

# ORDNANCE SUPPLY CATALOG

GROUP G

Technical Reference TM 9-803

(Standard Nomenclature List No. G-503)

## List of All Parts

For

**TRUCK, 1/4-TON, 4 x 4, COMMAND RECONNAISSANCE**

**(WILLYS-OVERLAND MOTORS, INC. MODEL MB  
AND FORD MOTOR CO. MODEL GPW)**

Supersedes ORD 9 portion of SNL G-503 Standard Nomenclature List, dated 15 January 1944. ORD 7 portion was superseded by ORD 7 SNL G-503 Organizational Spare Parts and Equipment, dated 11 October 1944, ORD 8 portion was superseded by ORD 8 SNL G-503 Higher Echelon Spare Parts and Equipment (Addendum), dated 5 August 1944.

**Distribution:** See Inside Front Cover

HEADQUARTERS, ARMY SERVICE FORCES, 15 FEBRUARY 1945

*Headquarters, Army Service Forces*

Washington 25, D. C., 15 February 1945

Army Service Forces Ordnance Supply Catalog, ORD 9  
SNL G-503 List of All Parts, for Truck, 1/4-Ton, 4 x 4,  
Command Reconnaissance (Willys-Overland Motors, Inc.  
Model MB and Ford Motor Co. Model GPW), has been  
prepared under the supervision of the Chief of Ordnance  
and is published for the information and guidance of  
all concerned.

SPX 461 (1 February 1945)

By command of Lieutenant General SOMERVELL:

W. D. STYER,  
Major General, General Staff Corps,  
Chief of Staff.

OFFICIAL:

J. A. ULIO,  
Major General,  
The Adjutant General.

**Distribution:** AAF (10); AGF (10); ASF (2); AAF Comds (2); Arm & Sv Bd (2);  
S Div ASF (1); T of Opns (10); Tech Sv (2); Sv C (10); PC&S (1) except Air Bases  
(3); PE, 9 (5); Dist O, 9 (5); Dist Br O, 9 (3); Reg O, 9 (3); Establishments, 9 (5);  
Decentralized Sub-O, 9 (3); Tk Dep, 9 (5); Gen & Sp Sv Schs (10); USMA (2); A  
(10); CHQ (10); D (2); AF (5); R 9 (2); Bw 9 (2); C 9 (3).

(For explanation of symbols see FM 21-6.)



# ORDNANCE SUPPLY CATALOG

GROUP G

Technical Reference TM 9-803

(Standard Nomenclature List No. G-503)

CHUCK LEWIS MOTORS  
DOUGLAS WYOMING

## List of All Parts

For

## TRUCK, 1/4-TON, 4 x 4, COMMAND RECONNAISSANCE

(WILLYS-OVERLAND MOTORS, INC. MODEL MB  
AND FORD MOTOR CO. MODEL GPW)

## GENERAL INFORMATION

For full information relative to Standard Nomenclature Lists, the procedure followed and principles employed in the compilation, together with the purposes and uses thereof, see the Introduction to the Ordnance Catalog (ORD 1 IOC), the Ordnance Provision System Regulations (OPSR) and the Ordnance Publications for Supply Index (ORD 2 OPSI).

The Standard Nomenclature List for a major item consists of three main parts: The Organizational Spare Parts and Equipment (ORD 7), the Higher Echelon Spare Parts and Equipment (Addendum) (ORD 8), and the List of All Parts (ORD 9). These

Quick  
Reference  
Index

### GENERAL INFORMATION

01 ENGINE

02 CLUTCH

03 FUEL

04 EXHAUST

05 COOLING SYSTEM

06 ELECTRICAL

07 TRANSMISSION

08 TRANSFER CASE

09 PROPELLER SHAFT AND  
UNIVERSAL JOINT

10 FRONT AXLE

11 REAR AXLE

12 BRAKE

13 WHEELS, HUBS AND  
DRUMS

14 STEERING

15 FRAME AND BRACKETS

16 SPRING AND SHOCK  
ABSORBER

17 HOODS, FENDERS AND  
APRONS

18 BODY

20 WINCH

21 BUMPERS AND GUARD

22 MISCELLANEOUS BODY  
AND CHASSIS  
ACCESSORIES

23 GENERAL USE  
STANDARDIZED PARTS

26 RADIO

INDEXES

three subdivisions may be published separately or may be combined. In this publication the ORD 9 is printed separately.

## SCOPE

This List of All Parts contains information for the identification of all parts which are considered items of service for the vehicles and/or models listed below:

TRUCK, 1/4-TON, 4 x 4, COMMAND RECONNAISSANCE

(WILLYS-OVERLAND MOTORS, INC. MODEL MB AND FORD MOTOR CO. MODEL GPW)

THIS PUBLICATION IS NOT TO BE USED FOR THE REQUISITIONING OF PARTS. IT IS TO BE USED ONLY FOR INFORMATION AND IDENTIFICATION.

## FEATURES OF THIS PUBLICATION

The following paragraphs explain important features of this catalog.

**STANDARDIZED GOVERNMENT GROUPING**—The parts listed in this catalog are divided into groups and subgroups in accordance with the Standardized Government Grouping. This division into groups facilitates the location and identification of each part. The Standardized Government Grouping as adapted to this catalog is outlined on pages 4 and 5.

**ILLUSTRATIONS**—Each illustration is identified by a figure number and title, and an index of all figures and the pages on which they appear will be found in the back of the book. Items appearing on the illustrations are identified in the accompanying legend by noun, number and group.

**COMPONENTS OF KITS, SETS AND ASSEMBLIES**—Whenever any doubt might exist as to what items are included as components of kits, sets or assemblies, an explanatory note or complete listing of such components is shown.

**ATTACHING PARTS**—Attaching parts, such as bolts, nuts, rivets, screws, washers, etc., are indented immediately under the item which they attach. Whenever two similar items, having the same attaching parts, such as right and left fenders, are listed, they are placed one immediately following the other and the attaching parts for both are covered by a single listing under the second part. The quantities shown for the attaching parts are those necessary to attach both items.

**INDEXES**—Indexes are listed in the back of the book in the following sequence. Illustrations, Alphabetical, and Numerical (Official Stock Numbers, Manufacturers' Part Numbers, Ordnance Part Numbers).

**OFFICIAL STOCK NUMBER**—The prefix letter and number of the official stock number (i.e., G104-XX-XXXXX, G103-XX-XXXXX or G167-XX-XXXXX) signifies that the particular part or component was originally coded under the major item designation for that SNL, and does NOT mean that the part is used ONLY in that major item. All subsequent lists for different vehicles will include the same official stock number for this same part.

**MANUFACTURERS' IDENTIFICATION SYMBOL**—Identification symbols have been assigned to manufacturers' part numbers. These symbols are prefixed to the part numbers in this book and a list of manufacturers is shown on page 7.

**LIST OF ABBREVIATIONS**—A list of abbreviations appearing in this book is shown on page 6.

### PUBLICATIONS PERTAINING TO THIS VEHICLE

Technical Manual 1st and 2nd Echelon .....	TM 9-803
Technical Manual 3rd and 4th Echelon .....	
Ordnance Maintenance: Engine and Engine Accessories .....	TM 9-1803A
Ordnance Maintenance: Power train, body, and frame .....	TM 9-1803B
Ordnance Maintenance: Electrical Equipment (Delco-Remy) .....	TM 9-1825A
Ordnance Maintenance: Carburetor (Carter) .....	TM 9-1826A
Ordnance Maintenance: Hydraulic brakes (Wagner-Lockheed) .....	TM 9-1827C
Ordnance Maintenance: Pumps, fuel .....	TM 9-1828A

SNL G-503



**INTERCHANGEABILITY OF COMPONENTS**—The engine, transmission, clutch and differential of the rear axle are the same as or similar to the corresponding units installed in Tractor, snow, M7 (SNL G-194).

The engine has many components that are the same as those of Power Unit (Willys Engine Model 441) Signal Corps Models PE95F, 95G, 95H, 182A and 183A Signal Corps Models PU58 and 26 (SNL G-716).

## HOW TO FIND PARTS

This catalog is arranged and cross-indexed so that parts can be found easily even though only one of the several identifying factors is known. The various ways in which parts can be located are as follows:

If the nomenclature (basic name) only is known, and the subgroup is not, refer to the alphabetical index in the back of the book. This index will give the subgroup in which the part is listed. As the part names are arranged in alphabetical order within this subgroup, the complete listing of the part can readily be found.

If any one of the Part Numbers—Ordinance Number, Official Stock Number, or Manufacturer's Number—is known, refer to the appropriate numerical index in the back of the book. This index will give the subgroup number from which the part can be found by following the procedure given in the previous paragraph.

If the use, or function, or location of the part is known, refer to the illustration index to determine in which figure or figures the part is likely to appear; then turn to this figure until a picture of the part is found. The arrow pointing to the part will lead out to a listing of the name, part number and subgroup number, which will permit locating the complete listing of the part.

THE MAJOR ITEM COVERED BY THIS CATALOG IS DESIGNATED AS A GENERAL PURPOSE VEHICLE, AS DEFINED IN PARAGRAPH 3, AR 850-15, DATED 28 AUGUST 1943.

## MODIFICATION WORK ORDERS

The following Modification Work Orders have been incorporated in this publication:

FSMWO G503-W1 modifying Radiator and Cooling System to improve cooling system for desert service by installing surge tank to conserve coolant.

MWO ORD G503-W2 modifying Electrical System to provide lighting current for trailers.

MWO ORD G503-W7 modifying Electrical System to convert the entire electrical system from 6 volts to 12 volts to provide current for radio equipment.

MWO ORD G503-W8 modifying Chassis to provide power winch.

MWO ORD G503-W9 modifying Engine, Tires and Spare Tire Carrier to install compressor and large tires to permit greater mobility through increased flotation.

# STANDARDIZED GOVERNMENT GROUPING

## 01—ENGINE GROUP

0100 Engine Assembly  
 0101 Crankcase and Cylinder Block  
 0101A Cylinder Head  
 0102 Crankshaft  
 0102A Crankshaft Bearings  
 0103 Pistons  
 0103A Piston Rings  
 0103B Piston Pins  
 0104 Connecting Rods  
 0104A Connecting Rod Bearings  
 0105 Valves, Seats, Guides and Springs  
 0105A Tappets  
 0105C Valve Covers and Gaskets  
 0106 Camshaft  
 0106A Camshaft Bushings (bearings)  
 0106C Chains and Sprockets  
 0106D Timing Chain Cover  
 0107 Oil Pump  
 0107A Oil Pan  
 0107A-1 Oil Float  
 0107E Oil Filter  
 0107G Oil Filler  
 0107H Level Indicator (gage)  
 0107J Oil Distribution System  
 0107N Crankcase Ventilator  
 0108 Intake and Exhaust Manifolds  
 0108C Heat Control  
 0109 Flywheel  
 0109B Ring Gear  
 0109C Flywheel Housing  
 0110 Mountings

## 02—CLUTCH GROUP

0201 Clutch Disk  
 0201A Facings and Rivets  
 0202 Cover and Pressure Plate  
 0203 Release Parts  
 0204 Pedal  
 0204A Pedal Linkage  
 0205 Pilot Bearing

## 03—FUEL GROUP

0300 Fuel Tanks  
 0300A Tank Gage Unit  
 0301 Carburetor  
 0301A Carburetor Attaching Parts  
 0301B Choke (see Group 0303A)  
 0301C Air Cleaner  
 0302 Fuel Pump  
 0302A Fuel Pump Attaching Parts  
 0303 Accelerator and Linkage  
 0303A Hand Throttle and Choke Control  
 0304 Fuel Lines  
 0306B Fuel Strainer

## 04—EXHAUST GROUP

0401 Muffler and Exhaust Pipe (round type and oval type)  
 0401-1 Muffler and Exhaust Pipe (deep mud type)

## 05—COOLING GROUP

0501 Radiator  
 0501C Surge Tank  
 0502 Thermostat  
 0503 Water Pump  
 0503A Fan and Pulleys  
 0503B Fan Belt  
 0505 Engine Water Fittings and Hose

## 06—ELECTRICAL GROUP

0601 Generator (ball type bearing)  
 0601-1 Generator (bushing type bearing)  
 0601-2 Generator (12 volt)  
 0601A Generator Attaching Parts  
 0601A-1 Generator (12 volt) Attaching Parts  
 0601B Generator Regulator  
 0601B-1 Generator Regulator (12 volt)  
 0602 Cranking Motor  
 0602-1 Cranking Motor (12 volt)  
 0603 Distributor (regular type)  
 0603-1 Distributor (dustproof type)  
 0604 Ignition Coil  
 0604A Ignition Wiring  
 0604B Spark plugs  
 0604C Ignition Lock  
 0605 Instruments  
 0605C Panel Light  
 0606 Switches  
 0606B Chassis Wiring  
 0606D Circuit Breakers  
 0606E Junction Blocks  
 0606F Trailer Electric Coupling  
 0607 Headlight  
 0607A Sealed Beam  
 0607B Lamps  
 0607D Blackout Lights  
 0608 Taillight  
 0609 Horns  
 0609B Horn Button and Wiring  
 0610 Battery  
 0610A Battery Hangers  
 0610B Battery Cables and Connections  
 0610B-1 Battery Cables and Connections (12 volt)

## 07—TRANSMISSION GROUP

0700 Transmission Assembly  
 0701 Case  
 0703 Main Drive Gear and Bearings  
 0704 Main Shaft, Gears and Bearings  
 0704C Countershaft and Reverse Idler Shaft, Gears and Bearings  
 0706A Gearshift Lever and Parts  
 0706B Gearshift Rails and Parts  
 0706C Gearshift Forks



**08—TRANSFER CASE GROUP**

0800 Transfer Case Assembly  
 0801 Case and Covers  
 0802 Drive Gear  
 0803 Output Shaft, Gears and Bearings  
 0804 Intermediate Shaft, Gear and Bearings  
 0805 Shifter Rods and Parts  
 0805A Forks  
 0805B Shift Lever and Parts  
 0809 Mountings  
 0810 Speedometer Drive Gears

**09—PROPELLER SHAFT AND UNIVERSAL JOINT GROUP**

0901 Propeller Shaft Assemblies  
 0902 Universal Joints

**10—FRONT AXLE GROUP**

1000 Front Axle Assembly  
 1001 Housing  
 1003 Differential Case, Gears, Pinion and Bearings  
 1006 Steering Knuckle, Flange and Arm  
 1007 Axle Shafts and Universal Joints

**11—REAR AXLE GROUP**

1100 Rear Axle Assembly  
 1101 Housing Assembly  
 1102 Axle Drive Shafts  
 1104 Differential Case, Gears, Pinion and Bearings

**12—BRAKE GROUP**

1200 Brake Assembly  
 1201 Hand Brake Parts (external contracting type)  
 1201-1 Hand Brake Parts (internal expanding type)  
 1202 Shoes and Facings  
 1203 Brake Shoe Support  
 1204 Pedal and Spring  
 1205 Master Cylinder  
 1207 Wheel Cylinders  
 1209B Hoses  
 1209C Tubes and Clips  
 1209D Brackets and Springs

**13—WHEELS, HUBS AND DRUMS GROUP**

1301 Wheel Assembly  
 1301A Bearings  
 1301B Seals  
 1302 Hubs and Drums  
 1302A Studs and Bolts

**14—STEERING GROUP**

1401 Steering Connecting Rod (drag link) and Bell Crank  
 1402 Tie Rod  
 1403A Gear Assembly  
 1404 Wheel Assembly  
 1405 Brackets

**15—FRAME AND BRACKETS GROUP**

1500 Frame and Brackets  
 1502 Pintle Hook  
 1505 Spare Wheel Carrier

**16—SPRING AND SHOCK ABSORBER GROUP**

1601 Front Springs  
 1601A Rear Springs  
 1601B Spring Bumpers  
 1601C Torque Reaction Spring  
 1602 Shackles and Spring Attaching Parts  
 1603 Shock Absorbers and Mountings

**17—HOODS, FENDERS, APRON GROUP**

1701 Fenders  
 1702 Splash Apron  
 1704 Hood

**18—BODY GROUP**

1800 Body  
 1800A Body Handles  
 1800B Top  
 1801 Body Mounting Parts  
 1802 Body Pillars  
 1802A Body Panels  
 1803 Floor Mats and Seals  
 1804 Seats  
 1804A Cushions  
 1809 Instrument Panel and Mounting Parts  
 1809A Compartment and Parts  
 1811 Windshield Assembly  
 1811B Windshield Frame Molding and Seals  
 1811D Windshield Wiper Arms and Blades  
 1817 Tool Box  
 1817A Spare Gasoline Carrier  
 1820 Gun Holders

**20—WINCH GROUP**

2000 Winch Assembly  
 2001 Winch Parts and Winch Drive Shafts  
 2002 Cables and Ropes  
 2003 Winch Control Parts

**21—BUMPERS AND GUARD GROUP**

2101 Bumpers  
 2103 Radiator Guards  
 2103A Lamp Guards

**22—MISCELLANEOUS BODY, CHASSIS AND ACCESSORY GROUP**

2201 Tarpaulins  
 2201A Bows  
 2201F Side Curtains  
 2202 Rear View Mirrors  
 2203 Identification and Caution Plates  
 2203A Reflectors  
 2204 Speedometer and Parts  
 2208 Air Compressor (tire pump)

**23—GENERAL USE STANDARDIZED PARTS**

2306 Tires and Tubes

**26—RADIO GROUP**

2603 Radio Suppression System Parts


# LIST OF ABBREVIATIONS

alloy-S. ....	alloy steel	mach. ....	machine
amp. ....	ampere	mall-I ....	malleable iron
as req. ....	as required	mfd. ....	microfarad
binding-hd. ....	binding head	NC ....	National coarse
br. ....	brass	NF ....	National fine
bz. ....	bronze	No. ....	number
c-pin ....	cotter pin	NS ....	National form special
cd-pltd. ....	cadmium plated	O.D. ....	outer diameter
ck-hd. ....	countersunk head	Ord. ....	ordnance
contd. ....	continued	oval-hd. ....	oval head
cp. ....	candlepower	pltd. ....	plated
deg. ....	degree	rd-hd. ....	round head
diam. ....	diameter	reg. ....	regular
dld. f/c-pin ....	drilled for cotter pin	R.H. ....	right hand
dld. f/lkg-wire ....	drilled for locking wire	S. ....	steel
elec. ....	electric	SAE ....	Society of Automotive Engineers
fil. ....	filament	s-fin. ....	semi-finished
fil-hd. ....	fillister head	sp. gr. ....	specific gravity
fl. ....	flat	sq. ....	square
fl-hd. ....	flat head	sq-hd. ....	square head
gr. ....	gravity	sq-nk. ....	square neck
hd. ....	head	sq-shank ....	square shank
hex. ....	hexagonal	std. ....	standard
hex-hd. ....	hexagonal-head	stght. ....	straight
hr. ....	hour	thd. ....	thread
hv. ....	heavy	thk. ....	thick
I. ....	iron	tung. ....	tungsten
I.D. ....	inner diameter	USS ....	United States Standard
in. ....	inch	V. ....	volt
incand. ....	incandescent	w/ ....	with
lgh. ....	length	w/o ....	without
L.H. ....	left hand	zn-pltd. ....	zinc plated



# MANUFACTURERS' IDENTIFICATION SYMBOLS


AB	Aetna Ball Bearing Mfg. Co.	4600 Schubert Ave., Chicago 39, Illinois
AC	A. C. Spark Plug Division (General Motors Corp.)	1300 N. Dort Hwy., Flint 2, Michigan
AD	Alemite Division (Stewart-Warner Corp.)	1826 Diversey Pkwy., Chicago 14, Illinois
AL	Electric Auto-Lite Co.	Main Post Office Box 931, Toledo 1, Ohio
AN	Ainsworth Mfg. Corp.	2200 Franklin St., Detroit 7, Michigan
AVM	Atwood Vacuum Machine Co.	2500 N. Main St., Rockford, Illinois
BA	Bassick Co. (The)	38 Austin St., Bridgeport 2, Conn.
B & B	Borg and Beck Div. (Borg-Warner Corp.)	6558 S. Menard Ave., Chicago 38, Illinois
BN	Bantam Bearing Corp. (The)	South Bend 21, Indiana
BOW	Bower Roller Bearing Co.	3040 Hart Ave., Detroit 14, Michigan
BUE	Budd Mfg. Co., Edw. G.	2450 Hunting Parke Ave., Philadelphia 32, Pennsylvania
BX	Bendix Products Div.	401 Bendix Drive, South Bend 20, Indiana
CA	Columbus Auto Parts Co.	Hudson St. and Penn. R.R., Columbus 16, Ohio
CAR	Carter Carburetor Corp.	2820-56 N. Spring Ave., P.O. Box 2425, St. Louis 7, Missouri
CB	Corcoran-Brown Lamp Co.	4900 Spring Gr. Ave., Cincinnati 32, Ohio
CL	Clum Mfg. Co.	601 W. National Ave., Milwaukee 4, Wisconsin
CNC	Cinch Mfg. Corp.	2335 W. Van Buren St., Chicago 12, Illinois
DM	Douglas Mfg. Co., H. A.	Bronson, Michigan
DTC	Deutschmann, Tobe, Corp.	Washington Ave., Canton, Massachusetts
EAT	Eaton Mfg. Co. (The)	739 E. 140th St., Cleveland 10, Ohio
FB	Federal Bearings Co., Inc.	Poughkeepsie, New York
FM	Ford Motor Co.	3000 Schaefer Rd., Dearborn, Michigan
GM	General Motors Corp.	3044 W. Grand Blvd., Detroit 2, Michigan
HI	Hayes Industries, Inc.	437 Fern Ave., Jackson, Michigan
HO	Hoover Ball and Bearing Co.	Ann Arbor, Michigan
HP	Harris Products Co.	5105 Cowan Ave., Cleveland 4, Ohio
KHW	Kelsey, Hayes Wheel Co.	3600 Military Ave., Detroit 32, Michigan
KS	King-Seeley Corp.	316 S. 1st St., Ann Arbor, Michigan
LK	Link-Belt Co.	307 N. Michigan Ave., Chicago 1, Illinois
LO	Wagner Electric Corp.	6400 Plymouth Ave., St. Louis 14, Missouri
MAE	Monroe Auto Equipment	E. 1st St., Monroe, Michigan
MDR	McCord Radiator and Mfg. Co.	2587 E. Grand Blvd., Detroit 11, Michigan
MLL	Mallory and Co. Inc., P. R.	3029 E. Washington, Indianapolis 6, Indiana
MRC	Marlin-Rockwell Corp.	402 Chandler St., Jamestown 55, New York
MZ	"Mazda"-General Electric Co.	Schenectady 5, New York
ND	New Departure Div. (General Motors Corp.)	1940 Hughes St., Bristol, Connecticut
NP	New Process Gear, Inc.	500 Plum St., Syracuse 1, New York
OKS	Oakes Products Div. (Houdaille-Hershey Corp.)	2188 National Bank Bldg., Detroit 26, Mich.
PU	Purolator Products, Inc.	365 Frelinghuysen Ave., Newark 5, New Jersey
RG	Ross Gear and Tool Co.	8th and Heath Sts., Lafayette, Indiana
RMC	Rich Mfg. Corp.	Battle Creek 100, Michigan
SKF	SKF Industries, Inc.	Front St. and Erie Ave., Philadelphia 34, Pennsylvania
SOL	Solar Mfg. Co.	23rd St. and Avenue A, Bayonne 2, New Jersey
SP	Spicer Mfg. Corp.	4100 Bennett Rd., Toledo 1, Ohio
SPR	Sprague Specialties Co.	Beaver St., North Adams, Massachusetts
TIM	Timken Roller Bearing Co. (The)	1935 Kelley Ave., Canton, Ohio
TP	Thompson Products, Inc.	2196 Clarkwood Rd., Cleveland 3, Ohio
TR	Torrington Co. (The)	59 Field St., Torrington, Connecticut
TRI	Trico Products Co.	817 Washington St., Buffalo 3, New York
TRU	TRU-Stop (American Chain and Cable Co.)	Bridgeport 2, Connecticut
TSE	Taylor Sales Engineering Co.	117 W. Franklin St., Elkhart, Indiana
USL	Autolite Battery Corp. (formerly USL Battery Corp.)	Highland Ave., Niagara Falls, New York
VC	Van Cleef Brothers	7800 S. Woodlawn Ave., S., Chicago 19, Illinois
WB	Willard Storage Battery Co.	264 E. 131st St., Cleveland 1, Ohio
WBK	Westinghouse Air Brake Co. (Industrial Div.)	1943 Herman Ave., Welmerding, Pa.
WC	Weston Electrical Instrument Corp.	614 Frelinghuysen Ave., Newark 5, New Jersey
WEB	Warner Electric Brake Mfg. Co.	Beloit, Wisconsin
WH	Weatherhead Co. (The)	300 E. 131st St., Cleveland 8, Ohio
WO	Willys-Overland Motors, Inc.	Wolcott Blvd., Toledo 1, Ohio
WP	Worthington Pump & Machinery Corp.	Harrison, New Jersey

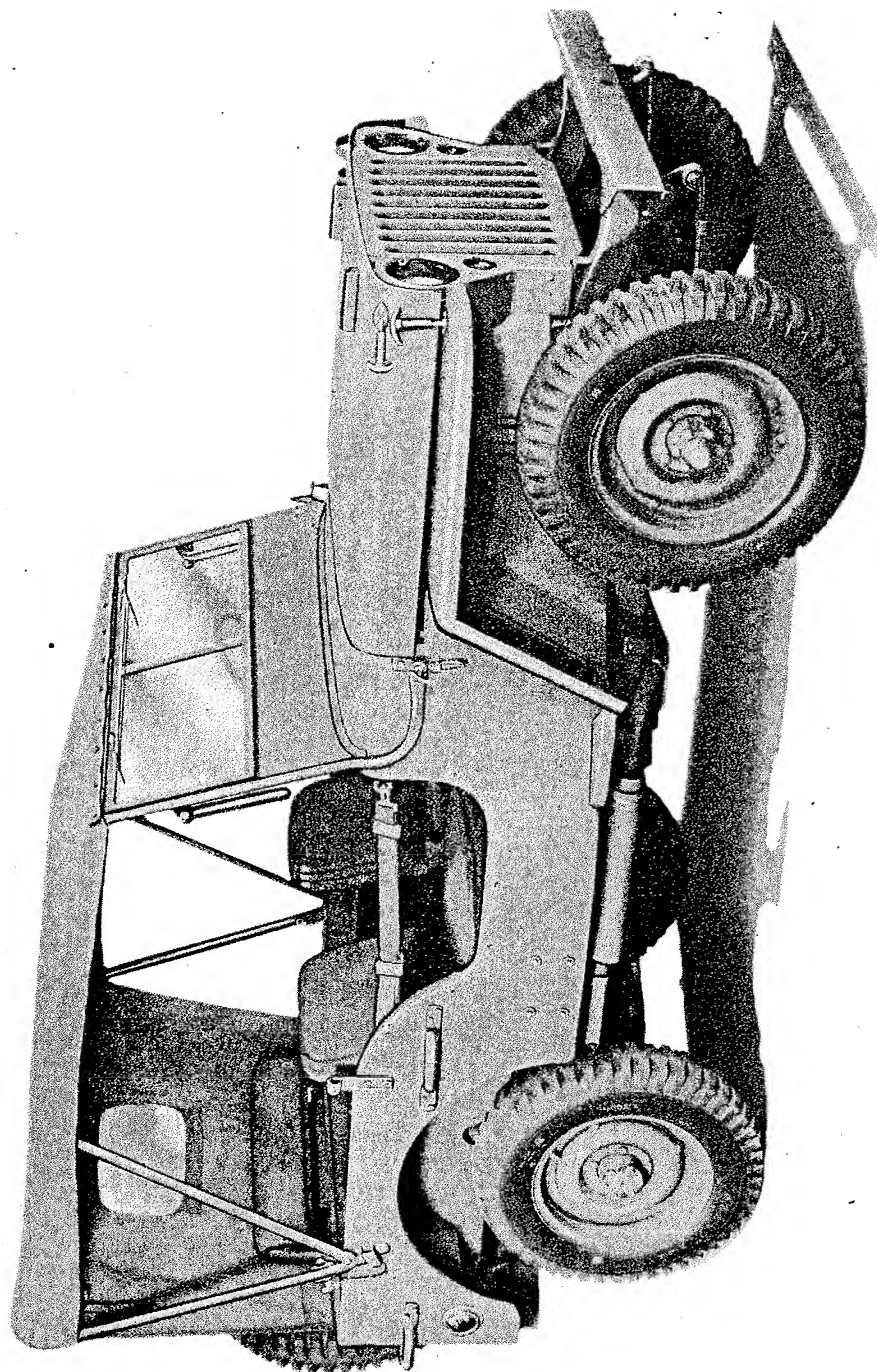

RA PD 342253


FIGURE A—TRUCK, 1/4-TON, 4 x 4 COMMAND RECONNAISSANCE—3/4 RIGHT FRONT VIEW



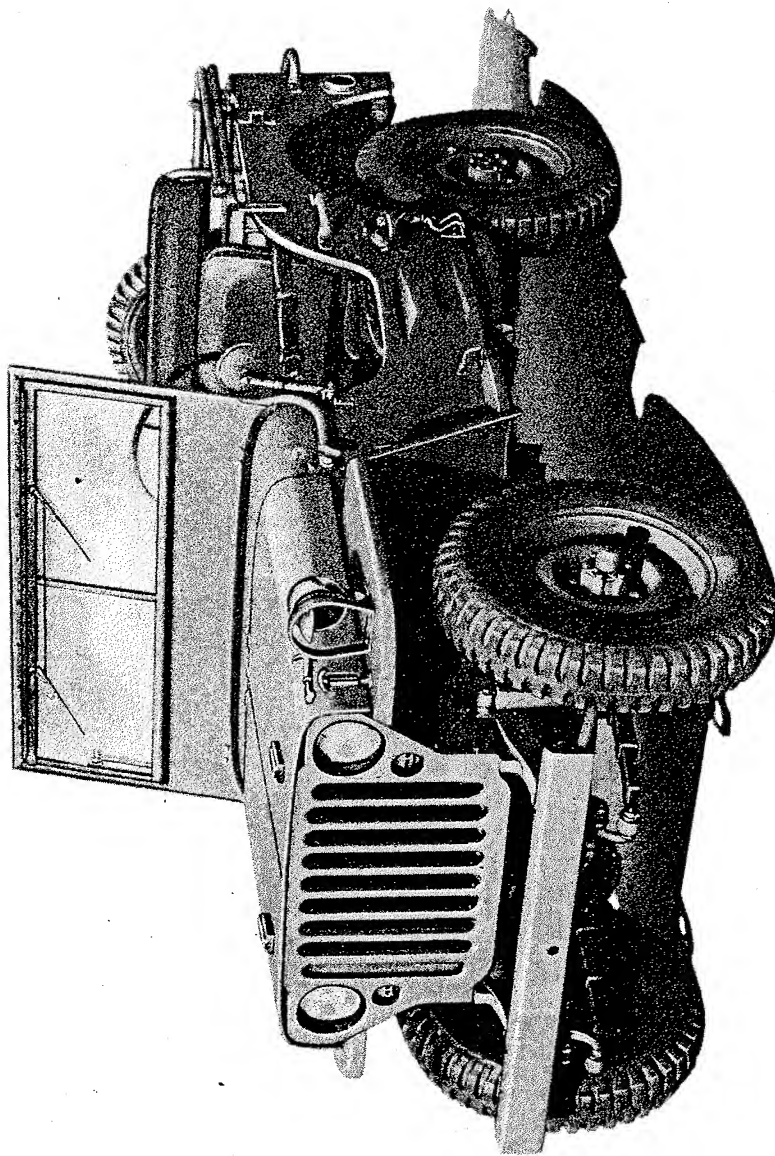

RA PD 342278


FIGURE B—TRUCK, 1/4-TON, 4 x 4 COMMAND RECONNAISSANCE— $\frac{3}{4}$  LEFT FRONT VIEW

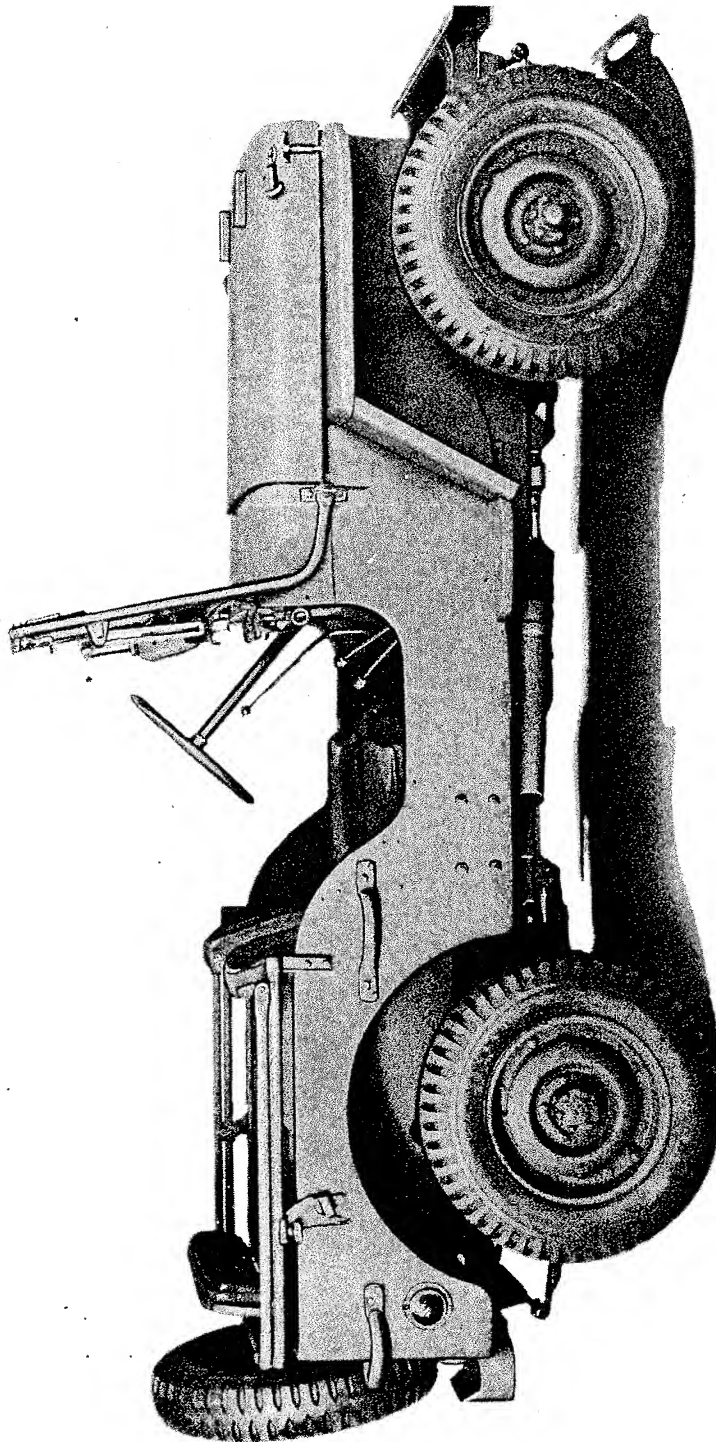

RA PD 342279


FIGURE C—TRUCK, 1/4-TON, 4 x 4 COMMAND RECONNAISSANCE—RIGHT SIDE VIEW

BUCK LEWIS MOTORS  
DOUGLAS, WYOMING

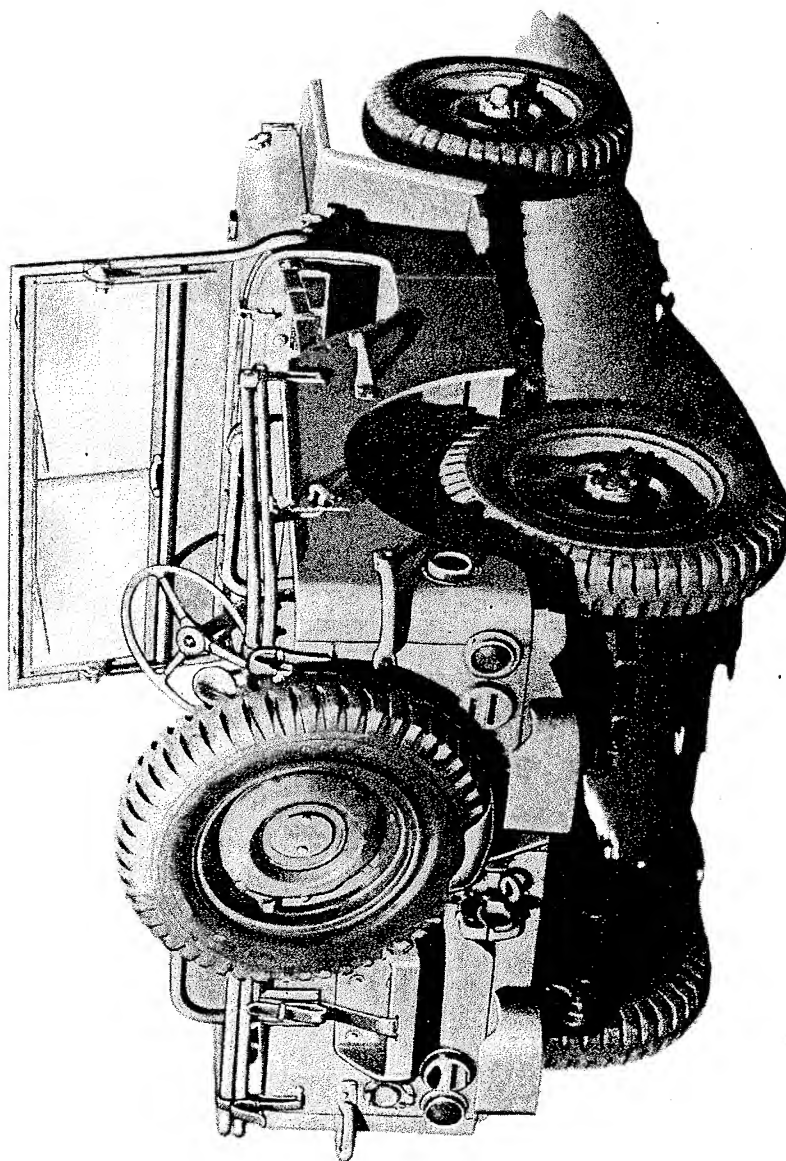

RA PD 342272

FIGURE D—TRUCK, 1/4-TON, 4 x 4 COMMAND RECONNAISSANCE—3/4 RIGHT REAR VIEW

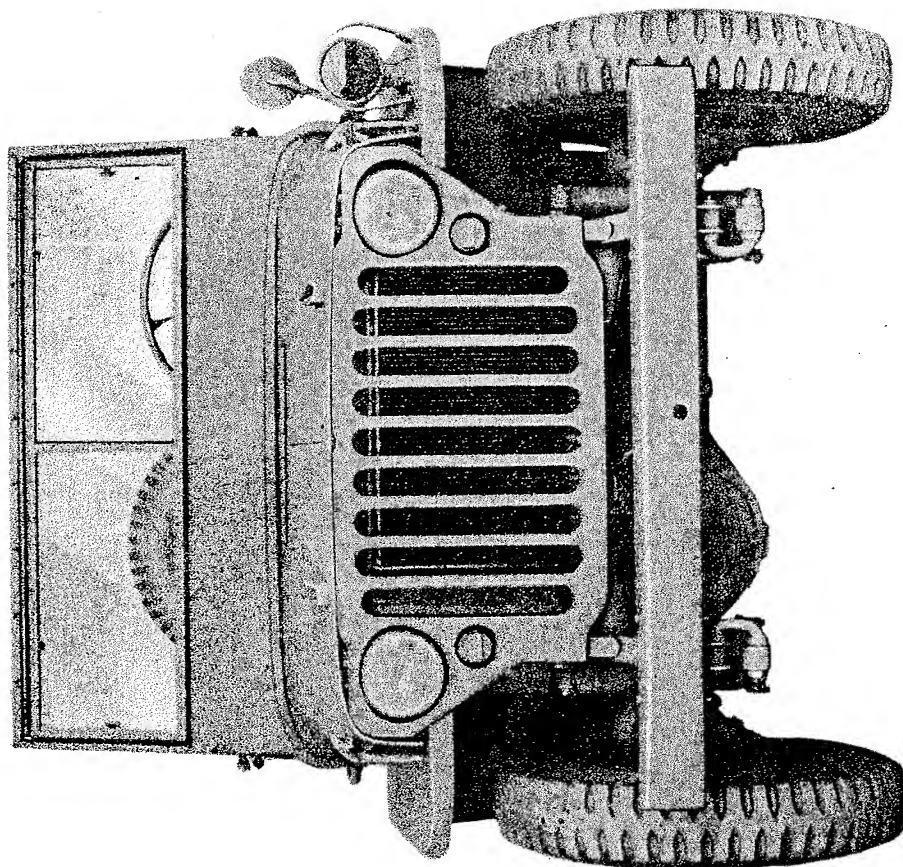

RA PD 342257

FIGURE E—TRUCK, 1/4-TON, 4 x 4 COMMAND RECONNAISSANCE—FRONT VIEW

Key	Part Name	Ford Part No.	Willlys Part No.	Group Number
A	COIL, assembly	FM-GPW-12000	WO-A-1424	0604
B	DISTRIBUTOR, assembly	FM-GPW-12100-B	WO-A-9075	0603-1
C	TUBE, assembly	FM-GPW-9637-B	WO-A-6911	0301C
D	FILTER, assembly	FM-GPW-18660-A	WO-A-1230	0107E
E	FAN, assembly	FM-GPW-8600	WO-A-447	0503A
F	GENERATOR, assembly	FM-GPW-10000-A3	WO-A-10048	0601-1
G	CRANKING MOTOR, assembly	FM-GPW-11001-A	WO-A-1245	0602
H	YOKÉ	FM-GP-7729	WO-A-1106	0803
J	BRAKE, assembly	FM-GPW-2598	WO-A-1008	1201
K	TRANSFER CASE, assembly	FM-GPW-7700	WO-A-1195	0800
L	LEVER	FM-GPW-7710	WO-A-1506	0805B
M	LEVER	FM-GPW-7793	WO-A-1505	0805B


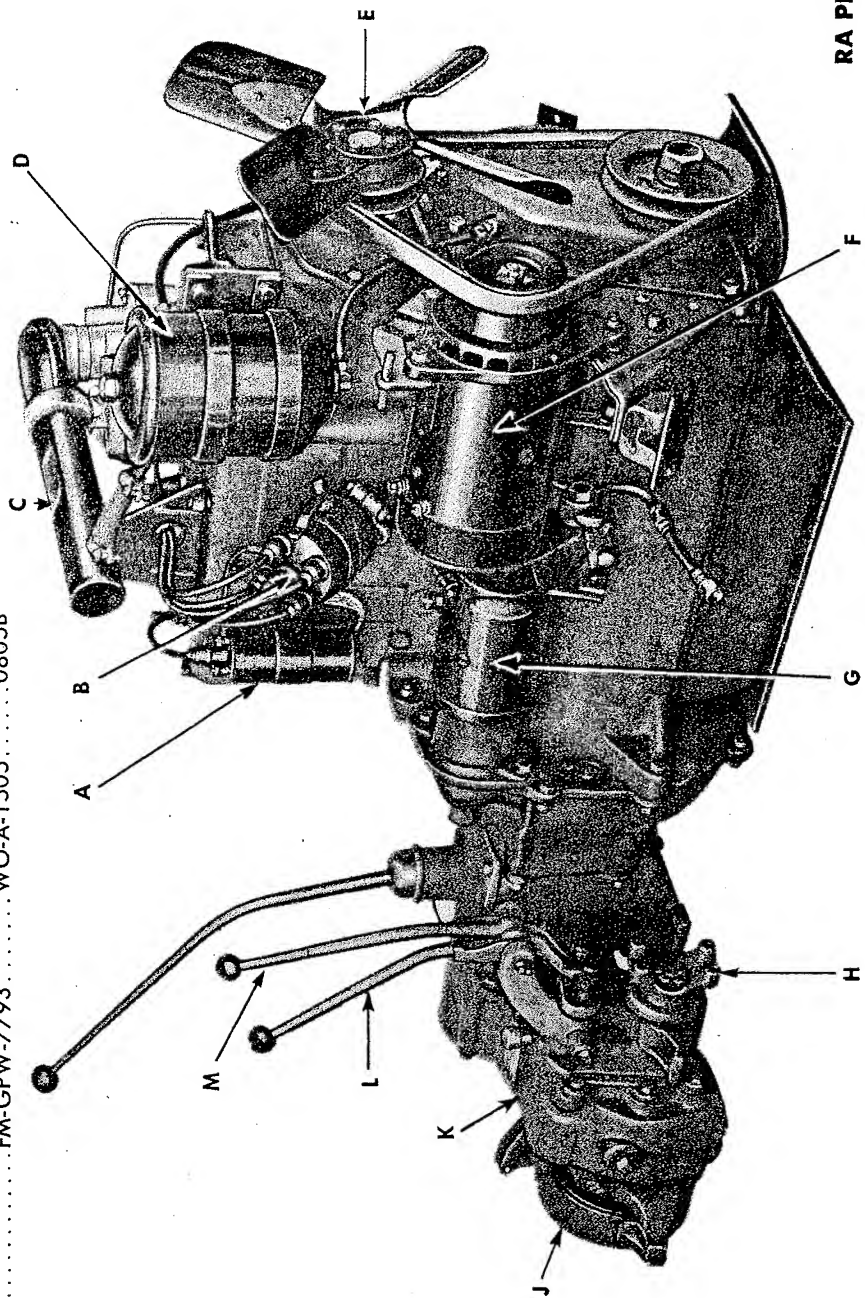


FIGURE 01-2—ENGINE ASSEMBLY—RIGHT SIDE VIEW



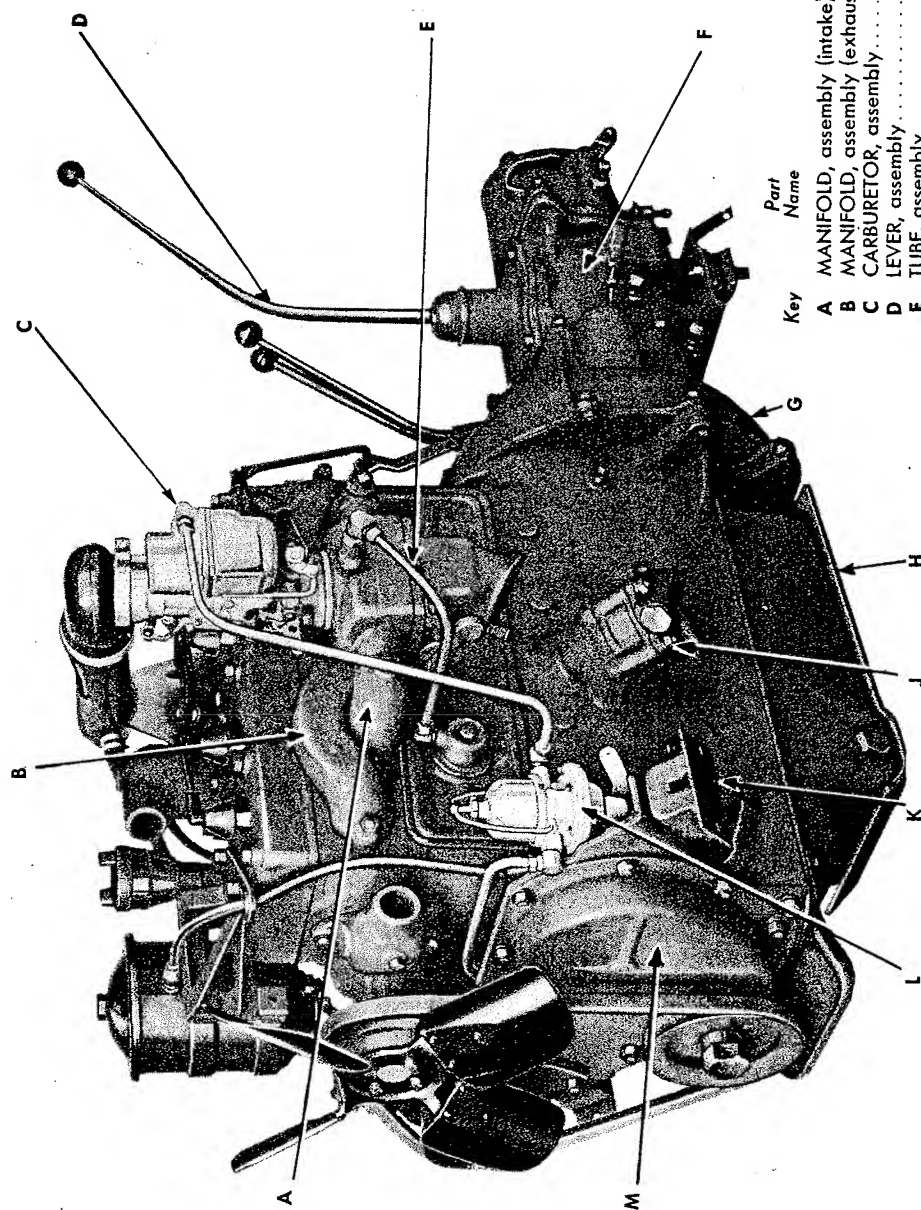

Key	Part Name	Ford Part No.	Willys Part No.	Group Number
A	MANIFOLD, assembly (intake)	FM-GPW-9424-B	WO-1166	0108
B	MANIFOLD, assembly (exhaust)	FM-GPW-9426	WO-A-912	0108
C	CARBURETOR, assembly	FM-GPW-9510	WO-A-1223	0301
D	LEVER, assembly	FM-GPW-7210-A	WO-A-1380	0706A
E	TUBE, assembly	FM-GPW-6756	WO-A-6922	0107N
F	TRANSMISSION, assembly	FM-GPW-7000	WO-A-1145	0700
G	HOUSING	FM-GPW-6392	WO-A-439	0109C
H	PAN, assembly	FM-GPW-6675	WO-A-7238	0107A
J	PUMP, assembly	FM-GPW-6600	WO-637636	0107
K	INSULATOR, assembly	FM-GPW-6038-A	WO-A-7498	0110
L	PUMP, assembly	FM-GPW-9350-B	WO-A-8323	0302
M	COVER, assembly	FM-GPW-6054	WO-A-1190	0106D

FIGURE 01-1—ENGINE ASSEMBLY—LEFT SIDE VIEW


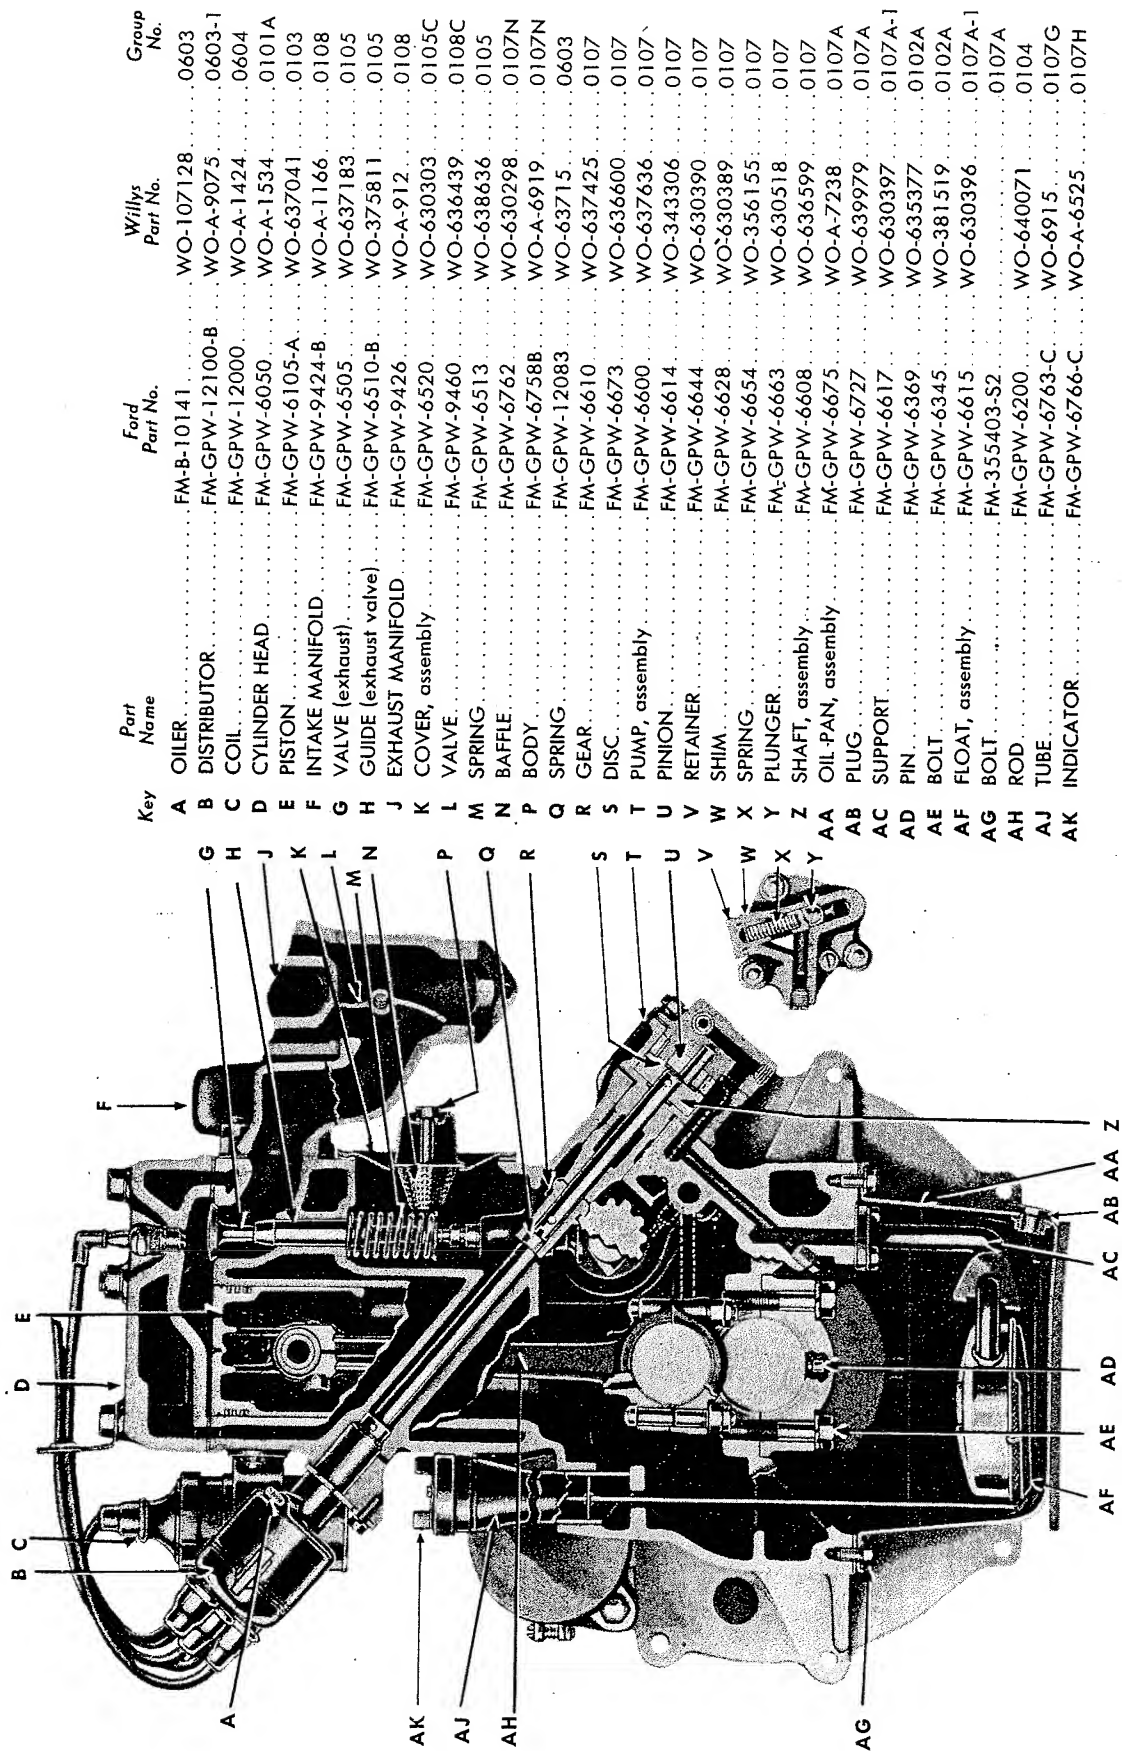


FIGURE 01-3—ENGINE ASSEMBLY—TRANSVERSE SECTIONAL VIEW

RA PD 342255

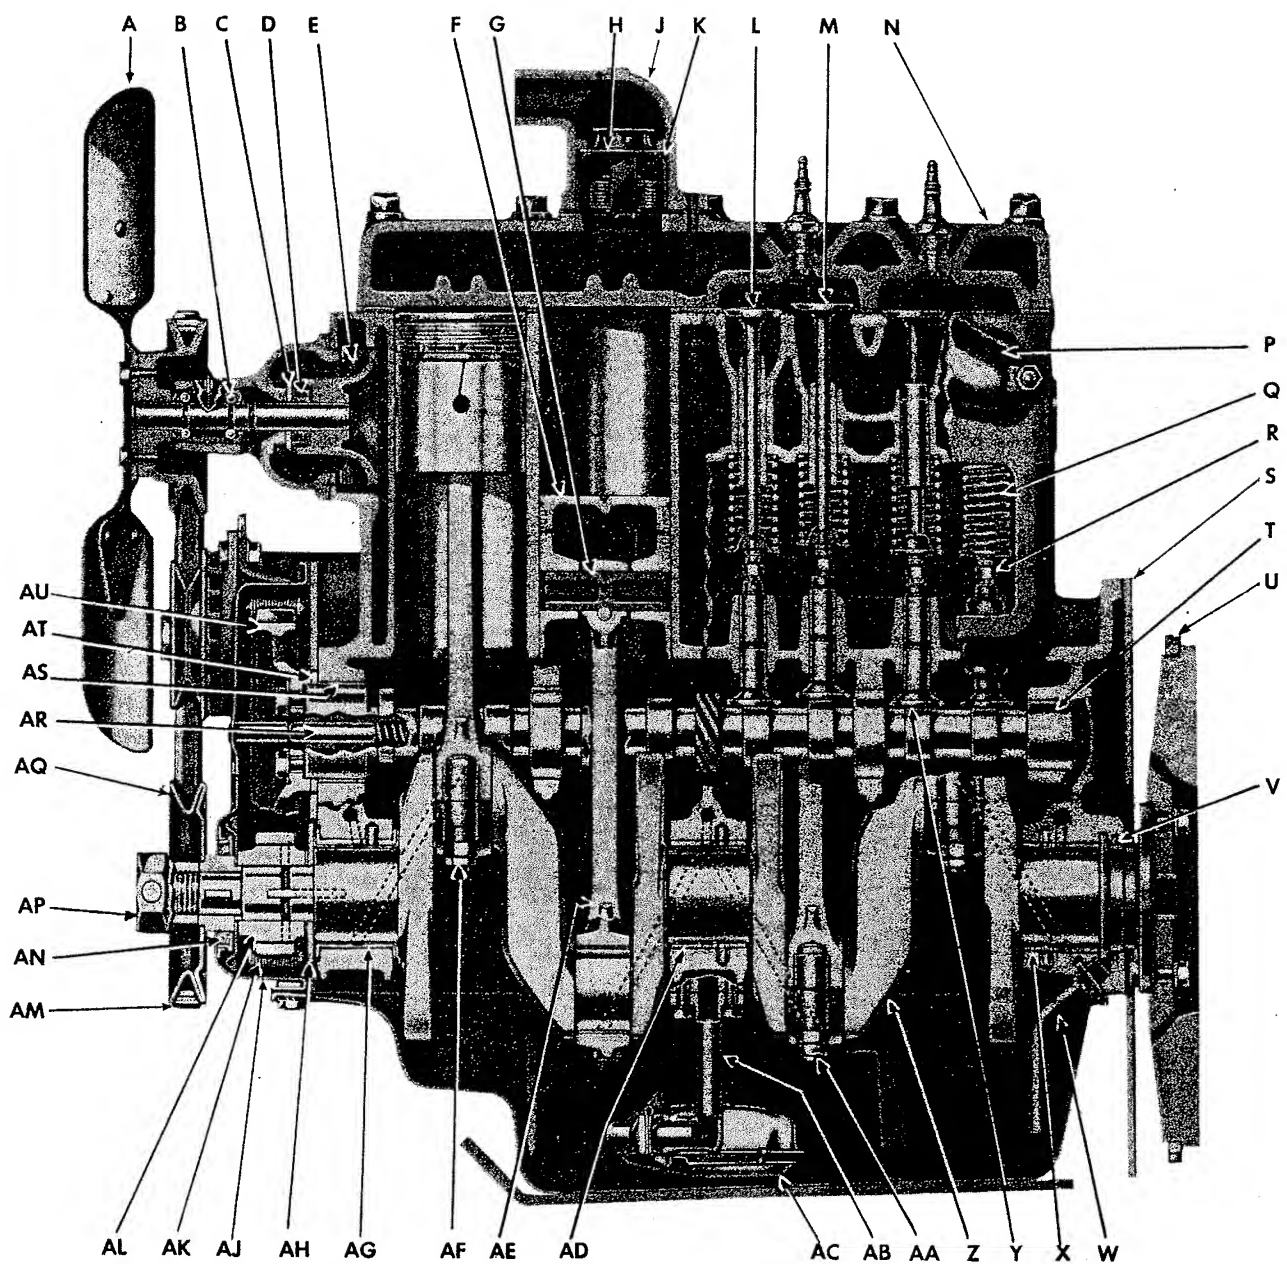

RA PD 342291

FIGURE 01-4—ENGINE ASSEMBLY—LONGITUDINAL SECTIONAL VIEW

Key	Part Name	Ford Part No.	Willys Part No.	Group No.
A	FAN, assembly	FM-GPW-8600	WO-A-447	0503A
B	BEARING, w/SHAFT, assembly	FM-GPW-8530	WO-636297	0503
C	WASHER	FM-GPW-8557-A	WO-640034	0503
D	SEAL, assembly	FM-GPW-8524-A	WO-640031	0503
E	IMPELLER	FM-GPW-8512	WO-639993	0503
F	PISTON, assembly	FM-GPW-6105-A	WO-637041	0103
G	PIN	FM-GPW-6135-A	WO-636961	0103B
H	THERMOSTAT	FM-GPW-8575	WO-637646	0502
J	ELBOW	FM-GPW-8250	WO-A-1192	0505
K	RETAINER	FM-GPW-8578	WO-639651	0502
L	VALVE	FM-GPW-6505	WO-637183	0105
M	VALVE <i>INTAKE</i>	FM-GPW-6507	WO-637182	0105
N	HEAD	FM-GPW-6050	WO-A-1534	0101A
P	MANIFOLD, assembly	FM-GPW-9426	WO-A-912	0108
Q	SPRING	FM-GPW-6513	WO-638636	0105
R	SCREW	FM-GPW-6549-B	WO-640020	0105A
S	PLATE	FM-GPW-7007	WO-A-5121	0109C
T	CAMSHAFT	FM-GPW-6250	WO-637065	0106
U	GEAR	FM-GPW-6384	WO-635394	0109B
V	PACKING	FM-GPW-6702	WO-637237	0102A
W	PIPE	FM-GPW-6326	WO-630294	0102A
X	BEARING	FM-GPW-6337-A	WO-638733	0102A
Y	TAPPET	FM-GPW-6500-A	WO-637047	0105A
Z	CRANKSHAFT	FM-GPW-6303-A	WO-638121	0102
AA	BOLT	Willys only	WO-640070	0104
AB	SUPPORT	FM-GPW-6617	WO-630397	0107A-1
AC	FLOAT, assembly	FM-GPW-6615	WO-630396	0107A-1
AD	BEARING	FM-GPW-6341-A	WO-638731	0102A
AE	ROD	FM-GPW-6201	WO-640072	0104
AF	NUT	FM-356021-S	WO-636962	0104
AG	BEARING	FM-GPW-6338-A	WO-637008	0102A
AH	WASHER	FM-GPW-6308	WO-634796	0102
AJ	COVER, assembly	FM-GPW-6054	WO-A-1190	0106D
AK	CHAIN	FM-GPW-6260	WO-638457	0106C
AL	SPROCKET	FM-GPW-6306	WO-638459	0106C
AM	BELT	FM-GPW-8620-A	WO-A-9490	0503B
AN	PACKING	FM-GPW-6700	WO-637098	0102A
AP	NUT, assembly	FM-GPW-6319	WO-387633	0102
AQ	PULLEY	FM-GPW-6312	WO-638113	0102
AR	PLUNGER	FM-GPW-6243	WO-375907	0106
AS	BUSHING	FM-GPW-6262-A	WO-639051	0106A
AT	WASHER	FM-GPW-6245	WO-375900	0106
AU	SPROCKET	FM-GPW-6256	WO-638458	0106C

RA PD 342291A


FIGURE 01-4A—LEGEND FOR FIGURE 01-4  
ENGINE ASSEMBLY—LONGITUDINAL SECTIONAL VIEW

## GROUP 01—ENGINE

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>GROUP 01—ENGINE</b>						
<b>0100—ENGINE ASSEMBLY</b>						
9680-A-1388 3320-GPW-6005		FM-GPW-6005	WO-A-1388 WO-A-5497	ENGINE, assembly (includes all units from flywheel forward less air CLEANER). . . . . ENGINE, assembly (includes CLUTCH, assembly, FLYWHEEL HOUSING, and all units ready to run) (superseded by ENGINE, assembly, FM-GPW-6004, WO-A-5497). ENGINE, assembly (includes CLUTCH, assembly, FLYWHEEL HOUSING, and all units ready to run) (supersedes ENGINE, assembly, FM-GPW-6005, WO-A-5497). . . . .	1	257.70
3320-GPW-6004		FM-GPW-6004	WO-A-5497		1	
<b>0101—CRANKCASE AND CYLINDER BLOCK</b>						
BLOCK, cylinder, w/PISTONS and RINGS, assembly (includes camshaft bushings, crankshaft bearing caps, piston pins, and valve guides) . . . . .						
FM-GPW-6009			WO-A-6793	COCK, drain, engine cylinder water jacket (S, zn-pltd., 1/4 in. pipe thread) (WH-145-A)	1	73.62
FM-9N-8115 FM-GPW-18390	H106-0103647 3320-GPW-18390		WO-A-1126 WO-A-1536	GASKET SET, engine overhaul (superseded by GASKET SET, FM-GPW-18390-B, WO-A-17401) (Note 1) . . . . .	1	.0833
FM-GPW-18390-B			WO-A-17401	GASKET SET, engine overhaul (supersedes GASKET SET, FM-GPW-18390, WO-A-1536) (Note 1) . . . . .	1	.635
(Consists of:						
FM-GPW-6288			WO-630365	1 GASKET, chain cover		
FM-GPW-6020			WO-630359	1 GASKET, cylinder block, front		
FM-GPW-6051-B			WO-A-8558	1 GASKET, cylinder head		
FM-GPW-9450			WO-634814	1 GASKET, exhaust pipe flange		
FM-GPW-9417			WO-638737	1 GASKET, fuel pump		
FM-GPW-9448			WO-638640	1 GASKET, intake and exhaust manifold		
FM-GPW-9435			WO-634811	1 GASKET, intake to exhaust manifold		
FM-GPW-6627			WO-630398	1 GASKET, oil strainer float support		
FM-GPW-6710			WO-639980	1 GASKET, oil pan		
FM-GPW-6659			WO-639870	1 GASKET, oil pump cover		
FM-GPW-6619			WO-630392	4 GASKET, oil pump cover		
FM-GPW-6734			WO-314338	1 GASKET, oil drain plug		
FM-GPW-6625			WO-375927	1 GASKET, oil pump shaft		
FM-GPW-6630			WO-630394	1 GASKET, oil pump to cylinder block		
FM-GPW-6642			WO-634813	1 GASKET, oil relief spring retainer		
FM-GPW-6353			WO-334103	1 GASKET, oil slinger		

Note 1—GASKET SETS, FM-GPW-18390, WO-A-1536; and FM-GPW-18390-B, WO-A-17401, have the same components except GASKET, FM-GPW-9445, WO-A-6357, which is not in GASKET SET FM-GPW-18390-B, WO-A-17401.



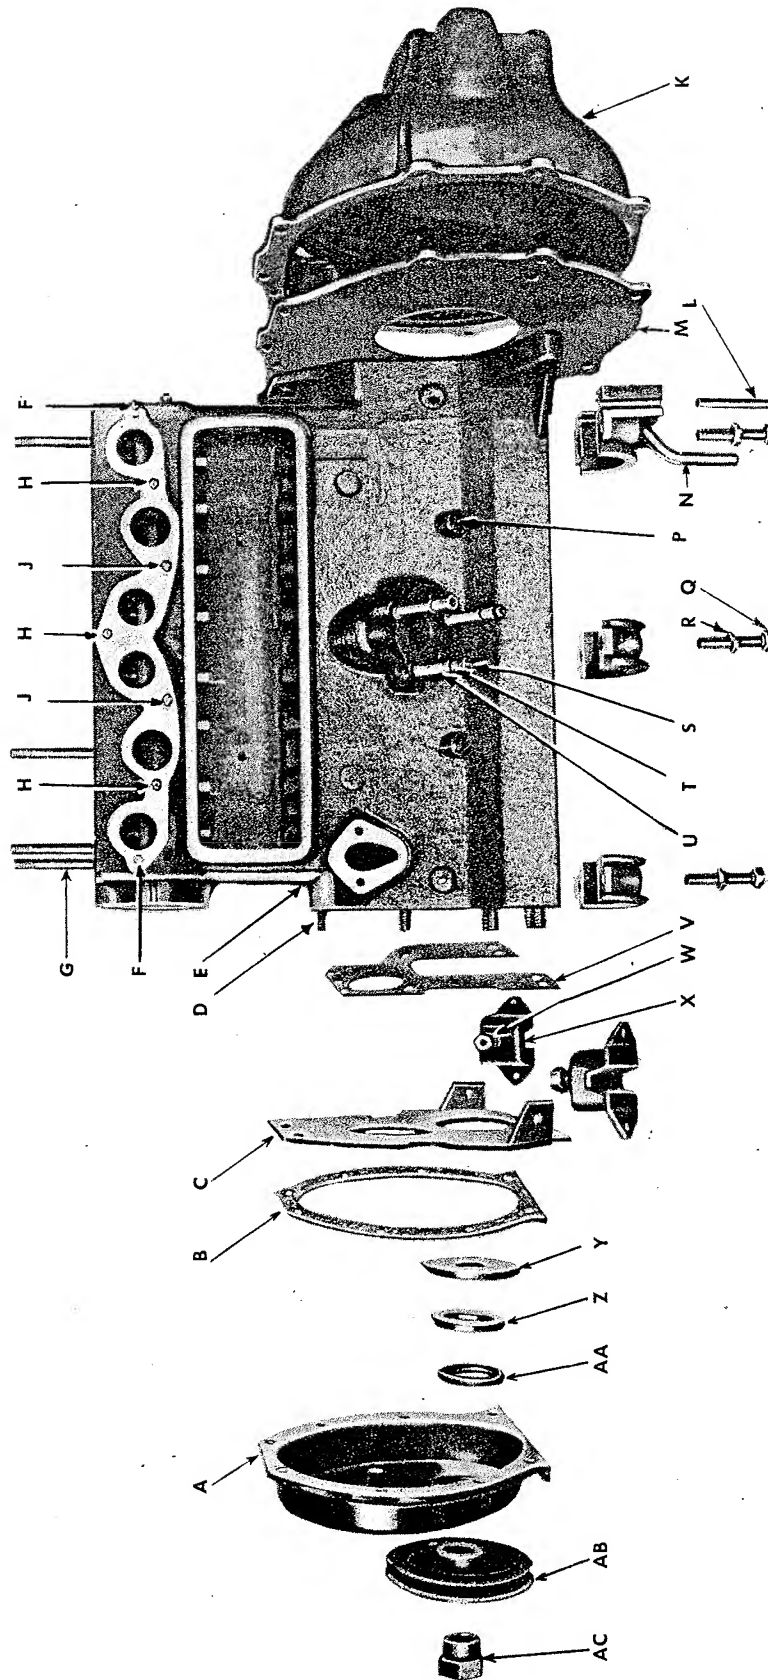

Key	Part Name	Ford Part No.	Willlys Part No.	Group No.
A	COVER.....	FM-GPW-6054.....	WO-A-1190.....	.0106D
B	GASKET.....	FM-GPW-6288.....	WO-630365.....	.0106D
C	PLATE.....	FM-GPW-6031-A3.....	WO-A-1463.....	.0106D
D	STUD.....	FM-88022-S.....	WO-384958.....	.0106D
E	BLOCK, assembly.....	FM-GPW-6009.....	WO-A-6793.....	.0101
F	STUD.....	FM-88082-S.....	WO-349712.....	.0108
G	STUD.....	FM-GPW-6066.....	WO-349368.....	.0101A
H	STUD.....	FM-88042-S.....	WO-300143.....	.0108
J	STUD.....	FM-88057-S7.....	WO-632159.....	.0108
K	HOUSING.....	FM-GPW-6392.....	WO-A-439.....	.0109C
L	PACKING.....	FM-GPW-6701.....	WO-637790.....	.0102A
M	PLATE.....	FM-GPW-7007.....	WO-A-5121.....	.0109C
N	PIPE.....	FM-GPW-6326.....	WO-630294.....	.0102A
P	PLUG.....	FM-358064-S.....	WO-5085.....	.0101


Key	Part Name	Ford Part No.	Willlys Part No.	Group No.
Q	BOLT.....	FM-GPW-6345.....	WO-381519.....	.0102A
R	WASHER.....	FM-34809-S.....	WO-5009.....	.0102A
S	NUT.....	FM-33798-S7.....	WO-A-1532.....	.0107
T	WASHER.....	FM-34806-S7.....	WO-51833.....	.0107
U	STUD.....	FM-88141-S.....	WO-375981.....	.0107
V	GASKET.....	FM-GPW-6020.....	WO-630359.....	.0106D
W	NUT.....	FM-33846-S2.....	WO-5916.....	.0110
X	INSULATOR.....	FM-GPW-6038-A.....	WO-A-7498.....	.0110
Y	SLINGER.....	FM-GPW-6310.....	WO-375877.....	.0102
Z	RETAINER.....	FM-GPW-6287.....	WO-375920.....	.0102A
AA	PACKING.....	FM-GPW-6700.....	WO-637098.....	.0102A
AB	PULLEY.....	FM-GPW-6312.....	WO-638113.....	.0102
AC	NUT.....	FM-GPW-6319.....	WO-387633.....	.0102

FIGURE 01-5—TIMING CHAIN COVER, CYLINDER BLOCK AND FLYWHEEL HOUSING—EXPLODED VIEW

## GROUP 01—ENGINE (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>0101—CRANKCASE AND CYLINDER BLOCK (Cont'd)</b>		
		FM-01A-12410	WO-637863	GASKET SET, engine overhaul (cont'd)		
		FM-GPW-6521	WO-630305	4 GASKET, spark plug		
		FM-GPW-6555-A	WO-51875	1 GASKET, valve spring cover		
		FM-GPW-6648	WO-630299	2 GASKET, valve cover screw		
		FM-GPW-8255	WO-639650	1 GASKET, ventilator to valve cover		
		FM-GPW-8543	WO-637053	1 GASKET, water outlet elbow		
		FM-GPW-6700	WO-637098	1 GASKET, water pump to cylinder block		
		FM-GPW-6702	WO-637237	1 PACKING, crankshaft		
		FM-GPW-6701	WO-637790	2 PACKING, rear bearing cap		
		FM-GPW-18387	WO-A-1537	2 PACKING, rear bearing cap		
	3320-GPW-18387			GASKET SET, engine, valve regrind (superseded by GASKET SET, FM-GPW-18387-B, WO-A-17402) (Note 1)	1	.424
		FM-GPW-18387-B	WO-A-17402	GASKET SET, engine, valve regrind (components also in GASKET SET, FM-GPW-18390-B, WO-A-17401) (supersedes GASKET SET, FM-GPW 18387	1	
				WO-A-1537) (Note 1)		
				(Consists of:		
		FM-GPW-6051-B	WO-A-8558	1 GASKET, cylinder head		
		FM-GPW-9450	WO-634814	1 GASKET, exhaust pipe flange		
		FM-GPW-9448	WO-638640	1 GASKET, intake and exhaust manifold		
		FM-GPW-9435	WO-634811	1 GASKET, intake to exhaust manifold		
		FM-01A-12410	WO-637865	4 GASKET, spark plug		
		FM-GPW-6555-A	WO-51875	2 GASKET, valve cover screw		
		FM-GPW-6521	WO-630305	1 GASKET, valve spring cover		
		FM-GPW-6648	WO-630299	1 GASKET, valve spring cover to ventilator		
		FM-GPW-8255	WO-639650	1 GASKET, water outlet elbow		
	H006-0282480	FM-74121-S	WO-51091	PLUG, expansion, S, 1 1/4 in. (cylinder block)	5	
	H006-0283800	FM-358064-S	WO-5085	PLUG, pipe, sq-hd., black, 1/8 in. (cylinder block oil hole)	4	
	H006-0283805	FM-353055-S	WO-5138	PLUG, pipe, sq-hd., black, 1/4 in. (drain, cylinder water jacket)	1	.0142
01-5						
	G503-0194018	FM-GPW-6051	WO-638678	<b>0101A—CYLINDER HEAD</b>		
				GASKET, engine cylinder head (superseded by GASKET, FM-GPW-6051-B, WO-A-8558)	1	.179

Note 1—GASKET SETS, FM-GPW-18387, WO-A-1537; and FM-GPW-18387-B, WO-A-17402, have the same components except GASKET, FM-GPW-9445, WO-A-6357, which is not in GASKET SET, FM-GPW-18307-B, WO-A-17402.

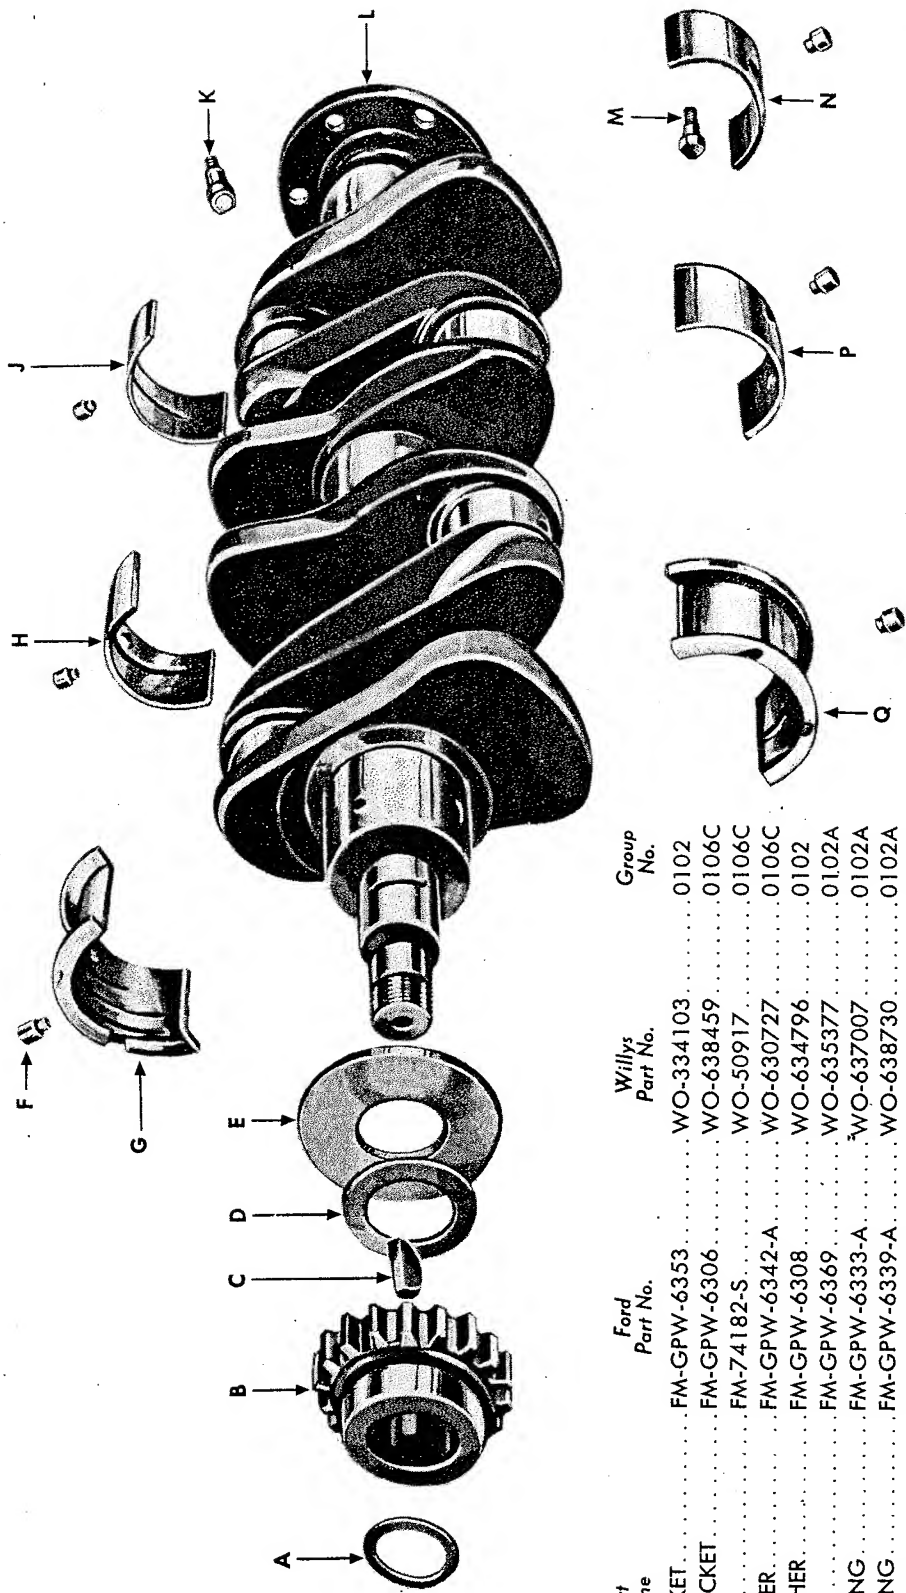

Key	Part Name	Ford Part No.	Willlys Part No.	Group No.
A	GASKET.....	FM-GPW-6353	WO-334103	0102
B	SPROCKET.....	FM-GPW-6306	WO-638459	0106C
C	KEY.....	FM-74182-S	WO-50917	0106C
D	SPACER.....	FM-GPW-6342-A	WO-630727	0106C
E	WASHER.....	FM-GPW-6308	WO-634796	0102
F	PIN.....	FM-GPW-6369	WO-635377	0102A
G	BEARING.....	FM-GPW-6333-A	WO-637007	0102A
H	BEARING.....	FM-GPW-6339-A	WO-638730	0102A
J	BEARING.....	FM-GPW-6331-A	WO-638732	0102A
K	BOLT.....	FM-GPW-6390	WO-116295	0109
L	CRANKSHAFT.....	FM-GPW-18288	WO-A-7568	0102
M	BOLT.....	FM-355497-S	WO-632157	0109
N	BEARING.....	FM-GPW-6337-A	WO-638733	0102A
P	BEARING.....	FM-GPW-63Y1-A	WO-638731	0102A
Q	BEARING.....	FM-GPW-6338-A	WO-637008	0102A

FIGURE 01-6—CRANKSHAFT AND BEARINGS

## GROUP 01—ENGINE (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>0101A—CYLINDER HEAD (Cont'd)</b>						
01-3, 4	3320-GPW-6051-B	FM-GPW-6051-B	WO-A-8558	GASKET, engine cylinder head (also in FM-GPW-18387, WO-A-1537 GASKET SET) (supersedes GASKET, FM-GPW-6051, WO-638678)	1	
	3320-GPW-6050	FM-GPW-6050	WO-A-1534	HEAD, cylinder, engine (ratio 6.48)	1	8.501
	3320-GPW-6065	FM-GPW-6065	WO-638635	BOLT, hex-hd., s-fin., alloy-S, $\frac{1}{16}$ -14NC-2 (rolled thd.) x $2\frac{3}{4}$ (superseded by STUD, FM-GPW-6066, WO-349368)	9	.0389
01-5	G085-2307376	FM-351025-S7	WO-638539	NUT, reg. hex., s-fin., alloy-S, $\frac{1}{16}$ -20NF-2	15	.0083
		FM-GPW-6060	WO-A-1549	NUT, cylinder head stud (ORD-A7044072) (Note 1)	2	
				STUD, S, cd-pltd., $\frac{1}{16}$ -14NC x $3\frac{1}{16}$ x $\frac{1}{16}$ -20NF (superseded by STUD, FM-GPW-6066, WO-349368)	5	
	3320-GPW-6066	FM-GPW-6066	WO-349368	STUD, S, $\frac{1}{16}$ -14NC x $3\frac{1}{16}$ x $\frac{1}{16}$ -20NF (supersedes STUD, FM-GPW-6060, WO-A-1549, and BOLT, FM-GPW-6065, WO-638635)	14	.0318
	3320-GPW-6067	FM-GPW-6067	WO-A-1548	STUD, S, cd-pltd., $\frac{1}{16}$ -14NC x $3\frac{1}{16}$ x $\frac{1}{16}$ -20NF	1	.0582
				STUD, cylinder head (ORD-C7044153) (Note 1)	2	
<b>0102—CRANKSHAFT</b>						
01-4	3320-GPW-6303-A	FM-GPW-6303-A	WO-638121	CRANKSHAFT, engine	1	24.06
01-6	3320-GPW-18288	FM-GPW-18288	WO-A-7568	CRANKSHAFT, engine, group assembly	1	
				(Consists of:		
		FM-GPW-6390	WO-116295	2 BOLT, special hd., S, $\frac{1}{2}$ -20NF-2 x $1\frac{1}{16}$		
		FM-GPW-6303-A	WO-638121	1 CRANKSHAFT		
		FM-33929-S	WO-52804	2 NUT, jam, hex., S, $\frac{1}{2}$ -20NF-2		
		FM-34909-S2	WO-52330	2 WASHER, lock, S, internal tooth, flat type, $\frac{1}{2}$ in.)		
				(Note: Parts Numbered FM-GPW-6390, WO-116295; FM-33929-S, WO-52804; and FM-34909-S2, WO-52330 are required for straight dowering of flywheel to crankshaft. Eliminates need of special tapered reamer.)		
01-6	3320-GPW-6353	FM-GPW-6353	WO-334103	GASKET, engine crankshaft oil slinger (also in FM-GPW-18390, WO-1536 GASKET SET)	1	.0073
01-4, 5	3320-GPW-6319	FM-GPW-6319	WO-387633	NUT, engine crankshaft, w/PIN, assembly	1	.228
20-2			WO-638513	NUT, engine crankshaft (Note 2)	1	
20-2		FM-GPWS-6312	WO-A-9205	PULLEY, engine crankshaft (Note 1)	1	
01-4, 5	3320-GPW-6312	FM-GPW-6312	WO-638113	PULLEY, engine crankshaft (Note 2)	1	.407
	H001-0518022	FM-74178-S	WO-5036	PULLEY, engine crankshaft (ORD-C7044165) (Note 3)	1	
	3320-GPW-6342-B	FM-GPW-6342-B	WO-630262	KEY, Woodruff, S, $\frac{3}{16}$ x $\frac{3}{4}$ (GM-124549)	1	
				SHIM, engine crankshaft (0.002 thk.)	as req.	.0104

01-5	3320-GPW-6310	FM-GPW-6310	WO-375877	SLINGER, oil, engine crankshaft	1	.0194
01-4, 6	3320-GPW-6308	FM-GPW-6308	WO-634796	WASHER, thrust, engine crankshaft (S, 1 1/4 I.D. x 3 1/2 O.D. x 0.156 thk.)	1	.179
<b>0102A—CRANKSHAFT BEARING</b>						
01-6	3320-GPW-6333-A	FM-GPW-6333-A	WO-637007	BEARING, engine crankshaft, front upper (std.) (also in BEARING SET, FM-GPW-18347, WO-A-6798)	1	
01-4, 6	3320-GPW-6338-A	FM-GPW-6338-A	WO-637008	BEARING, engine crankshaft, front lower (std.) (also in BEARING SET, FM-GPW-18347, WO-A-6798)	1	
01-6	3320-GPW-6339-A	FM-GPW-6339-A	WO-638730	BEARING, engine crankshaft, center upper (std.) (also in BEARING SET, FM-GPW-18347, WO-A-6798)	1	
01-4, 6	3320-GPW-6341-A	FM-GPW-6341-A	WO-638731	BEARING, engine crankshaft, center lower (std.) (also in BEARING SET, FM-GPW-18347, WO-A-6798)	1	
01-6	3320-GPW-6331-A	FM-GPW-6331-A	WO-638732	BEARING, engine crankshaft, rear upper (std.) (also in BEARING SET, FM-GPW-18347, WO-A-6798)	1	
01-4, 6	3320-GPW-6337-A	FM-GPW-6337-A	WO-638733	BEARING, engine crankshaft, rear lower (std.) (also in BEARING SET, FM-GPW-18347, WO-A-6798)	1	
	3320-GPW-6333-B	FM-GPW-6333-B	WO-637724	BEARING, engine crankshaft, front upper (0.010 undersize) (also in BEARING SET, FM-GPW-18348, WO-A-6746)	1	
	3320-GPW-6338-B	FM-GPW-6338-B	WO-637725	BEARING, engine crankshaft, front lower (0.010 undersize) (also in BEARING SET, FM-GPW-18348, WO-A-6746)	1	
	3320-GPW-6339-B	FM-GPW-6339-B	WO-639237	BEARING, engine crankshaft, center upper (0.010 undersize) (also in BEARING SET, FM-GPW-18348, WO-2-6746)	1	
	3320-GPW-6341-B	FM-GPW-6341-B	WO-639238	BEARING, engine crankshaft, center lower (0.010 undersize) (also in BEARING SET, FM-GPW-18348, WO-A-6746)	1	
	3320-GPW-6331-B	FM-GPW-6331-B	WO-639239	BEARING, engine crankshaft, rear upper (0.010 undersize) (also in BEARING SET, FM-GPW-18348, WO-A-6746)	1	
	3320-GPW-6337-B	FM-GPW-6337-B	WO-639240	BEARING, engine crankshaft, rear lower (0.010 undersize) (also in BEARING SET, FM-GPW-18348, WO-A-6746)	1	
		FM-GPW-6338-C	WO-116524	BEARING, engine crankshaft, front lower (0.020 undersize) (also in BEARING SET, FM-GPW-18349, WO-A-6747)	1	
		FM-GPW-6333-C	WO-116552	BEARING, engine crankshaft, front upper (0.020 undersize) (also in BEARING SET, FM-GPW-18349, WO-A-6747)	1	
		FM-GPW-6341-C	WO-116528	BEARING, engine crankshaft, center lower (0.020 undersize) (also in BEARING SET, FM-GPW-18349, WO-A-6747)	1	
		FM-GPW-6339-C	WO-116526	BEARING, engine crankshaft, center upper (0.020 undersize) (also in BEARING SET, FM-GPW-18349, WO-A-6747)	1	
		FM-GPW-6337-C	WO-116532	BEARING, engine crankshaft, rear lower (0.020 undersize) (also in BEARING SET, FM-GPW-18349, WO-A-6747)	1	
		FM-GPW-6331-C	WO-116530	BEARING, engine crankshaft, rear upper (0.020 undersize) (also in BEARING SET, FM-GPW-18349, WO-A-6747)	1	
		FM-GPW-6338-D	WO-116525	BEARING, engine crankshaft, front lower (0.030 undersize) (also in BEARING SET, FM-GPW-18350, WO-A-6748)	1	
		FM-GPW-6333-D	WO-116523	BEARING, engine crankshaft, front upper (0.030 undersize) (also in BEARING SET, FM-GPW-18350, WO-A-6748)	1	

Note 1—Only for vehicles modified by MWO ORD G503-W7 (see page 3). Note 2—Only for vehicles modified by MWO ORD G503-W8 (see page 3).

Note 3—Only for vehicles modified by MWO ORD G503-W9 (see page 3).

## GROUP 01—ENGINE (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>0102A—CRANKSHAFT BEARING (Cont'd)</b>		
		FM-GPW-6341-D	WO-116529	BEARING, engine crankshaft, center lower (0.030 undersize) (also in BEARING SET, FM-GPW-18350, WO-A-6748)	1	
		FM-GPW-6339-D	WO-116527	BEARING, engine crankshaft, center upper (0.030 undersize) (also in BEARING SET, FM-GPW-18350, WO-A-6748)	1	
		FM-GPW-6337-D	WO-116533	BEARING, engine crankshaft, rear lower (0.030 undersize) (also in BEARING SET, FM-GPW-18350, WO-A-6748)	1	
		FM-GPW-6331-D	WO-116531	BEARING, engine crankshaft, rear upper (0.030 undersize) (also in BEARING SET, FM-GPW-18350, WO-A-6748)	1	
	3320-GPW-18347	FM-GPW-18347	WO-A-6798	BEARING SET, engine crankshaft (std.)	1	2.411
		FM-GPW-6338-A	WO-637008	(Consists of:		
		FM-GPW-6333-A	WO-637007	1 BEARING, front lower		
		FM-GPW-6339-A	WO-638730	1 BEARING, front upper		
		FM-GPW-6341-A	WO-638731	1 BEARING, center upper		
		FM-GPW-6331-A	WO-638732	1 BEARING, center lower		
		FM-GPW-6337-A	WO-638733	1 BEARING, rear upper		
		FM-GPW-18348	WO-A-6746	1 BEARING, rear lower		
	3320-GPW-18348			BEARING SET, engine crankshaft (0.010 undersize)	1	2.835
		FM-GPW-6333-B	WO-637724	(Consists of:		
		FM-GPW-6338-B	WO-637725	1 BEARING, front upper		
		FM-GPW-6339-B	WO-639237	1 BEARING, front lower		
		FM-GPW-6341-B	WO-639238	1 BEARING, center upper		
		FM-GPW-6331-B	WO-639239	1 BEARING, center lower		
		FM-GPW-6337-B	WO-639240	1 BEARING, rear upper		
		FM-GPW-18349	WO-A-6747	1 BEARING, rear lower		
	3320-GPW-18349			BEARING SET, engine crankshaft (0.020 undersize)	1	3.08
		FM-GPW-6333-C	WO-116552	(Consists of:		
		FM-GPW-6338-C	WO-116524	1 BEARING, front upper		
		FM-GPW-6339-C	WO-116526	1 BEARING, front lower		
		FM-GPW-6341-C	WO-116528	1 BEARING, center upper		
		FM-GPW-6331-C	WO-116530	1 BEARING, center lower		
		FM-GPW-6337-C	WO-116532	1 BEARING, rear upper		
		FM-GPW-18350	WO-A-6748	1 BEARING, rear lower		
	3320-GPW-18350			BEARING SET, engine crankshaft (0.030 undersize)	1	
		FM-GPW-6338-D	WO-116525	(Consists of:		
		FM-GPW-6333-D	WO-116523	1 BEARING, front lower		
				1 BEARING, front upper		



## GROUP 01—ENGINE (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>0102A—CRANKSHAFT BEARING (Cont'd)</b>		
				BEARING SET, engine crankshaft (0.030 undersize) (cont'd)		
		FM-GPW-6341-D	WO-116529	1 BEARING, center lower		
		FM-GPW-6339-D	WO-116527	1 BEARING, center upper		
		FM-GPW-6337-D	WO-116533	1 BEARING, rear lower		
		FM-GPW-6331-D	WO-116531	1 BEARING, rear upper		
01-3, 5	3320-GPW-6345	FM-GPW-6345	WO-381519	BOLT, crankshaft bearing cap (hex-hd., S, 1/2-13NC x 2 3/8)	6	.0435
01-5	H001-1518011	FM-34809-S	WO-5009	WASHER, lock, S, SAE std., 1/2 in.	6	
01-4, 5	3320-GPW-6700	FM-GPW-6700	WO-637098	PACKING, engine crankshaft, front end (also in GASKET SET, FM-GPW-18390, WO-A-1536)	1	.0251
01-4	3320-GPW-6702	FM-GPW-6702	WO-637237	PACKING, engine crankshaft, rear end (CN-type 310-0) (also in GASKET SET, FM-GPW-18390, WO-A-1536)	2	.0179
01-5	3320-GPW-6701	FM-GPW-6701	WO-637790	PACKING, engine crankshaft rear bearing cap (also in GASKET SET, FM-GPW-18390, WO-A-1536)	2	.0184
01-3, 6	3320-GPW-6369	FM-GPW-6369	WO-635377	PIN, dowel, crankshaft bearing	5	.0135
01-5	3320-GPW-6326	FM-GPW-6326	WO-630294	PIPE, drain, engine crankshaft rear bearing cap	1	.0512
	3320-357420-S	FM-357420-S	WO-337112	PIN, S, 1/8 x 7/8	1	
01-5	3320-GPW-6287	FM-GPW-6287	WO-375920	RETAINER, engine crankshaft front packing	1	.0264
				<b>0103—PISTONS</b>		
				PISTON, engine, w/o PIN (std.)	4	
	3320-GPW-6110-A	FM-GPW-6110-A	WO-636954	PISTON, engine, w/o PIN (0.020 oversize)	4	
	3320-GPW-6110-C	FM-GPW-6110-C	WO-116021	PISTON, engine, w/o PIN (0.030 oversize)	4	
	3320-GPW-6110-D	FM-GPW-6110-D	WO-116022	PISTON, engine, w/PIN, assembly (std. size re-ring)	4	1.645
01-3, 4	3320-GPW-6105-A	FM-GPW-6105-A	WO-637041	PISTON, engine, w/PIN, assembly (0.020 oversize re-ring)	4	1.515
	3320-GPW-6105-C	FM-GPW-6105-C	WO-116019	PISTON, engine, w/PIN, assembly (0.030 oversize re-ring)	4	1.515
	3320-GPW-6105-D	FM-GPW-6105-D	WO-116020	PISTON, engine, w/PIN, assembly (0.040 oversize re-ring)	4	
	3320-GPW-6105-F	FM-GPW-6105-F	WO-116701			
				<b>0103A—RINGS</b>		
				RING, engine piston, top groove, std.	4	
01-7	FM-GPW-6150-A	FM-GPW-6150-A	WO-639864	RING, engine piston, top groove, 0.020 oversize	4	
	FM-GPW-6150-C	FM-GPW-6150-C	WO-116502	RING, engine piston, top groove, 0.030 oversize	4	
	FM-GPW-6150-D	FM-GPW-6150-D	WO-116503	RING, engine piston, second groove, std.	4	
01-7	FM-GPW-6155-A	FM-GPW-6155-A	WO-637042	RING, engine piston, second groove, 0.020 oversize	4	
	FM-GPW-6155-G	FM-GPW-6155-G	WO-116023	RING, engine piston, second groove, 0.030 oversize	4	
	FM-GPW-6155-H	FM-GPW-6155-H	WO-116024			

652



**FIGURE 01-7—PISTON AND CONNECTING ROD—EXPLODED VIEW**

## GROUP 01—ENGINE (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>0103A—RINGS (Cont'd)</b>						
	3320-GPW-6149-G	FM-GPW-6149-G	WO-A-6796	RING SET, engine piston, conventional type (0.020 oversize) (Consists of: 4 RING, top groove 4 RING, second groove 4 RING, bottom groove)	1	.652
	3320-GPW-6149-H	FM-GPW-6149-H	WO-A-6797	RING SET, engine piston, conventional type (0.030 oversize) (Consists of: 4 RING, top groove 4 RING, second groove 4 RING, bottom groove)	1	.652
	3320-GPW-6149-J	FM-GPW-6149-J	WO-A-15283	RING SET, engine piston, conventional type (.040 oversize)	1	
<b>0103B—PISTON PINS</b>						
01-7	3320-355497-S	FM-355497-S	WO-632157	BOLT, lock, engine piston pin (in connecting rod)	4	.0125
01-7	H001-1518009	FM-34807-S2	WO-5010	WASHER, lock, S, SAE std., $\frac{3}{8}$ in.	4	
01-4, 7	3320-GPW-6135-D	FM-GPW-6135-A FM-GPW-6135-D	WO-636961 WO-116003	PIN, engine piston (std. size) PIN, engine piston (0.003 oversize)	4 4	
<b>0104—CONNECTING RODS</b>						
01-4, 7	9680-640070		WO-637020	BOLT, engine connecting rod bearing cap (head has 2 flat sides, S, $\frac{1}{16}$ -20NF-2 x $2\frac{3}{8}$ )	8	
01-4, 7	3320-356021-S	FM-356021-S	WO-640070	BOLT, engine connecting rod bearing cap (offset head, S, $\frac{1}{16}$ -20NF x $2\frac{3}{8}$ )	8	
01-7	H001-0726020	FM-356028-S	WO-636962 WO-52825 WO-639999	NUT, hex, S, $\frac{1}{16}$ -20NF-2 NUT, hex, S, stamped, std. type, $\frac{1}{16}$ -20NF-2 (Palnut) ROD, connecting, engine, Nos. 1 and 3, assembly (less bearing) (superseded by ROD, FM-GPW-6200, WO-640071)	8 8 8	.0167 .0042
01-3, 7	3320-GPW-6200	FM-GPW-6200	WO-640071	ROD, connecting, engine, Nos. 1 and 3, assembly (less bearing) (supersedes ROD, WO-639999) (Note 1)	2	
			WO-639858	ROD, connecting, engine, Nos. 1 and 3, w/BEARING, assembly	2	2.525
			WO-640000	ROD, connecting, engine, Nos. 2 and 4, assembly (less bearing) (superseded by ROD, FM-GPW-6201, WO-640072)	2	
01-4	3320-GPW-6201	FM-GPW-6201	WO-640072	ROD, connecting, engine, Nos. 2 and 4, assembly (less bearing) (supersedes ROD, WO-640000) (Note 1)	2	2.525
			WO-639859	ROD, connecting, engine, Nos. 2 and 4, w/BEARING, assembly	2	

0104A—CONNECTING ROD BEARINGS			
01-7	3320-GPW-6211-A	FM-GPW-6211-A	WO-639862
	3320-GPW-6211-B	FM-GPW-6211-B	WO-116534
	3320-GPW-6211-C	FM-GPW-6211-C	WO-116535
		FM-GPW-6211-D	WO-116536
	3320-GPW-18330-A	FM-GPW-18330-A	WO-A-7233
		FM-GPW-6211-A	WO-639862
	3320-GPW-18330-B	FM-GPW-18330-B	WO-A-7234
		FM-GPW-6211-B	WO-116534
	3320-GPW-18330-C	FM-GPW-18330-C	WO-A-7235
		FM-GPW-6211-C	WO-116535
	3320-GPW-18330-D	FM-GPW-18330-D	WO-A-7236
		FM-GPW-6211-D	WO-116536
	3320-GPW-6510	FM-GPW-6510	
01-3	3320-GPW-6510-B	FM-GPW-6510-B	WO-375811
	3320-GPW-6511	FM-GPW-6511	
01-8	3320-GPW-6511-B	FM-GPW-6511-B	WO-637045
01-8	3320-GPW-6546	FM-GPW-6546	WO-375994
01-3, 4, 8	3320-GPW-6514	FM-GPW-6514	WO-637044
	3320-GPW-6513	FM-GPW-6513	WO-638636
01-3, 4, 8	3320-GPW-6550	FM-GPW-6550	WO-637704
01-4	G503-7036580	FM-GPW-6505	WO-637183
	G503-7036579	FM-GPW-6507	WO-637182
	3320-GPW-6549	FM-355571-S	WO-375910
		FM-GPW-6549	WO-637048
01-4, 8	3320-GPW-6549-B	FM-GPW-6549-B	WO-640020
	3320-GPW-6552-B	FM-GPW-6552-B	WO-640019
BEARING, engine connecting rod, upper or lower half (std.) (also in BEARING SET, FM-GPW-18330-A, WO-A-7233) ..... 8 BEARING, engine connecting rod, upper or lower half (0.010 undersize) (also in BEARING SET, FM-GPW-18330-B, WO-A-7234) ..... 8 BEARING, engine connecting rod, upper or lower half (0.020 undersize) (also in BEARING SET, FM-GPW-18330-C, WO-A-7235) ..... 8 BEARING, engine connecting rod, upper or lower half (0.030 undersize) (also in BEARING SET, FM-GPW-18330-D, WO-A-7236) ..... 8 BEARING SET, engine connecting rod (std.) ..... 4 (Consists of: 2 BEARING) ..... BEARING SET, engine connecting rod (0.010 undersize) ..... 4 (Consists of: 2 BEARING) ..... BEARING SET, engine connecting rod (0.020 undersize) ..... 4 (Consists of: 2 BEARING) ..... BEARING SET, engine connecting rod (0.030 undersize) ..... 4 (Consists of: 2 BEARING) .....			
0105—VALVES, SEATS, GUIDES, AND SPRINGS			
		GUIDE, engine exhaust valve stem (superseded by GUIDE, FM-GPW-6510-B, WO-375811) ..... 4	
		GUIDE, engine exhaust valve stem (supersedes GUIDE, FM-GPW-6510) ..... 4	.391
		GUIDE, engine intake valve stem (superseded by GUIDE, FM-GPW-6511-B, WO-637045) ..... 4	
		GUIDE, engine intake valve stem (supersedes GUIDE, FM-GPW-6511) ..... 4	.391
		LOCK, engine valve spring retainer (lower) ..... 16	.0883
		RETAINER, engine valve spring (lower) ..... 8	.0334
		SPRING, engine valve ..... 8	.0658
		SPRING, engine valve tappet clearance (model MA only) ..... 8	
		VALVE, exhaust, engine (RMC-A-366) ..... 4	.505
		VALVE, intake, engine (RMC-A-365) ..... 4	.153
0105A—TAPPETS			
		NUT, engine valve tappet adjusting screw ( $\frac{3}{8}$ -24NF) ..... 8	
		SCREW, adjusting, engine valve tappet (S., hex hd., $\frac{3}{8}$ -24NF x $\frac{7}{8}$ ) (superseded by SCREW, FM-GPW-6549-B, WO-640020) ..... 8	
		SCREW, adjusting, engine valve tappet (self-locking) (supersedes SCREW, FM-GPW-6549, WO-637048) ..... 8	.0505
		TAPPET, engine valve, w/SCREW, assembly ..... 8	

Note 1—Rod, assemblies, FM-GPW-6200 and FM-GPW-6201 use studs for cap; WO-640071 and WO-640072 use bolts—complete assemblies are interchangeable.


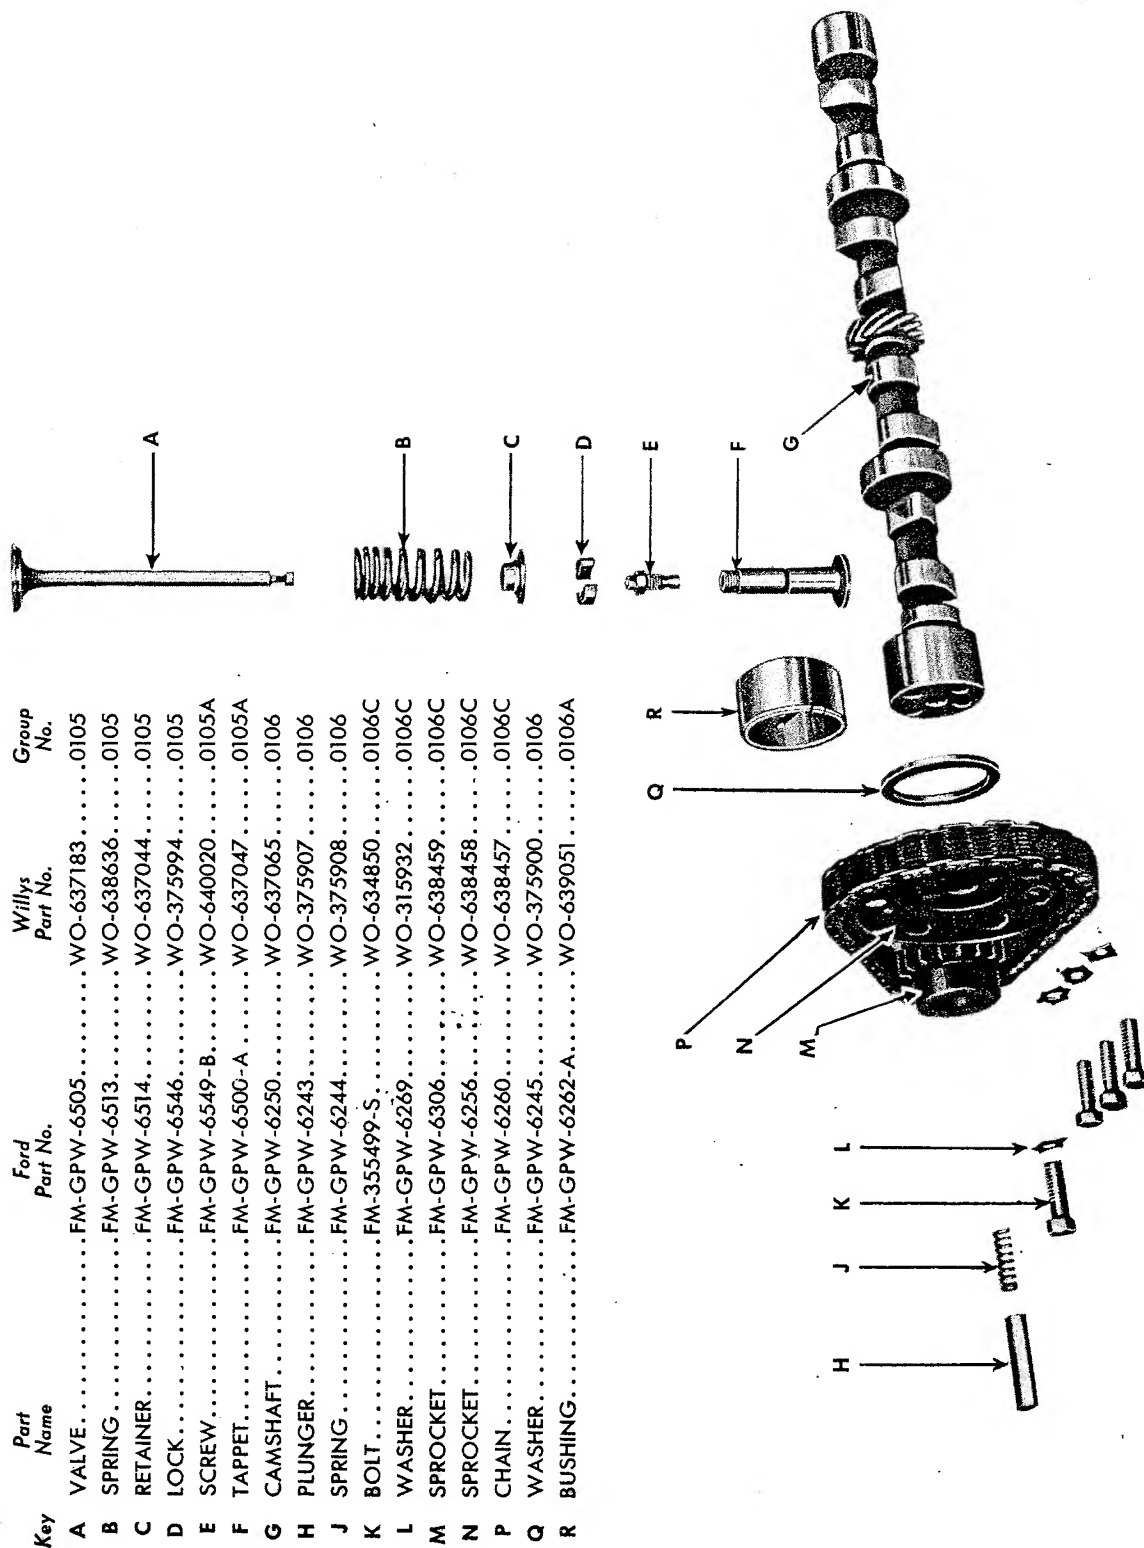


FIGURE 01-8—CAMSHAFT, TIMING CHAIN AND VALVE MECHANISM—EXPLODED VIEW



Key	Part Name	Ford Part No.	Willys Part No.	Group Number
A	GASKET	FM-GPW-6521	WO-630305	0105C
B	COVER	FM-GPW-6520	WO-630303	0105C
C	GASKET	FM-GPW-6555-A	WO-51875	0105C
D	BOLT	FM-355452-S	WO-639052	0105C
E	VALVE, assembly	FM-GPW-6769	WO-A-6895	0107N
F	ELBOW	FM-GPW-6722	WO-A-6885	0107N
G	TUBE, assembly	FM-GPW-6756	WO-A-6922	0107N
H	BOLT	FM-355451-S	WO-632158	0105C
J	ELBOW	FM-GPW-9268	WO-384549	0107N
K	BODY	FM-GPW-6758-B	WO-A-6919	0107N
L	GASKET	FM-GPW-6648	WO-630299	0107N
M	BAFFLE	FM-GPW-6762	WO-630298	0107N

FIGURE 01-9—VALVE COVER AND VENTILATOR PARTS—EXPLODED VIEW

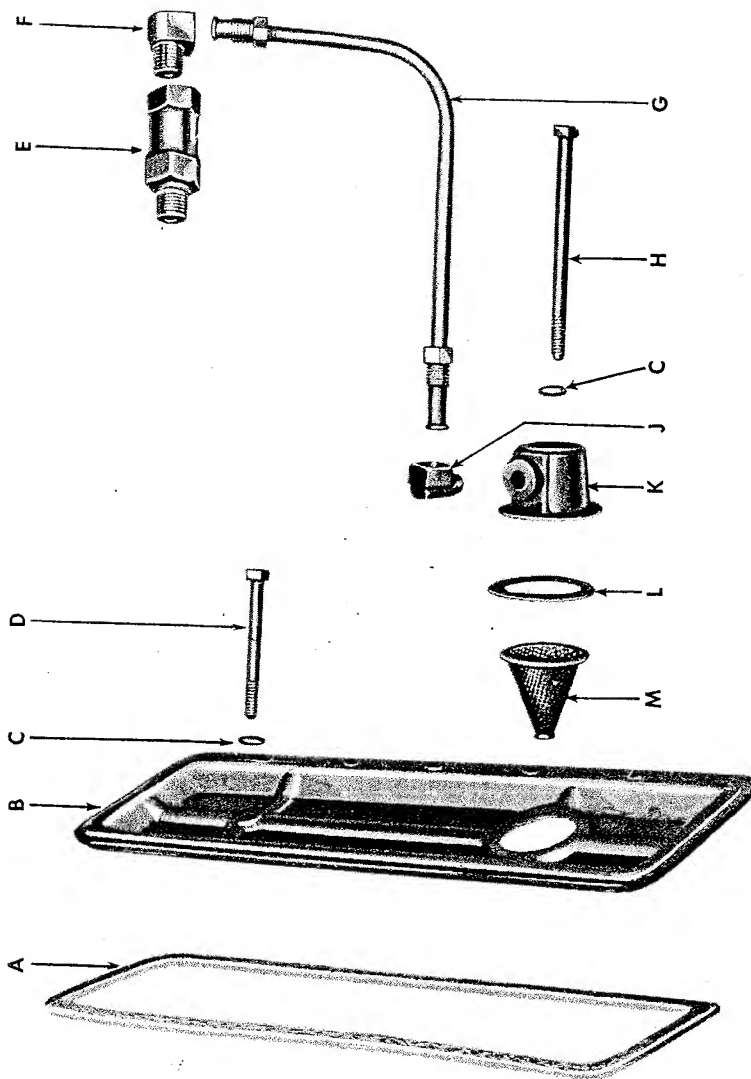

## GROUP 01—ENGINE (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>0105A—TAPPETS (Cont'd)</b>						
01-4, 8	3320-GPW-6500-A	FM-GPW-6500-A FM-GPW-6500-B	WO-637047 WO-115498	TAPPET, engine valve, std. (WIL-ST-1265) (CCS-W-41-25)..... TAPPET, engine valve, 0.004 O.S. ....	8 4	.228 .228
<b>0105C—VALVE COVERS AND GASKETS</b>						
01-3, 9	G503-0131476	FM-GPW-6520	WO-630303	COVER, engine valve spring .....	1	.261
01-9		FM-355451-S	WO-632158	BOLT, hex-hd., S, $\frac{5}{16}$ -18NC-2 x $4\frac{1}{8}$ .....	1	.0167
01-9		FM-355452-S	WO-639052	BOLT, hex-hd., S, $\frac{5}{16}$ -18NC-2 x $3\frac{1}{16}$ .....	1	.0167
01-9	G503-0194022	FM-GPW-6521	WO-630305	GASKET, engine valve spring cover (also in FM-GPW-18387, WO-A-1537, GASKET SET) .....	1	.0432
	G503-0194032	FM-GPW-6555		GASKET, engine valve spring cover bolt (superseded by GASKET, FM-GPW-6555-A, WO-51875) .....	1	
01-9		FM-GPW-6555-A	WO-51875	GASKET, engine valve spring cover bolt (also in FM-GPW-18387, WO-A-1537, GASKET SET) (supersedes GASKET, FM-GPW-6555) .....	2	.0036
<b>0106—CAMSHAFT</b>						
01-4, 8	G503-0131476	FM-GPW-6250	WO-637065	CAMSHAFT, engine .....	1	5.67
01-4, 8	3320-GPW-6243	FM-GPW-6243	WO-375907	PLUNGER, thrust, engine camshaft .....	1	.244
01-8	3320-GPW-6244	FM-GPW-6244	WO-375908	SPRING, engine camshaft thrust plunger .....	1	.0106
01-8		FM-GPW-6285	WO-630364	STUD, engine camshaft thrust plunger (in timing chain cover) .....	1	.142
01-4, 8	3320-GPW-6245	FM-GPW-6245	WO-375900	WASHER, thrust, engine camshaft .....	1	.099
<b>0106A—CAMSHAFT BUSHINGS (BEARINGS)</b>						
01-4, 8	3320-GPW-6262-A	FM-GPW-6262-A	WO-639051	BUSHING, engine camshaft, front .....	1	.116
	3320-74127-S	FM-74127-S	WO-51460	PLUG, expansion, engine camshaft rear bearing ( $1\frac{3}{4}$ in. O.D.) .....	1	
<b>0106C—CHAINS AND SPROCKETS</b>						
01-4, 8	G503-7036574	FM-GPW-6260	WO-638457	CHAIN, timing, engine camshaft ( $\frac{1}{2}$ in. thk. x 1 in. wide) (LK-S-40936) .....	1	1.47
01-6	3320-GPW-6342-A	FM-GPW-6342-A	WO-630727	SPACER, engine crankshaft sprocket .....	1	.0111
01-4, 8	G503-7036571	FM-GPW-6256	WO-638458	SPROCKET, engine camshaft (S, 36 teeth, 5.780 O.D. x 1.013 thk.) (LK-S-035117-1) .....	1	.603
01-8		FM-355499-S	WO-634850	BOLT, hex-hd., s-fin., alloy-S, $\frac{3}{8}$ -24NF x $1\frac{1}{4}$ .....	4	.0125
01-8	3320-GPW-6269	FM-GPW-6269	WO-315932	WASHER, lock, S, $\frac{3}{8}$ in. ....	4	.0016
01-4, 6	G503-7036572	FM-GPW-6306	WO-638459	SPROCKET, engine crankshaft (S, 18 teeth, 2.870 O.D. x 1.656 thk.) (LK-S-35116-1) .....	1	.684
01-6	H101-0124552	FM-74182-S	WO-50917	KEY, Woodruff, No. 13 ( $\frac{3}{8}$ x 1) (GM-124542) .....	1	

## 0106D—TIMING CHAIN COVER

01-1, 4, 5	3320-GPW-6016	FM-GPW-6016	WO-A-1190	COVER, engine timing chain, assembly (superseded by COVER, assembly, WO-A-1190)	1	1.37
	3320-GPW-6054	FM-GPW-6054	WO-52542	COVER, engine timing chain, assembly (supersedes COVER, assembly, FM-GPW-6016)	1	
01-5		FM-33800-S7	WO-384958	NUT, reg., hex., S., cd-pltd., $\frac{3}{8}$ -24NPF-2	6	.0125
	H001-1518009	FM-88022-S	WO-34807-S2	STUD, $\frac{3}{8}$ -16NC x $1\frac{1}{2}$ x $\frac{3}{8}$ -24NPF (timing chain cover to block)	6	
01-5	3320-GPW-6288	FM-GPW-6288	WO-5010	WASHER, lock, S., SAE std., $\frac{3}{8}$ in.	6	
			WO-630365	GASKET, engine timing chain cover (also in GASKET SET, FM-GPW-18390, WO-A-1536)		
01-5	3320-GPW-6020	FM-GPW-6020	WO-630359	GASKET, engine cylinder block to timing chain cover plate (also in GASKET SET, FM-GPW-18390, WO-A-1536)	1	.0329
		FM-GPW-6031		PLATE, engine cylinder block to timing chain cover (superseded by PLATE, FM-GPW-6031-A3, WO-A-1463)	1	.0042
01-5		FM-GPW-6031-A3	WO-A-1463	PLATE, engine cylinder block to timing chain cover (supersedes PLATE, FM-GPW-6031)	1	
		FM-20349-S2	WO-50163	BOLT, hex-hd., S., $\frac{3}{8}$ -24NPF-2 x $\frac{3}{4}$ (plate to front cover)	1	2.02
		FM-24389-S2	WO-5919	BOLT, hex-hd., S., $\frac{3}{8}$ -24NPF-2 x 1 (plate to front cover)	3	
		FM-24348-S	WO-6412	BOLT, hex-hd., S., $\frac{3}{8}$ -16NC-2 x $\frac{3}{4}$ (plate to cylinder block)	1	.0125
		FM-33800-S7	WO-52542	NUT, reg., hex., S., cd-pltd., $\frac{3}{8}$ -24NPF-2	3	
		FM-34807-S2	WO-5010	WASHER, lock, S., SAE std., $\frac{3}{8}$ in.	4	
	H001-1518009	FM-GPW-6286	WO-375917	RING, retaining, engine timing chain cover packing	7	.0285


## 0107—OIL PUMP

01-10	3320-GPW-6664	FM-GPW-6604	WO-630384	BODY, engine oil pump	1	
01-10		FM-GPW-6664	WO-630387	COVER, engine oil pump, assembly	1	1.743
01-10		FM-31079-S	WO-51819	SCREW, mach., fil-hd., S., No. 12 (0.214)-24NC-2 x $\frac{5}{8}$	1	.0022
01-10	H001-1518006	FM-34804-S2	WO-51969	WASHER, lock, S., SAE std., No. 12 (0.214)	1	
01-3, 10	3320-GPW-6673	FM-GPW-6673	WO-636600	DISK, engine oil pump rotor	1	.0973
	3320-GPW-6619	FM-GPW-6619	WO-630392	GASKET, engine oil pump cover (0.003 thk.) (also in GASKET SET, FM-GPW-18380, WO-A-6750 and FM-GPW-18390, WO-A-1536)	1	
01-10	3320-GPW-6659	FM-GPW-6659	WO-639870	GASKET, engine oil pump cover (vellumoid, 0.010 thk.) (also in GASKET SET, FM-GPW-18380, WO-A-6750 and FM-GPW-18390, WO-A-1536)	1	
		FM-355262-S	WO-380197	GASKET, engine oil pump cover to body screw	1	.0042
01-10	3320-GPW-6625	FM-GPW-6625	WO-375927	GASKET, engine oil pump shaft (also in GASKET SET, FM-GPW-18380, WO-A-6750 and FM-GPW-18390, WO-A-1536)	1	
01-10	3320-GPW-6630	FM-GPW-6630	WO-630394	GASKET, engine oil pump to cylinder block (also in GASKET SET, FM-GPW-18380, WO-A-6750 and FM-GPW-18390, WO-A-1536)	1	
		FM-GPW-6642	WO-634813	GASKET, engine oil pump oil relief spring retainer (paper) (also in GASKET SET, FM-GPW-18380, WO-A-6750 and FM-GPW-18390, WO-A-1536)	1	
01-3, 10	3320-GPW-6610	FM-GPW-6610	WO-637425	GEAR, driven, engine oil pump (12 teeth, 1.1369 O.D. x $\frac{5}{16}$ thk.) (also in KIT, FM-GPW-18379, WO-A-6749)	1	
		FM-GPW-6684	WO-330964	PIN, sight., S., $\frac{3}{8}$ x $\frac{31}{32}$ (also in KIT, FM-GPW-18379, WO-A-6749)	1	.022
01-10	3320-GPW-18380	FM-GPW-18380	WO-A-6750	GASKET SET, service, engine oil pump	1	.13
		FM-355262-S	WO-380197	(Consists of:		
		FM-GPW-6627	WO-630398	1 GASKET, cover to body screw		
		FM-GPW-6659	WO-639870	1 GASKET, oil float support		
				1 GASKET, oil pump cover		

## GROUP 01—ENGINE (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>0107—OIL PUMP (Cont'd)</b>		
				GASKET SET, service, engine oil pump (Cont'd)		
		FM-GPW-6619	WO-630392	4 GASKET, oil pump cover		
		FM-GPW-6630	WO-630394	1 GASKET, oil pump to cylinder block		
		FM-GPW-6625	WO-375927	1 GASKET, oil pump shaft		
		FM-GPW-6642	WO-634813	1 GASKET, oil relief spring retainer		
		FM-GPW-6648	WO-630299	1 GASKET, ventilator to valve spring cover		
		FM-GPW-6628	WO-630389	4 SHIM, oil relief spring		
	3320-GPW-18379	FM-GPW-18379	WO-A-6749	KIT, repair, engine oil pump	1	2.085
				(Consists of:		
		FM-GPW-6610	WO-637425	1 GEAR, driven		
	3320-GPW-6684	FM-GPW-6684	WO-330964	1 PIN, driven gear		
	3320-GPW-6614	FM-GPW-6614	WO-343306	1 PINION		
	3320-GPW-6608	FM-GPW-6608	WO-636599	1 SHAFT		
01-3, 10	3320-GPW-6614	FM-GPW-6614	WO-343306	PINION, engine oil pump (7 teeth) (also in KIT, FM-GPW-18379, WO-A-6749)	1	.0055
01-10	H006-0283180	FM-353052-S5	WO-52525	PLUG, engine oil pump cover (pipe, slotted, $\frac{1}{8}$ in.)	1	.0256
01-3, 10	3320-GPW-6663	FM-GPW-6663	WO-630518	PLUNGER, engine oil pump relief	1	7.445
01-1, 3	3320-GPW-6600	FM-GPW-6600	WO-637636	PUMP, oil, engine, assembly	3	.0092
01-5	H101-0103180	FM-88141-S	WO-375981	STUD, S, $\frac{5}{16}$ -18NC-2 x $2\frac{1}{4}$ x $\frac{5}{16}$ -24NF-2	3	
01-5		FM-33798-S7	WO-A-1532	NUT, hex., reg., S, cd-pltd., $\frac{5}{16}$ -24NF-2	3	
01-5	H001-7025711	FM-34806-S7	WO-51833	WASHER, lock, S, cd-pltd., SAE std., $\frac{5}{16}$ in.	1	.0422
01-3, 10	3320-GPW-6644	FM-GPW-6644	WO-630390	RETAINER, engine oil pump oil relief spring	1	
01-3, 10	3320-GPW-6608	FM-GPW-6608	WO-636599	SHAFT, engine oil pump, assembly (also in KIT, FM-GPW-18379, WO-A-6749)	1	
01-3, 10	3320-GPW-6628	FM-GPW-6628	WO-630389	SHIM, engine oil pump oil relief spring	as req.	
01-3, 10	3320-GPW-6654	FM-GPW-6654	WO-336155	SPRING, engine oil pump oil relief plunger (S, wire, 13 turns, 0.360 O.D. x $1\frac{1}{8}$ free lgth.)	1	.0106
				<b>0107A—OIL PAN</b>		
				GASKET, engine oil pan (also in GASKET SET, FM-GPW-18512, WO-A-1538 and FM-GPW-18390, WO-A-1536)	1	
	3320-GPW-6710	FM-GPW-6710	WO-639980	GASKET, engine oil pan drain plug (optional with GASKET, FM-GPW-6734)	1	
		FM-GPW-B-12410	WO-640030	GASKET, engine oil pan drain plug (optional with GASKET, FM-B-12410) (also in GASKET SET, FM-GPW-18512, WO-A-01538 and FM-GPW-18390, WO-A-1536)	1	
	3320-GPW-6734	FM-GPW-6734	WO-314338	GASKET SET, engine oil pan (also in GASKET SET, FM-GPW-18390, WO-A-1536)	1	.0037
		FM-GPW-18512	WO-A-1538	(Consists of:	1	.293
	G503-0194020			1 GASKET, oil strainer float support		
		FM-GPW-6627	WO-630398	1 GASKET, oil pan		
		FM-GPW-6710	WO-639980	1 GASKET, oil pan drain plug		
		FM-GPW-6734	WO-314338			

01-1, 3	3320-GPW-6675	FM-GPW-6675	WO-A-1167	PAN, oil, engine, assembly (superseded by PAN, FM-GPW-6675, WO-A-7238)	1	2.79
01-3		FM-355403-S2	WO-A-7238	PAN, oil, engine, assembly (supersedes PAN, WO-A-1167)	1	.0083
01-3	G503-0340661	FM-GPW-6727	WO-639979	BOLT, hex-hd., S, $\frac{5}{16}$ -18NC-2 x $\frac{1}{16}$ (w/lock WASHER)	20	.093
				PLUG, drain, engine oil pan ( $\frac{7}{8}$ in.)	1	

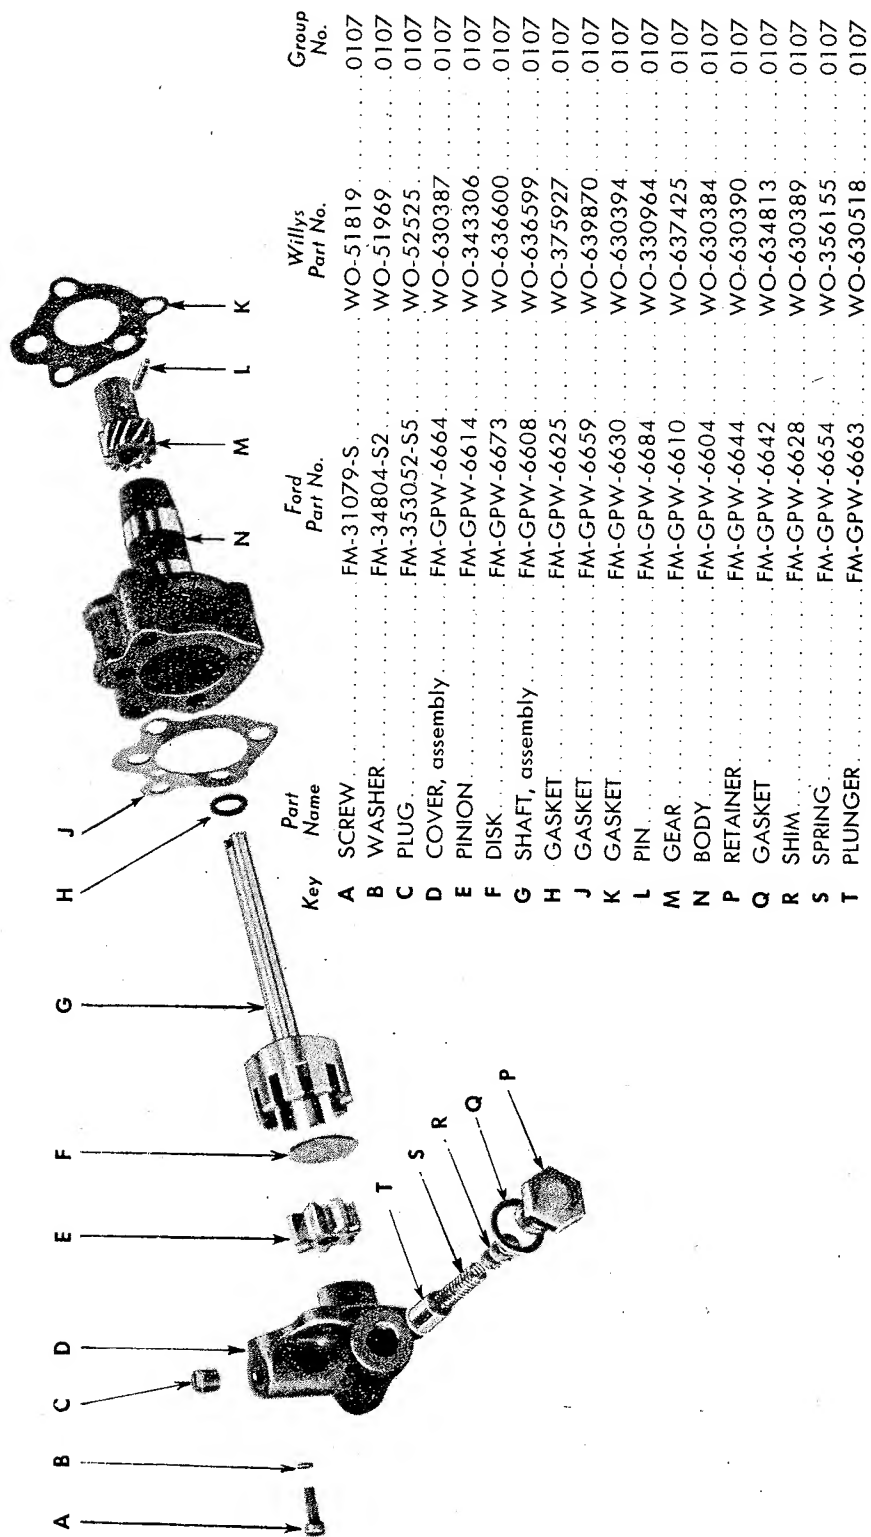

Key	Part Name	Ford Part No.	Willlys Part No.	Group No.
A	SCREW	FM-31079-S	WO-51819	0107
B	WASHER	FM-34804-S2	WO-51969	0107
C	PLUG	FM-353052-S5	WO-52525	0107
D	COVER, assembly	FM-GPW-6664	WO-630387	0107
E	PINION	FM-GPW-6614	WO-343306	0107
F	DISK	FM-GPW-6673	WO-636600	0107
G	SHAFT, assembly	FM-GPW-6608	WO-636599	0107
H	GASKET	FM-GPW-6625	WO-375927	0107
J	GASKET	FM-GPW-6659	WO-639870	0107
K	GASKET	FM-GPW-6630	WO-630394	0107
L	PIN	FM-GPW-6684	WO-330964	0107
M	GEAR	FM-GPW-6610	WO-637425	0107
N	BODY	FM-GPW-6604	WO-630384	0107
P	RETAINER	FM-GPW-6644	WO-630390	0107
Q	GASKET	FM-GPW-6642	WO-634813	0107
R	SHIM	FM-GPW-6628	WO-630389	0107
S	SPRING	FM-GPW-6654	WO-356155	0107
T	PLUNGER	FM-GPW-6663	WO-630518	0107


FIGURE 01-10—OIL PUMP ASSEMBLY—EXPLODED VIEW

## GROUP 01—ENGINE (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>0107A-1—OIL FLOAT</b>						
01-3, 4	G503-7036578	FM-GPW-6615	WO-630396	FLOAT, oil strainer, engine, assembly (TSE-215-B)	1	.391
	H001-0811055	FM-72089-S	WO-5134	PIN, cotter, split, S, $\frac{1}{8}$ x $1\frac{3}{4}$	1	
	3320-GPW-6627	FM-GPW-6627	WO-630398	GASKET, engine oil strainer float support (also in GASKET SET, FM-GPW-18512, WO-A-1538 and FM-GPW-18390, WO-A-1536)	1	
01-3, 4	3320-GPW-6617	FM-GPW-6617	WO-630397	SUPPORT, engine oil strainer float	1	.136
	H001-5419140	FM-355396-S	WO-636796	BOLT, hex-hd., $\frac{5}{16}$ -18NC-2 x $\frac{3}{4}$	2	.0125
	H001-7025711	FM-34806-S7	WO-51833	WASHER, lock, S, cd-pltd., SAE std., $\frac{5}{16}$ in.	2	
<b>0107E—OIL FILTER</b>						
01-12	G148-0140138	FM-GPW-18663	WO-A-1247	BRACKET, mounting, engine oil filter, assembly	1	.472
		FM-GPW-18644-A	WO-A-6818	CASE, engine oil filter, assembly	1	
		FM-GPW-18687	WO-A-1251	CLAMP, engine oil filter, assembly	2	
01-12	G148-0140138	FM-GPW-18687-A	WO-A-1231	COVER, engine oil filter, assembly (superseded by COVER, assembly, FM-GPW-18687-A, WO-A-1231)	1	
		FM-GPW-18691	WO-A-1232	COVER, engine oil filter, assembly (PU-25791) (supersedes COVER, assembly, FM-GPW-18687)	1	.961
		FM-GPW-18662-B	WO-A-1235	BOLT, oil filter cover (superseded by BOLT, FM-GPW-18691-A, WO-A-1232)	1	.097
01-12	H017-0540462	FM-GPW-18691-A	WO-A-1232	BOLT, hex-hd., S, $\frac{1}{16}$ -20NF-2 (PU-25755) (supersedes BOLT, FM-GPW-18691)	1	
		FM-GPW-18662-A	WO-A-1235	ELEMENT, engine oil filter, assembly (superseded by ELEMENT, assembly, FM-GPW-18662-B, WO-A-1236)	1	.815
		FM-GPW-18662-B	WO-A-1235	ELEMENT, engine oil filter, assembly (PU-26687) (supersedes ELEMENT, assembly, FM-GPW-18662-A)	1	
01-2	H017-0540501	FM-GPW-18660	WO-A-1230	FILTER, oil, engine, assembly (superseded by FILTER, assembly FM-GPW-18660-A, WO-A-1230)	1	2.95
		FM-GPW-18660-A	WO-A-1230	FILTER, oil, engine assembly (PU-27078) (supersedes FILTER, assembly, FM-GPW-18660)	1	
		FM-24347-S2	WO-51396	BOLT, hex-hd., S, $\frac{5}{16}$ -24NF-2 x $\frac{3}{4}$	4	
01-12	G503-0194033	FM-34806-S7	WO-51833	WASHER, lock, S, cd-pltd., SAE std., $\frac{5}{16}$ in.	4	
		FM-34746-S7	WO-A-1533	WASHER, plain, S, cd-pltd., SAE std., $\frac{5}{16}$ in.	4	
		FM-GPW-18688	WO-A-1235	GASKET, engine oil filter cover (superseded by GASKET, FM-GPW-18688-A, WO-A-1235)	1	.0223
01-12	G503-0194033	FM-GPW-18688-A	WO-A-1235	GASKET, engine oil filter cover (PU-25802) (supersedes GASKET, FM-GPW-18688)	1	
		FM-GPW-18675		GASKET, engine oil filter cover bolt (PU-25756) (superseded by GASKET, FM-GPW-18675-A, WO-A-1233)	1	

01-12	G116-1593934	FM-GPW-18675-A	WO-A-1233	GASKET, engine oil filter cover bolt (PU-25756) (supersedes GASKET, FM-GPW-18675).....	1	.0036
01-12	G148-0340604	FM-GPW-13434-A FM-358040-S FM-GPW-18685	WO-345961 WO-A-1237	GROMET, engine oil filter bracket..... PLUG, drain, engine oil filter (S, %, hex., 1/4-18NPT) (PU-25795)..... SPRING, engine oil filter cover bolt (superseded by SPRING, FM-GPW-18685-A, WO-A-1234).....	1 1 1	.0212 .0425
01-12	G148-0389795-A	FM-GPW-18685-A	WO-A-1234	SPRING, engine oil filter cover bolt (S-wire, tapered, I.D. 1 3/16 to 1 7/8) (PU-25757) (supersedes SPRING, FM-GPW-18685).....	1	.0331
<b>0107G—OIL FILLER</b>						
01-3	3320-GPW-6763-A G503-0407837 3320-GPW-6763-C	FM-GPW-6770 FM-GPW-6772 FM-GPW-6771 FM-GPW-6763-A FM-GPW-6763-B FM-GPW-6763-C	WO-A-5105 WO-53108 WO-A-6918 WO-639555 WO-A-5165 WO-A-6915	BRACKET, support, engine oil filler tube..... CLAMP, engine crankcase ventilator hose to oil filler tube..... HOSE, flexible, engine crankcase ventilator to oil filler tube (3/4 O.D. x 1/2 I.D. x 3 3/4)..... TUBE, engine oil filler (straight type)..... TUBE, engine oil filler, assembly (funnel type)..... TUBE, engine oil filler, assembly (with ventilator tube connection).....	1 2 1 1 1 1	.027 .0135 .0406 .798
<b>0107H—LEVEL INDICATOR (GAGE)</b>						
01-3	3320-GPW-6789 G503-0132455 3320-GPW-6766-C	FM-GPW-6789 FM-GPW-6766-B FM-GPW-6766-C	WO-A-7280 WO-A-5168 WO-A-6525	GASKET, engine oil filler cap..... INDICATOR, engine oil level, w/filler CAP, assembly (for TUBE FM-GPW-6763-B) INDICATOR, engine oil level, w/filler CAP, assembly (for TUBE FM-GPW-6763-C)	1 1 1	.44
<b>0107J—OIL DISTRIBUTION SYSTEM</b>						
01-3, 9	3320-9N-18679 3320-9N-18686 G503-0217815 G503-0217816 3320-GPW-9316 3320-GPW-9323	FM-9N-18679 FM-9N-18686 FM-GPW-18667 FM-GPW-18666 FM-GPW-9316 FM-GPW-9323	WO-387891 WO-384569 WO-A-1197 WO-A-1198 WO-A-1450 WO-A-1456	CONNECTOR, inverted flared tube, br., 1/4 in., 1/8 in. male pipe end (tube to oil filter) ELBOW, inverted flared tube, br., 1/4 in., 1/8 in. male pipe end (1 used flexible connection to engine; 1 used tube to cylinder block)..... TUBE, engine oil filter inlet, assembly..... TUBE, flexible (1 used oil filter outlet; 1 used oil gage tube)..... TUBE, oil gage, assembly (1/4 in. O.D.)..... UNION, inverted flared tube, br., 1/4 in. (flexible connection to tube assembly).....	1 2 1 2 1 1	.0258 .0425 .456 .31 .143 .0253
<b>0107N—CRANKCASE VENTILATOR</b>						
01-3, 9	3320-GPW-6762 3320-GPW-6758	FM-GPW-6762 FM-GPW-6758	WO-630298	BAFFLE, engine crankcase ventilator..... BODY, engine crankcase ventilator (superseded by BODY, FM-GPW-6758-A, WO-A-1061).....	1 1	.0419
01-3, 9	3320-GPW-6758-A	FM-GPW-6758-A	WO-A-1061	BODY, engine crankcase ventilator, assembly (supersedes BODY, FM-GPW-6758) (superseded by BODY, FM-GPW-6758-B, WO-A-6919).....	1	
01-9	3320-GPW-6758-B	FM-GPW-6758-B	WO-A-6919	BODY, engine crankcase ventilator, assembly (used with valve, tube and fittings shown in this group) (supersedes BODY, FM-GPW-6758-A, WO-A-1061).....	1	.152
01-9		FM-GPW-9268	WO-384549	ELBOW, inverted flared tube, 3/8 in., 1/8 in. male pipe end (engine crankcase ventilator to tube).....	1	.0446
01-9		FM-GPW-6722	WO-A-6885	ELBOW, inverted flared tube, 3/8 in., 1/4 in. male pipe end (engine crankcase ventilator tube to valve).....	1	.065



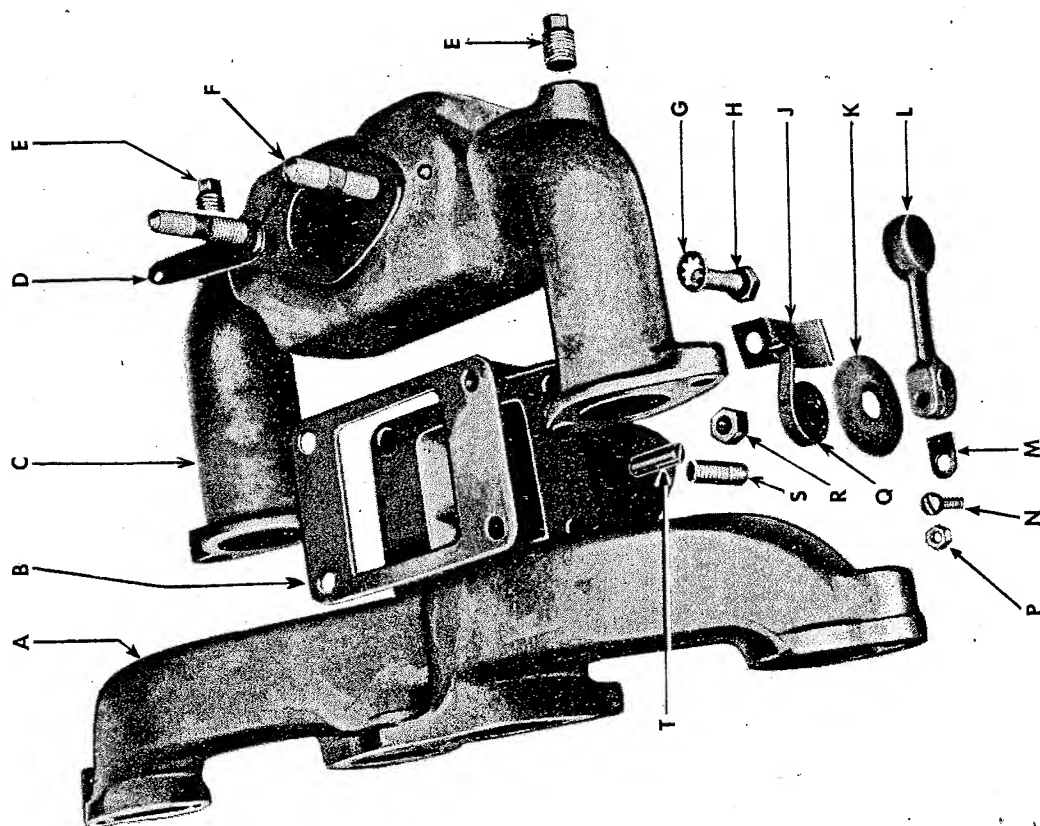


Key	Part Name	Ford Part No.	Willlys Part No.	Group No.
A	MANIFOLD, assembly	FM-GPW-9426	WO-A-912	0108
B	GASKET	FM-GPW-9435	WO-634811	0108
C	MANIFOLD, assembly	FM-GPW-9424-B	WO-A-1166	0108
D	CLIP	FM-GPW-9751	WO-A-1173	0303
E	PLUG	FM-353055-S	WO-5138	0108
F	STUD	FM-88057-S7	WO-632159	0108 0301A
G	WASHER	FM-34906-S	WO-52428	0108
H	BOLT	FM-20386-S7	WO-51486	0108
J	STOP	FM-GPW-9463	WO-639743	0108C
K	WASHER	FM-GPW-9484	WO-637209	0108C
L	LEVER	FM-GPW-9458	WO-637210	0108C
M	KEY	FM-GPW-9465	WO-637211	0108C
N	SCREW	FM-355160-S2	WO-5272	0108C
P	NUT	FM-355836-S7	WO-A-1701	0108C
Q	SPRING	FM-GPW-9467-A	WO-637208	0108C
R	NUT	FM-33800-S7	WO-52542	0402
S	STUD	FM-88032-S7	WO-332515	0402
T	SHAFT	FM-GPW-9456	WO-637206	0108C

FIGURE 01-11—MANIFOLD ASSEMBLY—EXPLODED VIEW

RA PD 342268

Key	Part Name	Ford Part No.	Willys Part No.	Group No.
A	BOLT.....	FM-GPW-18691-A.....	WO-A-1232.....	0107E
B	GASKET.....	FM-GPW-18675-A.....	WO-A-1233.....	0107E
C	COVER.....	FM-GPW-18687-A.....	WO-A-1231.....	0107E
D	SPRING.....	FM-GPW-18685-A.....	WO-A-1234.....	0107E
E	GASKET.....	FM-GPW-18688-A.....	WO-A-1235.....	0107E
F	ELEMENT, assembly.....	FM-GPW-18662-B.....	WO-A-1236.....	0107E
G	CASE, assembly.....	.....	WO-A-6818.....	0107E
H	PLUG.....	FM-358040-S.....	WO-A-1237.....	0107E
J	CLAMP, w/BOLT and NUT.....	FM-GPW-18644-A.....	WO-A-1251.....	0107E

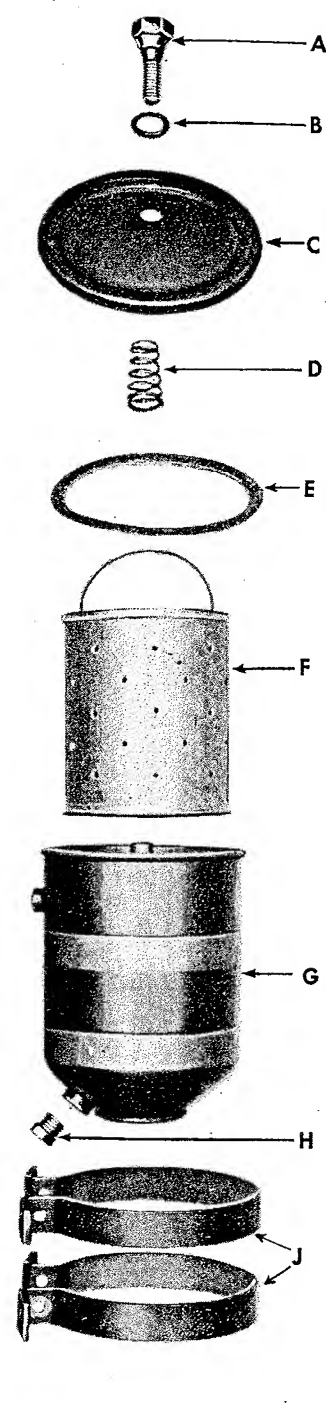

RA PD 342264

FIGURE 01-12—OIL FILTER ASSEMBLY—EXPLODED VIEW

## GROUP 01—ENGINE (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>0107N—CRANKCASE VENTILATOR (Cont'd)</b>						
01-9	3320-GPW-6648	FM-GPW-6648	WO-630299	GASKET, engine crankcase ventilator to valve spring cover (also in GASKET SETS, FM-GPW-18390, WO-A-1536, FM-GPW-18380, WO-A-6750)	1	
01-1, 9	3320-GPW-6756	FM-GPW-6756	WO-A-6922	TUBE, engine crankcase ventilator valve, assembly	1	.14
01-9	3320-GPW-6769	FM-GPW-6769	WO-A-6895	VALVE, engine crankcase ventilator, assembly	1	.538
<b>0108—INTAKE AND EXHAUST MANIFOLDS</b>						
01-11	G503-0194021	FM-GPW-9448	WO-638640	GASKET, engine intake and exhaust manifold (also in GASKET SET, FM-GPW-18323, WO-A-7835 and FM-GPW-18387, WO-A-1537)	1	
	3320-GPW-9435	FM-GPW-9435	WO-634811	GASKET, engine intake to exhaust manifold (also in GASKET SET, FM-GPW-18323, WO-A-7835, and FM-GPW-18387, WO-A-1537)	1	
	G503-0194027	FM-GPW-18323	WO-A-7835	GASKET SET, engine manifold (Consists of: 1 GASKET, exhaust pipe flange 1 GASKET, intake and exhaust manifold 1 GASKET, intake to exhaust manifold)	1	.0614
01-1, 3, 4, 11	3320-GPW-9426	FM-GPW-9450 FM-GPW-9448 FM-GPW-9435 FM-GPW-9410-B FM-GPW-9428	WO-634814 WO-638640 WO-634811 WO-A-1165	MANIFOLD, engine intake and exhaust, assembly MANIFOLD, exhaust, engine, assembly (superseded by MANIFOLD, FM-GPW-9426, WO-A-912)	1	
	3320-GPW-9426	FM-GPW-9426	WO-A-912	MANIFOLD, exhaust, engine, w/HEAT CONTROL, assembly (supersedes MANIFOLD, FM-GPW-9428)	1	6.68
	3320-GPW-9424	FM-GPW-9424		MANIFOLD, intake, engine, assembly (superseded by MANIFOLD, FM-GPW-9424-B, WO-A-1166)	1	
01-1, 3, 10	3320-GPW-9424-B	FM-GPW-9424-B	WO-A-1166	MANIFOLD, intake, engine, assembly (supersedes MANIFOLD, FM-GPW-9424)	1	4.871
01-11		FM-20386-S7	WO-51486	BOLT, hex-hd., S, cd-pltd., $\frac{5}{16}$ -18NC-2 x 1 (intake to exhaust manifold)	4	
01-11	G518-7001420	FM-33800-S7	WO-52542	NUT, hex., reg., S, cd-pltd., $\frac{3}{8}$ -24NF-2	7	.01
01-5	H101-0103190	FM-88082-S	WO-349712	STUD, S, $\frac{3}{8}$ -16NC x $1\frac{1}{2}$ x $\frac{3}{8}$ -24NF-2	2	.0092
01-5		FM-88057-S7	WO-632159	STUD, S, cd-pltd., $\frac{3}{8}$ -16NC x $1\frac{1}{2}$ x $\frac{3}{8}$ -24NF-2	2	.0167
01-5		FM-88042-S	WO-300143	STUD, S, $\frac{3}{8}$ -16NC x $1\frac{1}{2}$ x $\frac{3}{8}$ -24NF-2	3	.016
	3320-GPW-9443	FM-GPW-9443	WO-344732	WASHER, special, S, $\frac{1}{8}$ O.D. x $\frac{1}{8}$ I.D. x $\frac{1}{8}$ to $\frac{3}{8}$ thk. at I.D.	2	
01-11	H001-1519010	FM-34906-S	WO-52428	WASHER, lock, S, internal tooth, flat type, $\frac{3}{8}$ in.	4	.0142
01-11		FM-353055-S	WO-5138	PLUG, engine intake manifold (pipe, sq-hd., black, $\frac{1}{4}$ in.)	2	
<b>0108C—HEAT CONTROL</b>						
	3320-GPW-9462	FM-GPW-9462	WO-636438	BEARING, engine heat control valve shaft	1	


01-11	3320-GPW-9465	FM-GPW-9465	WO-637211	KEY, engine heat control valve lever.....	1	
01-11	FM-GPW-9458	FM-GPW-9458	WO-637210	LEVER, counterweight, engine heat control valve.....	1	.127
01-11	FM-355836-S7	FM-355836-S7	WO-A-1701	NUT, hex., reg., S, cd-pltd., No. 10 (0.190)-24NC-2.....	1	
01-11	FM-355160-S2	FM-355160-S2	WO-5272	SCREW, rd-hd., mach., S, No. 10 (0.190)-24NC-2 x 3/4.....	1	.212
01-11	FM-GPW-9456	FM-GPW-9456	WO-637206	SHAFT, engine heat control valve.....	1	
	3320-GPW-9467	FM-GPW-9467		SPRING, engine heat control valve (superseded by SPRING, FM-GPW-9467-A, WO-637208).....	1	
01-11	3320-GPW-9467-A	FM-GPW-9467-A	WO-637208	SPRING, engine heat control valve (supersedes SPRING, FM-GPW-9467).....	1	.119
01-11	3320-GPW-9463	FM-GPW-9463	WO-639743	STOP, engine heat control valve spring.....	1	
01-3	3320-GPW-9460	FM-GPW-9460	WO-636439	VALVE, engine heat control.....	1	.0782
01-11	3320-GPW-9484	FM-GPW-9484	WO-637209	WASHER, engine heat control valve spring (S, special, 1 1/2 O.D. x 0.310 I.D. x 1/8 thk. at opening).....	1	.0049
<b>0109—FLYWHEEL</b>						
	3320-GPW-6375	FM-GPW-6375	WO-A-1443	FLYWHEEL, engine.....	1	4.89
01-6		FM-355497-S	WO-632157	BOLT, hex-hd., S, 3/8-24NF-2 x 1 3/8.....	4	.0125
01-6	3320-GPW-6390	FM-GPW-6390	WO-116295	BOLT, special head, S, 1/2-20NF-2 x 1 3/8 (Note 1).....	2	.0769
		FM-33929-S2	WO-52804	NUT, jam, hex., S, 1/2-20NF-2 (Note 1).....	2	
		FM-33800-S7	WO-52542	NUT, reg., hex., S, cd-pltd., 3/8-24NF-2.....	4	
		FM-34907-S7	WO-53135	WASHER, lock, S, cd-pltd., internal tooth, flat type, 3/8 in.....	4	
		FM-34909-S2	WO-52330	WASHER, lock, S, internal tooth, flat type, 1/2 in. (Note 1).....	2	
	3320-GPW-18289	FM-GPW-18289	WO-A-7503	FLYWHEEL, engine, group assembly.....	1	
				(Consists of:		
		FM-GPW-6390	WO-116295	2 BOLT, special hd., S, 1/2-20NF-2 x 1 3/8.....		
		FM-GPW-6375	WO-A-1443	1 FLYWHEEL.....		
		FM-33929-S	WO-52804	2 NUT, jam, hex., S, 1/2-20NF-2.....		
		FM-34909-S2	WO-52330	2 WASHER, lock, S, internal tooth, flat type, 1/2 in.).....		
				NOTE: Parts numbered FM-GPW-6390, WO-116295; FM-33929-S, WO-52804; and FM-34909-S2, WO-52330, are required for straight doweling of flywheel to crankshaft. Eliminates need of special tapered reamer.		
	3320-GPW-6387	FM-GPW-6387	WO-632156	PIN, dowel, flywheel to crankshaft (tapered).....	2	
<b>0109B—RING GEAR</b>						
01-4	3320-GPW-6384	FM-GPW-6384	WO-635394	GEAR, ring, engine flywheel (S, 97 teeth, 10.980 I.D. x 12.185 O.D. x 3/8 wide).....	1	.863
<b>0109C—FLYWHEEL HOUSING</b>						
01-1, 5	3320-GPW-6392	FM-GPW-6392	WO-A-439	HOUSING, engine flywheel (includes starting motor bushing).....	1	7.852
		FM-24409-S7	WO-6606	BOLT, hex-hd., S, cd-pltd., 3/8-24NF-2 x 1 1/8.....	4	
		FM-24489-S	WO-52379	BOLT, hex-hd., S, 3/8-24NF-2 x 1 5/8.....	2	
		FM-355597-S	WO-630101	BOLT, hex-hd., S, 3/8-24NF-2 x 2 1/8 (dowel bolt).....	2	.0167
	G518-7001420	FM-33800-S7	WO-52542	NUT, reg., hex., S, cd-pltd., 3/8-24NF-2.....	8	
	H001-1518009	FM-34807-S2	WO-5010	WASHER, lock, S, SAE std., 3/8 in.....	8	
01-4, 5		FM-GPW-7007	WO-A-5121	PLATE, engine cylinder block to flywheel housing.....	1	1.043

Note 1—Also available with FLYWHEEL, group assembly, FM-GPW-18289, WO-A-7503 and CRANKSHAFT, group assembly, FM-GPW-18288, WO-A-7568.

## GROUP 01—ENGINE (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
01-1, 5	3320-GPW-6043	FM-GPW-6043	WO-A-146	0110—MOUNTINGS	1	.212
	H001-5420520	FM-24328-S2	WO-52189		3	
	H001-1518009	FM-24348-S	WO-6412		1	
		FM-34807-S2	WO-5010		4	
		FM-GPWS-6071			1	
		FM-GPW-6069	WO-A-5125		1	.407
	3320-GPW-6044	FM-GPW-6044	WO-52542		2	
	G518-7001420	FM-33800-S7	WO-52909		1	
	H001-4057595	FM-34807-S2	WO-5010		2	
	H001-1518009	FM-34747-S7	WO-A-1680		1	
	H001-7043741	FM-GPW-6038	WO-A-542		2	
	3320-GPW-6038		WO-A-7498		2	
		FM-GPW-6038-A			2	.277
			WO-6609		4	.0042
01-5	G085-2212144	FM-24427-S7	WO-5934	0201—CLUTCH DISK	4	
	G085-2712158	FM-24387-S7	WO-A-1532		4	
	G166-0314832	FM-33798-S7	WO-5916		2	
	G085-2307356	FM-33846-S2	WO-51833		4	
	H001-7025711	FM-34806-S7	WO-5009		2	
	H001-1518011	FM-34809-S			2	
	3320-GPW-6040-A	FM-GPW-6040-A			1	.554
			WO-A-6156		4	
	3320-GPW-6040-B	FM-GPW-6040-B	WO-52542		4	
	G518-7001420	FM-33800-S7	WO-5010		2	.0251
02-1, 2	H001-1518009	FM-34807-S2	WO-A-1680	0201—CLUTCH DISK	as req.	
	H001-7043741	FM-34747-S7	WO-A-1051		1	2.541
		FM-GPW-6098	WO-636755	PLATE, disk, engine clutch, w/HUB, assembly (B&B-11123)		

Note 1—Only for vehicles modified by MWO ORD G503-W7.

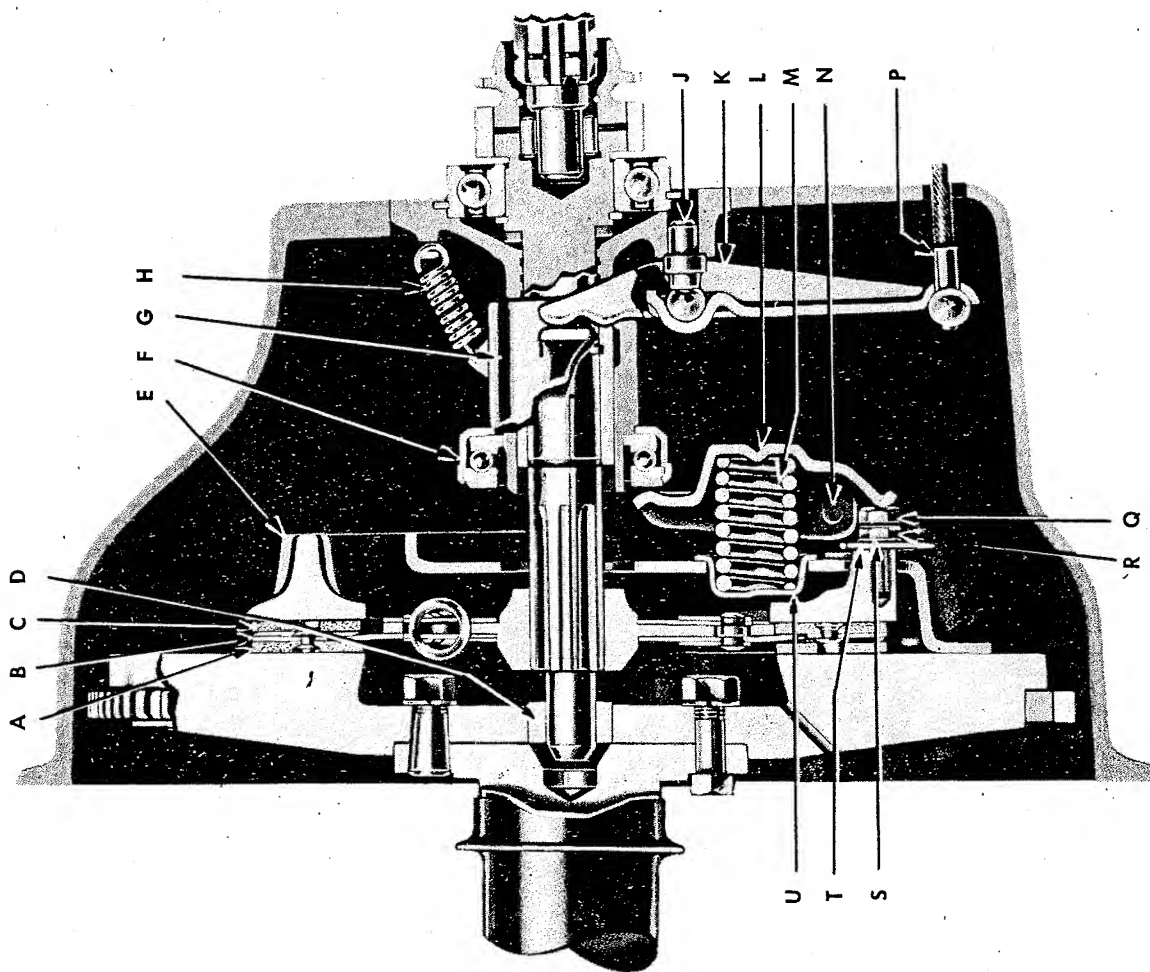

Key	Part Name	Ford Part No.	Willys Part No.	Group No.
A	FACING	FM-GPW-7549	WO-371567	0201A
B	PLATE	FM-GPW-7550	WO-636755	0201
C	FACING	FM-GPW-7577	WO-636778	0201A
D	BUSHING	FM-GPW-7600	WO-639578	0205
E	PLATE	FM-GPW-7566	WO-638152	0202
F	BEARING	FM-74-7580-B	WO-635529	0203
G	CARRIER	FM-GPW-7561	WO-639654	0203
H	SPRING	FM-GPW-7562	WO-630117	0203
J	FULCRUM	FM-GPW-7516	WO-630068	0203
K	LEVER	FM-GPW-7515	WO-630112	0203
L	LEVER	FM-GPW-7591	WO-638158	0202
M	SPRING	FM-GPW-7572	WO-638993	0202
N	PIN	FM-GPW-7565	WO-638159	0202
P	CABLE	FM-GPW-7530	WO-A-5102	0203
Q	SCREW	FM-24325-S	WO-638154	0202
R	NUT	FM-33921-S7	WO-638155	0202
S	WASHER	FM-34745-S2	WO-638305	0202
T	SPRING	FM-GPW-7590	WO-638153	0202
U	CUP	FM-GPW-7567	WO-638157	0202

FIGURE 02-1—CLUTCH ASSEMBLY—SECTIONAL VIEW






As perplexing and strange as the Sphinx  
Is Joe Dope's spare part storage - it (er) smells  
Lots of parts, that's quite true  
Ah, but find 'em - Can You?  
He will soon say "We're short" so we think

Don't  
be a  
Dope!

**HANDLE EQUIPMENT RIGHT!**

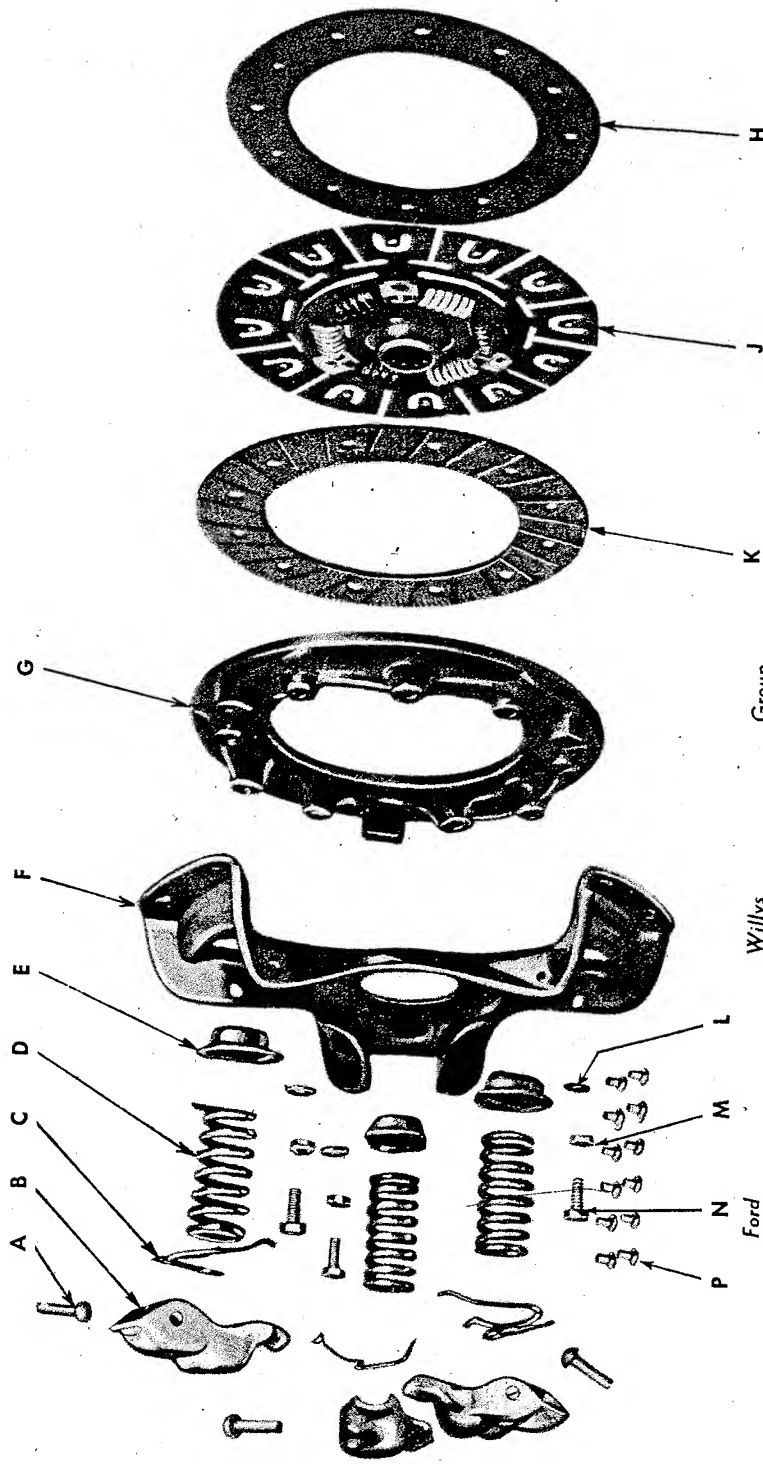

Key	Part Name	Ford Part No.	Willlys Part No.	Group Number
A	PIN	FM-GPW-7565	WO-638159	0202
B	LEVER	FM-GPW-7591	WO-638158	0202
C	SPRING	FM-GPW-7590	WO-638153	0202
D	SPRING	FM-GPW-7572	WO-638993	0202
E	CUP	FM-GPW-7567	WO-638157	0202
F	COVER	FM-GPW-7570	WO-638151	0202
G	PLATE	FM-GPW-7566	WO-638152	0202
H	FACING	FM-GPW-7549	WO-371567	0201A
J	PLATE, assembly	FM-GPW-7550	WO-636755	0201
K	FACING	FM-GPW-7577	WO-636755	0201A
L	WASHER	FM-34745-S2	WO-638305	0202
M	NUT	FM-33921-S7	WO-638155	0202
N	SCREW	FM-24325-S	WO-638154	0202
P	RIVET	FM-351926-SA	WO-374681	0201A

FIGURE 02-2—CLUTCH PRESSURE PLATE AND DISK—EXPLODED VIEW

## GROUP 02—CLUTCH (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>0201A—FACINGS AND RIVETS</b>		
01-1, 2	5960-C-5509	FM-GPW-7577	WO-636778	FACING, engine clutch, rear (B&B-4324) (also in FACING SET, FM-GPW-18358, WO-A-6751)	1	
01-1, 2	5960-C-5510	FM-GPW-7549	WO-371567	FACING, engine clutch, front (B&B-2940) (also in FACING SET, FM-GPW-18358, WO-A-6571)	1	
02-2	5960-CS-5509-A	FM-351926-SA FM-GPW-18358	WO-374681 WO-A-6751	RIVET, tubular, S, fl. ck-hd., $\frac{5}{32}$ x $\frac{3}{16}$	12	
				FACING SET, engine clutch disk	1	1.043
				(Consists of:		
				1 FACING, engine clutch, rear		
				1 FACING, engine clutch, front		
				15 RIVET)		
				<b>0202—COVER AND PRESSURE PLATE</b>		
02-2		FM-GPW-7570	WO-638151	COVER, engine clutch	1	
02-1, 2		FM-GPW-7567	WO-638157	CUP, engine clutch pressure spring	3	
	3320-GPW-18359	FM-GPW-18359	WO-A-6752	KIT, repair, engine clutch cover (superseded by KIT, FM-GPW-18359-B, WO-A-7833)	1	
				(Consists of:		
				3 CUP, pressure spring		
				3 LEVER, pressure spring		
				3 PIN, pivot, lever		
				3 SPRING, pressure		
				3 SPRING, return, pressure plate)		
	3320-GPW-18359-B	FM-GPW-7590 FM-GPW-18359-B	WO-638153 WO-A-7833	KIT, repair, engine clutch cover (supersedes KIT, FM-GPW-18359, WO-A-6752)	1	3.063
				(Consists of:		
				3 CUP, pressure spring		
				3 LEVER, pressure spring		
				3 NUT, adjusting screw		
				3 PIN, pivot, lever		
				3 SCREW, adjusting		
				3 SPRING, pressure		
				3 SPRING, return, pressure plate		
				3 WASHER, adjusting screw)		
02-1, 2				LEVER, engine clutch pressure spring	3	
02-1, 2				NUT, lock, engine clutch lever adjusting screw (thin, hex., s-fin., S., cd-pltd., $\frac{1}{4}$ -28NF-2)	3	
02-1, 2				PIN, pivot, engine clutch pressure spring lever	3	

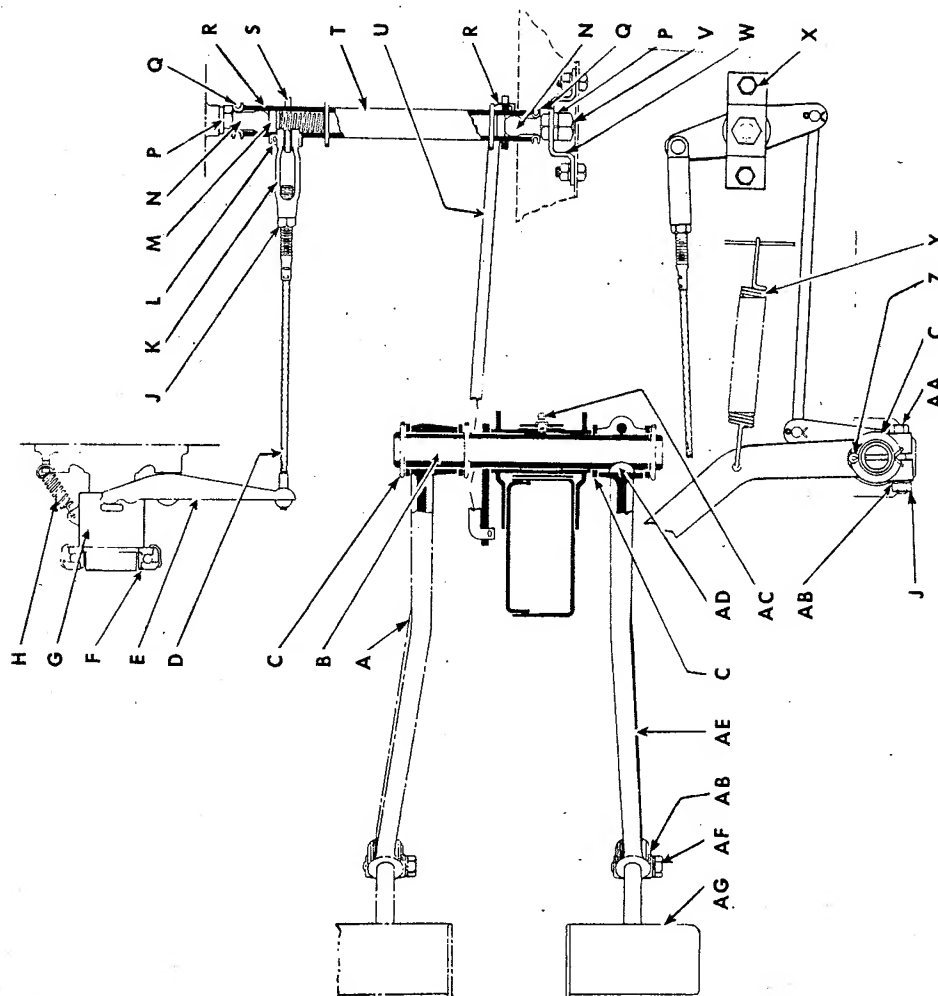


FIGURE 02-3—CLUTCH LINKAGE AND CONTROLS

Key	Part Name	Ford Part No.	Willis Part No.	Group No.
A	PEDAL	FM-GPW-2452-B	WO-A-8253	1204
B	SHAFT	FM-GPW-2473	WO-A-495	1204
C	WASHER	FM-356561-S	WO-A-498	0204
D	CABLE	FM-GPW-7530	WO-A-5102	0203
E	LEVER	FM-GPW-7515	WO-630112	0203
F	BEARING	FM-74-7580-B	WO-635529	0203
G	CARRIER	FM-GPW-7561	WO-639654	0203
H	SPRING	FM-GPW-7562	WO-630117	0203
J	NUT	FM-33798-S7	WO-A-1532	0203
K	YOKE	FM-GPW-7532	WO-632177	0203
L	PIN	FM-73880-S	WO-339043	0203
M	RETAINER	FM-GPW-7517	WO-A-177	0204A
N	STUD	FM-GPW-7514	WO-A-181	0204A
P	WASHER	FM-34808-S2	WO-5059	0204A
Q	SEAL	FM-GPW-7512	WO-A-887	0204A
R	PAD	FM-GPW-7539	WO-A-176	0204A
S	SPRING	FM-GPW-7545	WO-A-178	0204A
T	LEVER, assembly	FM-GPW-7503	WO-A-1355	0204A
U	ROD	FM-GPW-7521	WO-A-499	0204A
V	NUT	FM-33801-S2	WO-5336	0204A
W	BRACKET	FM-GPW-7508	WO-A-180	0204
X	BOLT	FM-24327-S7	WO-52132	0204
Y	SPRING	FM-GPW-7523	WO-630593	0204
Z	PIN	FM-72063-S	WO-52944	0204
AA	BOLT	FM-24505-S7	WO-50992	0204
AB	WASHER	FM-34806-S2	WO-51833	0204
AC	FITTING	FM-353043-A-S7	WO-638792	0204
AD	KEY	FM-74178-S	WO-5036	0204
AE	PEDAL	FM-GPW-7520	WO-A-405	0204
AF	BOLT	FM-24426	WO-6157	0204
AG	PAD	FM-GPW-7525	WO-A-1360	0204

RA PD 342242


## GROUP 02—CLUTCH (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>0202—COVER AND PRESSURE PLATE (Cont'd)</b>						
02-1, 2	0523-TP-285-1 3320-GPW-7563	FM-GPW-7566 FM-GPW-7563	WO-638152 WO-638992	PLATE, pressure, engine clutch (AVM-TP-285-1)..... PLATE, pressure, engine clutch, assembly (AVM-TP-28-71) (includes: COVER, pressure PLATE, SPRINGS, and LEVERS).....	1 1	1.60 2.802
02-1, 2		FM-355476-S FM-24325-S	WO-630129 WO-638154	BOLT, hex-hd., S, special, $\frac{5}{16}$ -18NC-2 x $1\frac{1}{16}$ ..... SCREW, adjusting, engine clutch lever (hex-hd., s-fin., alloy-S, $\frac{1}{4}$ -28NF-2 x $\frac{5}{8}$ ) (AVM-TP-2818) (also in KIT, FM-GPW-18359-B, WO-A-7833).....	6	.0083
02-1, 2		FM-GPW-7572	WO-638993	SPRING, pressure, engine clutch.....	3	
02-1, 2		FM-GPW-7590	WO-638153	SPRING, return, engine clutch pressure plate.....	3	
02-1, 2		FM-34745-S2	WO-638305	WASHER, engine clutch lever adjusting screw (flat, S, $\frac{3}{32}$ I.D. x $\frac{5}{8}$ O.D. x $\frac{1}{16}$ thk.).....	3	
<b>0203—RELEASE PARTS</b>						
02-1, 3	H012-0710203	FM-GPW-7580		BEARING, engine clutch release (superseded by BEARING, FM-74-7580-B, WO-635529).....	1	.641
02-1, 3		FM-74-7580-B	WO-635529	BEARING, engine clutch release (AB-A-935-1) (supersedes BEARING, FM-GPW-9580).....	1	.293
02-3	3320-GPW-7530	FM-GPW-7530	WO-A-5102	CABLE, engine clutch control (TRU-SA-2844-1).....	1	.684
02-1, 3	G166-0314832	FM-33798-S7	WO-A-1532	NUT, reg., hex, S, cd-pltd., $\frac{5}{16}$ -24NF-2.....	1	.0482
02-1	3320-GPW-7561	FM-GPW-7561	WO-639654	CARRIER, engine clutch release bearing.....	1	.179
02-1, 3	3320-GPW-7516	FM-GPW-7516	WO-630068	FULCRUM, engine clutch release lever (TRU-SA-2844-1).....	1	.0075
02-1, 3	3320-GPW-7515	FM-GPW-7515	WO-630112	LEVER, engine clutch release.....	1	
02-1, 3	3320-GPW-7562	FM-GPW-7562	WO-630117 WO-6599	SPRING, engine clutch release bearing carrier..... YOKE, adjustable, engine clutch control cable (superseded by YOKE, FM-GPW-7532, WO-632177).....	1	
02-3	3320-GPW-7532	FM-GPW-7532	WO-632177	YOKE, adjustable, engine clutch control cable (supersedes YOKE, WO-6599).....	1	.0758
02-3		FM-73880-S	WO-339043	PIN, clevis, engine clutch control cable, yoke end.....	1	
	H001-6811640	FM-72034-S	WO-A-1642	PIN, cotter, split, S, cd-pltd., $\frac{3}{32}$ x 1.....	1	
<b>0204—PEDAL</b>						
02-3		FM-GPW-7508	WO-A-180	BRACKET, engine clutch control lever (on frame).....	1	.0875
02-3		FM-24327-S7	WO-52132	BOLT, hex-hd., s-fin., S, cd-pltd., $\frac{5}{16}$ -24NF-2 x $\frac{5}{8}$ .....	2	.0026
		FM-33798-S7	WO-A-1532	NUT, hex, S, cd-pltd., $\frac{5}{16}$ -24NF-2.....	2	
02-3	H001-7025711	FM-34806-S7 FM-353043-A-S7	WO-51833 WO-638792	WASHER, lock, reg, S, cd-pltd., $\frac{5}{16}$ in..... FITTING, grease, straight, $\frac{1}{4}$ -28NF, tapered thd. (AD-1641) (engine clutch pedal shaft).....	2 1	

## GROUP 02-CLUTCH (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>0204—PEDAL (Cont'd)</b>						
02-3		FM-GPW-7525	WO-A-1360	PAD, engine clutch pedal, assembly (superseded by PAD, FM-GPW-7525-A, WO-A-8440)	1	
02-3		FM-GPW-7525-A	WO-A-8440	PAD, engine clutch pedal, assembly (supersedes PAD, FM-GPW-7525, WO-A-1360)	1	
02-3, 18-1		FM-24426	WO-6157	BOLT, hex-hd., S., $\frac{5}{16}$ -18NC-2 x $\frac{1}{4}$	1	.0042
		FM-GPW-7520	WO-A-405	PEDAL, engine clutch (superseded by PEDAL, FM-GPW-7520-A, WO-A-10269)	1	2.541
02-3		FM-GPW-7520-A	WO-A-10269	PEDAL, engine clutch (supersedes PEDAL, FM-GPW-7520, WO-A-405)	1	
02-3		FM-24505-S7	WO-50992	BOLT, hex-hd., S., cd-pltd., $\frac{5}{16}$ -24NF-2 x $1\frac{3}{4}$	1	
02-3		FM-74178-S	WO-5036	KEY, Woodruff No. 9	1	
02-3		FM-33798-S2	WO-5910	NUT, reg., hex., s-fn., S., $\frac{5}{16}$ -24NF-2 (GM-103025)	1	
02-3		FM-34806-S2	WO-51833	WASHER, lock, reg., S., $\frac{5}{16}$ in.	1	
02-3	G503-0389783	FM-GPW-7523	WO-630593	SPRING, retracting, engine clutch pedal ( $5\frac{7}{8}$ in. free lgth., 40 coils)	1	.0544
02-3		FM-356561-S	WO-A-498	WASHER, engine clutch pedal shaft (special, S., $1\frac{1}{2}$ O.D. x $1\frac{1}{8}$ I.D. x $\frac{1}{8}$ thk.)	3	.0167
02-3		FM-72063-S	WO-52944	PIN, cotter, split, S., $\frac{5}{8}$ x $1\frac{3}{8}$	3	
<b>0204A—PEDAL LINKAGE</b>						
02-3	3320-GPW-7503	FM-GPW-7503	WO-A-1355	LEVER, engine clutch control, w/TUBE, assembly	1	.717
02-3	3320-GPW-7539	FM-GPW-7539	WO-A-176	PAD, engine clutch control tube (felt, $\frac{5}{8}$ O.D. x $\frac{1}{4}$ thk.)	2	.0021
02-3	3320-GPW-7517	FM-GPW-7517	WO-A-177	RETAINER, engine clutch control tube spring (S., $19\frac{3}{8}$ O.D. x $\frac{3}{8}$ thk.)	2	.0065
02-3		FM-GPW-7521	WO-A-499	ROD, engine clutch release lever	1	.163
		FM-72004-S	WO-5354	PIN, cotter, split, S., $\frac{3}{8}$ x $\frac{1}{2}$	2	
02-3	3320-GPW-7512	FM-GPW-7512	WO-A-887	SEAL, engine clutch control tube, dust (1 in. O.D.)	2	.0192
02-3	3320-GPW-7545	FM-GPW-7545	WO-A-178	SPRING, engine clutch control tube (S., $\frac{9}{16}$ O.D. x $1\frac{1}{4}$ free lgth.)	2	.014
02-3	3320-GPW-7514	FM-GPW-7514	WO-A-181	STUD, ball, engine clutch control (S., $\frac{1}{16}$ -14NC)	2	.0992
02-3	G134-0314564	FM-33801-S2	WO-5336	NUT, reg., hex., S., $\frac{1}{16}$ -14NC-2	2	
02-3	G085-2371520	FM-34808-S2	WO-5059	WASHER, lock, S., SAE std., $\frac{1}{16}$ in.	2	
<b>0205—PILOT BEARING</b>						
02-1	3320-GPW-7600	FM-GPW-7600	WO-639578	BUSHING, pilot, clutch shaft (in flywheel)	1	.0533



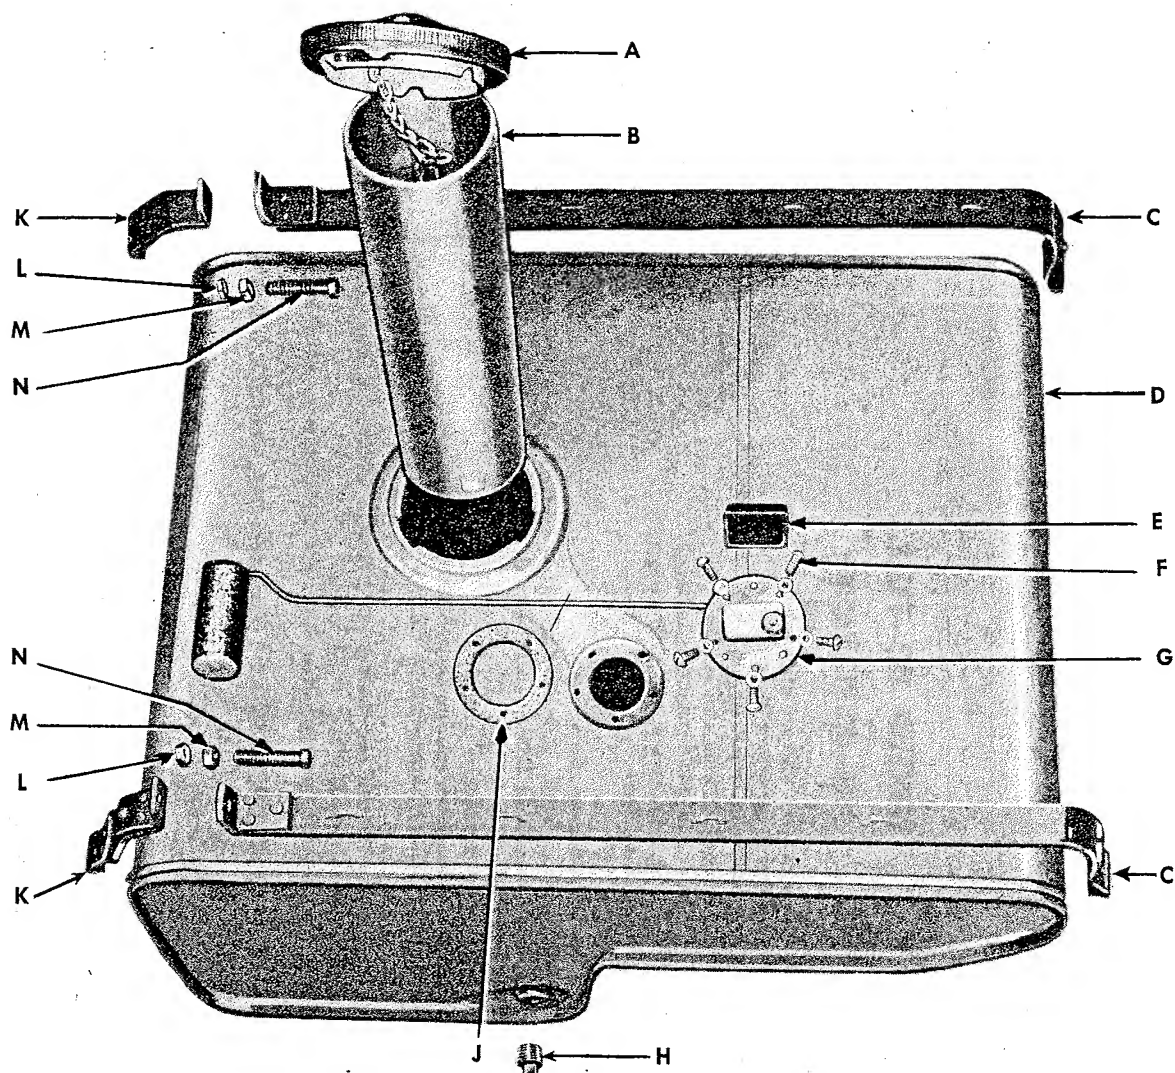

Key	Part Name	Ford Part No.	Willys Part No.	Group Number
A	CAP, assembly .....	FM-GPW-9030-B .....	WO-A-6333 .....	0300
B	EXTENSION .....	FM-GPW-9034-A .....	WO-A-6424 .....	0300
C	STRAP, assembly .....	FM-GPW-9095 .....	WO-A-1472 .....	0300
D	TANK, assembly .....	FM-GPW-9002-B .....	WO-A-6618 .....	0300
E	PROTECTOR .....	FM-GPW-9211 .....	WO-A-1763 .....	0300A
F	SCREW, w/LOCK WASHER .....	FM-355095-S7 .....	WO-5556 .....	0300A
G	GAGE, assembly .....	FM-GPW-9275-A .....	WO-A-1292 .....	0300A
H	PLUG .....	FM-353055-S7 .....	WO-A-5120 .....	0300
J	GASKET .....	FM-GPW-9276 .....	WO-A-1293 .....	0300A
K	STRAP, assembly .....	FM-GPW-9057 .....	WO-A-1477 .....	0300
L	NUT .....	Willys only .....	WO-52891 .....	0300
M	NUT .....	FM-33798-S7 .....	WO-A-1532 .....	0300
N	BOLT .....	FM-24505-S7 .....	WO-A-1483 .....	0300

RA PD 342228

FIGURE 03-1—FUEL TANK ASSEMBLY AND RELATED PARTS


## GROUP 03—FUEL

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>GROUP 03—FUEL</b>						
<b>0300—FUEL TANKS</b>						
03-1	H001-0924108	FM-GPW-9069	WO-A-1738	ANTISQUEAK, fuel tank (1 in. wide x 6 in. long).....	2	
		FM-GPW-9079	WO-A-1739	ANTISQUEAK, fuel tank (1 in. wide x 7 1/4 in. long).....	2	
		FM-GPW-9075	WO-A-1740	ANTISQUEAK, fuel tank (1 in. wide x 9 1/2 in. long).....	2	
		FM-GPW-9071	WO-A-1741	ANTISQUEAK, fuel tank (1 in. wide x 18 in. long).....	2	
		FM-GPW-9078	WO-A-1480	ANTISQUEAK, fuel tank hold-down strap (3 1/4 in. long).....	2	
		FM-GPW-9074	WO-A-1476	ANTISQUEAK, fuel tank hold-down strap (24.88 in. long).....	2	
		FM-GPW-9063	WO-A-2954	BRACKET, fuel tank hold-down.....	2	
		FM-62218-S	WO-51977	RIVET, rd-hd., S, 1/4 x 1/16.....	4	
		FM-GPW-9065	WO-A-2953	BRACKET, fuel tank hold-down, front, inner.....	1	
		FM-20324-S2	WO-52168	BOLT, hex-hd., s-fin., alloy-S, 1/4-20NC-2 x 5/8 (GM-121668).....	2	
		FM-33795-S2	WO-52217	NUT, reg., hex., s-fin., S, 1/4-20NC-2 (GM-118613).....	2	
		FM-34805-S2	WO-52706	WASHER, lock, reg., S, 1/4 in.....	2	
		FM-GPW-9062	WO-A-2952	BRACKET, fuel tank hold-down, rear, inner.....	1	
		FM-GPW-9051	WO-A-2970	BRACKET, fuel tank hold-down, rear, inner, w/SUPPORT, assembly.....	1	
		FM-GPW-9030		CAP, fuel tank (2 7/8 in. O.D.) (superseded by CAP, FM-GPW-9030-A, WO-A-1254) (Note 1).....	1	
03-1	3320-GPW-9030-B	FM-GPW-9030-A	WO-A-1254	CAP, fuel tank, w/safety CHAIN and BAR (2 7/8 in. O.D.) (AC-850042) (supersedes CAP, FM-GPW-9030) (Note 1).....	1	
		FM-GPW-9030-B2		CAP, fuel tank (4 5/8 in. O.D.) (superseded by CAP, FM-GPW-9030-B, WO-A-6333) (Note 2).....	1	.57
		FM-GPW-9030-B	WO-A-6333	CAP, fuel tank, w/safety CHAIN (4 5/8 in. O.D.) (supersedes CAP, FM-GPW-9030-B2) (Note 2).....	1	.0709
		FM-GPW-1111322	WO-A-3055	CAP, fuel tank well drain.....	1	
		FM-GPW-9066	WO-A-1481	CLAMP, fuel tank hold-down, assembly.....	1	
		FM-24505-S7	WO-A-1483	BOLT, hex-hd., s-fin., S, cd-pltd., 5/16-24NF-2 x 1 3/4.....	1	
		FM-33798-S7	WO-A-1532	NUT, reg., hex., s-fin., S, cd-pltd., 5/16-24NF-2 (GM-103025).....	1	
		FM-34806-S7	WO-52891	NUT, hex., S, stamped, 5/16-24NF-2 (Willys only) (GM-147510).....	1	
		FM-GPW-9034-A	WO-51833	WASHER, lock, reg., S, cd-pltd., 5/16 in. (Ford only).....	1	
		FM-GPW-9035-B	WO-A-6424	EXTENSION, fuel tank filler neck.....	1	
		FM-GPW-1111323	WO-A-1275	GASKET, fuel tank cap (for CAP, FM-GPW-9030-A).....	1	
		FM-353055-S7	WO-A-3056	NECK, fuel tank well drain hole.....	2	
		FM-GPW-1140474	WO-A-5120	PLUG, pipe, 1/4 in. (fuel tank drain plug).....	1	.0142
		FM-24308-S2	WO-A-2930	SHIELD, fuel tank, driver seat to rear floor.....	1	
			WO-52170	BOLT, hex-hd., s-fin., alloy-S, 1/4-20NC-2 x 1 1/2 (GM-119860).....	3	.0117

03-1	FM-34129-S2	WO-52165	NUT, reg., hex., s-fin., S., 1/4-20NC-2 (GM-118643)	3	.0053
	FM-34745-S	WO-52702	WASHER, plain, S., 1/4 in.	3	
	FM-34805-S2	WO-52706	WASHER, lock, reg., S., 1/4 in.	3	
03-1	FM-GPW-9095	WO-A-1472	STRAP, hold-down, fuel tank, inner, assembly	2	
03-1	FM-GPW-9057	WO-A-1477	STRAP, hold-down, fuel tank, outer, assembly	1	
	FM-24505-S7	WO-A-1483	BOLT, hex-hd., s-fin., S., cd-pltd., 5/16-24NF-2 x 1 3/4	1	
	FM-33798-S7	WO-A-1532	NUT, reg., hex., s-fin., S., cd-pltd., 5/16-24NF-2 (GM-103025)	1	
03-1	FM-34806-S7	WO-52891	NUT, hex., S., stamped, 5/16-24NF-2 (Willys-only) (GM-147510)	1	
	FM-GPW-9002-A	WO-51833	WASHER, lock, reg., S., cd-pltd., 5/16 in. (Ford only)	1	
	FM-GPW-9002-B	WO-A-1221	TANK, fuel, assembly (before Willys serial No. 174739)	1	
03-1, 18-1		WO-A-6618	TANK, fuel, assembly (after Willys serial No. 174739) (superseded by TANK, assembly, FM-GPW-9002-C, WO-A-15507) (Note 3)	1	
	FM-GPW-9001	WO-A-6897	TANK, fuel, w/EXTENSION and CAP, assembly (as required for replacement on Willys prior to serial No. 174739)	1	
	FM-GPW-9002-C	WO-A-15507	TANK, fuel, w/STRAINER, assembly (supersedes TANK, assembly FM-GPW-9002-B, WO-A-6618) (Note 3)	1	
	FM-GPW-1111324	WO-A-3497	WELL, fuel tank drain, assembly (in front floor pan)	1	
<b>0300A—TANK GAGE UNIT</b>					
03-1	FM-GPW-9276	WO-A-1293	GASKET, fuel tank gage (cork) (2 5/8 O.D. x 1 1/8 I.D. x 1/8 thk.)	1	.0065
	FM-GPW-9275		GAGE, fuel, tank unit, assembly (superseded by GAGE, FM-GPW-9275-A, WO-A-1292)	1	
03-1, 06-12	FM-GPW-9275-A	WO-A-1292	GAGE, fuel, tank unit, assembly (AL-9979-A) (supersedes GAGE, FM-GPW-9275)	1	.505
03-1	FM-355095-S7	WO-5556	SCREW, mach., rd-hd., S., cd-pltd., w/lock WASHER, No. 8 (0.164)-32NC-2 x 3/8	5	.0042
03-1	FM-GPW-9211	WO-A-1763	PROTECTOR, fuel gage, tank unit	1	.0386
<b>0301—CARBURETOR</b>					
03-2	FM-GPW-9528	WO-116181	ARM, carburetor pump, w/COLLAR, assembly (CAR-53A-168S)	1	.179
03-2	FM-GPW-9583	WO-116197	ARM, carburetor throttle shaft, w/SCREW, assembly (CAR-114-21S) (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2	FM-31588-S7	WO-52290	SCREW, mach., fil-hd., S., cd-pltd., No. 10 (0.190)-32NF-2 x 5/8	1	8.21
01-1	FM-GPW-9510	WO-A-1223	CARBURETOR, assembly (CAR-539S)	1	
03-2	FM-GPW-9576	WO-116205	CHECK, carburetor fuel intake, assembly (CAR-122-64S) (also in KIT, FM-GPW-18357-B, WO-A-1541)	1	
03-2	FM-GPW-9594	WO-116204	CHECK, carburetor pump discharge, assembly (CAR-122-47S) (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2	FM-GPW-9595	WO-116587	CLAMP, carburetor tube (CAR-62-134)	1	.0731
03-2	FM-GPW-9515	WO-116208	COVER, carburetor bowl, w/PIN, assembly (CAR-146-95S)	1	
03-2	FM-31061-S8	WO-116213	SCREW, mach., fil-hd., S., z-pltd., No. 8 (0.164)-32NC-2 x 1/2 (also in KIT, FM-GPW-18357-B, WO-A-6840)	2	.684
03-2	FM-34802-S2	WO-6330	WASHER, lock, S., SAE std., No. 8 (0.164) (also in KIT, FM-GPW-18357-B, WO-A-6840)	2	

Note 1—Used on TANK, FM-GPW-9002-A, WO-A-1221, FM-GPW-9001, WO-A-6897, Note 2—Used on TANK, FM-GPW-9002-B, WO-A-6618.

Note 3—TANK, FM-GPW-9002-C, WO-A-15507 is interchangeable with TANK, FM-GPW-9002-B, WO-A-6618 by using fuel TUBE, WO-A-15598 from fuel tank to fuel pump and ELBOW, FM-GPW-9269, WO-A-15596).

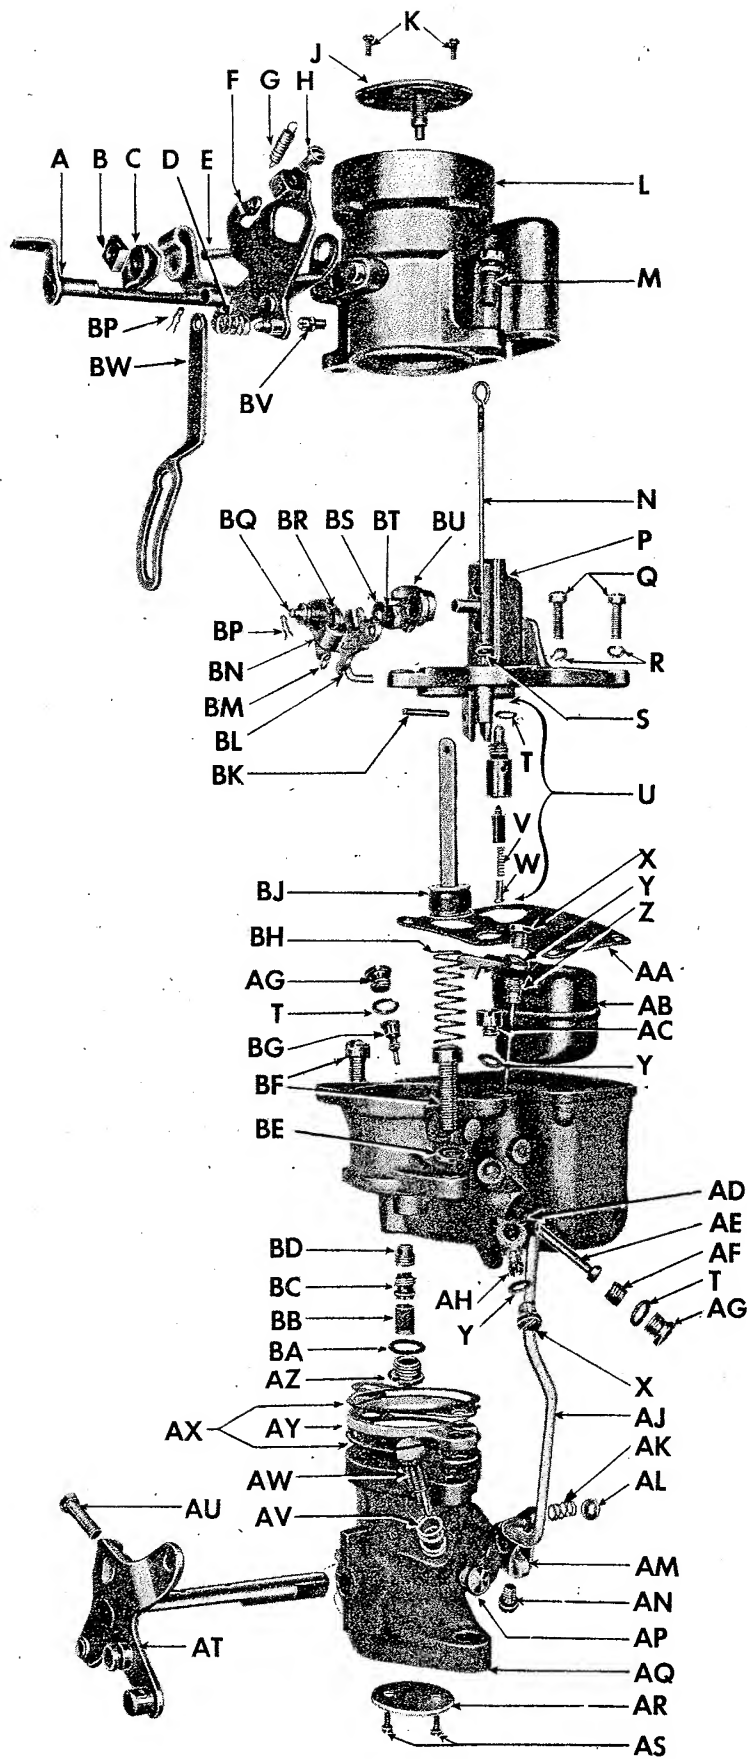

RA PD 342289

FIGURE 03-2—CARBURETOR ASSEMBLY—EXPLODED VIEW

Key	Part Name	Ford Part No.	Willys Part No.	Group No.
A	LEVER, assembly	FM-GPW-9546	WO-116545	0301
B	NUT	FM-355858-S	WO-116219	0301
C	CLAMP	FM-GPW-9595	WO-116587	0301
D	SPRING	FM-GPW-9587	WO-116189	0301
E	SCREW	FM-355132-S7	WO-116588	0301
F	LEVER, assembly	FM-GPW-9526	WO-116586	0301
G	SPRING	FM-GPW-9624	WO-116184	0301
H	SCREW	FM-31032-S7	WO-116211	0301
J	VALVE, assembly	FM-GPW-9549	WO-116157	0301
K	SCREW	FM-GPW-9586	WO-116216	0301
L	HORN, assembly	FM-GPW-9520	WO-116544	0301
M	SCREW, w/WASHER	FM-355200-S7	WO-116385	0301
N	ROD	FM-GPW-9906	WO-116540	0301
P	COVER, w/PIN, assembly	FM-GPW-9515	WO-116208	0301
Q	SCREW	FM-31061-S8	WO-116213	0301
R	WASHER	FM-34802-S2	WO-6330	0301
S	DISC	FM-GPW-9905	WO-116206	0301
T	GASKET	FM-GPW-9569	WO-116168	0301
U	VALVE, w/SEAT, assembly	FM-GPW-9567	WO-116174	0301
V	SPRING	FM-GPW-9935	WO-116191	0301
W	PIN	FM-GPW-9566	WO-116177	0301
X	PLUG, w/GASKET, assembly	FM-GPW-9543	WO-116165	0301
Y	GASKET	FM-GPW-9608	WO-116169	0301
Z	JET	FM-GPW-9533	WO-116539	0301
AA	GASKET	FM-GPW-9519	WO-116203	0301
AB	FLOAT, assembly	FM-GPW-9550	WO-116172	0301
AC	JET	FM-GPW-9914	WO-116541	0301
AD	GASKET	FM-GPW-9926	WO-116171	0301
AE	NOZZLE	FM-GPW-9922	WO-116166	0301
AF	PLUG	FM-GPW-9562	WO-116161	0301
AG	PLUG	FM-GPW-9928	WO-116164	0301
AH	JET	FM-GPW-9544	WO-116179	0301
AJ	ROD	FM-GPW-9531	WO-116198	0301
AK	SPRING	FM-GPW-9615	WO-116185	0301
AL	RETAINER	FM-GPW-9614	WO-116194	0301
AM	ARM, w/SCREW, assembly	FM-GPW-9583	WO-116197	0301
AN	SCREW	FM-31588-S7	WO-52290	0301
AP	PLUG	FM-GPW-9579	WO-116162	0301
AQ	FLANGE, assembly	FM-GPW-9518	WO-116584	0301
AR	VALVE	FM-GPW-9585	WO-116154	0301
AS	SCREW	FM-GPW-9588	WO-116217	0301
AT	SHAFT, assembly	FM-GPW-9581	WO-116585	0301
AU	SCREW	FM-GPW-9610	WO-116214	0301
AV	SPRING	FM-GPW-9578	WO-116183	0301
AW	SCREW	FM-GPW-9541	WO-116176	0301
AX	GASKET	FM-GPW-9516	WO-116202	0301
AY	INSULATOR	FM-GPW-9554	WO-116210	0301
AZ	PLUG, w/GASKET, assembly	FM-GPW-9696	WO-116163	0301
BA	GASKET	FM-GPW-9574	WO-116170	0301
BB	STRAINER	FM-GPW-9575	WO-116175	0301
BC	CHECK, assembly	FM-GPW-9576	WO-116205	0301
BD	CHECK, assembly	FM-GPW-9594	WO-116204	0301
BE	WASHER	FM-34805-S2	WO-5045	0301
BF	SCREW	FM-31662-S	WO-116215	0301
BG	JET	FM-GPW-9940	WO-116180	0301
BH	SPRING	FM-GPW-9636	WO-116188	0301
BJ	PLUNGER, assembly	FM-GPW-9631	WO-116195	0301
BK	PIN	FM-GPW-9538	WO-116173	0301
BL	LINK	FM-GPW-9527	WO-116199	0301
BM	SPRING	FM-GPW-9570	WO-116187	0301
BN	LEVER, assembly	FM-GPW-9529	WO-116537	0301
BP	SPRING	FM-GPW-9599	WO-116178	0301
BQ	PIN	FM-GPW-9930	WO-116209	0301
BR	SPRING	FM-GPW-9907	WO-116538	0301
BS	WASHER	FM-34711-S7	WO-116207	0301
BT	NUT	FM-34051-S7	WO-52615	0301
BU	ARM, assembly	FM-GPW-9528	WO-116181	0301
BV	SCREW	FM-355067-S7	WO-116384	0301
BW	LINK	FM-GPW-9598	WO-116542	0301

RA PD 342289A

FIGURE 03-2A—LEGEND FOR FIGURE 03-2—CARBURETOR  
ASSEMBLY—EXPLODED VIEW

## GROUP 03—FUEL (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>0301—CARBURETOR (Cont'd)</b>						
03-2	1500-129-15	FM-GPW-9905	WO-116206	DISK, carburetor metering rod (CAR-129-15) (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2		FM-GPW-9518	WO-116584	FLANGE, carburetor body, assembly (CAR-1-407)	1	
03-2		FM-31662-S	WO-116215	SCREW, mach., fil-hd., S, 1/4-28NF-2 x 7/8 (CAR-101-122) (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2	H001-1518007	FM-34805-S2	WO-5045	WASHER, lock, reg., S, 1/4 in. (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2	1500-21-74S	FM-GPW-9550	WO-116172	FLOAT, carburetor, w/LEVER, assembly (CAR-21-74S)	1	
03-2	G503-0194034	FM-GPW-9516	WO-116202	GASKET, carburetor body flange to main body (CAR-121-56) (also in GASKET SET, FM-GPW-18352, WO-A-6837 and KIT, FM-GPW-18357-B, WO-A-6840)	2	
03-2		FM-GPW-9519	WO-116203	GASKET, carburetor bowl cover (CAR-121-73) (also in GASKET SET, FM-GPW-18352, WO-A-6837, and KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2	1500-20-26	FM-GPW-9608	WO-116169	GASKET, carburetor metering rod jet and plug (CAR-20-26) (also in GASKET SET, FM-GPW-18352, WO-A-6837)	3	
03-2	G103-1594029	FM-GPW-9569	WO-116168	GASKET, carburetor needle seat and plug (CAR-20-22) (also in GASKET SET, FM-GPW-18352, WO-A-6837)	3	
03-2	1500-20-72	FM-GPW-9926	WO-116171	GASKET, carburetor nozzle (CAR-20-72) (also in GASKET SET, FM-GPW-18352, WO-A-6837 and KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2	1500-20-61	FM-GPW-9574	WO-116170	GASKET, carburetor strainer plug (CAR-20-61) (also in GASKET SET, FM-GPW-18352, WO-A-6837)	1	
	9680-A-5548		WO-A-5548	GASKET SET, carburetor (superseded by GASKET SET, FM-GPW-18352, WO-A-6837)	1	
	1500-147	FM-GPW-18352	WO-A-6837	GASKET SET, carburetor (supersedes GASKET SET, WO-A-5448)	1	.44
		FM-GPW-9516	WO-116202	(Consists of:		
		FM-GPW-9519	WO-116203	2 GASKET, body flange		
		FM-GPW-9445	WO-A-6357	1 GASKET, bowl cover		
		FM-GPW-9926	WO-116171	1 GASKET, diffuser to manifold		
		FM-GPW-9608	WO-116169	1 GASKET, nozzle		
		FM-GPW-9569	WO-116168	3 GASKET, metering rod jet		
		FM-GPW-9574	WO-116170	3 GASKET, seat and plug		
		FM-GPW-9520	WO-116544	1 GASKET, strainer		
03-2	1500-6-312S	FM-GPW-9520	WO-116544	HORN, air, carburetor, assembly (CAR-6-312S)	1	1.50
03-2	G125-0869940	FM-GPW-9554	WO-116210	INSULATOR, carburetor main body to body flange (CAR-183-19)	1	.244
03-2	1500-43-67	FM-GPW-9544	WO-116179	JET, carburetor idle well (CAR-43-67) (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2		FM-GPW-9533	WO-116539	JET, carburetor low speed, assembly (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2	1500-120-151S	FM-GPW-9914	WO-116541	JET, carburetor metering rod, w/GASKET, assembly (CAR-120-151S) (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	

03-2	1500-48-84	FM-GPW-9940	WO-116180	JET, carburetor pump (CAR-48-84) (also in KIT, FM-GPW-18357-B, WO-A-6840).....	1
	1500-1319	FM-GPW-18357	WO-A-1541	KIT, repair, carburetor (CAR-1319) (superseded by KIT, FM-GPW-18357-B, WO-A-6840)	1
	3320-GPW-18357-B	FM-GPW-18357-B	WO-A-6840	KIT, repair, carburetor (supersedes KIT, FM-GPW-18357, WO-A-1541).....	1
				(Consists of:	
		FM-GPW-9583	WO-116197	1 ARM, throttle shaft, w/SCREW	
		FM-GPW-9594	WO-116204	1 CHECK, discharge disk	
		FM-GPW-9576	WO-116205	1 CHECK, intake ball	
		FM-GPW-9905	WO-116206	1 DISK, metering rod	
		FM-GPW-9516	WO-116202	2 GASKET, body flange	
		FM-GPW-9519	WO-116203	1 GASKET, bowl cover	
		FM-GPW-9945	WO-A-6357	1 GASKET, diffuser to manifold	
		FM-GPW-9926	WO-116171	1 GASKET, nozzle	
		FM-GPW-9544	WO-116179	1 JET, idle well	
		FM-GPW-9533	WO-116539	1 JET, low speed, assembly	
		FM-GPW-9914	WO-116541	1 JET, metering rod	
		FM-GPW-9940	WO-116180	1 JET, pump	
		FM-GPW-9527	WO-116199	1 LINK, pump connector	
		FM-GPW-9922	WO-116166	1 NOZZLE	
		FM-34051-S7	WO-52615	1 NUT, metering rod pin	
		FM-GPW-9930	WO-116209	1 PIN, metering rod	
		FM-GPW-9562	WO-116161	1 PLUG, retainer, nozzle	
		FM-GPW-9579	WO-116162	1 PLUG, idle port rivet	
		FM-GPW-9525	WO-116160	5 PLUG, rivet	
		FM-GPW-9522	WO-116159	1 PLUG, rivet	
		FM-GPW-9696	WO-116163	1 PLUG and GASKET, strainer passage	
		FM-GPW-9928	WO-116164	2 PLUG and GASKET, pump jet	
		FM-GPW-9543	WO-116165	2 PLUG and GASKET, low speed jet	
		FM-GPW-9631	WO-116195	1 PLUNGER and ROD, pump	
		FM-GPW-9614	WO-116194	1 RETAINER, spring	
		FM-GPW-9531	WO-116198	1 ROD, connector, throttle	
		FM-GPW-9906	WO-116540	1 ROD, metering	
		FM-GPW-9586	WO-116216	2 SCREW, choke valve	
		FM-GPW-9588	WO-116217	2 SCREW, throttle valve	
		FM-31061-S8	WO-116213	2 SCREW, bowl cover	
		FM-31662-S	WO-116215	1 SCREW, body flange	
		FM-355200-S7	WO-116385	1 SCREW, air horn, w/WASHER	
		FM-GPW-9599	WO-116178	4 SPRING, carburetor pin	
		FM-GPW-9587	WO-116189	1 SPRING, connector link	
		FM-GPW-9615	WO-116185	1 SPRING, connector rod	
		FM-GPW-9907	WO-116538	1 SPRING, metering rod	
		FM-GPW-9636	WO-116188	1 SPRING, pump	
		FM-GPW-9570	WO-116187	1 SPRING, pump arm	
		FM-GPW-9624	WO-116184	1 SPRING, pull back, choke	
		FM-GPW-9575	WO-116175	1 STRAINER, pump check	
		FM-GPW-9567	WO-116174	1 VALVE and SEAT	
		FM-34802-S2	WO-6330	2 WASHER, bowl cover screw	
		FM-34805-S2	WO-5045	1 WASHER, body flange screw	
		FM-34711-S	WO-116207	1 WASHER, metering rod pin)	



## GROUP 03—FUEL (Cont'd)


Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>0301—CARBURETOR (Cont'd)</b>						
03-2		FM-GPW-9526	WO-116586	LEVER, carburetor choke, w/BRACKET, assembly (CAR-62-135-S)	1	.407
03-2	1500-14-246S	FM-GPW-9546	WO-116545	LEVER, carburetor choke control, w/SHAFT, assembly (CAR-14-246S)	1	.277
03-2	1500-53A-251S	FM-GPW-9529	WO-116537	LEVER, operating, carburetor pump, assembly (CAR-53A-251S)	1	.31
03-2	1500-117-106	FM-GPW-9598	WO-116542	LINK, carburetor choke (CAR-117-106)	1	.0717
03-2	G103-167640S	FM-GPW-9527	WO-116199	LINK, connector, carburetor pump (CAR-117-58) (also available in KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2	1500-12-255	FM-GPW-9922	WO-116166	NOZZLE, carburetor (CAR-12-255) (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2	G505-0529696	FM-355858-S	WO-116219	NUT, carburetor tube clamp (CAR-105A-8)	1	.0641
03-2	G179-0579810	FM-GPW-9538	WO-116173	PIN, carburetor float lever (CAR-24-23)	1	.0195
03-2	1500-150-98	FM-GPW-9566	WO-116177	PIN, carburetor intake needle (CAR-150-98)	1	.0391
03-2	1500-150-97	FM-GPW-9930	WO-116209	PIN, carburetor metering rod (CAR-150-97) (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	.0717
03-2	H001-0716530	FM-34051-S7	WO-52615	NUT, mach. screw, hex., S, cd-pltd., No. 6 (0.138)-32NC-2 (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2	H001-1522003	FM-34711-S7	WO-116207	WASHER, plain, br., No. 6 (0.138) x 1/2 thk. (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2		FM-GPW-9579	WO-116162	PLUG, carburetor idle port rivet (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2	G103-1740563	FM-GPW-9543	WO-116165	PLUG, carburetor low speed jet and idle well passage, w/GASKET, assembly (CAR-11B-129S) (also in KIT, FM-GPW-18357-B, WO-A-6840)	2	
03-2	1500-11B-105	FM-GPW-9562	WO-116161	PLUG, carburetor nozzle retainer (CAR-11B-105) (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2	1500-11B-127S	FM-GPW-9928	WO-116164	PLUG, carburetor pump jet and nozzle passage, w/GASKET (CAR-11B-127S) (also in KIT, FM-GPW-18357-B, WO-A-6840)	2	
03-2	1500-11B-125S	FM-GPW-9696	WO-116163	PLUG, carburetor strainer passage, w/GASKET, assembly (CAR-11B-125S) (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
	1500-11B-79	FM-GPW-9523	WO-116160	PLUG, rivet, carburetor (CAR-11B-79) (also in KIT, FM-GPW-18357-B, WO-A-6840)	6	
	1500-11B-35	FM-GPW-9522	WO-116159	PLUG, rivet, carburetor (CAR-11B-35) (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2	1500-64-62S	FM-GPW-9631	WO-116195	PLUNGER, carburetor pump, w/ROD, assembly (CAR-64-62S) (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2	G103-1767693	FM-GPW-9614	WO-116194	RETAINER, carburetor spring (CAR-63-65) (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2		FM-GPW-9531	WO-116198	ROD, connecting, carburetor throttle (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2	1500-75-547	FM-GPW-9906	WO-116540	ROD, metering, carburetor (CAR-75-547) (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2	G104-0102538	FM-GPW-9541	WO-116176	SCREW, adjustment, carburetor idler (CAR-30A-39)	1	.212
03-2	G085-3004960	FM-GPW-9610	WO-116214	SCREW, adjustment, carburetor throttle lever (CAR-101-121)	1	.0195

03-2	1500-101-150S	FM-355200-S7	WO-116385	SCREW, attaching, carburetor air horn, w/WASHER (CAR-101-150S) (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2	1500-101-6	FM-31037-S7	WO-301232	SCREW, carburetor choke lever bracket (CAR-101-6)	1	
03-2	1500-105-13	FM-355067-S7	WO-116384	SCREW, carburetor choke valve	1	.035
03-2	H001-5127331	FM-355132-S7	WO-116588	SCREW, carburetor tube clamp (CAR-105-13)	1	.0047
03-2	1500-3-465S	FM-31032-S7	WO-116211	SCREW, carburetor wire clamp (CAR-101-10)	1	
03-2	1500-61-190	FM-GPW-9581	WO-116585	SHAFT, carburetor throttle, w/LEVER, assembly (CAR-3-465-S)	1	.619
		FM-GPW-9587	WO-116189	SPRING, carburetor connector link (CAR-61-190) (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2	G085-3005920	FM-GPW-9615	WO-116185	SPRING, carburetor connector rod (CAR-61-128) (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2	1500-61-119	FM-GPW-9624	WO-116184	SPRING, carburetor choke pull-back (CAR-61-119) (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2	G103-1789631	FM-GPW-9578	WO-116183	SPRING, carburetor idle adjustment screw (CAR-61-57)	1	.0195
03-2	1500-61-207	FM-GPW-9935	WO-116191	SPRING, carburetor intake needle (CAR-61-207)	1	.0195
03-2	1500-61-272	FM-GPW-9907	WO-116538	SPRING, carburetor metering rod (CAR-61-272) (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
		FM-GPW-9650	WO-116186	SPRING, carburetor plunger (CAR-61-143)	1	
03-2	G125-0882589	FM-GPW-9599	WO-116178	SPRING, carburetor pin (CAR-150-A-10) (also in KIT, FM-GPW-18357-B, WO-A-6840)	4	
03-2	1500-61-171	FM-GPW-9636	WO-116188	SPRING, carburetor pump (CAR-61-171) (also in KIT, FM-GPW-18357-B, WO-A-8840)	1	
03-2	1500-61-169	FM-GPW-9570	WO-116187	SPRING, carburetor pump arm (CAR-61-169) (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2	1500-7-116S	FM-GPW-9575	WO-116175	STRAINER, carburetor pump check (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	
03-2	G122-0381730	FM-GPW-9549	WO-116157	VALVE, carburetor choke, assembly (CAR-7-116S)	1	
		FM-GPW-9586	WO-116216	SCREW, attaching, carburetor choke valve (CAR-39-10) (also in KIT, FM-GPW-18357-B, WO-A-6840)	2	
03-2	1500-25-93S	FM-GPW-9567	WO-116174	VALVE, needle, carburetor, intake, w/SEAT and SPRING, assembly (CAR-25-93S) (also in KIT, FM-GPW-18357-B, WO-A-6840)	1	.554
03-2	1500-2-89	FM-GPW-9585	WO-116154	VALVE, carburetor, throttle (CAR-2-89)	1	
03-2	G085-0305020	FM-GPW-9588	WO-116217	SCREW, attaching, carburetor throttle valve (CAR-39-11) (also in KIT, FM-GPW-18357-B, WO-A-6840)	2	
<b>0301A—CARBURETOR ATTACHING PARTS</b>						
	3320-GPW-9447	FM-GPW-9447		GASKET, carburetor to intake manifold (superseded by GASKET, FM-GPW-9445, WO-A-6357)	1	
	1500-1A-55	FM-GPW-9445	WO-A-6357	GASKET, insulator, carburetor and intake manifold DIFFUSER, assembly (also in GASKET SET, FM-GPW-18387, WO-A-1537, FM-GPW-18352, WO-A-6837, and KIT, FM-GPW-18357-B, WO-A-6840) (supersedes GASKET, FM-GPW-9447)	1	
	G518-7001420	FM-88057-S7	WO-632159	STUD, S, $\frac{3}{8}$ -16NC x $1\frac{1}{16}$ x $\frac{3}{8}$ -24NF (carburetor to manifold)	2	.0092
		FM-33800-S7	WO-52542	NUT, reg., hex., S, cd-pltd., $\frac{3}{8}$ -24NF-2	2	

**0301B—CHOKE**  
(See Group 0303A)

## GROUP 03—FUEL (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>0301C—AIR CLEANER</b>						
03-3	6855-613455 0040-1542508	FM-GPW-9609	WO-A-1315	BASE, air cleaner, assembly (before Willys Serial No. 124309) (AC-1542510)	1	
			WO-A-5629	BODY, air cleaner, assembly (after Willys Serial No. 124309) (OKS-613455)	1	3.26
	H001-5419780	FM-GPW-9629	WO-A-1313	BOLT, wing, air cleaner cover (before Willys Serial No. 124309) (AC-1542508)	1	
		FM-GPW-9657	WO-A-5104	BRACE, air cleaner support bracket	1	.0239
		FM-GPW-9656	WO-A-1279	BRACKET, support, air cleaner, left, assembly	1	
		FM-24327-S7	WO-A-1278	BRACKET, support, air cleaner, right, assembly	1	
	H001-7025711 3320-GPW-9686	FM-33798-S7	WO-A-52132	BOLT, hex-hd., s-fin., alloy-S, $\frac{5}{16}$ -24NF-2 x $\frac{3}{4}$ (GM-106279)	6	.0026
		FM-34806-S7	WO-A-1532	NUT, reg., hex, s-fin., S, cd-pltd., $\frac{5}{16}$ -24NF-2	6	
	3320-GPW-9686-A	FM-GPW-9686	WO-51833	WASHER, lock, reg., S, cd-pltd., $\frac{5}{16}$ in.	6	
			WO-A-1451	BUSHING, air cleaner tube to carburetor (superseded by BUSHING, FM-GPW-9686-A, WO-A-1451)	1	
03-3	3320-GPW-9628 3320-GPW-6772 G503-7036575 3320-GPW-2250	FM-GPW-9628	WO-A-281	BUSHING, air cleaner tube to carburetor (3-ply rad. hose $2\frac{1}{4}$ x $1\frac{1}{8}$ ) (supersedes BUSHING, FM-GPW-9686) (superseded by SEAL, FM-GPW-9633, WO-A-17318; and SEAL, FM-GPW-9686-B, WO-A-17317)	1	.0134
		FM-GPW-6772	WO-53108	CLAMP, carburetor air horn, w/BOLT and NUT (S, $2\frac{1}{8}$ I.D. x $1\frac{1}{2}$ )	1	.0759
		FM-GPW-9653	WO-635097	CLAMP, hose, S, $2\frac{3}{8}$ in. I.D. (USL-461389)	2	.0135
03-3	6855-613306 G503-0169094	FM-GPW-2250	WO-A-1515	CLAMP, hose, S, $2\frac{1}{2}$ in. I.D. (1 used for WO-A-1451 BUSHING; 1 used carburetor to air cleaner tube) (superseded by CLAMP, FM-GPW-9625, WO-53384)	4	.0192
		FM-GPW-9625	WO-53384	CLAMP, carburetor and air cleaner horn (supersedes CLAMP, FM-GPW-2250, WO-A-1515)	2	.0125
		FM-GPW-18205-B	WO-A-5621	CLEANER, air, assembly (OKS-613300)	1	4.40
03-3	6855-613300 3320-355253-S	FM-355253-S	WO-115905	SCREW, wing, $\frac{1}{4}$ -20NC-2 x $\frac{3}{4}$ (air cleaner to bracket)	1	.0217
		FM-34805-S2	WO-52706	WASHER, lock, S, SAE std., $\frac{1}{4}$ in.	4	
		FM-GPW-9658	WO-A-5631	CUP, oil, air cleaner (OKS-613306)	1	.407
03-3	G503-0169094	FM-GPW-9618		ELEMENT, air cleaner, assembly (superseded by ELEMENT, FM-GPW-9617, WO-A-5630)	1	
		FM-GPW-9617	WO-A-5630	ELEMENT, air cleaner, w/wing BOLT, assembly (OKS-613387) (supersedes ELEMENT, FM-GPW-9618)	1	1.515
		FM-GPW-9621	WO-A-5632	GASKET, air cleaner body, upper (OKS-613313)	1	.0098
03-3	G179-7010485 6855-613314 3320-GPW-9632 3320-GPW-6771 3320-GPW-9652	FM-GPW-9623	WO-A-5633	GASKET, air cleaner oil cup, lower (OKS-613314)	1	.0117
		FM-GPW-9632	WO-A-463	HORN, air cleaner	1	.228
		FM-GPW-6771	WO-A-6918	HOSE, air cleaner tube to oil filler tube	1	.0406
03-3	3320-GPW-9652	FM-GPW-9652		HOSE, air cleaner tube to cleaner (superseded by HOSE, FM-GPW-9652-B, WO-A-1311)	1	.117
		FM-GPW-9652-B	WO-A-1311	HOSE, air cleaner tube to cleaner, flexible (supersedes HOSE, FM-GPW-9652)	1	

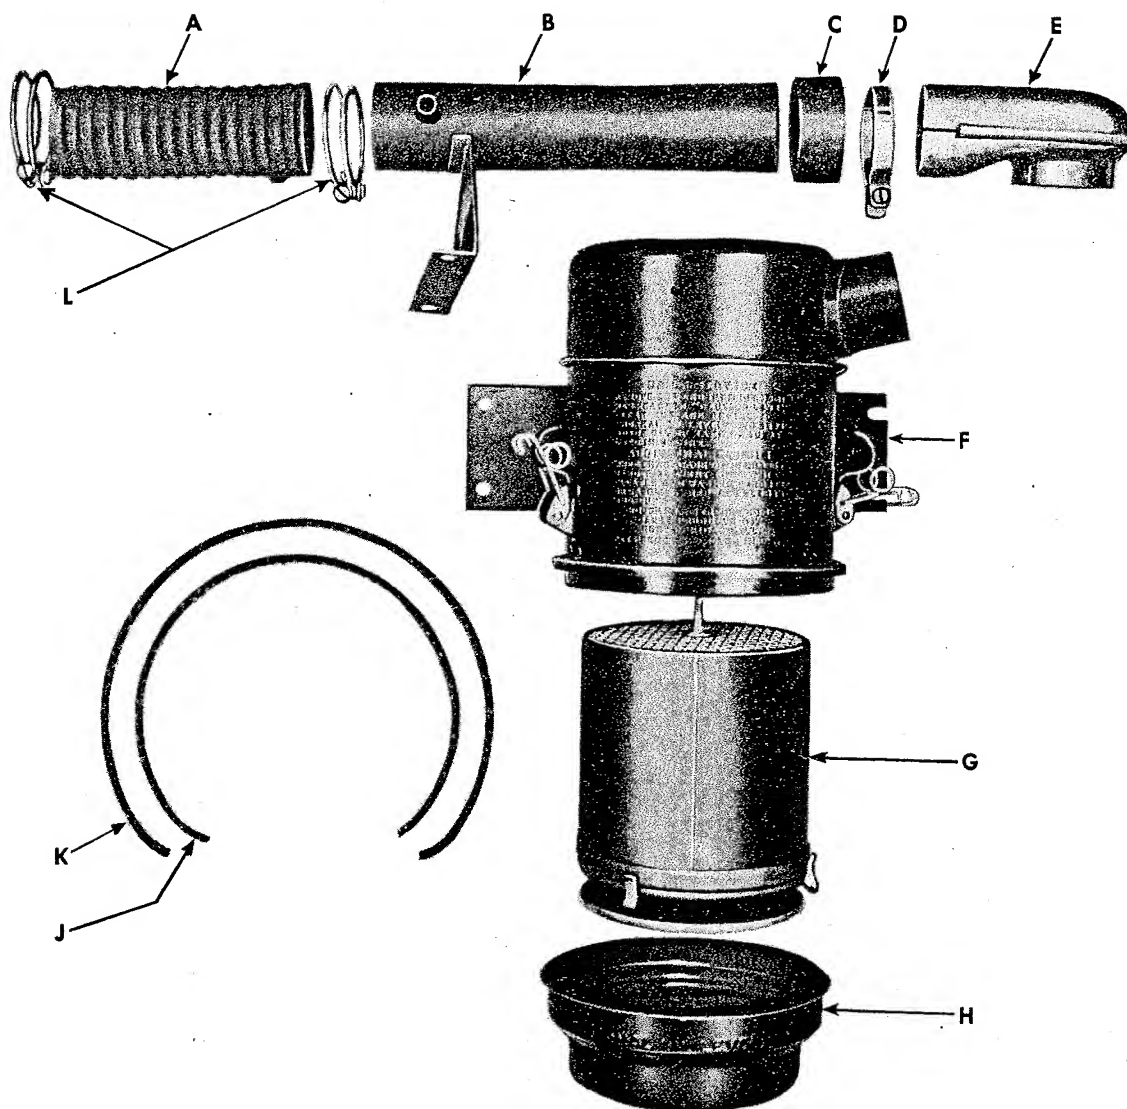

Key	Part Name	Ford Part No.	Willys Part No.	Group No.
A	HOSE .....	FM-GPW-9652-B	WO-A-1311	0301C
B	TUBE, w/BRACKET, assembly .....	FM-GPW-9637-B	WO-A-6911	0301C
C	BUSHING .....	FM-GPW-9686-A	WO-A-1451	0301C
D	CLAMP .....	FM-GPW-2250	WO-A-1515	0301C
E	HORN .....	FM-GPW-9632	WO-A-463	0301C
F	BODY, assembly .....	FM-GPW-9609	WO-A-5629	0301C
G	ELEMENT, assembly .....	FM-GPW-9617	WO-A-5630	0301C
H	CUP .....	FM-GPW-9658	WO-A-5631	0301C
J	GASKET .....	FM-GPW-9623	WO-A-5633	0301C
K	GASKET .....	FM-GPW-9621	WO-A-5632	0301C
L	CLAMP .....	FM-GPW-9653	WO-635097	0301C

RA PD 342266

FIGURE 03-3—AIR CLEANER ASSEMBLY—EXPLODED VIEW

## GROUP 03—FUEL (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willis No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>0301C—AIR CLEANER (Cont'd)</b>		
	3320-GPW-9633	FM-GPW-9633	WO-A-17318	SEAL, carburetor and air cleaner horn (supersedes BUSHING, FM-GPW-9686-A, WO-A-1451) . . . . .	1	
	3320-GPW-9686-B	FM-GPW-9686-B	WO-A-17317	SEAL, carburetor air cleaner tube clamp (supersedes BUSHING, FM-GPW-9686-A, WO-A-1451) . . . . .	1	
		FM-GPW-9647	WO-A-642	SHIELD, air cleaner, assembly . . . . .	1	
	H001-4167520	FM-20309-S7	WO-51732	BOLT, hex-hd., s-fin., S, cd-pltd., 1/4-28NPF-2 x 1/2 (BADX4AA-1) . . . . .	3	
		FM-33796-S2	WO-5914	NUT, reg, hex, s-fin., S, 1/4-28NPF-2 (GM-103024) . . . . .	3	
		FM-34745-S2	WO-52702	WASHER, plain, S, 1/4 in. . . . .	3	
	H001-1518007	FM-34805-S2	WO-52706	WASHER, lock, reg., S, 1/4 in. . . . .	3	
	6855-613380	FM-GPW-9612	WO-A-7191	SPRING, air cleaner toggle (OKS-613380) . . . . .	2	.0391
	3320-GPW-9637	FM-GPW-9637		TUBE, air cleaner . . . . .	1	
	3320-GPW-9637-A	FM-GPW-9637-A	WO-A-1290	TUBE, air cleaner, w/BRACKET, assembly (w/o ventilator tube connection) . . . . .	1	
	3320-GPW-9637-B	FM-GPW-9637-B	WO-A-6911	TUBE, air cleaner, w/BRACKET, assembly (w/ventilator tube connection) . . . . .	1	.554
01-2, 3				<b>0302—FUEL PUMP</b>		
03-4	0040-1521960	FM-GPW-9399	WO-115641	ARM, rocker, fuel pump, assembly (AC-1521960) . . . . .	1	.179
03-4	G085-3000180	FM-GPW-9387	WO-115657	BAIL, fuel pump strainer, assembly (AC-1523231) (also in KIT, FM-GPW-18375, WO-A-6754) . . . . .	1	
03-4		FM-GPW-9386	WO-A-1045	BODY, fuel pump, w/priming LEVER, assembly . . . . .	1	
03-4	G085-3000880	FM-GPW-9355	WO-A-1494	BOWL, fuel pump (metal) (AC-1537065) (also in KIT, FM-GPW-18375, WO-A-6754) . . . . .	1	
03-4	G085-3004580	FM-11A-9361	WO-115653	CLAMP, fuel pump valve (AC-1521956) . . . . .	1	
03-4		FM-26466-S7	WO-51546	SCREW, machine, rd-hd., S, cd-pltd., No. 6 (0.138-32NC-2 x 3/8) (also in KIT, FM-GPW-18373D, WO-A-9293) . . . . .	1	.0083
03-4		FM-GPW-9354	WO-115650	COVER, fuel pump, assembly . . . . .	2	
03-4		FM-31628-S7	WO-113439	SCREW, fil-hd., No. 10 (0.190)-32NPF-2 x 1/2 (AC-855493) (also in KIT, FM-GPW-18373-D, WO-A-7834) . . . . .	1	
03-4	H001-7025621	FM-34803-S7	WO-52221	WASHER, lock, S, cd-pltd., SAE std., No. 10 (0.190) . . . . .	6	
		FM-GPW-9398-B	WO-116995	DIAPHRAGM, fuel pump, w/pull ROD, assembly (AC-1538205) (used with PUMP, FM-GPW-9350, WO-A-1220) (also in KIT, FM-GPW-18373-C, WO-A-7834) . . . . .	6	
03-4	G085-0100660	FM-GPW-9398	WO-115644	DIAPHRAGM, fuel pump, w/PULL ROD, assembly (AC-1522199) (also in KIT, FM-GPW-18373-D, WO-A-9293) . . . . .	1	
03-4	G085-3002220	FM-GPW-9364	WO-115656	GASKET, fuel pump bowl (AC-1523096) (also in KIT, FM-GPW-18373-D, WO-A-9293, and KIT, FM-GPW-18375, WO-A-6754) . . . . .	1	
03-4		FM-GPW-9363	WO-115652	GASKET, fuel pump valve (AC-1521953) (also in KIT, FM-GPW-18373-D, WO-A-9293) . . . . .	1	
					2	

Key	Part Name	Ford Part No.	Willlys Part No.	Group No.
A	BAIL, assembly.....	FM-GPW-9387.....	WO-115657.....	.0302
B	SEAT.....	FM-GPW-9388.....	WO-113460.....	.0302
C	BOWL.....	FM-GPW-9355.....	WO-A-1494.....	.0302
D	SCREEN.....	FM-GPW-9365.....	WO-115654.....	.0302
E	GASKET.....	FM-GPW-9364.....	WO-115656.....	.0302
F	COVER.....	FM-GPW-9354.....	WO-115650.....	.0302
G	SCREW.....	FM-31628-S7.....	WO-113439.....	.0302
H	WASHER.....	FM-34803-S7.....	WO-52221.....	.0302
J	DIAPHRAGM, assembly.....	FM-GPW-9398.....	WO-115644.....	.0302
K	CLAMP.....	FM-11A-9361.....	WO-115653.....	.0302
L	VALVE, assembly.....	FM-11A-9352.....	WO-115651.....	.0302
M	SCREW.....	FM-26466-S7.....	WO-51546.....	.0302
N	GASKET.....	FM-GPW-9363.....	WO-115652.....	.0302
P	SPRING.....	FM-GPW-9396-B.....	WO-116694.....	.0302
Q	SPRING.....	FM-GPW-9380.....	WO-115643.....	.0302
R	ARM.....	FM-GPW-9399.....	WO-115641.....	.0302
S	LINK.....	FM-1NC-9381.....	WO-115880.....	.0302
T	PIN.....	FM-GPW-9378.....	WO-A-1046.....	.0302
U	BODY, w/LEVER, assembly.....	FM-GPW-9386.....	WO-A-1045.....	.0302
V	SEAL.....	FM-GPW-9469.....	WO-115870.....	.0302
W	WASHER.....	FM-GPW-9468.....	WO-115869.....	.0302

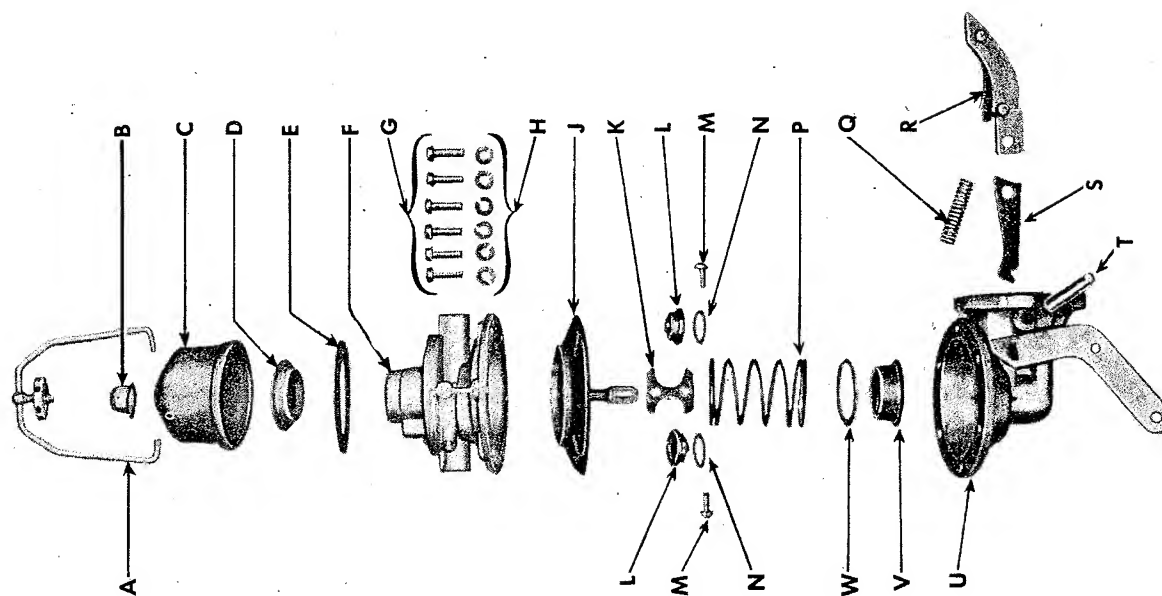


FIGURE 03-4—FUEL PUMP ASSEMBLY—EXPLODED VIEW

## GROUP 03—FUEL (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Q. Incl. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>0302—FUEL PUMP (Cont'd)</b>		
		FM-GPW-18373	WO-A-1540	KIT, repair, fuel pump (AC-1537904) (superseded by KIT, FM-GPW-18373-D, WO-A-9293)	as req.	
		FM-GPW-18373-B	WO-A-6838	KIT, repair, fuel pump (AC-1538114) (superseded by KIT, FM-GPW-18373-D, WO-A-9293)	as req.	1.173
	0040-1538360	FM-GPW-18373-C	WO-A-7834	KIT, repair, fuel pump (superseded by KIT, FM-GPW-18373-D, WO-A-9293)	as req.	1.173
		FM-GPW-9398-B	WO-116695	(Consists of:		
		FM-GPW-9364	WO-115656	1 DIAPHRAGM, w/ROD		
		FM-IGA-9417	WO-638737	1 GASKET, bowl		
		FM-GPW-9363	WO-115652	1 GASKET, fuel pump		
		FM-INC-9381	WO-115880	2 GASKET, valve		
		FM-GPW-9378	WO-A-1046	1 LINK, rocker arm		
		FM-GPW-9469	WO-A-1046	1 PIN, rocker arm		
		FM-GPW-9365	WO-115870	1 SEAL		
		FM-26466-S7	WO-115654	1 SCREEN, filtering, assembly		
		FM-31628-S7	WO-51546	3 SCREW, clamp		
		FM-GPW-9396	WO-113439	3 SCREW, cover		
		FM-GPW-9380	WO-116694	1 SPRING, diaphragm		
		FM-11A-9352	WO-115643	1 SPRING, rocker arm		
		FM-GPW-9377	WO-115651	2 VALVE, assembly		
		FM-GPW-18373-D	WO-113440	3 WASHER, lock		
			WO-A-1047	1 WASHER, pin		
	0040-1538360		WO-A-9293	KIT, repair, fuel pump (AC-1538360) (supersedes KITS, FM-GPW-18373, WO-A-1540; FM-GPW-18373-B, WO-A-6838; and FM-GPW-18373-C, WO-A-7834)	1	
		FM-GPW-9398	WO-115644	(Consists of:		
		FM-GPW-9364	WO-115656	1 DIAPHRAGM, w/ROD		
		FM-IGA-9417	WO-638737	1 GASKET, bowl		
		FM-GPW-9363	WO-115652	1 GASKET, fuel pump		
		FM-INC-9381	WO-115880	2 GASKET, valve		
		FM-GPW-9378	WO-A-1046	1 LINK, rocker arm		
		FM-GPW-9469	WO-115870	1 PIN, rocker arm		
		FM-GPW-9365	WO-115654	1 SEAL		
		FM-26466-S7	WO-51546	1 SCREEN, filtering, assembly		
		FM-31628-S7	WO-113439	1 SCREW, clamp		
		FM-GPW-9396-B	WO-116694	3 SCREW, cover		
		FM-GPW-9380	WO-115643	1 SPRING, diaphragm		
			WO-115643	1 SPRING, rocker arm		

			FM-11A-9352	WO-115651	2 VALVE, assembly	1	
			FM-GPW-9377	WO-113440	3 WASHER, lock		
			FM-GPW-18375	WO-A-1047	1 WASHER, pin)		
	0040-1538115			WO-A-6754	KIT, repair, fuel pump bowl (AC-1538115)		
					(Consists of:		
			FM-GPW-9387	WO-11567	1 BAIL, fuel strainer, assembly (AC-1523231)		
	G085-3000880		FM-GPW-9355	WO-A-1494	1 BOWL, fuel (AC-1537065)		.103
	G085-3002220		FM-GPW-9364	WO-115656	1 GASKET, fuel bowl (AC-1523096)		
	G085-1414736		FM-GPW-9373	WO-113461	1 NUT, thumb, fuel pump bowl (AC-855763)		
	G067-1501511		FM-GPW-9388	WO-113460	1 SEAT, fuel bowl (AC-854005)		
03-4	G085-3003100		FM-INC-9381	WO-115880	LINK, fuel pump rocker arm (AC-1521708) (also in KIT, FM-GPW-18373-D, WO-A-9293)	1	
			FM-GPW-9373	WO-113461	NUT, thumb, fuel pump strainer (AC-855763) (also in KIT, FM-GPW-18375, WO-A-6754)	1	
03-4	G085-3003640		FM-GPW-9378	WO-A-1046	PIN, fuel pump rocker arm (AC-1521578) (also in KIT, FM-GPW-18373-D, WO-A-9293)	1	
	G503-0345876		FM-GPW-9350	WO-A-1220	PUMP, fuel, assembly (superseded by PUMP, FM-GPW-9350-B, WO-A-8323)	1	2.04
01-1	0040-1538312		FM-GPW-9350-B	WO-A-8323	PUMP, fuel, assembly (AC-1538312) (supersedes PUMP, FM-GPW-9350, WO-A-1220)	1	
03-4	G085-3004880		FM-GPW-9365	WO-115654	SCREEN, filtering fuel pump, assembly (AC-1523099) (also in KIT, FM-GPW-18373-D, WO-A-9293)	1	
			FM-GPW-9469	WO-115870	SEAL, fuel pump pull rod (rubber) (AC-1521880) (also in KIT, FM-GPW-18373-D, WO-A-9293)	1	.0354
03-4	G067-1510511		FM-GPW-9388	WO-113460	SEAL, fuel pump strainer bowl (AC-854005) (also in KIT, FM-GPW-18375, WO-A-6754)	1	
			FM-GPW-9396-B	WO-116694	SPRING, fuel pump diaphragm (AC-1523068) (also in KIT, FM-GPW-18373-D, WO-A-9293)	1	
03-4			FM-GPW-9380	WO-115643	SPRING, fuel pump rocker arm (AC-1522046) (also in KIT, FM-GPW-18373-D, WO-A-9293)	1	
			FM-11A-9352	WO-115651	VALVE, fuel pump, assembly (AC-1523106) (also in KIT, FM-GPW-18373-D, WO-A-9293)	2	
03-4	0040 1521985		FM-GPW-9468	WO-115869	WASHER, fuel pump diaphragm spring seat (AC-1521985)	1	.0052
			FM-GPW-9377	WO-A-1047	WASHER, fuel pump rocker arm pin (also in KIT, FM-GPW-18373-D, WO-A-9293)	1	

## 0302A—FUEL PUMP ATTACHING PARTS

			FM-20366-S	WO-6428	BOLT, fuel pump mounting (hex-hd., S., $\frac{5}{16}$ -18NC-2 x $\frac{1}{8}$ ) (GM-106325)	2	
	H001-1013018		FM-34806-S7	WO-51833	WASHER, lock, S., cd-pltd., SAE std., $\frac{5}{16}$ in.	2	
	H001-7025711		FM-GPW-9417		GASKET, fuel pump to block (AC-838263) (superseded by GASKET, FM-IGA-9417, WO-638737)	1	
	G085-3002240				GASKET, fuel pump to block (also in KIT, FM-GPW-18375-D, WO-A-9293, and GASKET SET, FM-GPW-18390, WO-A-1536) (supersedes GASKET, FM-GPW-9417)	1	



## GROUP 03—FUEL (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
01-11	3320-GPW-9752	FM-GPW-9752	WO-633013	0303—ACCELERATOR AND LINKAGE	1	.168
		FM-GPW-9728	WO-639607		1	.0606
	H001-4167520	FM-33796-S2	WO-5914		2	
	H101-0173252	FM-88350-S7	WO-337304		2	.0038
		FM-356305-S	WO-52768		2	.0083
		FM-34805-S2	WO-52706		2	
	H001-1518007	FM-GPW-9751	WO-A-1173		1	.0166
		FM-GPW-9745	WO-639610		1	.031
	3320-GPW-9731-B	FM-GPW-9711	WO-651298		1	.0218
	3320-GPW-9727	FM-GPW-9727	WO-A-1174		1	
	3320-GPW-9719	FM-GPW-9719	WO-A-6710		1	.244
	H001-0811066	FM-72008-S	WO-5433		1	
	G085-23-71466	FM-34745-S2	WO-52702		1	
	3320-GPW-9726	FM-GPW-9726	WO-A-1910		1	
18-1	9680-A-1083		WO-A-1083		1	
	3320-GPW-9735-A	FM-GPW-9735-A			1	.358
	3320-GPW-9735-B	FM-GPW-9735-B	WO-A-6851		1	
		FM-355836-S7	WO-A-1701		1	
		FM-355162-S2	WO-51537		2	
		FM-GPW-9716	WO-A-1225		2	.0878
		FM-33909-S	WO-52954		1	
	H101-0114493		WO-A-1273		1	
	3320-GPW-9742	FM-GPW-9742	WO-A-1175		1	.129
	H001-0811026	FM-72008-S	WO-5433		2	
18-1	3320-GPW-9739	FM-GPW-9739	WO-A-1243		1	
	9680-A-6853		WO-A-6853		1	
	3320-GPW-9799	FM-GPW-9799	WO-633011		1	.0231
	3320-GPW-9737	FM-GPW-9737	WO-632174		1	.0064
	3320-GPW-9795	FM-GPW-9795	WO-650483		1	.0051
					1	

## 0303A—HAND THROTTLE AND CHOKE CONTROL

3320-GPW-9775	FM-GPW-9775	WO-A-5106	CONTROL, carburetor choke or throttle, assembly (superseded by CONTROL, FM-GPW-9775-B, WO-A-7517)	2	.244
3320-GPW-9700	FM-GPW-9700	WO-A-1301	CONTROL, carburetor choke or throttle, assembly (superseded by CONTROL, FM-GPW-9775-B, WO-A-7517)		.244
3320-GPW-9775-B	FM-GPW-9775-B	WO-A-7517	CONTROL, carburetor choke or throttle, assembly (supersedes CONTROL, FM-GPW-9700, WO-A-1301, and FM-GPW-9775, WO-A-5106)	2	
		WO-A-1308	KNOB, carburetor choke or throttle, w/PLUNGER and WIRE, assembly (superseded by KNOB, FM-GPW-9778, WO-A-7518)	2	
		WO-A-1307	KNOB, carburetor choke or throttle, w/PLUNGER and WIRE, assembly (superseded by KNOB, FM-GPW-9778, WO-A-7518)	2	
3320-GPW-9778	FM-GPW-9778	WO-A-7518	KNOB, carburetor choke or throttle, w/PLUNGER and WIRE, assembly (supersedes KNOB, WO-A-1308 and WO-A-1307)	2	
3320-GPW-11474	FM-GPW-11474	WO-372438	STOP, throttle wire	1	.0184
3320-GPW-11495	FM-GPW-11495	WO-A-8834	STOP, throttle wire, w/SCREW, assembly	1	
H001-5147511	FM-26457-S7	WO-52131	SCREW, mach., rd-hd., S., cd-pltd., No. 8 (0.164)-32NC-2 x 1/4	1	

## 0304—FUEL LINES

0040-119922	FM-GPW-9154	WO-A-1265	BUSHING, pipe, shoulder, hex., 1/4 x 1/8 (AC-119922) (fuel strainer inlet and outlet) (Note 1)	2	.0586
	FM-GPW-9269	WO-A-15596	ELBOW, flexible connection to fuel pump (used with TANK, FM-GPW-9002-C, WO-A-15507)	1	
	FM-GPW-14585	WO-A-1289	CLIP, closed, 1/8 in., bolt hole 13/32 (tube to front engine plate)	1	.0142
	FM-GPW-9295	WO-A-5450	CLIP, open, 7/8 in., bolt hole 1/2 (1 used, tube to floor pan front cross sill, 2 used, tube to floor pan rear cross sill, 1 used, tube to fender splashier, 1 used, tube to dash)	5	.0152
G503-0139920	FM-GPW-9288	WO-A-1325	CONNECTION, flexible (in fuel line) (FO-HA-8031)	1	.342
	FM-GPW-9267		CONNECTOR, inverted flared tube, 5/8 in. (superseded by CONNECTOR, FM-GPW-9267-A, WO-387249)	1	
3320-GPW-9627-A	FM-GPW-9267-A	WO-387249	CONNECTOR, inverted flared tube, br., 5/8 in. (fuel strainer) (supersedes CONNECTOR, FM-GPW-9627)	1	.0373
3320-GPW-9628	FM-GPW-9268	WO-384549	ELBOW, inverted flared tube, 5/8 in. (fuel pump inlet and outlet) (fuel strainer)	3	.0446
G503-0407836	FM-GPW-9289	WO-A-1368	TUBE, flexible connection to fuel pump, assembly	1	.179
3320-GPW-9282	FM-GPW-9282	WO-A-1367	TUBE, fuel filter to flexible connection, assembly (Note 1)	1	.179
3320-GPW-9237	FM-GPW-9237	WO-A-1366	TUBE, fuel tank to filter, assembly (73 5/8 long x 5/8 O.D.) (Note 1)	1	.456
3320-GPW-9237-B	FM-GPW-9237-B	WO-A-15598	TUBE, fuel tank to flexible connection (51 1/8 long x 5/8 O.D.) (used with TANK, FM-GPW-9003-C, WO-A-15507)	1	
3320-GPW-9369	FM-GPW-9369	WO-A-1369	TUBE, fuel pump to carburetor, assembly	1	.15


0306B—FUEL STRAINER  
(For vehicles equipped with fuel strainer mounted on dash)

	FM-GPW-9162	WO-A-1263	BOWL, fuel strainer, assembly	1	
	FM-GPW-9149	WO-A-1258	COVER, mounting, fuel strainer	1	1.60
G085-3002320	FM-GPW-9184	WO-A-1257	GASKET, fuel strainer cover cap screw (AC-853562) (also in GASKET SET, FM-GPW-18337, WO-A-6883)	1	

Note 1—For vehicles equipped with fuel strainer mounted on dash.

## GROUP 03—FUEL (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willis No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>0306B—FUEL STRAINER (Cont'd)</b> (For vehicles equipped with fuel strainer mounted on dash)						
03-5	G133-0193816	FM-GPW-9160	WO-A-1259	GASKET, fuel strainer bowl (AC-853558) (also in GASKET SET, FM-GPW-18337, WO-A-6883)	1	
03-5	G085-3002300	FM-GPW-9186	WO-A-1260	GASKET, fuel strainer unit (AC-853572) (also in GASKET SET, FM-GPW-18337, WO-A-6883)	1	
	G503-0194028	FM-GPW-18337	WO-A-6883	GASKET SET, fuel strainer	1	.0673
				(Consists of:		
	G085-3002320	FM-GPW-9184	WO-A-1257	1 GASKET, cover cap screw		
	G085-3002280	FM-GPW-9160	WO-A-1259	1 GASKET, strainer bowl		
	G085-3002300	FM-GPW-9186	WO-A-1260	1 GASKET, strainer unit		
03-5	H006-0283195	FM-GPW-9185	WO-A-1264	PLUG, drain, fuel strainer (AC-127951)	1	.05
03-5		FM-353055-S	WO-5138	PLUG, pipe, 1, 1/4 in.	2	.0142
03-5	G104-1781765	FM-GPW-9183	WO-A-1256	SCREW, attaching, fuel strainer cover (fil-hd., S.) (AC-853634)	1	.212
03-5	G085-3005780	FM-GPW-9182	WO-A-1262	SPRING, fuel strainer unit (AC-1504118)	1	.0386
	G503-0183053	FM-GPW-9155		STRAINER, fuel, assembly (superseded by STRAINER, FM-GPW-9155-A, WO-A-1255)	1	1.81
	G503-0183053	FM-GPW-9155-A	WO-A-1255	STRAINER, fuel, assembly (AC-1595235) (supersedes STRAINER, FM-GPW-9155)	1	
	G518-7001420	FM-24389-S2	WO-5919	BOLT, hex-hd., S., 3/8-24NF-2 x 1	2	
	H001-1518009	FM-33800-S7	WO-52542	NUT, reg., hex., S., cd-pltd., 3/8-24NF-2	2	
	H001-7045591	FM-34807-S2	WO-5010	WASHER, lock, S., SAE std., 3/8 in.	2	
	G085-3005980	FM-34707-S7	WO-52819	WASHER, plain, flat, S., cd-pltd., USS., 3/8 in.	2	
		FM-GPW-9140		STRAINER-UNIT, fuel, assembly (superseded by STRAINER-UNIT, FM-GPW-9140-A, WO-A-1261)	1	
03-5		FM-GPW-9140-A	WO-A-1261	STRAINER-UNIT, fuel, assembly (AC-1595823) (supersedes STRAINER-UNIT, FM-GPW-9140)	1	1.60
<b>GROUP 04—EXHAUST</b>						
<b>0401—MUFFLER AND EXHAUST PIPE</b> (Round Type and Oval Type)						
04-1	3320-GPW-5251	FM-GPW-5251	WO-A-1300	CLAMP, exhaust pipe extension	1	.101
04-1		FM-23392-S2	WO-52983	BOLT, carriage, sq-shank, rd-hd., S., 5/16-18NC-2 x 7/8 (GM-119034)	1	
	H001-1013461	FM-20046-S2	WO-51523	BOLT, hex-hd., S., 5/16-18NC-2 x 3/4	1	
04-1	G085-2307354	FM-33797-S2	WO-53037	NUT, reg., hex., S., 5/16-18NC-2 (GM-118614)	2	
04-1	H001-7025711	FM-34806-S7	WO-51833	WASHER, lock, S., cd-pltd., SAE std., 5/16 in.	2	
04-1		FM-34746-S7	WO-A-1533	WASHER, plain, S., cd-pltd., SAE, 5/16 in. (used as spacer)	1	

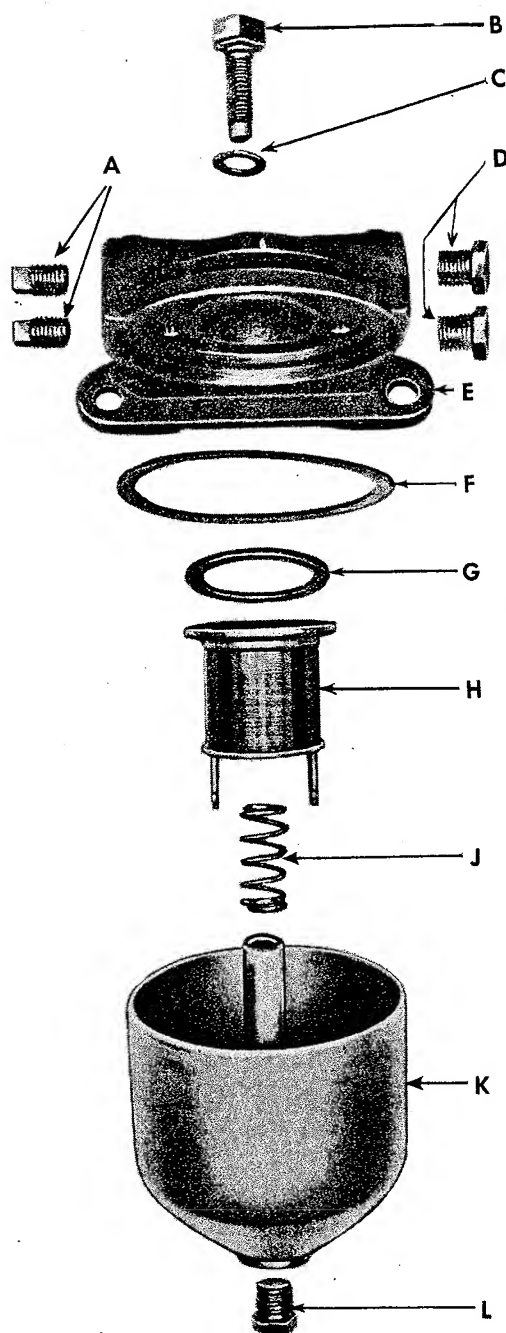

Key	Part Name	Ford Part No.	Willys Part No.	Group No.
A	PLUG .....	FM-353055-S .....	WO-5138 .....	0306B
B	SCREW .....	FM-GPW-9183 .....	WO-A-1256 .....	0306B
C	GASKET .....	FM-GPW-9184 .....	WO-A-1257 .....	0306B
D	BUSHING .....	FM-GPW-9154 .....	WO-A-1265 .....	0304
E	COVER .....	FM-GPW-9149 .....	WO-A-1258 .....	0306B
F	GASKET .....	FM-GPW-9160 .....	WO-A-1259 .....	0306B
G	GASKET .....	FM-GPW-9186 .....	WO-A-1260 .....	0306B
H	STRAINER—UNIT ..	FM-GPW-9140-A ..	WO-A-1261 .....	0306B
J	SPRING .....	FM-GPW-9182 .....	WO-A-1262 .....	0306B
K	BOWL .....	FM-GPW-9162 .....	WO-A-1263 .....	0306B
L	PLUG .....	FM-GPW-9185 .....	WO-A-1264 .....	0306B

RA PD 342239

FIGURE 03-5—FUEL STRAINER ASSEMBLY—EXPLODED VIEW

## GROUP 04—EXHAUST (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>0401—MUFFLER AND EXHAUST PIPE (Cont'd)</b> (Round Type and Oval Type)		
04-1	3320-GPW-5270	FM-GPW-5270	WO-636004	CLAMP, exhaust pipe to muffler.	1	.0658
04-1		FM-20407-S7	WO-53131	BOLT, hex-hd., S, cd-pltd., $\frac{5}{16}$ -24NF-2 x 1 $\frac{1}{2}$ .	1	
04-1	G166-0314832	FM-33798-S7	WO-A-1532	NUT, reg., hex, S, cd-pltd., $\frac{5}{16}$ -24NF-2.	1	
04-1	H001-7027511	FM-34806-S7	WO-51833	WASHER, lock, S, cd-pltd., SAE std., $\frac{5}{16}$ in.	1	
		FM-34706-S2	WO-5437	WASHER, plain, S, US std., $\frac{5}{16}$ in.	1	
04-1	3320-GPW-5298	FM-GPW-5298	WO-A-6119	CLAMP, muffler tail pipe.	1	.108
		FM-20407-S7	WO-53131	BOLT, hex-hd., S, cd-pltd., $\frac{5}{16}$ -24NF-2 x 1 $\frac{1}{2}$ (GM-123499).	1	
	G166-0314832	FM-33798-S7	WO-A-1532	NUT, reg., hex, S, cd-pltd., $\frac{5}{16}$ -24NF-2.	1	
	H001-7025711	FM-34806-S7	WO-51833	WASHER, lock, S, cd-pltd., SAE std., $\frac{5}{16}$ in.	1	
		FM-34706-S2	WO-5437	WASHER, plain, flat, S, US std., $\frac{5}{16}$ in.	1	
04-1	3320-GPW-5264-B	FM-GPW-5264-B	WO-A-5753	CLAMP, support, oval type muffler.	1	.163
		FM-20467-S2	WO-51658	BOLT, hex-hd., S, $\frac{5}{16}$ -24NF-2 x 1 $\frac{1}{2}$ .	2	
	H001-7025711	FM-33798-S7	WO-A-1532	NUT, reg., hex, S, cd-pltd., $\frac{5}{16}$ -24NF-2.	2	
		FM-34806-S7	WO-51833	WASHER, lock, S, cd-pltd., SAE std., $\frac{5}{16}$ in.	2	
		FM-GPW-5264		CLAMP, support, round type muffler (superseded by CLAMP, FM-GPW-5264-A, WO-A-655).	1	
04-1	3320-GPW-5264-A	FM-GPW-5264-A	WO-A-655	CLAMP, support, round type muffler (supersedes CLAMP, FM-GPW-5264).	1	.105
	3320-GPW-5269	FM-GPW-5269	WO-630526	FLANGE, exhaust pipe (Wilys only).	1	
			WO-6486	BOLT, hex-hd., s-fin., alloy-S, $\frac{3}{8}$ -16NC-2 x 2 $\frac{1}{4}$ (GM-106333).	1	
			WO-53289	NUT, hex., S, Secz-Pruf, $\frac{3}{8}$ -16NC-2.	1	
			WO-5010	WASHER, lock, reg., S, $\frac{3}{8}$ in.	1	
04-1	3320-GPW-9450	FM-34807-S2	WO-634814	GASKET, exhaust pipe flange (also in GASKET SET, FM-GPW-18387, WO-A-1537).	1	.008
04-1	3320-GPW-5283	FM-GPW-5283	WO-A-658	INSULATOR, muffler support.	2	.0072
		FM-23498-S2	WO-52372	BOLT, carriage, sq-shank, rd-hd., S, $\frac{5}{16}$ -18NC-2 x 1 $\frac{3}{4}$ (w/NUT) (to support strap and body sill).	1	
04-1		FM-24367-S2	WO-50929	BOLT, hex-hd., S, $\frac{5}{16}$ -24NF-2 x $\frac{1}{2}$ (to support strap and body sill).	3	
	G166-0314832	FM-33798-S7	WO-A-1532	NUT, reg., hex., S, cd-pltd., $\frac{5}{16}$ -24NF-2.	3	
	H001-7025711	FM-34806-S7	WO-51833	WASHER, lock, S, cd-pltd., SAE std., $\frac{5}{16}$ in.	4	
		FM-GPW-5230		MUFFLER, assembly (round type) (superseded by MUFFLER, assembly, FM-GPW-5230-A, WO-A-1146) (Note 1).	1	
	3320-GPW-5230-A	FM-GPW-5230-A	WO-A-1146	MUFFLER, assembly (round type) (supersedes MUFFLER, assembly FM-GPW-5230) (Note 1).	1	
04-1	3320-GPW-5230-B	FM-GPW-5230-B	WO-A-6118	MUFFLER, assembly (oval type).	1	1.71

Note 1—MUFFLER, assembly, FM-GPW-5230-B, WO-A-6118 (oval type) can be used to replace MUFFLER, assembly, FM-GPW-5230 and FM-GPW-5230-A, WO-A-1146 (round type) by using CLAMPS, FM-GPW-5264-B, WO-A-5733 and FM-GPW-5298, WO-A-6119 with the former.

Key	Part Name	Ford Part No.	Willys Part No.	Group No.
A	PIPE, assembly	FM-GPW-5246-B	WO-A-10199	0401
B	FLANGE	FM-GPW-5269	WO-630526	0401
C	PLATE	FM-GPW-5274	WO-638058	0401
D	BOLT	FM-23498-S2	WO-52372	0401
E	INSULATOR	FM-GPW-5283	WO-A-658	0401
F	BOLT	FM-24367-S2	WO-50929	0401
G	CLAMP	FM-GPW-5264-B	WO-A-5753	0401
H	STRAP	FM-GPW-5262	WO-A-657	0401
J	MUFFLER, assembly	FM-GPW-5230-B	WO-A-6118	0401
K	CLAMP	FM-GPW-5298	WO-A-6119	0401
L	PLATE	FM-GPW-5291-B	WO-A-1253	1500
M	WASHER	FM-34746-S7	WO-A-1533	0401
N	WASHER	FM-34806-S7	WO-51833	0401
P	NUT	FM-33797-S2	WO-53037	0401
Q	BOLT	FM-23392-S2	WO-52983	0401
R	CLAMP	FM-GPW-5251	WO-A-1300	0401
S	NUT	FM-33798-S7	WO-A-1532	0401
T	BOLT	FM-20407-S7	WO-53131	0401
U	CLAMP	FM-GPW-5270	WO-636004	0401

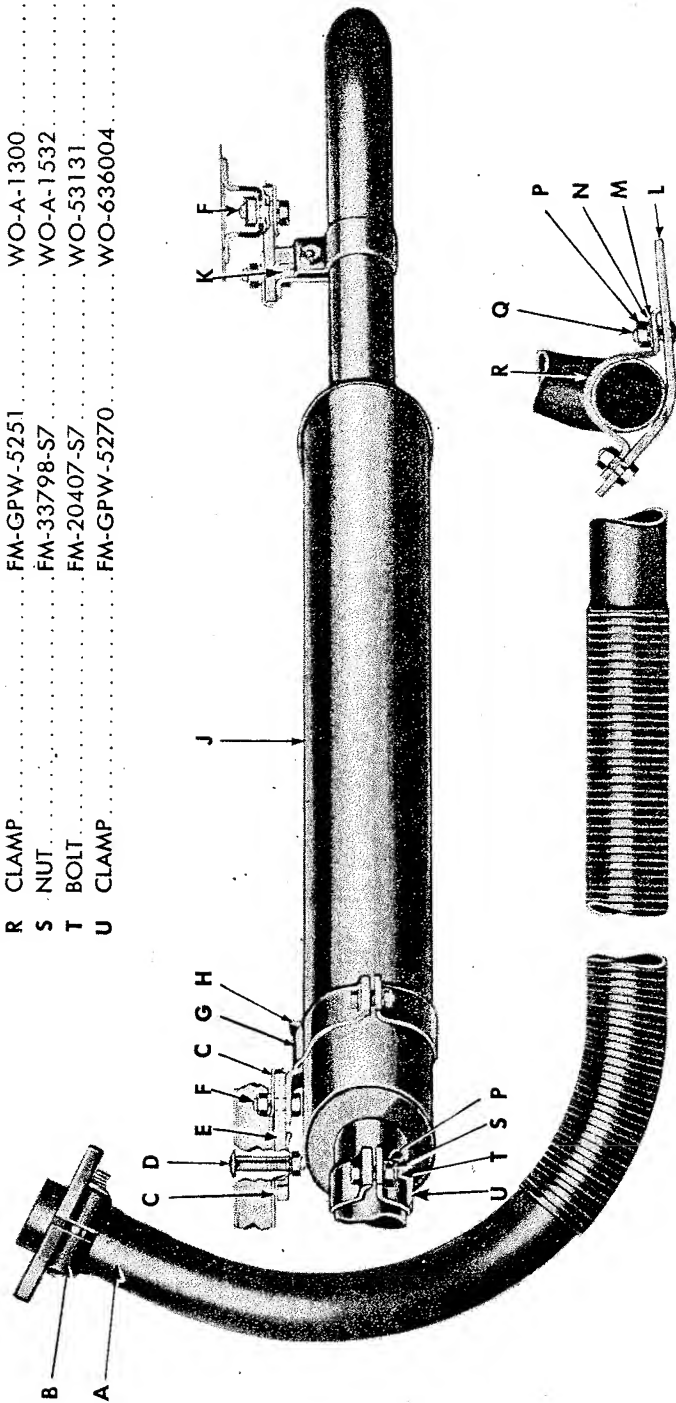


FIGURE 04-1—EXHAUST SYSTEM

## GROUP 04—EXHAUST (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>0401—MUFFLER AND EXHAUST PIPE (Cont'd)</b> (Round Type and Oval Type)		
04-1	3320-GPW-5246	FM-GPW-5246	WO-A-1296	PIPE, exhaust, w/bond STRAP, assembly (Ford only)	1	2.232
	3320-GPW-5246-B	FM-GPW-5246-B	WO-A-8101	PIPE, exhaust, w/o bond STRAP, assembly (Willlys only)	1	
01-11	G518-7001420	FM-24449-S7	WO-A-10199	PIPE, exhaust, assembly (flange welded on pipe)	1	
01-11		FM-33800-S7	WO-50878	BOLT, hex-hd., S., cd-pltd., $\frac{3}{8}$ -24NF-2 x 1 $\frac{1}{8}$	1	
04-1	3320-GPW-5274	FM-88032-S7	WO-52542	NUT, reg., hex., S., cd-pltd., $\frac{3}{8}$ -24NF-2	2	
04-1	3320-GPW-5262	FM-GPW-5274	WO-332515	STUD, S., $\frac{3}{8}$ -16NC-2 x 1 $\frac{1}{8}$ x $\frac{3}{8}$ -24NF-2 (in manifold)	1	.0072
		FM-GPW-5262	WO-638058	PLATE, muffler support insulator	4	.0955
			WO-A-657	STRAP, muffler support (2 required for round type muffler, one for oval type)	1 or 2	
				<b>0401-1—MUFFLER AND EXHAUST PIPE (DEEP MUD TYPE)</b> (Mounted diagonally at Rear of Vehicle)		
	3320-GPW-5265	FM-GPW-5265	WO-A-15498	BRACKET, support, exhaust pipe extension	1	
		FM-24327-S7	WO-52132	BOLT, hex-hd., S., $\frac{5}{16}$ -24NF x $\frac{5}{8}$ (exhaust pipe extension support bracket to frame cross member)	1	.0026
	H001-5419860	FM-24387-S7	WO-5934	BOLT, hex-hd., S., $\frac{5}{16}$ -24NF-2 x 1 (support bracket to muffler) (GM-100014)	1	
	H001-7025711	FM-33800-S	WO-5910	NUT, hex., S., $\frac{5}{16}$ -24NF-2	2	
		FM-34806-S7	WO-51833	WASHER, lock, reg., S., $\frac{5}{16}$ in.	2	
	3320-GPW-5266	FM-GPW-5266	WO-52274	WASHER, plain, S., $\frac{5}{16}$ in.	1	
		FM-24327-S7	WO-A-9084	BRACKET, support, muffler rear clamp	1	.0026
	H001-7025711	FM-33800-S	WO-52132	BOLT, hex-hd., S., $\frac{5}{16}$ -24NF-2 x $\frac{5}{8}$	1	
	3320-GPW-5253	FM-34806-S7	WO-5910	NUT, hex., S., $\frac{5}{16}$ -24NF-2	1	
	9680-A9086	FM-GPW-5253	WO-51833	WASHER, lock, reg., S., $\frac{5}{16}$ in.	1	
		FM-24327-S7	WO-A-9086	BRACKET, support, muffler front clamp (Ford only)	1	.0026
	H001-7025711	FM-33800-S	WO-52132	BRACKET, support, muffler front clamp (Willlys only)	1	
	3320-GPW-5276	FM-GPW-5276	WO-51833	BOLT, hex-hd., S., $\frac{5}{16}$ -24NF-2 x $\frac{5}{8}$	1	
		FM-24387-S7	WO-5910	NUT, hex., S., $\frac{5}{16}$ -24NF-2	1	
	H001-7025711	FM-355982-S	WO-53285	WASHER, lock, reg., $\frac{5}{16}$ -24NF-2	1	
		FM-34806-S7	WO-51833	WASHER, plain, S., $\frac{5}{16}$ in.	1	
	3320-GPW-5251-B	FM-GPW-5251-B	WO-A-9082	CLAMP, exhaust pipe extension support strap	1	
		FM-24387-S7	WO-5934	BOLT, hex-hd., S., $\frac{5}{16}$ -24NF-2 x 1	1	

H001-7025711	FM-355982-S	WO-53285	NUT, hex., S., $\frac{5}{16}$ -24NF-2.....	1
3320-GPW-5264-B	FM-34806-S7	WO-51833	WASHER, lock, reg., S., $\frac{5}{16}$ in.....	1
		WO-52274	WASHER, plain, S., $\frac{5}{16}$ in.....	1
		WO-A-5753	CLAMP, muffler, rear.....	1
H001-7025711	FM-GPW-5264-B	WO-5934	BOLT, hex-hd., S., $\frac{5}{16}$ -24NF-2 x 1.....	1
	FM-24387-S7	WO-53285	NUT, hex., S., Seez-Pruf, $\frac{5}{16}$ -24NF-2.....	1
	FM-355982-S	WO-51833	WASHER, lock, reg., S., $\frac{5}{16}$ in.....	1
	FM-34806-S7	WO-52274	WASHER, plain, S., $\frac{5}{16}$ in.....	1
3320-GPW-5283	FM-GPW-5245-B	WO-A-9142	EXTENSION, exhaust pipe.....	1
	FM-GPW-5283	WO-A-658	INSULATOR, exhaust pipe extension.....	1
	FM-24367-S2	WO-50929	BOLT, hex-hd., S., $\frac{5}{16}$ -24NF-2 x $\frac{1}{2}$ .....	2
H001-7025711	FM-355982-S	WO-53285	NUT, hex., S., Seez-Pruf, $\frac{5}{16}$ -24NF-2.....	2
3320-GPW-5230-C	FM-34806-S7	WO-51833	WASHER, lock, S., reg., $\frac{5}{16}$ in.....	2
3320-GPW-5253	FM-GPW-5230-C	WO-A-9090	MUFFLER, deep mud, w/tail PIPE, assembly.....	1
3320-GPW-5274	FM-GPW-5253	WO-A-9150	PIPE, exhaust, w/FLANGE, flexible CONNECTOR, and INSERT, assembly.....	1
3320-GPW-5262	FM-GPW-5274	WO-638058	PLATE, exhaust pipe extension.....	1
	FM-GPW-5262	WO-A-657	STRAP, support, exhaust pipe extension clamp.....	1

.163

.0072

.0955

## GROUP 05—COOLING SYSTEM

### 0501—RADIATOR

G503-0131549	FM-GPW-8100-A	WO-A-1215	CAP, filler, radiator, assembly (AC-846709).....	1
H106-0103647	FM-9N-8115	WO-A-6942	CAP, filler, radiator, assembly (Note 1).....	1
3320-GPW-8005-A	FM-GPW-8005	WO-A-1126	COCK, drain, radiator ( $\frac{1}{4}$ in.) (WH-145-A) (EAT-IE-1212).....	1
	FM-GPW-8005-A	WO-A-1214	CORE, radiator.....	1
	FM-355762-S7	WO-A-1546	CORE, radiator, w/TANK and SHROUD, assembly.....	1
	FM-34084-S7	WO-A-1547	BOLT, carriage, rd-hd., sq-nk., S., cd-pltd., $\frac{1}{16}$ -20NF-2 x 1 $\frac{1}{2}$ (FORD only).....	2
	FM-34708-S7	WO-53027	NUT, reg., hex., s-fin., S., cd-pltd., $\frac{1}{16}$ -20NF-2.....	4
	FM-356314-S7	WO-A-6941	WASHER, plain, S., cd-pltd., $\frac{1}{16}$ in.....	2
G103-1593621	FM-K-7129-B	WO-A-1216	WASHER, lock, internal-external tooth, S., cd-pltd., $\frac{1}{16}$ in.....	2
H001-4167560	FM-GPW-8133	WO-A-1217	CORE, radiator, w/SHROUD, assembly (Note 1).....	1
H001-7025711	FM-33798-S7	WO-A-1532	GASKET, radiator filler cap (AC-846732).....	1
	FM-34806-S7	WO-51833	ROD, brace, radiator core.....	3
	FM-GPW-8125-A	WO-A-4413	NUT, reg., hex., s-fin., S., cd-pltd., $\frac{5}{16}$ -24NF-2 (GM-103025).....	3
			WASHER, lock, reg., S., cd-pltd., $\frac{5}{16}$ in.....	3
			SHIM, radiator core to support bracket.....	2

.407

.0833

13.15

.0217

.0167

.163

.006

### 0501C—SURGE TANK (Only for Vehicles Modified by FSMWO-G503-W1)


	WO-A-6947	CLAMP, radiator surge tank connecting hose ( $\frac{3}{8}$ in.).....	4
	WO-A-6946	HOSE, connecting, radiator surge tank tube.....	2
	WO-A-11121	PLATE, tapping, radiator surge tank.....	2

Note 1—Only for vehicles modified by FSMWO-G503-W1 (see page 3)



## GROUP 05—COOLING SYSTEM

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>0501C—SURGE TANK (Cont'd)</b> <b>(Only for Vehicles Modified by FSMWO-G503-W1)</b>		
			WO-A-6949	STRAP, mounting, radiator surge tank.	2	
			WO-52161	NUT, mach., screw, hex., S., $\frac{1}{4}$ -28NF-2.	4	
			WO-52468	SCREW, mach., hex-hd., S., $\frac{1}{4}$ -28NF-2 x $\frac{5}{8}$ .	4	
			WO-53058	WASHER, lock, reg., S., $\frac{1}{4}$ in.	4	
	H001-7025685		WO-A-11176	SHIELD, radiator surge tank, assembly.	1	
	H101-0121668		WO-52168	BOLT, hex-hd., S., $\frac{1}{4}$ -20NC-2 x $\frac{5}{8}$ .	2	
			WO-53195	BOLT, hex-hd., S., $\frac{1}{4}$ -20NC-2 x $1\frac{1}{4}$ (for tapping plates).	2	
			WO-52217	NUT, reg., hex., S., $\frac{1}{4}$ -20NC-2.	2	
			WO-52031	WASHER, lock, reg., S., $\frac{1}{4}$ in.	4	
			WO-50937	WASHER, plain, S., $\frac{1}{4}$ in.	6	
			WO-A-6933	TANK, surge, radiator, assembly.	1	
			WO-A-6945	TUBE, radiator surge tank.	1	
				<b>0502—THERMOSTAT</b>		
01-4	3320-GPW-8578	FM-GPW-8578	WO-639651	RETAINER, thermostat.	1	.0239
01-4	G503-0400093	FM-GPW-8575	WO-637646	THERMOSTAT, assembly (HR-3108628).	1	.424
				<b>0503—WATER PUMP</b>		
01-4, 05-1	H012-0900105	FM-GPW-8530-A	WO-636297	BEARING, water pump, w/SHAFT, assembly, FM-GPW-18515-B (superseded by BEARING, assembly, FM-GPW-8530, WO-636297).	1	
				BEARING, water pump, w/SHAFT, assembly (double row, annular) (ND-885141) (MRC-D2-13567) (HO-88541) (also in KIT, FM-GPW-18515-B, WO-A-6839) (supersedes BEARING, assembly, FM-GPW-8530-A).	1	
			WO-640032	BELLOWS, water pump seal.	1	
05-1	3320-GPW-8505	FM-GPW-8548	WO-637052	BODY, water pump.	1	
05-1	G503-0194016	FM-GPW-8505	WO-637053	GASKET, water pump to cylinder block (also in KIT, FM-GPW-18515-B, WO-A-6839 and GASKET SET, FM-GPW-18387, WO-A-1536).	1	.0098
			WO-639993	IMPELLER, water pump.	1	.733
01-4, 05-1	3320-GPW-8512	FM-GPW-8512		KIT, repair, water pump (superseded by KIT, FM-GPW-18515-B, WO-A-6839).	1	1.124
			FM-GPW-18515	KIT, repair, water pump (superseded by KIT, FM-GPW-18515-B, WO-A-6839).	1	

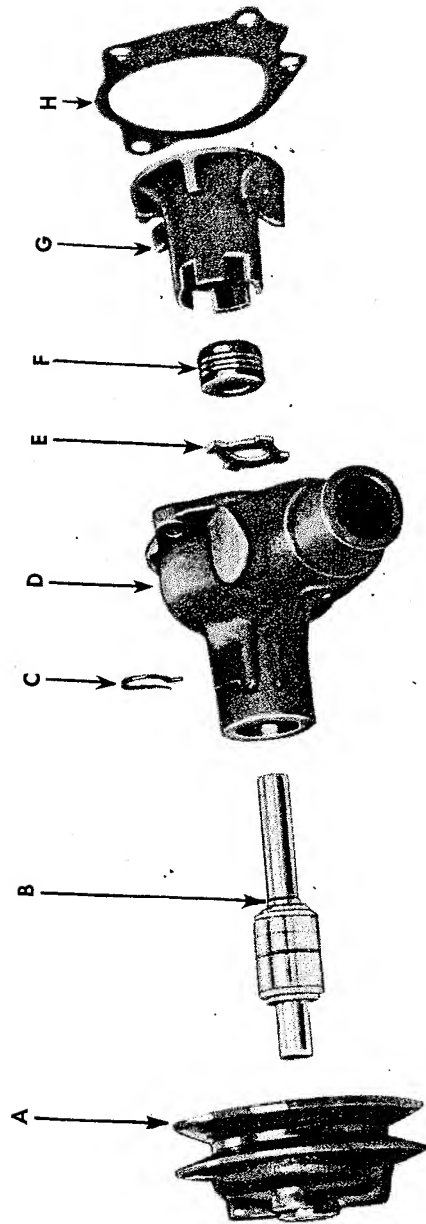

Key	Part Name	Ford Part No.	Willys Part No.	Group No.
A	PULLEY	FM-GPW-8509-A	WO-636299	0503A
B	BEARING, w/ SHAFT, assembly	FM-GPW-8530	WO-636297	0503
C	SPRING	FM-GPW-8576	WO-636298	0503
D	BODY	FM-GPW-8505	WO-637052	0503
E	WASHER	FM-GPW-8557-A	WO-640034	0503
F	SEAL, assembly	FM-GPW-8524-A	WO-640031	0503
G	IMPELLER	FM-GPW-8512	WO-639993	0503
H	GASKET	FM-GPW-8543	WO-637053	0503

FIGURE 05-1—WATER PUMP ASSEMBLY—EXPLODED VIEW

## GROUP 05—COOLING

SNL G-503

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
01-4, 05-1	3320-GWP-18515-B	FM-GPW-18515-B	WO-A-6839	<b>0503—WATER PUMP (Cont'd)</b> KIT, repair, water pump (supersedes KIT, FM-GPW-18515, WO-A-1539).....	1	1.124
		FM-GPW-8530	WO-636297	(Consists of:		
		FM-GPW-8543	WO-637053	1 BEARING, w/SHAFT, assembly		
		FM-GPW-8524-A	WO-640031	1 GASKET, pump to block		
		FM-GPW-8576	WO-636298	1 SEAL, assembly		
		FM-GPW-8557-A	WO-640034	1 SPRING, retaining, bearing		
		FM-GPW-18515-C	WO-A-8774	1 WASHER, seal)		
		FM-GPW-8543	WO-637053	KIT, repair, water pump seal.....	1	
		FM-GPW-8524-A	WO-640031	(Consists of:		
		FM-GPW-8576	WO-636298	1 GASKET, pump to block		
		FM-GPW-8557-A	WO-640034	1 SEAL, assembly		
		FM-GPW-8501	WO-639992	1 SPRING, retaining, bearing		
		FM-20366-S	WO-6428	1 WASHER, seal)		
	G503-0345896	FM-355442-S2	WO-51858	PUMP, water, assembly.....	1	4.855
05-1	H001-1013018	FM-34806-S7	WO-51833	BOLT, hex-hd., S, $\frac{5}{16}$ -18NC-2 x $\frac{7}{8}$ .....	3	.0125
	H001-7025711	FM-GPW-8524	WO-639663	BOLT, hex-hd., S, $\frac{5}{16}$ -18NC-2 x $2\frac{1}{2}$ .....	1	.163
	3320-GPW-8524-A	FM-GPW-8524-A	WO-640031	WASHER, lock, S, cd-pltd, SAE std., $\frac{5}{16}$ in.....	4	
		FM-GPW-8576	WO-636298	SEAL, water pump, assembly (superseded by SEAL, assembly, FM-GPW-8524-A, WO-640031).....	1	
		FM-GPW-8576	WO-636298	SEAL, water pump, assembly (also in KIT, FM-GPW-18515-B; KIT, WO-A-6839; FM-GPW-18515-C, WO-A-8774) (supersedes SEAL, assembly, FM-GPW-8524, WO-639663).....	1	
		FM-GPW-8572-B	WO-640033	SPRING, retaining, water pump bearing (also in KITS, FM-GPW-18515-B, WO-A-6839; FM-GPW-18515-C, WO-A-8774).....	1	
		FM-GPW-8557	WO-640034	SPRING, water pump seal.....	1	
		FM-GPW-8557-A	WO-640034	WASHER, water pump seal (superseded by WASHER, FM-GPW-8557-A, WO-640034)	1	
	3320-GPW-8557-A	FM-GPW-8557-A	WO-640034	WASHER, water pump seal (also in KITS, FM-GPW-18515-B, WO-A-6839; FM-GPW-18515-C, WO-A-8774) (supersedes WASHER, FM-GPW-8557).....	1	
		FM-GPW-8600	WO-A-447	<b>0503A—FAN AND PULLEYS</b>		
01-2, 4	G503-7036577	FM-GPW-8600	WO-A-447	FAN, assembly (HI-88632).....	1	.472
	H001-0121668	FM-20324-S2	WO-52168	BOLT, hex-hd., S, $\frac{1}{4}$ -20NC-2 x $\frac{5}{8}$ .....	4	
	G085-2102323	FM-34805-S2	WO-52706	WASHER, lock, S, SAE std., $\frac{1}{4}$ in.....	4	
	3320-GPW-8509-A	FM-GPW-8509-A	WO-636299	PULLEY, fan and water pump.....	1	.424
	3320-GPWS-8509	FM-GPW-8509	WO-636299	PULLEY, fan and water pump (Note 1).....	1	

		FM-GPW-8240 FM-35676-S	WO-A-1124 WO-A-1125 WO-A-6701	SHIELD, fan pulley. WASHER, fan pulley shield (S, $1\frac{1}{2}$ I.D. x $\frac{5}{8}$ O.D.). WASHER, fan pulley shield retaining bolt (S, $\frac{1}{4}$ I.D. x $\frac{5}{8}$ O.D. x 0.005 thk.).	1 6 6	
01-4	H017-0509226 H017-0509226 H017-0507291	FM-GPW-8620 FM-GPW-8620-A FM-GPWS-8620-S	WO-A-1495 WO-A-9490	<b>0503B—FAN BELT</b>  BELT, drive, fan and generator (superseded by BELT, FM-GPW-8620-A, WO-A-9490) BELT, drive, fan and generator (Goodrich Neoprene) (supersedes BELT, FM-GPW-8620, WO-A-1495). BELT, drive, fan and generator (Note 1).	1 1 1	.407
	3320-60-8287 3320-GPW-8250 H001-1518009 G503-0194030	FM-60-8287 FM-GPW-8250 FM-24408-S FM-34807-S2 FM-GPW-8255	WO-52226 WO-A-1192 WO-52911 WO-5010 WO-639650	<b>0505—ENGINE WATER FITTINGS AND HOSE</b>  CLAMP, hose, $1\frac{1}{8}$ in. diam. CLAMP, hose, $1\frac{1}{8}$ I.D., 2 slot, flat type (ORD 111618) (Note 2). ELBOW, engine cylinder head water outlet. BOLT, hex-hd., S, $\frac{3}{8}$ -16UNC-2 x $1\frac{1}{2}$ WASHER, lock, S, SAE std., $\frac{3}{8}$ in. GASKET, engine cylinder head water outlet elbow (also in GASKET SET, FM-GPW-18387, WO-A-1537). HOSE, radiator inlet and outlet (ORD-A7044164) (Note 2). HOSE, radiator inlet, upper. HOSE, radiator water outlet, lower ( $1\frac{1}{2}$ I.D. x $1\frac{1}{2}$ O.D. x $4\frac{1}{4}$ long). HOSE, radiator water outlet, upper ( $1\frac{1}{2}$ I.D. x $1\frac{1}{2}$ O.D. x $2\frac{1}{2}$ long). TUBE, connecting, radiator water inlet. TUBE, connecting, radiator water outlet.	8 2 1 3 3 1 2 2 1 1 1 1 1	.0217 1.32    .0142 .0391 .0551 .0425 .136 .261
06-1, 2 06-1 06-1, 2	G121-0110400 G121-0110500 G121-0115950 H001-1030594 H012-1300017	FM-GPW-10105 FM-GPW-10005 FM-GPW-10142 FM-34141-S2 FM-27161-S7 FM-B-10094	WO-A-1629 WO-A-1637 WO-A-1649 WO-6273 WO-A-1650 WO-51248	<b>GROUP 06—ELECTRICAL</b>  <b>0601—GENERATOR (BALL TYPE BEARING)</b> (See also Group 0601-1 and Group 0601-2)  ARM, generator brush (AL-GCE-54). ARMATURE, generator, assembly (AL-GEG-2120-F). BAND, generator, head (AL-GCE-24). NUT, sq., S, No. 10 (0.190)-32NFF-2. SCREW, mach., rd-hd., S, cd-pltd., No. 10 (0.190)-32NFF-2 x $1\frac{1}{4}$ . BEARING, ball, generator (AL-X-295) (ND-1203) (superseded by BEARING, FM-GPW-10094, WO-A-6299). BEARING, ball, generator (AL-X-1655) (ND-77503) (FB-1203FF) (supersedes BEARING, FM-B-10094, WO-51248). BOLT, hex-hd., S, cd-pltd., $\frac{1}{4}$ -20NFF-2 x $\frac{3}{8}$ (AL-DA-60) (Note 3). WASHER, lock, reg., S, $\frac{1}{4}$ in. WASHER, plain, S, cd-pltd., $\frac{1}{4}$ in. (AL-DA-22) (Note 3).	2 1 1 1 1 2 2 1 1 1 2 2 1 1 1	.014 4.17 .0272   .505  .0425
06-1, 2 06-1 06-1	H012-1323017 G104-1781822 H001-1518007	FM-GPW-10094 FM-355260-S7 FM-34805-S2 FM-356208-S7	WO-A-6299 WO-A-1623 WO-52706 WO-A-1621			

Note 1—Only for vehicles modified by MWO ORD G503-W7 (see page 3).

Note 2—Only for vehicles modified by MWO ORD G503-W9 (see page 3).

Note 3—Also in KIT, FM-GPW-18363-C, WO-A-9055.

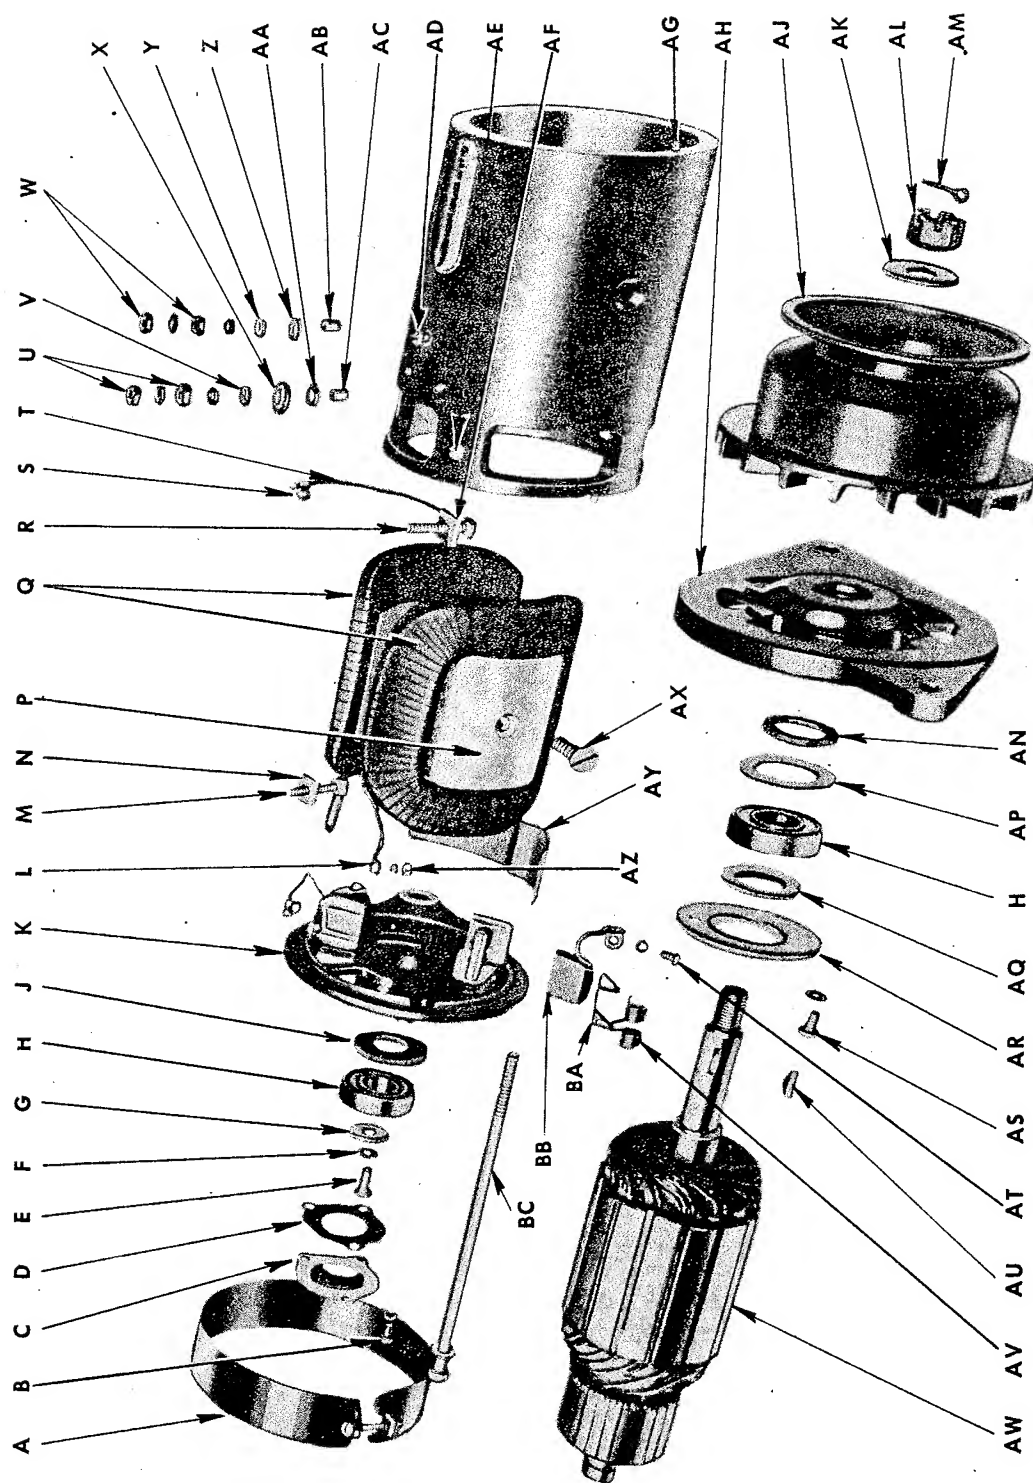


FIGURE 06-1—GENERATOR ASSEMBLY (BEARING TYPE)—EXPLODED VIEW

Key	Part Name	Ford Part No.	Willys Part No.	Group Number
A	BAND	FM-GPW-10142	WO-A-1649	0601
B	SCREW	FM-31588-S7	WO-A-1636	0601
C	COVER	FM-GPW-10118	WO-A-1626	0601
D	GASKET	FM-GPW-10119	WO-A-1625	0601
E	BOLT	FM-355260-S7	WO-A-1623	0601
F	WASHER	FM-34805-S2	WO-52706	0601
G	WASHER	FM-356208-S7	WO-A-1621	0601
H	BEARING	FM-GPW-10094	WO-A-6299	0601
J	WASHER	FM-GPW-10116	WO-A-1624	0601
K	HEAD, assembly	FM-GPW-10050	WO-A-6298	0601
L	TERMINAL		WO-A-1608	0601
M	POST	FM-GPW-10211-B	WO-A-1605	0601
N	WASHER	FM-GPW-10208-B		0601
P	POLE PIECE	FM-GPW-10041	WO-A-1600	0601
Q	COIL, assembly	FM-GPW-10175	WO-A-1604	0601
R	POST	FM-GPW-10211-A	WO-A-1602	0601
S	TERMINAL	FM-GPW-10216	WO-A-1603	0601
T	LEAD, assembly	FM-GPW-10100	WO-A-1601	0601
U	NUT	FM-355883-S7	WO-A-1611	0601
V	WASHER	FM-356264-S7	WO-A-1616	0601
W	NUT	FM-350853-S7	WO-A-1617	0601
X	WASHER	FM-GPW-10208-A	WO-A-1597	0601
Y	WASHER	FM-34703-S7	WO-A-1615	0601
Z	WASHER	FM-GPW-10202-A	WO-A-1593	0601
AA	INSULATOR	FM-GPW-10202-B	WO-A-1591	0601
AB	BUSHING	FM-GPW-10206-A	WO-A-1599	0601
Key	Part Name	Ford Part No.	Willys Part No.	Group Number
AC	BUSHING	FM-GPW-10206-B	WO-A-1598	0601
AD	SCREW	FM-36800-S7	WO-A-6297	0601
AE	SCREW	FM-36009-S7	WO-A-1618	0601
AF	INSULATOR	FM-GPW-10202-C	WO-A-1594	0601
AG	PIN	FM-GPW-10088	WO-A-1609	0601
AH	HEAD, assembly	FM-GPW-10138	WO-A-6300	0601
AJ	PULLEY, assembly	FM-GPW-10061	WO-A-1639	0601
AK	WASHER	FM-GPW-10134	WO-A-1638	0601
AL	NUT	FM-34032-S7	WO-A-1640	0601
AM	PIN	FM-72034-S	WO-A-1642	0601
AN	WASHER	FM-GPW-10212	WO-A-1646	0601
AP	GUARD	FM-GPW-10124	WO-A-1622	0601
AQ	WASHER	FM-78-10212-A	WO-A-1644	0601
AR	RETAINER	FM-GPW-10098	WO-106313	0601
AS	SCREW	FM-36800-S	WO-A-1647	0601
AT	SCREW	FM-26457-S7	WO-52131	0601
AU	KEY	FM-74144-S	WO-A-1641	0601
AV	SPRING	FM-GPW-10057	WO-A-1628	0601
AW	ARMATURE	FM-GPW-10005	WO-A-1637	0601
AX	SCREW	FM-355486-S7	WO-A-1596	0601
AY	INSULATOR	FM-01A-10193	WO-A-1592	0601
AZ	NUT	FM-34051-S7	WO-52615	0601
BA	ARM	FM-GPW-10105	WO-A-1629	0601
BB	BRUSH	FM-GPW-10069	WO-A-1630	0601
BC	SCREW	FM-GPW-10120	WO-A-1590	0601

FIGURE 06-1A—LEGEND FOR 06-1—GENERATOR ASSEMBLY (BEARING TYPE)—EXPLODED VIEW

## GROUP 06—ELECTRICAL (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>0601—GENERATOR (BALL TYPE BEARING) (Cont'd)</b> (See also Group 0601-1 and Group 0601-2)						
06-1, 2	G116-0400320	FM-GPW-10069	WO-A-1630	BRUSH, generator (AL-GCE-1012)	2	.0567
06-1, 2	H001-5147511	FM-26457-S7	WO-52131	SCREW, mach., rd-hd., S, cd-pltd., No. 8 (0.164) 32NC-2 x 1/4	2	
06-2	H001-1518004	FM-34802-S2	WO-52705	WASHER, lock, reg., S, No. 8	2	
	2980-GCE-2012S	FM-GPW-18274	WO-A-1651	BRUSH SET, generator (AL-GCE-2012S)	1	
				(Consists of:		
				2 BRUSH		
06-1, 2	G121-0127843	FM-GPW-10069	WO-A-1630	BUSHING, insulating, generator armature terminal (0.250 x 0.312 x 5/16) (AL-GCT-25)	1	
		FM-GPW-10206-B	WO-A-1598	(Note 2)		
06-1, 2	G121-0442942	FM-GPW-10206-A	WO-A-1599	BUSHING, insulating, generator field terminal (0.263 x 0.305 x 5/16) (AL-GCY-25)	1	
				(Note 2)		
06-1, 2	G121-0139650	FM-GPW-10175	WO-A-1604	COIL, field, generator, left and right, assembly (AL-GEB-1005A) (Note 2)	1	.008
	G121-0139660	FM-GPW-10192	WO-A-1606	COIL, field, generator, left, assembly (AL-GEB-1007A)	1	
	G121-0139665	FM-GPW-10191	WO-A-1607	COIL, field, generator, right, assembly (AL-GEB-1008B)	1	
06-1		FM-GPW-10118	WO-A-1626	COVER, generator commutator end cap (AL-GBJ-32A)	1	
06-1	H001-5127331	FM-31588-S7	WO-A-1636	SCREW, mach., oval-fil-hd., S, cd-pltd., No. 10 (0.190) 32NF-2 x 5/16 (AL-8X-870) (Note 1)	3	
				WASHER, lock, reg., S, cd-pltd., No. 10 (0.190) (AL-12X-544)	3	
06-1	H001-7025621	FM-34803-S7	WO-A-1635	GASKET, generator commutator end cap cover (AL-GBJ-25) (Note 1)	1	.0026
	G121-0193758	FM-GPW-10119	WO-A-1625	GENERATOR, assembly (AL-GEG-5001) (superseded by GENERATOR, assembly, FM-GPW-10000-A3, WO-A-10048) (Group 0601-1)	1	
	G503-0196299		WO-A-1246	GENERATOR, assembly (AL-GEG-5002D) (superseded by GENERATOR, assembly, FM-GPW-10000-A3, WO-A-10048) (Group 0601-1)	1	
06-1, 2	G121-0205450	FM-GPW-10124	WO-A-1622	GUARD, cil, generator (flat, S, 0.986 I.D. x 1.570 O.D. x 0.020 thk.) (AL-DA-39)	1	14.71
			WO-A-1627	HEAD, generator, commutator end, assembly (superseded by HEAD, assembly, FM-GPW-10050, WO-A-6298)	1	
06-1	2980-GCE-2118	FM-GPW-10050	WO-A-6298	HEAD, generator, commutator end, assembly (AL-GCE-2118) (supersedes HEAD, assembly, WO-A-1627)	1	1.482
			WO-A-1643	HEAD, generator, drive end, assembly (superseded by HEAD, assembly, FM-GPW-10138, WO-A-6300)	1	
06-1, 2	2980-GCE-1125	FM-GPW-10138	WO-A-6300	HEAD, generator, drive end, assembly (AL-GCE-1125) (supersedes HEAD, assembly, WO-A-1643)	1	1.694
				HEAD, generator, drive end (AL-GCE-125)	1	
06-1, 2	G121-0382182	FM-GPW-10139	WO-A-6301	SCREW, generator head (AL-DK-23)	2	.0534
	H001-7025711	FM-34806-S7	WO-51833	WASHER, lock, reg., S, cd-pltd., 5/16 in.	2	
06-1, 2	G121-0232700	FM-01A-10193	WO-A-1592	INSULATOR, generator field connection (AL-GAL-44) (Note 2)	1	

06-1, 2	G121-0232740	FM-GPW-10202-C	WO-A-1594	INSULATOR, generator armature terminal post, inner (AL-GBW-66) (Note 2).....	1
06-1, 2	G121-0232730	FM-GPW-10202-B	WO-A-1591	INSULATOR, generator armature terminal post, top ( $1\frac{1}{4}$ x $\frac{3}{4}$ x 0.062) (AL-GAA-32) (Note 2).....	1
06-1, 2	G121-0232750	FM-GPW-10208-A	FM-GPW-10208-A	INSULATOR, generator field terminal post, inner (AL-GBW-67) (Note 2).....	1
	G502-0196321	FM-GPW-18342	FM-GPW-18342	KIT, repair, generator field coil (superseded by KIT, FM-GPW-18342-B, WO-A-7840)	1
	G502-0196321	FM-GPW-18342-B	WO-A-7840	KIT, repair, generator field coil (AL-KIT-10A) (supersedes KIT, FM-GPW-18342).....	1
				(Consists of:	
		FM-GPW-10206-A	WO-A-1599	1 BUSHING	
		FM-GPW-10206-B	WO-A-1598	1 BUSHING	
		FM-GPW-10175	WO-A-1604	1 COIL	
		FM-01A-10193	WO-A-1592	1 INSULATOR	
		FM-GPW-10208-A	WO-A-1595	1 INSULATOR	
		FM-GPW-10202-C	WO-A-1594	1 INSULATOR (bottom)	
		FM-GPW-10202-B	WO-A-1591	1 INSULATOR (top)	
		FM-GPW-10100	WO-A-1601	1 LEAD, assembly	
		FM-34051-S7	WO-A-1610	1 NUT, ground screw	
		FM-350853-S7	WO-A-1617	2 NUT, terminal	
		FM-355883-S7	WO-A-1611	2 NUT	
		FM-36009-S7	WO-A-1618	1 SCREW, ground	
		FM-355486-S7	WO-A-1596	2 SCREW, pole	
		FM-34703-S7	WO-A-1615	1 WASHER	
		FM-34705-S2	WO-A-1616	1 WASHER, flat	
		FM-GPW-10208-A	WO-A-1597	1 WASHER, insulating	
		FM-GPW-10202-A	WO-A-1593	1 WASHER, insulating	
		FM-34803-S7	WO-5221	1 WASHER, lock	
		FM-356263-S7	WO-A-1612	1 WASHER, lock	
		FM-34801-S7	WO-A-1613	1 WASHER, lock	
	G502-0196319	FM-GPW-18363	WO-A-6755	KIT, repair, generator (superseded by KIT, FM-GPW-18363-C, WO-A-9055).....	1
				(Consists of:	
		FM-GPW-10105	WO-A-1629	ARM, brush	
	G121-0110400	FM-24427-S7	WO-6609	BOLT, circuit breaker to fender	
		FM-GPW-10104	WO-A-1598	BUSHING, insulating	
		FM-GPW-10206-A	WO-A-1599	BUSHING, insulating	
		FM-GPW-10119	WO-A-1625	GASKET, end cap cover	
		FM-GPW-10124	WO-A-1622	GUARD, oil, felt	
		FM-01A-10193	WO-A-1592	INSULATOR, field connection	
		FM-GPW-10208-B	WO-A-1595	INSULATOR, terminal post, bottom	
		FM-GPW-10202-B	WO-A-1591	INSULATOR, terminal post, top	
		FM-355883-S	WO-A-1611	NUT, generator armature terminal	
		FM-GPW-10211-B	WO-A-1605	POST, terminal	
		FM-GPW-10211-A	WO-A-1602	POST, terminal	
		FM-33798-S7	WO-A-6297	SCREW, No. 8, bond strap to generator	
		FM-355486-S7	WO-A-1596	SCREW, pole piece	
		FM-GPW-10057	WO-A-1628	SPRING, brush	
		FM-34703-S7	WO-A-1702	WASHER, No. 8, bond strap to generator	
		FM-GPW-10116	WO-A-1624	WASHER, felt, commutator end, inner	

**Note 1**—Also in KIT, FM-GPW-18363-C, WO-A-9055. **Note 2**—Also in KIT, FM-GPW-18342-B, WO-A-7840.



## GROUP 06—ELECTRICAL (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
		FM-78-10212-A FM-GPW-10212 FM-356436-S FM-356371-S7 FM-GPW-10202-A FM-GPW-10208-A FM-356263-S7 FM-34806-S2 FM-34806-S7 FM-GPW-18363-B FM-GPW-18363-C	WO-A-1644 WO-A-1646 WO-A-1396 WO-A-1401 WO-A-1593 WO-A-1597 WO-A-1612 WO-A-1619 WO-A-5288 WO-A-7839 WO-A-9055	<b>0601—GENERATOR (BALL TYPE BEARING) (Cont'd)</b> (See also Group 0601-1 and Group 0601-2)  KIT, repair, generator (Cont'd) WASHER, felt drive end head, inner WASHER, felt, drive end head, outer WASHER, generator support WASHER, generator support WASHER, insulating, field terminal WASHER, insulating WASHER, lock, armature terminal screw WASHER, lock, No. 7, bond WASHER, lock, generator frame) KIT, repair, generator (superseded by KIT, FM-GPW-18363-C, WO-A-9055) KIT, repair, generator (supersedes KITS, FM-GPW-18363, WO-A-6755; FM-GPW-18363-B, WO-A-7839)..... (Consists of: 2 BRUSH 1 GASKET, cover 1 NUT 3 SCREW, cover 1 SCREW 2 SCREW, lead 3 SCREW, retainer 1 SCREW, retaining 2 SPRING, brush 1 WASHER, felt 1 WASHER, felt 1 WASHER, felt 3 WASHER, lock 1 WASHER, lock 1 WASHER, lock 2 WASHER, lock 3 WASHER, lock 1 WASHER, retaining) LEAD, generator armature terminal, assembly (AL-GEB-44) (Note 1) OILER, generator (press-in type) (AL-X-489)..... PIECE, pole, generator (AL-GEB-29).....	1 1	2.623
		FM-GPW-10069 FM-GPW-10119 FM-34141-S7 FM-31588-S7 FM-27161-S7 FM-26457-S7 FM-36800-S FM-355260-S7 FM-GPW-10057 FM-GPW-10116 FM-78-10212-A FM-GPW-10212 FM-34803-S7 FM-34805-S7-8 FM-34806-S7 FM-34802-S2 FM-34803-S2 FM-356208-S7 FM-GPW-10100 FM-B-10141 FM-GPW-10041	WO-A-1630 WO-A-1625 WO-A-1589 WO-A-1636 WO-A-1650 WO-A-1632 WO-A-1647 WO-A-1623 WO-A-1628 WO-A-1624 WO-A-1644 WO-A-1646 WO-A-1635 WO-5045 WO-A-5288 WO-51532 WO-52960 WO-A-1621 WO-A-1601 WO-302347 WO-A-1600			
06-1	G121-0273850 M003-0109723				1	
06-1, 2	G121-0342160				2	

06-1, 2	G121-0382171	FM-355486-S7	WO-A-1596	SCREW, special, ck-hd., S, cd-pltd., $\frac{3}{8}$ -16 x 0.90 (AL-GBY-38A) (Note 1)	2	
06-1, 2	G121-0342320	FM-GPW-10088	WO-A-1609	PIN, dowel, S, $\frac{1}{8}$ x $\frac{1}{8}$ (generator commutator end head) (AL-MN-21)	2	
06-1, 2		FM-GPW-10211-B	WO-A-1605	POST, generator field, terminal (No. 10 (0.190)-32NF) (AL-GEB-58)	1	.0059
06-1, 2		FM-350853-S7	WO-A-1617	NUT, mach. screw, hex., S, cd-pltd., No. 10 (0.190)-32NF (Note 1)	2	
06-1, 2		FM-34703-S7	WO-A-1702	WASHER, plain, S, cd-pltd., U. S. std., No. 10 (0.190)	1	
06-2	H001-7025621	FM-34803-S7	WO-52221	WASHER, lock, reg., S, cd-pltd., No. 10 (0.190) (Note 1)	2	
06-1, 2	G121-0342310	FM-GPW-10211-A	WO-A-1602	POST, generator armature terminal (No. 14 (0.242)-24NC) (AL-GEB-27) (Note 1)	1	.0083
06-1, 2		FM-355883-S7	WO-A-1611	NUT, mach. screw, hex., S, cd-pltd., No. 14 (0.242)-24NC (AL-8X-177) (Note 1)	2	
06-2		FM-34705-S7	WO-52702	WASHER, flat, S, cd-pltd., $\frac{1}{4}$ in. (AL-8X-361)	1	
06-1, 2		FM-356263-S7	WO-A-1612	WASHER, lock, S, cd-pltd., No. 14 (0.242) (AL-12X-193) (Note 1)	1	
06-1, 2		FM-356264-S7	WO-A-1616	WASHER, special, S, cd-pltd., 0.026 I.D. x 0.50 O.D.	1	1.825
06-1, 2	2980-SP-484	FM-GPW-10130	WO-A-9492	PULLEY, drive, generator, w/o SPACER (AL-SP-484)	1	
06-1, 2	2980-SP-484A	FM-GPW-10061	WO-A-1639	PULLEY, drive, generator, w/SPACER, assembly (AL-SP-484A)	1	
06-1, 2	H001-0518011	FM-74144-S	WO-A-1641	KEY, Woodruff, S, $\frac{1}{8}$ x $\frac{5}{8}$ (GM-103905) (AL-X-260)	1	
06-1, 2	2980-X-156	FM-34032-S7	WO-A-1640	NUT, hex., slotted, hvy., alloy-S, $\frac{1}{2}$ -20NF-2 (AL-X-156)	1	
06-1, 2	H001-0811040	FM-72034-S	WO-A-1642	PIN, cotter, split, S, $\frac{3}{8}$ x 1 (GM-103374) (AL-X-404)	1	
06-1, 2	H001-7043801	FM-GPW-10134	WO-A-1638	WASHER, S, cd-pltd., $\frac{1}{8}$ I.D. x $\frac{1}{4}$ O.D. x 0.095 thk. (AL-GEW-31)	1	
06-1, 2	G502-0367841	FM-GPW-10214	WO-109173	RETAINER, generator commutator end head felt washer	1	.0448
06-1, 2	G156-0232827	FM-GPW-10098	WO-106313	RETAINER, generator drive end bearing	1	
06-1, 2	G154-0382036	FM-GPW-10121	WO-108515	RETAINER, generator drive end head felt washer	1	
06-1, 2		FM-36009-S7	WO-A-1618	SCREW, generator ground (mach., fl-hd., S, cd-pltd., No. 6 (0.138)-32NC-2 x $\frac{5}{8}$ ) (AL-8X-1420) (Note 1)	1	
06-1, 2	H001-0716530	FM-34051-S7	WO-52615	NUT, mach. screw, hex., S, cd-pltd., No. 6 (0.138)-32NC-2 (Note 1)	1	
06-2	H001-7025561	FM-34801-S7	WO-A-1613	WASHER, lock, reg., S, cd-pltd., No. 6 (0.138) (AL-12X-194) (Note 1)	1	
06-1, 2	G116-1782002	FM-36800-S	WO-A-1647	SCREW, generator drive end bearing retainer (rd-hd., S, No. 10 (0.190)-32NF-2 x $\frac{5}{8}$ ) (AL-8X-311) (Note 2)	3	
06-2	H001-7025621	FM-34803-S7	WO-52221	WASHER, lock, S, cd-pltd., SAE std., No. 10 (0.190) (Note 1)	3	
06-1, 2	H001-4135681	FM-36800-S7	WO-A-6297	SCREW, generator ground (rd-hd., S, cd-pltd., No. 10 (0.190)-32NF-2 x $\frac{5}{8}$ ) (AL-8X-1368)	1	.0169
06-2		FM-GPW-10035	WO-A-8842	SPACER, generator shaft (AL-GEG-31)	1	
06-1, 2	G104-1789657	FM-GPW-10057	WO-A-1628	SPRING, generator brush (AL-GCE-53)	2	
06-1, 2	G121-0398703	FM-GPW-10216	WO-A-1603	TERMINAL, generator armature lead (AL-X-847) (Willys only)	1	
06-1, 2	G154-0398792	FM-GPW-10218	WO-A-1608	TERMINAL, generator field (AL-X-959) (Willys only)	1	
06-1, 2	H001-7043681	FM-34705-S2	WO-52702	WASHER, generator armature terminal (flat, S, $\frac{1}{4}$ in.) (AL-8X-361)	1	
06-1	G121-0442945	FM-GPW-10116	WO-A-1624	WASHER, generator commutator end, inner (felt, $\frac{3}{4}$ x $1\frac{1}{8}$ x $\frac{1}{8}$ ) (AL-DH-7) (Note 2)	1	
06-1, 2	G121-0442946	FM-78-10212-A	WO-A-1644	WASHER, generator drive end head, inner (felt, $\frac{13}{16}$ x $1\frac{1}{8}$ x $\frac{1}{8}$ ) (AL-GAU-31) (Note 2)	1	
06-1, 2	G121-0442946	FM-GPW-10212	WO-A-1646	WASHER, generator drive end head, outer (felt, $\frac{7}{8}$ x $1\frac{1}{4}$ x $\frac{1}{8}$ ) (AL-GT-78) (Note 2)	1	
06-1, 2	G121-0232750	FM-GPW-10208-A	WO-A-1597	WASHER, insulating, generator armature terminal, outer ( $\frac{1}{4}$ x $\frac{5}{8}$ x $\frac{1}{8}$ ) (AL-GC-26) (Note 2)	1	
06-1, 2	G121-0232730	FM-GPW-10202-A	WO-A-1593	WASHER, insulating, generator field terminal, outer ( $\frac{13}{16}$ x $\frac{5}{8}$ x $\frac{1}{8}$ ) (AL-GBW-34) (Note 2)	1	

Note 1—Also in KIT, FM-GPW-18342-B, WO-A-7840. Note 2—Also in KIT, FM-GPW-18363-C, WO-A-9055.

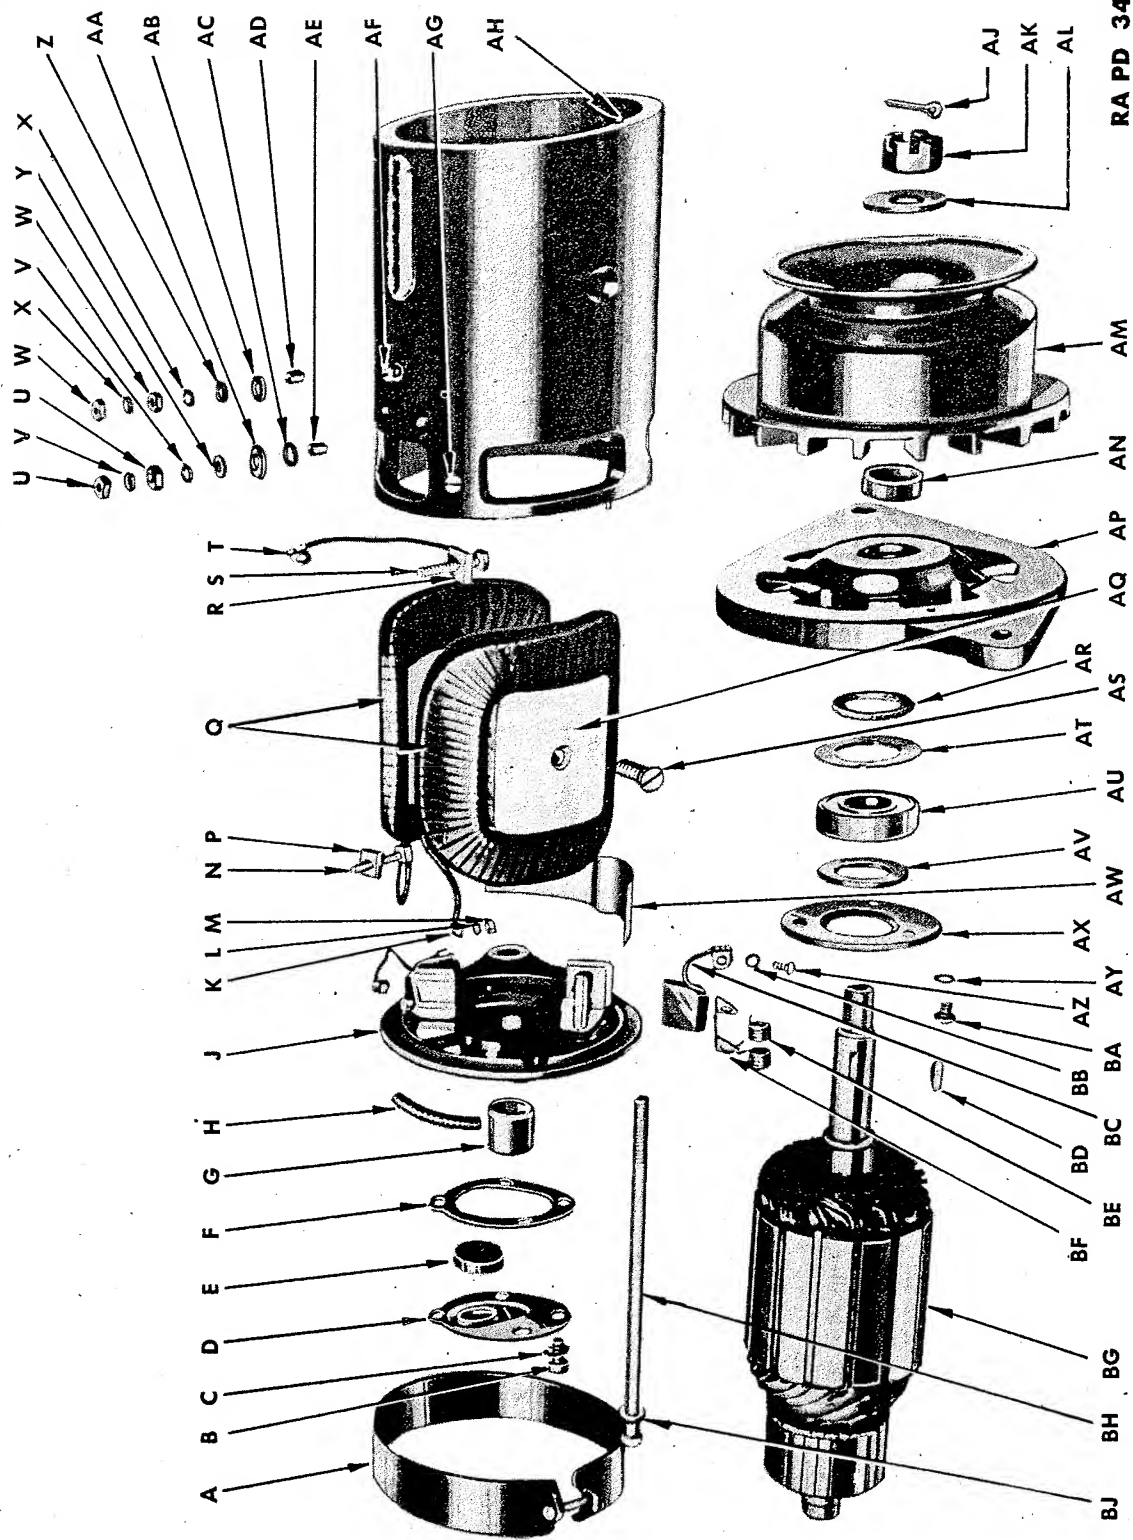


FIGURE 06-2—GENERATOR ASSEMBLY (BUSHING TYPE)—EXPLODED VIEW

RA PD 342250

Key	Part Name	Ford Part No.	Willlys Part No.	Group Number	Key	Part Name	Ford Part No.	Willlys Part No.	Group Number
A	BAND.....	FM-GPW-10142.....	WO-A-1649.....	0601	AF	SCREW.....	FM-36800-S7.....	WO-A-6297.....	0601
B	SCREW.....	FM-31061-S7.....	WO-A-7803.....	0601-1	AG	SCREW.....	FM-36009-S7.....	WO-A-1618.....	0601
C	WASHER.....	FM-34802-S7.....	WO-A-10294.....	0601-1	AH	PIN.....	FM-GPW-10088.....	WO-A-1609.....	0601
D	COVER.....	FM-GPW-10119-B.....	WO-A-10292.....	0601-1	AJ	PIN.....	FM-72034-S.....	WO-A-1642.....	0601
E	PLUG.....	FM-GPW-10112.....	WO-A-10293.....	0601-1	AK	NUT.....	FM-34032-S7.....	WO-A-1640.....	0601
F	GASKET.....	FM-GPW-10122.....	WO-A-1787.....	0601-1	AL	WASHER.....	FM-GPW-10134.....	WO-A-1638.....	0601
G	BEARING.....	FM-GPW-10128.....	WO-A-1793.....	0601-1	AM	PULLEY, assembly.....	FM-GPW-10061.....	WO-A-1639.....	0601
H	WICK.....	FM-GPW-10147.....	WO-A-1785.....	0601-1	AN	SPACER.....	FM-GPW-10035.....	WO-A-8842.....	0601
J	HEAD.....	FM-GPW-10129-B.....	WO-A-10291.....	0601-1	AP	HEAD.....	FM-GPW-10138.....	WO-A-6300.....	0601
K	TERMINAL.....	FM-GPW-10218.....	WO-A-1608.....	0601	AQ	POLE PIECE.....	FM-GPW-10041.....	WO-A-1600.....	0601
L	WASHER.....	FM-34801-S7.....	WO-A-1613.....	0601	AR	WASHER.....	FM-GPW-10212.....	WO-A-1646.....	0601
M	NUT.....	FM-34051-S7.....	WO-52615.....	0601	AS	SCREW.....	FM-355486-S7.....	WO-A-1596.....	0601
N	POST.....	FM-GPW-10211-B.....	WO-A-1605.....	0601	AT	GUARD.....	FM-GPW-10124.....	WO-A-1622.....	0601
P	INSULATOR.....	FM-GPW-10208-B.....	WO-A-1604.....	0601	AU	BEARING.....	FM-GPW-10094.....	WO-A-6299.....	0601
Q	COIL, assembly.....	FM-GPW-10175.....	WO-A-1604.....	0601	AV	WASHER.....	FM-78-10212-A.....	WO-A-1644.....	0601
R	INSULATOR.....	FM-GPW-10202-C.....	WO-A-1594.....	0601	AW	INSULATION.....	FM-01A-10193.....	WO-A-1592.....	0601
S	POST.....	FM-GPW-10211-A.....	WO-A-1602.....	0601	AX	RETAINER.....	FM-GPW-10098.....	WO-106313.....	0601
T	TERMINAL.....	FM-GPW-10216.....	WO-A-1603.....	0601	AY	WASHER.....	FM-34803-S7.....	WO-52221.....	0601
U	NUT.....	FM-355883-S7.....	WO-A-1611.....	0601	AZ	SCREW.....	FM-26457-S7.....	WO-52131.....	0601
V	WASHER.....	FM-356263-S7.....	WO-A-1612.....	0601	BA	SCREW.....	FM-36800-S.....	WO-A-1647.....	0601
W	NUT.....	FM-350853-S7.....	WO-A-1617.....	0601	BB	WASHER.....	FM-34802-S2.....	WO-52705.....	0601
X	WASHER.....	FM-34803-S7.....	WO-52221.....	0601	BC	BRUSH.....	FM-GPW-10069.....	WO-A-1630.....	0601
Y	WASHER.....	FM-356264-S7.....	WO-A-1616.....	0601	BD	KEY.....	FM-74144-S.....	WO-A-1641.....	0601
Z	WASHER.....	FM-34703-S7.....	WO-A-1615.....	0601	BE	SPRING.....	FM-GPW-10057.....	WO-A-1628.....	0601
AA	WASHER.....	FM-GPW-10208-A.....	WO-A-1597.....	0601	BF	ARM.....	FM-GPW-10105.....	WO-A-1629.....	0601
AB	WASHER.....	FM-GPW-10202-A.....	WO-A-1593.....	0601	BG	ARMATURE.....	FM-GPW-10005-B.....	WO-A-10295.....	0601-1
AC	INSULATOR.....	FM-GPW-10202-B.....	WO-A-1591.....	0601	BH	SCREW.....	FM-GPW-10120.....	WO-A-1590.....	0601
AD	BUSHING.....	FM-GPW-10206-A.....	WO-A-1599.....	0601	BJ	WASHER.....	FM-34806-S7.....	WO-51833.....	0601
AE	BUSHING.....	FM-GPW-10206-B.....	WO-A-1598.....	0601					

RA PD 342250A

FIGURE 06-2A—LEGEND FOR 06-2—GENERATOR ASSEMBLY (BUSHING TYPE)—EXPLODED VIEW

## GROUP 06—ELECTRICAL (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>0601-1 GENERATOR (BUSHING TYPE BEARING)</b> (See also Group 0601-2)		
				NOTE: The following parts are peculiar to WO-A-10048, FM-GPW-10000-A3, AL-GEG-5101-D GENERATOR. For the component parts of WO-A-5992, FM-GPW-10000-A, AL-GEG-5002-D GENERATOR see GROUP 0601. All parts not listed below are the same on both generators and will be found in GROUP 0601.		
06-2		FM-GPW-10005-B	WO-A-10295	ARMATURE, generator, assembly (AL-GEG-2134-F)	1	
06-2	H012-1900060	FM-GPW-10128	WO-A-1793	BEARING, generator commutator end (absorbent bz., 0.626 x 0.745 x 0.968) (AL-GBF-79)	1	
06-2		FM-GPW-10119-B	WO-A-10292	COVER, generator commutator end, w/PLUG, assembly (AL-GEG-1030)	1	
06-2	H001-5125821	FM-31061-S7	WO-A-7803	SCREW, mach., fl-hd., S., cd-pltd., No. 8 (0.164)-32NC-2 x 3/16 (AL-8X-888) (Note 3)	4	
06-2		FM-34802-S7	WO-A-10294	WASHER, lock, reg., S., cd-pltd., No. 8 (0.164) (Note 3)	4	
	H001-7025591	FM-GPW-10087	WO-A-1786	COVER, wick, generator commutator end (AL-GAR-98-A) (Note 3)	1	
	F227-0113360	FM-GPW-10122	WO-A-1787	GASKET, cover, generator commutator end (AL-GBW-69) (Note 3)	1	
06-2	G085-1100877	FM-GPW-10086	WO-A-1789	GASKET, generator commutator end cover oil guard (AL-GBW-73) (Note 3)	1	
	G085-1100878	FM-GPW-10000-A3	WO-A-10048	GENERATOR, assembly (AL-GEG-5101)	1	
01-2		FM-GPW-10082	WO-A-1788	GUARD, oil, generator commutator end cover (AL-GBW-72) (Note 3)	1	
	G085-1305451	FM-GPW-10129-B	WO-A-10291	HEAD, generator commutator end, assembly (AL-GCE-1133-A)	1	
06-2		FM-GPW-18363-D	WO-A-15485	INSULATOR, generator armature terminal post, outer (AL-MAK-49)	1	
	2980-KIT-119		WO-A-10369	KIT, repair, generator (AL-KIT-119)	1	as req.
				(Consists of:		
		FM-GPW-18274	WO-A-1651	1 BRUSH SET, generator		
		FM-GPW-10087	WO-A-1786	1 COVER, oil wick		
		FM-GPW-10122	WO-A-1787	1 GASKET, cover		
		FM-GPW-10086	WO-A-1789	1 GASKET, oil retaining		
		FM-GPW-10082	WO-A-1788	1 GUARD, oil		
		FM-34141-S7	WO-A-1589	1 NUT, cover band screw		
		FM-GPW-10112	WO-A-10293	1 PLUG, commutator end cover (felt)		
		FM-26457-S7	WO-A-1632	2 SCREW, brush lead		
		FM-31061-S7	WO-A-7803	4 SCREW, commutator end cover		
		FM-36800-S7	WO-A-1647	3 SCREW, drive end bearing retainer		
		FM-27161-S7	WO-A-1650	1 SCREW, head band		
		FM-GPW-10057	WO-A-1628	2 SPRING, generator brush		
		FM-78-10212-A	WO-A-1644	1 WASHER, generator drive end head, inner (felt)		
		FM-GPW-10212	WO-A-1646	1 WASHER, generator drive end head, outer (felt)		

06-2	FM-34803-S	WO-5168	3 WASHER, lock, generator bearing retaining bolt	1
	FM-34802-S	WO-51532	2 WASHER, lock, generator brush lead screw	1
	FM-34802-S7	WO-A-10294	4 WASHER, lock, generator commutator end cover screw	1
	FM-34806-S7	WO-A-5288	2 WASHER, lock, generator frame screw	1
	FM-GPW-10147	WO-A-1785	1 WICK, oil generator commutator end	
	FM-GPW-10112	WO-A-10293	PLUG, generator commutator end cover (felt) (AL-GEG-33) (Note 3)	
06-2	FM-GPW-10216	WO-A-10290	TERMINAL, generator armature lead (br., tinned, 0.175 in hole) (AL-X-975)	
	FM-GPW-10147	WO-A-1785	WICK, oil, generator commutator end	1
<b>0601-2—GENERATOR (12 VOLT)</b>				
(Only for vehicles modified by MWO ORD G503-W7. See page 00)				
	FM-2GAS-10005-A	WO-A-15339	ARMATURE, generator, assembly	1
	FM-GPA-10142		BAND, cover, generator	1
	FM-34141-S		NUT, mach-screw, sq., S., No. 10 (0.190)-32NC-2 (Note 1)	1
	FM-27161-S		SCREW, mach., rd-hd., S., No. 10 (0.190)-32NC-2 x 1 1/4 (Note 1)	1
	FM-99B-10094		BEARING, ball, generator drive end (No. 304, type A, annular, single row, medium series, 0.7874 bore, 2.0472 O.D., 0.5906 width)	1
	FM-B-10094		BEARING, ball, generator commutator end (No. 203, type A, annular, single row, light series, 0.6693 bore, 1.5748 O.D., 0.4724 width)	1
	FM-23454-S8		BOLT, generator terminal (rd-hd., sq-neck, S., zn-pltd., 5/16-24NF-2 x 1 3/8) (Note 2)	1
	FM-33923-S8		NUT, reg., hex., S., zn-pltd., 5/16-24NF-2 (Note 2)	2
	FM-34806-S8		WASHER, lock, reg., S., zn-pltd., 5/16 in. (Note 2)	1
	FM-34706-S8		WASHER, plain, S., zn-pltd., 5/16 in. (Note 2)	1
	FM-GAS-10120-A		BOLT, through, generator	2
	FM-GB-33415-A		NUT	2
	FM-34806-S		WASHER, lock, reg., S., 5/16 in. (GM-103320)	2
	FM-19B-10070-B		BRUSH, generator, assembly (Note 1)	2
	FM-63397-S8		RIVET, oval-hd., tubular, S., zn-pltd., 5/16-1 1/8	3
	FM-31578-S8		SCREW, mach., fl-hd., S., zn-pltd., No. 10 (0.190)-32NC-2 x 3/8 (Note 1)	2
	FM-34803-S8		WASHER, lock, reg., S., zn-pltd., No. 10 (0.190) (Note 1)	2
	FM-2GAS-10206		BUSHING, generator armature terminal insulator (Note 2)	1
	FM-19B-10202		BUSHING, generator field terminal insulator (Note 2)	1
	FM-19B-10118		CAP, generator commutator end plate	1
	FM-355157-S		SCREW, mach., fl-hd., S., No. 10 (0.190)-32NC-2 x 1/2 (Note 1)	1
	FM-34803-S7		WASHER, lock, reg., S., cd-pltd., No. 10 (0.190) (GM-120217) (Note 1)	3
	FM-99B-10175		COIL, field, assembly (Note 2)	1
	FM-19B-10116		GASKET, generator commutator end bearing cap (Note 1)	1
	FM-19B-10119		GASKET, generator commutator end plate cap (Note 1)	1
	FM-GPWS-10000	WO-A-7820	GENERATOR, 12V., assembly (less pulley but w/castellated NUT and Woodruff KEY)	1
	FM-19B-10051-A		HOLDER, generator brush, assembly	1
	FM-19B-10052-A		HOLDER, generator brush, assembly	1
	FM-63407-S7		RIVET, oval-hd., tubular, S., cd-pltd., 3/8 x 3/4	3
	FM-99-B-10055		INSULATOR, generator brush holder	1
	FM-19B-10048		INSULATOR, generator brush holder rivet	1
	FM-99B-10193		INSULATOR, generator field coil connecting wire (Note 2)	1

Note 1—Also in KIT, FM-GPA-18363-B. Note 2—Also in KIT, FM-GPA-18342. Note 3—Also in KIT, FM-GPW-18363-D, WO-A-10369.

## GROUP 06—ELECTRICAL (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
	3320-GPA-18363-B	FM-81A-10208 FM-GPA-18363-B  FM-19-B-10070-B FM-19-B-10116 FM-19-B-10119 FM-74175-S7 FM-34039-S FM-34141-S FM-19-B-10212 FM-19-B-10122 FM-19-B-10214 FM-99-B-10121 FM-31578-S8 FM-27161-S FM-355157-S FM-99B-10057 FM-2GAS-10117 FM-34803-S7 FM-34803-S7 FM-GPA-18342		0601-2—GENERATOR (12 VOLT) (Cont'd)  INSULATOR, generator terminal screw, inner (Note 2) ..... KIT, repair, generator ..... (Consists of: 2 BRUSH, generator, assembly 2 GASKET, bearing cap 1 GASKET, end plate 1 KEY, Woodruff 1 NUT, armature shaft 1 NUT, cover band screw 1 OIL SEAL, commutator end, inner 1 OIL SEAL, drive end, outer 1 RETAINER, oil seal, inner 2 RETAINER, oil seal, outer 2 SCREW, generator brush 1 SCREW, cover band 3 SCREW, end plate 2 SPRING, brush 1 STOP, generator bearing 2 WASHER, generator brush screw 3 WASHER, end plate screw) KIT, repair, generator field coil ..... (Consists of: 1 BOLT, generator terminal 1 BUSHING, insulator, armature terminal 1 BUSHING, insulator, field terminal 1 COIL, field, assembly 1 INSULATOR, field coil connection 1 INSULATOR, terminal screw 2 NUT, terminal bolt 2 NUT, field and ground terminal 1 SCREW, field terminal 8 SCREW, pole piece 2 WASHER, terminal, No. 10 1 WASHER, terminal, 5/8 in. 1 WASHER, lock, terminal, No. 10 1 WASHER, lock, terminal, 5/8 in.)	1 1	
	3320-GPA-18342	FM-23454-S8 FM-2GAS-10206 FM-19B-10202 FM-GPA-10175 FM-99B-10193 FM-81A-10208 FM-33923-S8 FM-34079-S8 FM-81A-10211 FM-99B-10044 FM-34703-S8 FM-34706-S8 FM-34803-S8 FM-34806-S2			1	

FM-19B-10212	OIL SEAL, generator commutator end, inner (Note 1)	1
FM-99B-10122	OIL SEAL, generator drive end bearing, outer (Note 1)	1
FM-99B-10041	PIECE, pole, generator	4
FM-18-10088	PIN, dowel, generator end plate	1
FM-GPA-10050	PLATE, generator commutator end, assembly	1
FM-GPA-10139	PLATE, generator drive end, assembly	1
FM-GPWS-10130	PULLEY, generator, assembly	1
FM-74175-S7	KEY, Woodruff, S, cd-pltd, $\frac{5}{8}$ x $\frac{5}{8}$ (Note 1)	1
FM-34039-S	NUT, hex., slotted, $1\frac{1}{4}$ -12NC (Note 1)	1
FM-19B-10214	RETAINER, generator commutator end oil seal, inner (Note 1)	1
FM-19B-10098	RETAINER, generator drive end bearing grease	1
FM-99B-10121	RETAINER, generator drive end bearing oil seal, outer (Note 1)	2
FM-81A-10211-A	SCREW, generator field terminal (Note 2)	1
FM-34079-S8	NUT, mach. screw, hex., S, zn-pltd., No. 10 (0.190)-32NC-2 (Note 2)	1
FM-34803-S8	WASHER, lock, reg., S, zn-pltd., No. 10 (0.190) (Note 2)	1
FM-34703-S8	WASHER, plain, S, zn-pltd., No. 10 (0.190) (Note 2)	1
FM-99B-10044	SCREW, generator pole piece (Note 2)	8
FM-GPW-10149	SPACER, generator end plate	1
FM-99B-10057	SPRING, generator brush (Note 1)	2
FM-2GAS-10117	STOP, generator commutator end bearing (Note 1)	1
<b>0601A—GENERATOR (6 VOLT) ATTACHING PARTS</b> (See also Group 0601A-1)		
FM-GPW-10176	BOLT, pivot, generator brace (hex-hd., S, $\frac{3}{8}$ -24NF-2 x $\frac{7}{8}$ )	1
G518-7001420	NUT, reg., hex., S, cd-pltd., $\frac{3}{8}$ -24NF-2	1
H001-1518009	WASHER, lock, reg., S, $\frac{3}{8}$ in.	1
	BRACE, generator, short	1
H001-4167545	BOLT, hex-hd., S, $\frac{5}{16}$ -18NC-2 x $1\frac{1}{4}$	1
H001-7017655	NUT, reg., S, $\frac{5}{16}$ -18NC-2 (GM-118614)	1
	WASHER, lock, S, cd-pltd., internal, external teeth, $\frac{5}{16}$ in. (GM-178532)	1
	BRACE, generator, w/HANDLE, assembly	1
	BUSHING, locking, generator brace	1
	GUIDE, adjusting generator brace	1
	BOLT, hex-hd., S, cd-pltd., $\frac{3}{8}$ -24NF-2 x $1\frac{1}{2}$	1
	NUT, reg., hex., S, cd-pltd., $\frac{3}{8}$ -24NF-2	1
H001-1518009	WASHER, lock, reg., S, $\frac{3}{8}$ in. (GM-103321)	1
	WASHER, plain, S, cd-pltd., USS, $\frac{3}{8}$ in. (GM-120388)	1
	INSULATOR, generator support (rubber, $1\frac{1}{16}$ O.D. x $\frac{1}{2}$ I.D.)	2
	BOLT, hex-hd., S, cd-pltd., $\frac{5}{16}$ -24NF x $3\frac{3}{4}$	2
	NUT, reg., hex., S, cd-pltd., $\frac{5}{16}$ -24NF-2	2
H001-7025711	WASHER, lock, reg., S, cd-pltd., $\frac{5}{16}$ in. (GM-120214)	2


Note 1—Also in KIT, FM-GPA-18363-B. Note 2—Also in KIT, FM-GPA-18342.



## GROUP 06—ELECTRICAL (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number	ITEM	Quant. Req'd. per Unit Assy.	Unit Price
Col. 1	Col. 2	Ford No.      Col. 3 Willlys No.      Col. 4	Col. 5	Col. 6	Col. 7
	H001-1518009	FM-356371-S7	0601A—GENERATOR (6 VOLT) ATTACHING PARTS (Cont'd) INSULATOR, generator support (rubber, 1 1/8 O.D. x 1/2 I.D.) (Cont'd) WASHER, generator support insulator (21/64) WASHER, generator support (23/64) SPRING, generator brace SUPPORT, generator assembly BOLT, hex-hd., S., 3/8-16NC-2 x 7/8 WASHER, lock, reg., S., 3/8 in. (GM-103321)	2	.0042
		FM-356436-S		2	.0399
		FM-GPW-10155		1	.31
		FM-GPW-10166		1	.0123
		FM-355496-S		2	
		FM-34807-S2		2	
	3320-350329-S2 3320-350341-S2 3320-350340-S2	FM-350329-S2	0601A-1—GENERATOR (12 VOLT) ATTACHING PARTS (Only for vehicles modified by MWO ORD G503-W7) BOLT, generator brace to bracket BOLT, mounting, generator, front BOLT, mounting, generator, rear BRACE, generator BRACKET, generator brace INSULATOR, generator support NUT, special, shoulder, 1/16-20 (generator mounting bolt) SPACER, generator brace SPACER, mounting, generator front end plate SUPPORT, generator, assembly SCREW, cap, hex-hd., S., 3/8-16NC-2 x 3/8 WASHER, lock, reg., S., 3/8 in. WASHER, special, flat, 3/8 in.	1	
		FM-350341-S2		1	
		FM-350340-S2		1	
		FM-GPA-10145		1	
3320-GPW-6074 3320-GPW-10027	FM-GPWS-10146-B	0601B—GENERATOR REGULATOR (6 VOLT) ARMATURE, generator current regulator, assembly (AL-VRY-1061B) (Note 1) ARMATURE, generator cut-out relay (AL-VRY-1043) (Note 2) ARMATURE, generator voltage regulator, assembly (AL-VRY-1080B) (Note 3) BRACKET, adjusting, generator current and voltage regulator coil, assembly (AL-VRA-1060) SCREW, mach, fil-hd., S., cd-pltd., No. 8 (0.164)-32NC-2 x 1/8 (AL-8X-878) (Notes 1 and 3) SCREW, mach, fil-hd., S., cd-pltd., No. 8 (0.164)-32NC-2 x 5/8 (AL-8X-888) WASHER, lock, S., No. 8 (0.164) (AL-X-195) (Notes 1 and 3) WASHER, plain, S., cd-pltd., No. 8 (0.164) (AL-8X-350) (Notes 1 and 3)	1		
	FM-GPW-6074		2		
	FM-GPW-10027		2		
	FM-GPWS-10149		1		
3320-351373-S2	FM-GPA-10166		1		
	FM-355496-S		2		
	FM-34807-S		2		
	FM-351373-S2		2		
06-3 G502-0110522	FM-GPW-10455		1		
	FM-GPW-10540		1		
	FM-GPW-10551		1		
			2		
06-3 H001-5125861	FM-31053-S7		2		
			4		
			8		
			12		
06-3 H001-5125821 H001-1518004 H001-7043591	FM-31037-S7		8		
	FM-34842-S7		12		
	FM-34702-S7		8		

Note 1—Also in KIT, FM-GPW-18299, WO-A-7805. Note 2—Also in KIT, FM-GPW-18298, WO-A-7794. Note 3—Also in KIT, FM-GPW-18311, WO-A-7810.

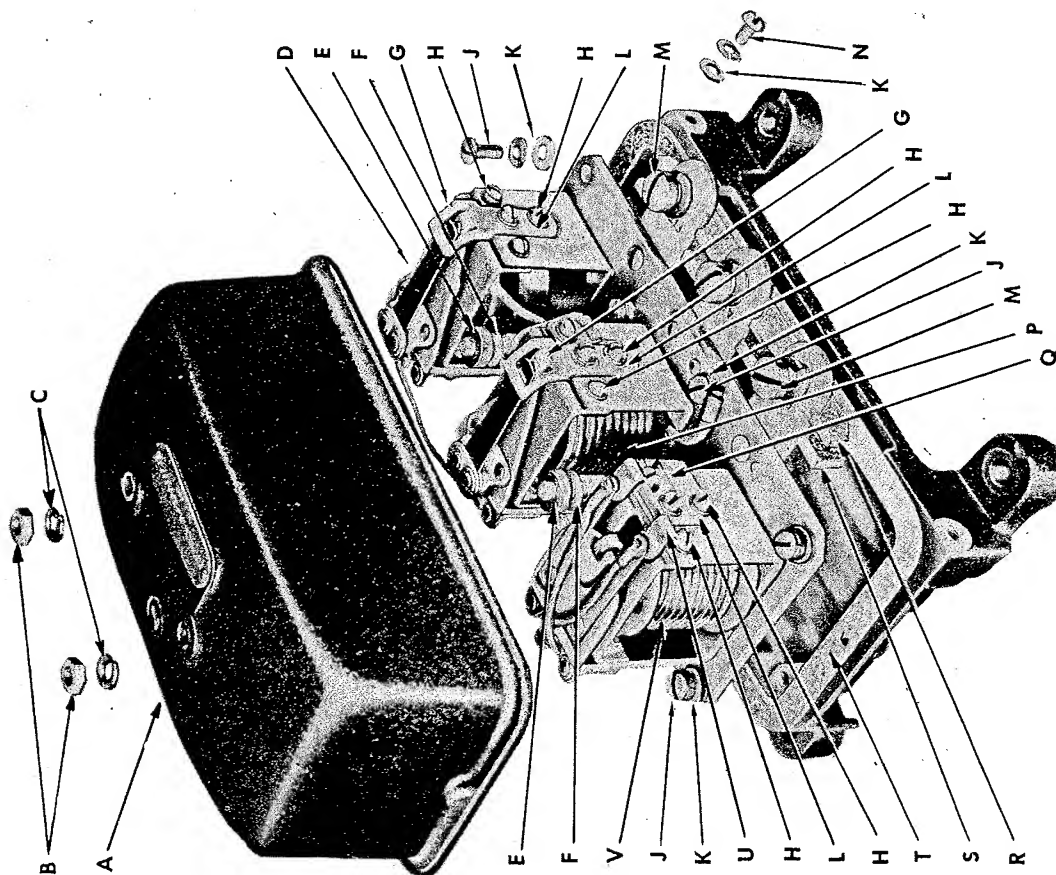

Key	Part Name	Ford Part No.	Willlys Part No.	Group No.
A	COVER		WO-A-9042	0601B
B	NUT		WO-A-9040	0601B
C	WASHER		WO-A-9041	0601B
D	COIL, assembly		WO-A-9049	0601B
E	WASHER		WO-A-9043	0601B
F	WASHER		WO-A-1616	0601B
G	BRACKET		WO-A-7807	0601B
H	SCREW	FM-31037-S7	WO-A-7803	0601B
J	SCREW		WO-A-8993	0601B
K	WASHER		WO-A-5262	0601B
L	WASHER	FM-34702-S7	WO-A-1666	0601B
M	SCREW	FM-355427-S7	WO-A-9050	0601B
N	SCREW		WO-A-1620	0601B
P	COIL, assembly		WO-A-9051	0601B
Q	INSULATION	FM-GPW-10636	WO-A-7799	0601B
R	INSULATION		WO-A-9048	0601B
S	GASKET	FM-GPW-10564	WO-A-9047	0601B
T	GASKET	FM-GPW-10623	WO-A-9046	0601B
U	BRACKET, assembly	FM-GPW-10536	WO-A-7801	0601B
V	COIL, assembly		WO-A-9044	0601B

FIGURE 06-3—GENERATOR REGULATOR ASSEMBLY

## GROUP 06—ELECTRICAL (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>0601B—GENERATOR REGULATOR (6 VOLT) (Cont'd)</b>						
06-3	G502-0125856		WO-A-8322	BRACKET, mounting, generator regulator resistance (AL-VRA-67)	1	
	G154-0392749	FM-GPW-10536	WO-A-7801	BRACKET, stationary, generator cut-out relay, w/CONTACT, assembly (AL-VRH-1073) (Note 2)	1	
	H001-5125861	FM-31053-S7	WO-A-7802	SCREW, mach., fl.-hd., S., cd.-pltd., No. 8 (0.164)-32NC-2 x 7/16 (AL-8X-878) (Note 2)	2	
	H001-5125821	FM-31037-S7	WO-A-7803	SCREW, mach., fl.-hd., S., cd.-pltd., No. 8 (0.164)-32NC-2 x 5/16 (AL-8X-888) (Note 2)	4	
	H001-1518004	FM-34842-S	WO-51532	WASHER, lock, S., No. 8 (0.164) (AL-X-195) (Note 2)	6	
06-3	H001-7043591	FM-34702-S7	WO-A-1666	WASHER, plain, S., cd.-pltd., No. 8 (0.164) (AL-8X-350) (Note 2)	4	
06-3	G502-0139775		WO-A-9044	COIL, generator cut-out relay, assembly (AL-VRY-3035)	1	
06-3	G502-0139777		WO-A-9051	COIL, generator current regulator, assembly (AL-VRY-30700)	1	
	G054-1714512		WO-A-9049	COIL, generator voltage regulator, assembly (AL-VRY-3071B)	1	
	H001-7023681		WO-A-9053	COIL, generator voltage regulator, assembly (AL-VRY-3071B)	1	
	H001-1540059		WO-A-8914	NUT, hex., S., cd.-pltd., 1/4-20NC-2 (AL-8X-1055)	3	
	H001-4135681		WO-A-9052	WASHER, lock, reg., S., 1/4 in. (AL-X-535)	3	
06-3	G154-0140096		WO-A-5260	CONNECTOR, generator regulator series coil (AL-VRA-46)	1	
06-3	H001-4167501		WO-A-9042	NUT, mach., screw, hex., S., cd.-pltd., No. 10 (0.190)-32NC-2 (AL-8X-173)	1	
06-3	H001-7023681		WO-A-9040	COVER, generator regulator (AL-VRA-1002)	1	
06-3	H001-7043681		WO-A-9041	NUT, reg., hex., S., cd.-pltd., 1/4-20NC-2 (AL-8X-163)	2	
06-3	G104-1842779		WO-A-1616	WASHER, lock, reg., S., cd.-pltd., 1/4 in. (AL-12X-199)	2	
06-3	G067-0902830		WO-A-9043	WASHER, plain, S., cd.-pltd., 1/4 in. (AL-8X-361)	4	
06-3	G067-0902840	FM-GPW-10623	WO-A-9046	WASHER, rubber (AL-VRA-109)	2	
06-3	G502-0232822	FM-GPW-10584	WO-A-9047	GASKET, generator regulator cover (AL-VRA-50)	1	
		FM-GPW-10636	WO-A-7799	GASKET, generator regulator terminal (AL-VRA-51)	1	
				INSULATION, generator regulator cut-out relay stationary bracket (AL-VRA-76) (Note 2)	1	
06-3	G067-0903450	FM-GPW-18299	WO-A-9048	INSULATION, generator regulator terminals (AL-VRA-52)	1	
			WO-A-7805	KIT, repair, generator current regulator (AL-KIT-16)	1	
				(Consists of:		
				1 ARMATURE		
				1 NUT, adjusting screw		
				1 SCREW, adjusting		
				2 SCREW, adjusting bracket		
				1 SPRING, armature		
				3 WASHER, lock, adjusting bracket		
				2 WASHER, plain, adjusting bracket		



## GROUP 06—ELECTRICAL (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>0601B—GENERATOR REGULATOR (6 VOLT) (Cont'd)</b>		
	G067-0905420		WO-A-8498	SEAL, generator regulator lead and wire (AL-GAG-138).....	1	
	G067-0905600	FM-GPW-10554	WO-A-7798	SPRING, generator regulator cut-out relay (AL-VRA-17).....	1	
			WO-A-7806	SPRING, generator current regulator and voltage regulator armature (AL-VRA-84) (Notes 1 and 3).....	2	
		FM-GPW-10544	WO-A-7795	WASHER, insulating, cut-out relay stationary bracket (0.187 x 0.250 x 1/8 thk.) (AL-GAA-35) (Note 2).....	2	
	G067-090490	FM-GPW-10577	WO-A-7804	WASHER, insulating, cut-out relay stationary bracket (1 1/4 x 3/8 x 1/8 thk.) (AL-X-1465) (Note 2).....	2	
			WO-A-5262	WASHER, plain, S, cd-pltd., No. 10 (0.190) (AL-8X-133A) (6 used—base mounting; 1 used—ground screw; 4 used—lead connection).....	11	
	H001-1518005		WO-5168	WASHER, lock, S, No. 10 (0.190) (AL-X-196) (6 used—base mounting; 1 used—ground screw—lead connection).....	11	
				<b>0601B-1—GENERATOR REGULATOR (12 Volt)</b>		
	G067-3138899			COIL, generator current regulator, assembly (AL-VRH-3008).....	1	
	G502-7001048			COIL, generator cut-out relay, assembly (AL-VRH-3035).....	1	
	G067-0904520			COIL, generator voltage regulator, assembly (AL-VRH-3071).....	1	
	2980-VRH-50			GASKET, generator regulator cover (for water proofing) (AL-VRH-50).....	1	
	G502-0367546			KIT, repair, generator current regulator (AL-KIT-28).....	1	
				(Consists of:		
	G502-0139954			1 ARMATURE and CONTACT (AL-VRH-1061).....		
	G067-0903910			1 NUT (AL-VRA-15).....		
	G067-0904830			1 SCREW (AL-VRA-16).....		
	H001-5123861			2 SCREW (AL-8X-878).....		
	G067-0905420			1 SPRING (AL-VRA-17).....		
	H001-1518004			2 WASHER (AL-X-195).....		
	H001-7043591			2 WASHER (AL-8X-350).....		
	G502-0125960			KIT, repair, generator cut-out relay (AL-KIT-27).....	1	
				(Consists of:		
	G154-0392749			1 ARMATURE and CONTACT (AL-VRY-1043).....		
	G067-0903910			1 BRACKET, contact (AL-VRH-1073).....		
	G067-0904830			1 INSULATION (AL-VRA-23).....		
				1 NUT (AL-VRA-15).....		
				1 SCREW (AL-VRA-16).....		
				2 SCREW (AL-8X-378).....		

06-3

G067-0905420	2	SCREW (AL-8X-388)	1	
G067-0903390	1	SPRING (AL-VRA-17)		
H001-1518004	2	WASHER (AL-GAA-35)		
	3	WASHER (AL-X-195)		
G067-0906490	3	WASHER (AL-8X-350)		
G502-0435653	2	WASHER (AL-X-1465)		
		KIT, repair, generator voltage regulator (AL-KIT-29)	1	
		(Consists of:		
G502-0139953	1	ARMATURE and CONTACT (AL-VRH-1080)		
G067-0903910	1	NUT (AL-VRA-15)		
G067-0904830	1	SCREW (AL-VRA-16)		
H001-5125861	2	SCREW (AL-8X-878)		
G067-0905600	1	SPRING (AL-VRA-84)		
H001-1518004	2	WASHER (AL-X-195)		
H001-7043591	1	WASHER (AL-8X-350))		
G136-0367413		REGULATOR, generator, assembly (12 volt) (AL-VRA-4101C)	1	
G067-0904540		RESISTANCE, generator regulator, carbon (marked 1) (AL-TC-51A)	1	
G067-0904550		RESISTANCE, generator regulator, carbon (marked 15) (AL-TC-51S)	1	
G067-0904560		RESISTANCE, generator regulator, carbon (marked 30) (AL-TC-51L)	1	
		<b>0602—CRANKING MOTOR</b>		
2980-MZ-2089		ARMATURE, cranking motor, assembly (AL-MZ-2089)	1	3.242
F227-0105011		BAND, cranking motor head, assembly (AL-MZ-1024)	1	.0233
		NUT, sq., S, No. 10 (0.190)-32NF-2 (Note 4)	1	
G067-0900250		SCREW, mach, rd-hd., S, cd-pltd., No. 10 (0.190)-32NF-2 x 1½ (Note 4)	1	
		BEARING, cranking motor (in flywheel housing) (superseded by BEARING, FM-GPW-11134, WO-639734)	1	
G067-0900250		BEARING, cranking motor (in flywheel housing) (supersedes BEARING, FM-GPW-11394)	1	.0287
G067-0900810		BEARING, cranking motor, commutator end (superseded by BEARING, FM-GPW-11135, WO-A-1583)	1	
G067-0900810		BEARING, cranking motor, commutator end (0.626) x 0.735, absorbent bz. (AL-MG-77A) (supersedes BEARING, FM-GPW-11395) (Note 4)	1	
G067-0900250		BEARING, cranking motor, intermediate, assembly (AL-MAB-2040A)	1	.0305
G067-0900690		BRUSH, grounded, cranking motor (AL-MZ-1034) (Also in BRUSH SET, FM-GPW-18535, WO-A-1552)	1	
G505-0152523		BRUSH, insulated, cranking motor (AL-MZ-12) (also in BRUSH SET, FM-GPW-18535, WO-A-1552)	2	
G121-0126320		BRUSH SET, cranking motor (AL-MZ-2012-S) (Note 4)	2	
		(Consists of:	1	.244
		2 BRUSH, insulated		
G505-0156045		2 BRUSH, grounded		
		BUSHING, insulating, cranking motor terminal post (AL-MU-31) (also in KIT, FM-GPW-18319, WO-A-7841; and KIT, FM-GPW-18376, WO-A-6756)	1	

Note 1—Also in KIT, FM-GPW-18299, WO-A-7805. Note 2—Also in KIT, FM-GPW-18311, WO-A-7810.  
 Note 4—Also in KIT, FM-GPW-18376-B, WO-A-7836.

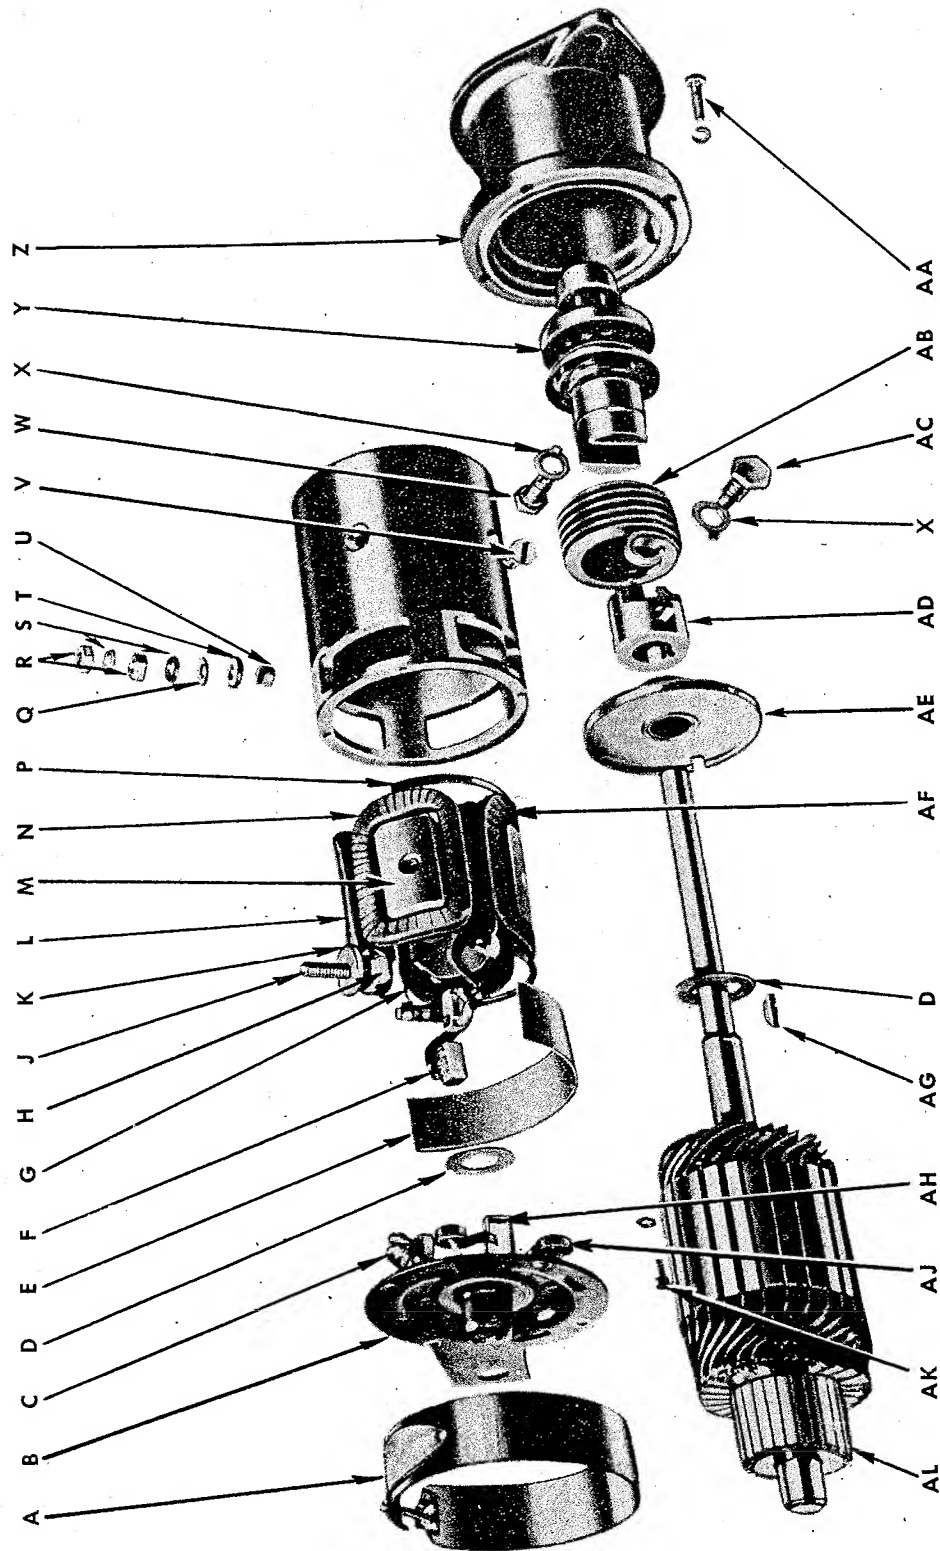


FIGURE 06-4—CRANKING MOTOR ASSEMBLY—EXPLODED VIEW

Key	Part Name	Ford Part No.	Willys Part No.	Group No.	Key	Part Name	Ford Part No.	Willys Part No.	Group No.
A	BAND	FM-GPW-11077	WO-109452	0602	U	BUSHING	FM-GPW-11107	WO-109436	0602
B	PLATE, assembly	FM-GPW-11049	WO-A-1566	0602	V	SCREW	FM-355485-S7	WO-A-1559	0602
C	BRUSH	FM-GPW-11056	WO-109446	0602	W	SCREW	FM-GPW-11382	WO-A-1579	0602
D	WASHER	FM-GPW-11036-B	WO-109455	0602	X	WASHER	FM-B-11379	WO-A-1574	0602
E	INSULATION	FM-GPW-11089	WO-A-1557	0602	Y	SHAFT, assembly	FM-GPW-11354	WO-A-1581	0602
F	BRUSH	FM-GPW-11055	WO-109431	0602	Z	HOUSING	FM-GPW-11131	WO-A-1585	0602
G	COIL	FM-GPW-11082	WO-A-1562	0602	AA	SCREW	FM-355164-S	WO-A-1584	0602
H	TERMINAL	FM-GPW-11102	WO-A-1554	0602	AB	SPRING	FM-GPW-11375	WO-A-1577	0602
J	POST	FM-GPW-11103	WO-109433	0602	AC	SCREW	FM-GPW-11377	WO-A-1578	0602
K	WASHER	FM-GPW-11095	WO-109437	0602	AD	HEAD	FM-B-11381	WO-A-1576	0602
L	COIL	FM-GPW-11083	WO-A-1560	0602	AE	BEARING	FM-GPW-11130	WO-A-1582	0602
M	POLE PIECE	FM-GPW-11120	WO-A-1556	0602	AF	COIL	FM-GPW-11084	WO-A-1561	0602
N	COIL	FM-GPW-11085	WO-A-1563	0602	AG	KEY	FM-74175-S	WO-5017	0602
P	CONNECTOR	FM-GPW-11090	WO-A-1558	0602	AH	HOLDER	FM-GPW-11061	WO-109442	0602
Q	WASHER	FM-34706-S2	WO-5437	0602	AJ	SPRING	FM-B-11059	WO-109445	0602
R	NUT	FM-355944-S5	WO-A-1565	0602	AK	SCREW	FM-31596-S	WO-A-1572	0602
S	WASHER	FM-34806-S7	WO-51833	0602	AL	ARMATURE, assembly	FM-GPW-11005	WO-A-1568	0602
T	WASHER	FM-GPW-11094	WO-A-1553	0602					

FIGURE 06-4A—LEGEND FOR 06-4—CRANKING MOTOR ASSEMBLY—EXPLODED VIEW



## GROUP 06—ELECTRICAL (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>0602—CRANKING MOTOR (Cont'd)</b>		
06-4	M001-0104161 2980-MZ-1009	FM-GPW-11082	WO-A-1562 WO-109427	COIL, cranking motor field, lower left (superseded by COIL, WO-109427)	1	
06-4	G505-0179571	FM-GPW-11084	WO-A-1561 WO-109428	COIL, cranking motor field, lower left (AL-MZ-1009) (supersedes COIL, FM-GPW-11082, WO-A-1562) (Note 2)	1	
06-4	F005-0102840	FM-GPW-11083	WO-A-1560	COIL, cranking motor field, lower right (superseded by COIL, WO-109428)	1	
06-	M001-0104162	FM-GPW-11085	WO-A-1563	COIL, cranking motor field, lower right (AL-MZ-1008) (Note 2) (supersedes COIL, FM-GPW-11084, WO-A-1561)	1	
06-4	2980-EBA-46	FM-GPW-11090	WO-A-1558	COIL, cranking motor field, upper left (AL-MZ-1007) (Note 2)	1	
06-4		FM-GPW-11350	WO-A-1573	COIL, cranking motor field, upper right (AL-MZ-1010) (Note 2)	1	
06-4		FM-B-11381	WO-A-1576	CONNECTOR, cranking motor field coil (AL-MZ-32) (Note 2)	2	
06-4	H001-0518016	FM-74175-S	WO-5017	DRIVE, Bendix, cranking motor, assembly (AL-EBA-46)	1	1.47
				HEAD, cranking motor Bendix drive (AL-EB-8503)	1	
				(also in KIT, FM-GPW-18329, WO-A-7842)	1	
06-4	G067-0903250	FM-GPW-11061	WO-109442	KEY, Woodruff, S, $\frac{5}{32}$ x $\frac{5}{8}$ (GM-124546) (also in KIT, FM-GPW-18329, WO-A-7842)	1	
06-4	2980-PS-1079A	FM-GPW-11131	WO-109455	HOLDER, cranking motor brush (AL-MZ-16)	2	
06-4		FM-355164-S	WO-A-1584	HOUSING, cranking motor Bendix drive pinion, assembly (AL-PS-1079A)	1	.896
06-4	H001-7025621	FM-34803-S7	WO-52221	SCREW, mach., hex-hd., S, No. 10 (0.190)-32NF-2 x $3\frac{1}{2}$ (AL-MZ-S2) (Note 1)	4	
06-4	G505-0365732	FM-GPW-11089	WO-A-1557	WASHER, lock, reg., S, cd-pltd., No. 10 (0.190) (Note 1)	4	
		FM-GPW-18376	WO-A-6756	INSULATION, cranking motor field connection (AL-MZ-30A) (Note 2)	1	
				KIT, repair, cranking motor	1	
				(Consists of:		
		FM-GPW-11107	WO-109436	1 BUSHING, insulating, terminal post		
		FM-GPW-11103	WO-109433	1 POST, terminal		
		FM-355485-S7	WO-A-1559	4 SCREW, pole piece		
		FM-GPW-11053	WO-A-1569	1 SPACER, thrust, bearing		
		FM-B-11059	WO-109445	4 SPRING, brush		
		FM-GPW-11102	WO-A-1554	1 TERMINAL, field coil		
		FM-GPW-11095	WO-109437	1 WASHER, insulating, terminal post, inner		
		FM-GPW-11094	WO-A-1553	1 WASHER, insulating, terminal post, outer		
		FM-B-11379	WO-A-1574	2 WASHER, lock, drive spring screw		
		FM-351355-S7	WO-A-1555	2 WASHER, plain, terminal post		
		FM-GPW-11036-B	WO-109455	2 WASHER, thrust, armature, commutator end)		
	2980-KIT-24	FM-GPW-18376-B	WO-7836	KIT, repair, cranking motor (AL-KIT-24)	1	.603
				(Consists of:		
		FM-GPW-11135	WO-A-1583	1 BEARING		
		FM-GPW-11535	WO-A-1552	1 BRUSH SET		

2980-KIT-25	FM-34141-S2	WO-A-1589	1 NUT, head band	1	.912
	FM-355164-S	WO-A-1584	2 SCREW, head		
	FM-35954-S7	WO-A-1588	1 SCREW, head band		
	FM-31596-S	WO-A-1572	2 SCREW, commutator end plate		
	FM-B-11059	WO-109445	4 SPRING, brush		
	FM-34803-S7	WO-A-1571	2 WASHER, lock		
		WO-52960	2 WASHER, lock, w/KIT only		
	FM-GPW-11036-B	WO-109455	2 WASHER, thrust, armature, commutator end)		
	FM-GPW-18329	WO-A-7842	KIT, repair, cranking motor Bendix drive (AL-KIT-25)	1	
			(Consists of:		
2980-KIT-26	FM-B-11381	WO-A-1576	1 HEAD, drive		1.971
	FM-74175-S	WO-5017	1 KEY, Woodruff, drive head		
	FM-GPW-11377	WO-A-1578	1 SCREW, drive spring to head		
	FM-GPW-11382	WO-A-1579	1 SCREW, drive spring to shaft		
	FM-11357-A	WO-A-1575	1 SLEEVE, drive		
	FM-GPW-11375	WO-A-1577	1 SPRING, drive		
	FM-B-11379	WO-A-1574	2 WASHER, lock, drive spring screw)		
	FM-GPW-18319	WO-A-7841	KIT, repair, cranking motor field coil (AL-KIT-26)	1	
			(Consists of:		
	FM-GPW-11107	WO-109436	1 BUSHING, insulating, terminal post		
		WO-109427	1 COIL, field, lower left		10.10
		WO-109428	1 COIL, field, lower right		
		WO-A-1560	1 COIL, field, upper left		
		WO-A-1563	1 COIL, field, upper right		
		WO-A-1558	1 CONNECTOR, field coil		
		WO-A-1557	1 INSULATION, field connection		
		WO-A-1565	2 NUT, terminal post		
		WO-109433	1 POST, terminal		
		WO-A-1559	4 SCREW, pole piece		
		WO-A-1554	1 TERMINAL, field coil		
G503-0295835	FM-34806-S7	WO-A-1619	1 WASHER, lock, terminal post		.0038
	FM-351355-S7	WO-A-1555	1 WASHER, plain, terminal post		
	FM-GPW-11095	WO-109437	1 WASHER, insulating, terminal post, inner		
	FM-GPW-11094	WO-A-1553	1 WASHER, insulating, terminal post, outer)		
	FM-GPW-11001		MOTOR, cranking, assembly (superseded by MOTOR, assembly, FM-GPW-11001-A, WO-A-1245)	1	
			MOTOR, cranking, assembly (superseded by MOTOR, assembly, FM-GPW-11001-A, WO-A-1245)	1	
			MOTOR, cranking, assembly (includes Bendix drive) (AL-MZ-4113) (supersedes MOTOR, assembly, FM-GPW-11001; and MOTOR, assembly, FM-GPW-11002)	1	
			BOLT, hex-hd., s-fin., alloy-S., $\frac{3}{8}$ -16NC-2 x $1\frac{1}{4}$ (GM-100135)	2	
			WASHER, lock, reg., S., $\frac{3}{8}$ in.	2	
			PIECE, pole, cranking motor (AL-MZ-29)	4	
G503-0295838			SCREW, special, fl-hd., S., cd-pltd., $\frac{3}{8}$ -16NC-2 x 0.54 (AL-MZ-38A) (Notes 2 and 3)	4	10.10
			PIN, dowel, cranking motor intermediate bearing (AL-MAB-88)	1	
G134-0338435					.0038

Note 1—Also in KIT, FM-GPW-18376-B, WO-A-7836. Note 2—Also in KIT, FM-GPW-18319, WO-A-7841. Note 3—Also in KIT, FM-GPW-18376, WO-A-6756.

## GROUP 06—ELECTRICAL (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>0602—CRANKING MOTOR (Cont'd)</b>		
06-4	2980-MZ-2156	FM-GPW-11049	WO-A-1566	PLATE, cranking motor, commutator end, w/grounded BRUSHES, assembly (AL-MZ-2156)	1	.505
06-4	H001-1026463	FM-31596-S	WO-A-1572	SCREW, mach., fil-hd., S, No. 10 (0.190)-32NF-2 x $\frac{3}{8}$ (AL-X-902) (Note 1)	4	
06-4	H001-7025621	FM-34803-S7	WO-52221	WASHER, lock, S, cd-pltd., No. 10 (0.190)	4	
06-4	G067-0904430	FM-GPW-11103	WO-109433	POST, terminal, cranking motor ( $\frac{5}{16}$ -24NF) (AL-MU-28) (Notes 2 and 3)	1	
06-4		FM-355944-S5	WO-A-1565	NUT, thin, hex., S, copper plate, $\frac{5}{16}$ -24NF-2 (AL-5X-1376) (Note 2)	2	
06-4	H001-7025711	FM-34806-S7	WO-A-1619	WASHER, lock, S, cd-pltd., SAE std., $\frac{5}{16}$ in. (Note 2)	2	
06-4	H001-7043711	FM-351355-S7	WO-A-1555	WASHER, plain, S, cd-pltd., $\frac{5}{16}$ in. (AL-MU-37) (Notes 2 and 3)	1	
06-4	H001-1531002	FM-34706-S2	WO-5437	WASHER, plain, S, $\frac{5}{16}$ in.	1	.0083
	H001-1531002	FM-34706-S2	WO-A-1580	RING, take-up, cranking motor, Bendix drive (AL-EB-8734)	1	
06-4	G067-0905580	FM-B-11371	WO-A-1578	SCREW, cranking motor Bendix head spring (AL-EB-8506) (also in KIT, FM-GPW-18329, WO-A-7842)	1	.0256
	2980-EB-8506	FM-GPW-11377		SCREW, cranking motor Bendix shaft spring (superseded by SCREW FM-GPW-11382, WO-A-1579)	1	
06-4	2980-EB-8507	FM-GPW-11382	WO-A-1579	SCREW, cranking motor Bendix shaft spring (AL-EB-8507) (also in KIT, FM-GPW-18329, WO-A-7842) supersedes SCREW, FM-GPW-11378)	1	.0192
06-4	2980-EBA-4611	FM-GPW-11354	WO-A-1581	SHAFT, cranking motor Bendix drive, w/PINION, assembly (AL-EBA-4611)	1	1.873
	G067-0905310	FM-B-11357-A	WO-A-1575	SLEEVE, compression, cranking motor Bendix drive (AL-EB-7819S) (also in KIT, FM-GPW-18329, WO-A-7842)	1	
06-4	2980-MZ-51	FM-GPW-11053	WO-A-1569	SPACER, thrust, cranking motor bearing (AL-MZ-51) (Note 3)	1	.0613
06-4	G067-0905570	FM-B-11059	WO-109445	SPRING, cranking motor brush (AL-MZ-19) (Notes 1 and 3)	4	.0125
06-4	2980-EB-8505	FM-GPW-11375	WO-A-1577	SPRING, cranking motor Bendix drive (AL-EB-8505) (also in KIT, FM-GPW-18329, WO-A-7842)	1	
		FM-GPW-11140	WO-638646	SUPPORT, cranking motor to block	1	.0277
			WO-A-1746	BOLT, hex-hd., s-fin., S, $\frac{3}{8}$ -16NC-2 x $\frac{7}{8}$ (support to block) (superseded by BOLT, FM-24388-S7, WO-51405)	1	
		FM-24388-S7	WO-51405	BOLT, hex-hd., s-fin., S, cd-pltd., $\frac{3}{8}$ -16NC-2 x 1 (support to block) (supersedes BOLT, WO-A-1746)	2	
		FM-24327-S7	WO-52132	BOLT, hex-hd., s-fin., S, cd-pltd., $\frac{5}{16}$ -24NF-2 x $\frac{5}{8}$ (support to cranking motor) (GM-106279)	1	.0026
	H001-5419780			WASHER, lock, S, cd-pltd., internal, external teeth, $\frac{3}{8}$ in. (FM-178551)	2	
	H001-7124741	FM-356200-S7	WO-53026	WASHER, lock, S, cd-pltd., internal teeth, $\frac{5}{16}$ in. (GM-178378)	1	
	H001-7124621	FM-356309-S7	WO-53025	WASHER, plain, S, $\frac{5}{16}$ in. (GM-106262)	1	
	H001-1531003	FM-34706-S2	WO-5437	TERMINAL, cranking motor field coil (AL-MU-14) (Note 2)	1	
06-4	F227-0200895	FM-GPW-11102	WO-A-1554	WASHER, insulating, cranking motor terminal post, outer (AL-MAB-31) (Notes 2 and 3)	1	.0065
06-4	G067-0906730	FM-GPW-11094	WO-A-1553			

06-4	G067-0906720	FM-GPW-11095	WO-109437	WASHER, insulating, cranking motor terminal post, inner (AL-MU-39) (Notes 2 and 3)	1	.006
06-4	G067-0906840	FM-B-11379	WO-A-1574	WASHER, lock, cranking motor Bendix drive spring screw (AL-EB-108) (Notes 2 and 3)	2	.0042
06-4	G104-1842710	FM-GPW-11036-B	WO-109455	WASHER, thrust, cranking motor armature, commutator end (fiber, 0.645 x 1 1/4 x 1/32) (AL-MU-54) (Notes 1 and 3)	1	
				Willlys	2	
				Ford	1	
				<b>0602-1—CRANKING MOTOR (12 Volt)</b>		
				(All parts NOT listed below are the same as used on MOTOR, FM-GPW-11001, and will be found in Group 0602) (Only for vehicles modified by MWO ORD G503-W7)		
	3320-26H-11055	FM-26H-11055		BRUSH, cranking motor	1	
		FM-GPW-11055		BRUSH, cranking motor	1	
		FM-GPW-11056		BRUSH, grounded, cranking motor	2	
		FM-GPA-18535		BRUSH SET, cranking motor (also in KIT, FM-GPA-18376)	1	
				(Consists of:		
		FM-GPW-11056		2 BRUSH, grounded		
		FM-26H-11055		1 BRUSH		
		FM-GPW-11055		1 BRUSH		
		FM-GPA-11084		COIL, field, cranking motor, assembly	2	
		FM-GPW-11083		COIL, field, cranking motor upper, left, assembly	1	
		FM-GPA-11085		COIL, field, cranking motor, upper, right, assembly	1	
		FM-GPA-11089		INSULATION, cranking motor field coil	1	
		FM-GPA-18376		KIT, repair, cranking motor	1	
				(Consists of:		
		FM-GPA-18535		1 BRUSH SET		
		FM-34141-S		1 NUT, cover band screw		
		FM-355944-S5		2 NUT, terminal		
		FM-GPW-11130		1 PLATE, drive end		
		FM-31596-S		4 SCREW, commutator end plate		
		FM-27177-S7		1 SCREW, cover band		
		FM-355164-S		4 SCREW, drive end housing		
		FM-GPW-11053		1 SPACER, thrust, bearing		
		FM-B-11059		4 SPRING, brush		
		FM-GPW-11036-B		1 WASHER, armature		
		FM-34803-S7		4 WASHER, lock (No. 10)		
		FM-34803-S		4 WASHER, lock (No. 10)		
		FM-34806-S7		2 WASHER, lock (3/8 in.)		
	3320-GPA-18319	FM-GPA-18319		KIT, repair, cranking motor field coil	1	
				(Consists of:		
		FM-GPW-11107		1 BUSHING, terminal post		
		FM-GPA-11084		2 COIL, field, lower		
		FM-GPW-11083		1 COIL, field, upper, left		
		FM-GPA-11085		1 COIL, field, upper, right		


Note 1—Also in KIT, FM-GPW-18376-B, WO-A-7836. Note 2—Also in KIT, FM-GPW-18319, WO-A-7841. Note 3—Also in KIT, FM-GPW-18376, WO-A-6756.

## GROUP 06—ELECTRICAL (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>0602-1—CRANKING MOTOR (12 Volt) (Cont'd)</b>		
				KIT, repair, cranking motor field coil (Cont'd)		
		FM-GPW-11090		2 CONNECTOR, field coil		
		FM-GPA-11089		1 INSULATION		
		FM-355944-S5		2 NUT, terminal post		
		FM-GPW-11102		1 POST, terminal		
		FM-355485-S7		4 SCREW, pole piece		
		FM-GPW-11103		1 TERMINAL, field		
		FM-351355-S7		1 WASHER, flat		
		FM-GPW-11095		1 WASHER, insulation		
		FM-GPW-11094		1 WASHER, insulating		
		FM-34806-S7		2 WASHER, lock		
	G503-0295823	FM-GPA-11001		MOTOR, cranking, assembly (includes Bendix drive) (12 volt)	1	
		FM-24428-S		BOLT, hex-hd., S, $\frac{3}{16}$ -16NC-2 x $1\frac{1}{4}$ (cranking motor to rear engine plate)	2	
		FM-33798-S7		NUT, reg, hex, S, cd-pltd., $\frac{5}{16}$ -24NF-2	1	
		FM-24327-S		SCREW, cap, hex-hd., S, $\frac{5}{16}$ -24NF-2 x $\frac{5}{8}$ (support to cranking motor)	1	
	H001-7025711	FM-34806-S7		WASHER, lock, reg., S, cd-pltd., $\frac{3}{8}$ in.	1	
	H001-1518009	FM-34807-S		WASHER, lock, reg., S, $\frac{3}{8}$ in.	2	
	H001-7045561	FM-34706-S7		WASHER, plain, S, cd-pltd., $\frac{5}{8}$ in.	1	
				<b>0603—DISTRIBUTOR (REGULAR TYPE)</b> (See also Group 0603-1)		
06-5, 6	2980-IGS-1080	FM-GPW-12155	WO-A-1674	ARM, advance control, distributor, assembly (AL-IGS-1080)	1	.0977
06-6	G116-0400060	FM-GPW-12162	WO-A-1570	ARM, breaker, distributor, assembly (AL-IGP-3028)	1	
06-5	2980-IGS-2135	FM-GPW-12139	WO-A-1679	BASE, distributor, assembly (AL-IGS-2135)	1	1.63
06-6	G104-1518120	FM-GPW-12082	WO-A-1681	BEARING, distributor, absorbent bronze (AL-IG-579-A) (Note 1)	2	
06-5	G503-0131548	FM-GPW-12106	WO-A-1655	CAP, distributor, assembly (AL-IG-1324-D)	1	1.075
06-5, 6	G121-0137958	FM-GPW-12217	WO-A-1663	CLIP, distributor breaker arm spring (AL-IG-676) (Note 1)	1	
06-5, 6	G154-0139853	FM-GPW-12195	WO-A-1659	COLLAR, distributor drive shaft (AL-IGB-199)	1	.0652
06-5, 6	G121-0370109	FM-72867-S7	WO-A-1685	RIVET, distributor drive shaft collar (AL-SW-213) (Note 1)	1	
06-5, 6	G067-0901889	FM-GPW-12300	WO-A-1631	CONDENSER, distributor (AL-IGW-3139)	1	.261
		FM-31026-S7	WO-A-1670	SCREW, mach, fil-hd., S, cd-pltd., No. 6 (0.138)-32NC-2 x $\frac{5}{8}$ (AL-8X-01546) (condenser mounting) (Note 1)	1	
06-5		FM-31583-S	WO-A-1686	SCREW, mach, fil-hd., S, No. 10 (0.190)-32NF-2 x $\frac{1}{4}$ (condenser terminal)	1	
06-6	G116-1843059	FM-34801-S7	WO-A-1669	WASHER, lock, S, cd-pltd., No. 6 (0.138) (AL-X-1012) (Note 1)	1	
06-5	H001-7075621	FM-34803-S7	WO-52221	WASHER, lock, S, cd-pltd., No. 10 (0.190) (AL-X-196) (Note 1)	1	
06-6	G116-0400590	FM-GPW-12218	WO-A-1564	CONTACT, breaker, distributor, assembly (AL-IGC-1149)	1	

06-5	G067-3140085 G503-0152015	FM-GPW-12174 FM-GPW-12100	WO-A-1660 WO-A-1244	COVER, distributor terminal slot (AL-IGC-117) (Note 1) DISTRIBUTOR, assembly (AL-IGC-4705) (superseded by DISTRIBUTOR, assembly, FM-GPW-12100-B, WO-A-9075) (group 0603-1)	1	
	H001-1518007 H001-1530007	FM-24308-S FM-34805-S2 FM-34745-S2 FM-GPW-18343	WO-51763 WO-52706 WO-52702 WO-A-7843	BOLT, hex-hd., S, 1/4-20NC-2 x 1/2 WASHER, lock, reg., S, 1/4 in. WASHER, plain, S, SAE, 1/4 in. KIT, repair, distributor (use with Distributor, assembly, FM-GPW-12100, WO-A-1244 only)	1 1 1 1	3.91
	G121-0340614	FM-GPW-12082 FM-GPW-12217 FM-GPW-12174 FM-B-10141 FM-GPW-12145	WO-A-1681 WO-A-1663 WO-A-1660 WO-107128 WO-A-1683	(Consists of: 1 BEARING 1 CLIP, breaker arm spring 1 COVER, terminal slot 1 OILER 2 PIN, hinge 1 PLUG (AL-IGS-32) 1 RING, retaining, cam 1 RIVET, drive shaft collar 1 SCREW, condenser mounting 1 SCREW, stationary contact 2 SCREW 1 SCREW, breaker arm spring clip 2 SPRING, cap 2 WASHER, lock, condenser screw 3 WASHER, lock, condenser terminal 1 WASHER, spacer, cam spring 1 WASHER, breaker arm spring screw 1 WASHER, plain, stationary contact 1 WASHER, thrust, shaft upper 1 WASHER, thrust, shaft, lower 1 WICK OILER, distributor shaft (press-in sleeve type) (AL-X-490) (Note 1)	1	.505
01-3, 06-5,6	G067-0903990 G121-0340306	FM-GPW-12120 FM-34701-S7 FM-34702-S2 FM-GPW-12182 FM-GPW-12193 FM-GPW-12133 FM-B-10141	WO-A-1672 WO-A-1667 WO-A-1666 WO-A-1673 WO-106740 WO-A-1671 WO-107128		1	
	G121-0340277 H001-5112731	FM-GPW-12151 FM-GPW-12010 FM-31588-S7	WO-A-1662 WO-A-1664 WO-A-1636	PLATE, breaker, distributor, assembly (AL-IGC-2148C) (includes CONDENSER and POINT SET) PLATE, breaker, distributor (AL-IGC-1148) SCREW, mach., fl-hd., S, cd-pltd., No. 10 (0.190)-32NFX 5/16 (AL-SX-870) (Note 1)	1 1	1.303
06-5	H001-7025621	FM-34803-S7	WO-52221	WASHER, lock, S, cd-pltd., SAE std., No. 10 (0.190)	3	
06-5	G121-0340277	FM-GPW-12176	WO-A-1661	PLATE, distributor cam and stop (AL-IGC-1148)	3	.977
06-5	G067-0904036	FM-GPW-12145	WO-A-1683	PIN, distributor cap spring hinge (AL-X-1448) (Note 1)	1	
	G067-0904329 G104-1783105	FM-GPW-12011 FM-GPW-18354	WO-A-1656 WO-A-1687	PLUNGER, distributor contact spring (AL-IG-514) POINT SET, distributor (AL-1GP-3028FS) (Consists of: 1 ARM, assembly 1 CONTACT) RING, retaining, distributor cam (AL-IG-680) (Note 1)	2 1 as req.	.0111 .619
06-5, 6	G167-0903749	FM-GPW-12162 FM-GPW-12218 FM-GPW-12177	WO-A-1570 WO-A-1564 WO-A-1653		1	.0326

Note 1—Also in KIT, FM-GPW-18343, WO-A-7843.

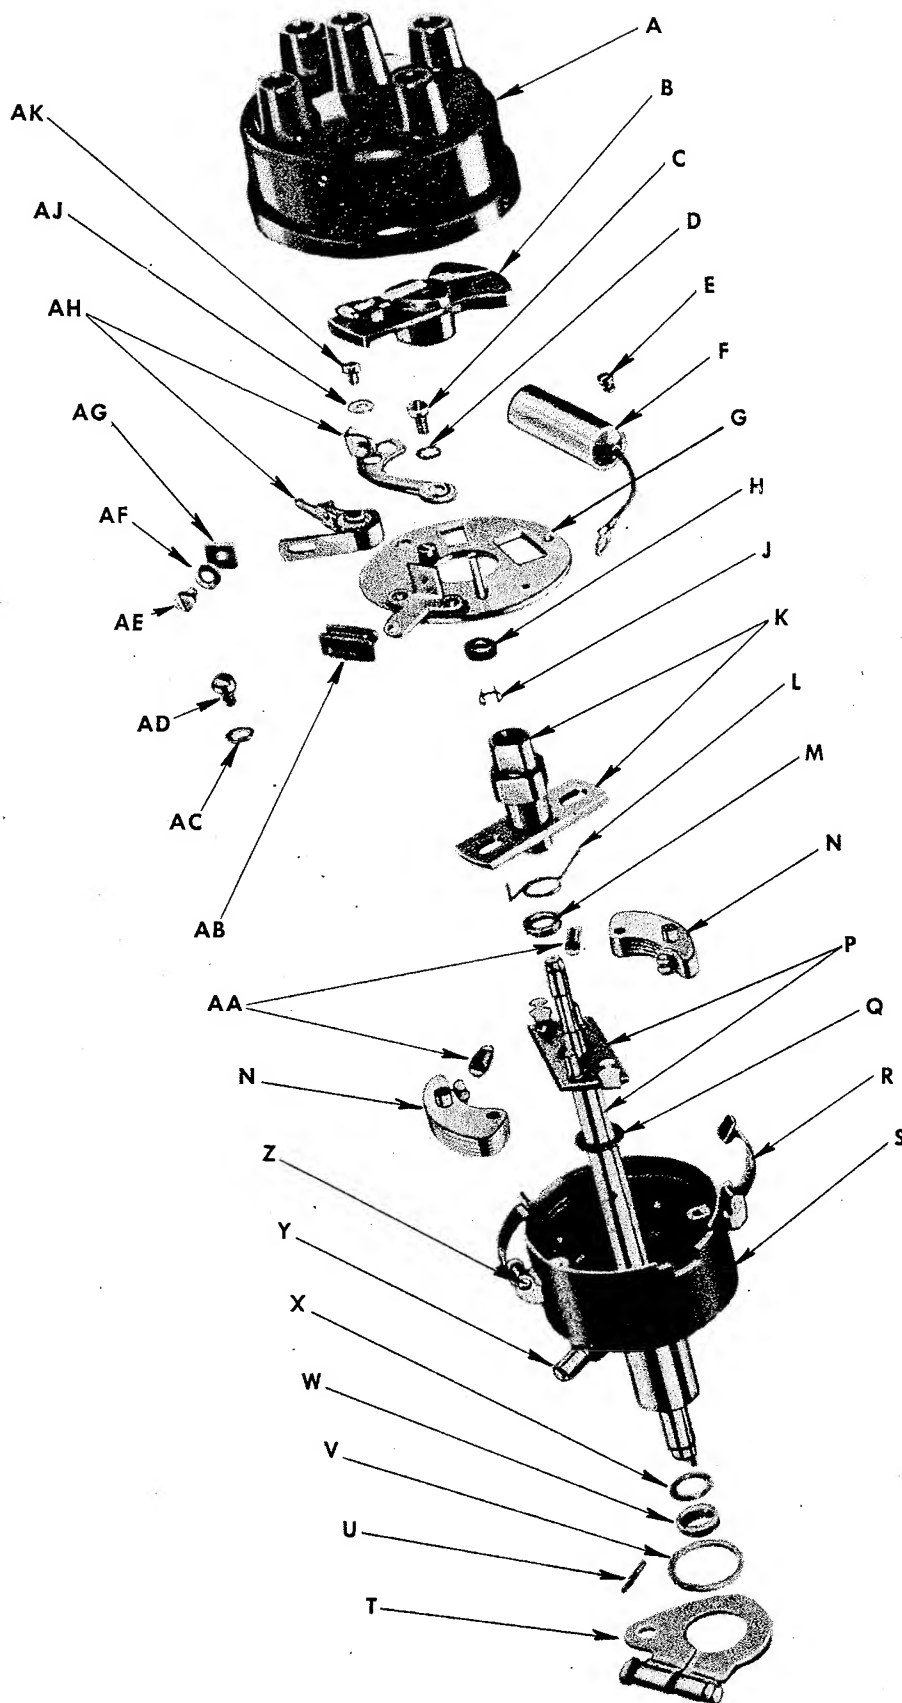

RA PD 342269

FIGURE 06-5—DISTRIBUTOR ASSEMBLY (OPEN TYPE)—EXPLODED VIEW

Key	Part Name	Ford Part No.	Willys Part No.	Group No.
A	CAP, assembly	FM-GPW-12106	WO-A-1655	0603
B	ROTOR	FM-GPW-12200	WO-A-1658	0603
C	SCREW	FM-31588-S7	WO-A-1636	0603
D	WASHER	FM-34803-S7	WO-52221	0603
E	SCREW	FM-31026-S7	WO-A-1670	0603
F	CONDENSER, assembly	FM-GPW-12300	WO-A-1631	0603
G	PLATE	FM-GPW-12010	WO-A-1664	0603
H	WICK	FM-GPW-12133	WO-A-1671	0603
J	RING	FM-GPW-12177	WO-A-1653	0603
K	PLATE, assembly	FM-GPW-12176	WO-A-1661	0603
L	SPRING	FM-GPW-12191	WO-A-1684	0603
M	WASHER	FM-GPW-12120	WO-A-1672	0603
N	WEIGHT	FM-GPW-12188	WO-A-1676	0603
P	SHAFT	FM-GPW-12178	WO-A-1678	0603
Q	WASHER	FM-GPW-12182	WO-A-1673	0603
R	SPRING	FM-GPW-12144	WO-A-1682	0603
S	BASE, assembly	FM-GPW-12139	WO-A-1679	0603
T	ARM	FM-GPW-12155	WO-A-1674	0603
U	RIVET	FM-72867-S	WO-A-1685	0603
V	WASHER	FM-GPW-12267	WO-A-1654	0603
W	COLLAR	FM-GPW-12195	WO-A-1659	0603
X	WASHER	FM-GPW-12193	WO-106740	0603
Y	OILER	FM-B-10141	WO-107128	0603
Z	PIN	FM-GPW-12145	WO-A-1683	0603
AA	SPRING SET	FM-GPW-12084	WO-A-1677	0603
AB	COVER	FM-GPW-12174	WO-A-1660	0603
AC	WASHER	FM-34803-S7	WO-5168	0603
AD	SCREW	FM-31583-S7	WO-A-1686	0603
AE	SCREW	FM-36787-S7	WO-A-1633	0603
AF	WASHER	FM-34701-S7	WO-A-1667	0603
AG	CLIP	FM-GPW-12217	WO-A-1663	0603
AH	POINT SET	FM-GPW-18354	WO-A-1687	0603
AJ	WASHER	FM-34902-S2	WO-52754	0603
AK	SCREW	FM-31027-S8	WO-A-1668	0603

RA PD 342269A


**FIGURE 06-5A—LEGEND FOR 06-5—DISTRIBUTOR  
ASSEMBLY (OPEN TYPE)—EXPLODED VIEW**



## GROUP 06—ELECTRICAL (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>0603—DISTRIBUTOR (REGULAR TYPE) (Cont'd)</b> (See also Group 0603-1)						
06-5, 6	G503-0373638	FM-GPW-12200	WO-A-1658	ROTOR, distributor (AL-IG-1657R)	1	.293
06-5, 6	H001-5123801	FM-31027-S8	WO-A-1668	SCREW, distributor breaker contact (oval-fil-hd., S., zn-pltd., No. 8 (0.164)-32NC x 3/16) (AL-8X-884) (Note 1)	1	
06-5, 6	G116-1782009	FM-36787-S7	WO-A-1633	SCREW, distributor breaker arm (hex-hd., S., cd-pltd., slotted, No. 6 (0.138)-32NC x 5/16) (AL-ICG-175) (Note 1)	1	
06-5	2980-IGS-1134L	FM-GPW-12178	WO-A-1678	SHAFT, drive, distributor, assembly (AL-IGS-1134L)	1	
	2980-IGS-2134L	FM-GPW-12175	WO-A-1675	SHAFT, drive, distributor, w/GOVERNOR, assembly (AL-IGS-2134L)	1	1.14
06-5	2980-IGT-69	FM-GPW-12191	WO-A-1684	SPRING, distributor, antirattle (AL-IGT-69)	1	.0652
	G121-0389891	FM-GPW-12169	WO-A-1587	SPRING, distributor breaker arm (AL-IGP-30)	1	
06-5	G121-0389890	FM-GPW-12144	WO-A-1682	SPRING, distributor cap (AL-IG-694) (Note 1)	2	
	G067-0903419	FM-GPW-12012	WO-A-1657	SPRING, distributor contact (AL-IG-515)	1	.0065
01-3		FM-GPW-12083	WO-637615	SPRING, friction, distributor shaft	1	.0029
06-5	2980-IGB-202S	FM-GPW-12084	WO-A-1677	SPRING SET, distributor governor weight (AL-IGB-202S) (consists of two springs)	1	.13
06-5, 6	H001-7043561	FM-34701-S7	WO-A-1667	WASHER, distributor breaker arm screw (plain, S., cd-pltd., USS., No. 6 (0.138)) (AL-8X-353) (Note 1)	1	
06-5	H001-1519006	FM-34902-S	WO-52754	WASHER, lock distributor breaker contact screw (S., internal tooth, flat type No. 8 (0.164))	1	
06-5, 6	G067-0906491	FM-GPW-12120	WO-A-1672	WASHER, spacer, distributor cam spring (AL-IGS-99) (Note 1)	1	.013
06-5, 6	G116-1843100	FM-GPW-12267	WO-A-1654	WASHER, thrust, distributor advance arm (AL-IG-816C)	1	.0065
06-5, 6	G067-3442601	FM-GPW-12193	WO-106740	WASHER, thrust, distributor drive shaft, lower (AL-IG-90) (Note 1)	1	
06-5, 6	G067-0906960	FM-GPW-12182	WO-A-1673	WASHER, thrust, distributor shaft, upper (AL-IGS-104) (Note 1)	1	
06-5	G116-1845184	FM-GPW-12188	WO-A-1676	WEIGHT, distributor governor, assembly (AL-IG-2456)	2	.163
06-5, 6	G121-0447500	FM-GPW-12133	WO-A-1671	WICK, oiling, distributor cam (felt) (AL-IGH-28) (Note 1)	1	
<b>0603-1—DISTRIBUTOR (DUSTPROOF TYPE)</b>						
NOTE: The following parts apply to FM-GPW-12100-B, WO-A-9075, AL-IAD-4008 DISTRIBUTOR. For the component parts of FM-GPW-12100, WO-A-1244, AL-IGC-4705 DISTRIBUTOR see GROUP 0603. All parts not listed below are the same on both distributors.						
06-6		FM-GPW-12139-B	WO-A-9313	BASE, dustproof distributor, assembly (AL-IAD-2001)	1	
06-6		FM-GPW-12167	WO-A-10278	BUSHING, dustproof distributor terminal post (AL-IAD-10)	1	
06-6	G503-0131548	FM-GPW-12106-B	WO-A-9307	CAP, dustproof distributor, assembly (AL-IG-1324-D)	1	
06-6		FM-GPW-12165	WO-A-10276	CONNECTOR, dustproof distributor terminal post assembly (AL-IAD-7)	1	

Note 1—Also in KIT, FM-GPW-18343, WO-A-7843.

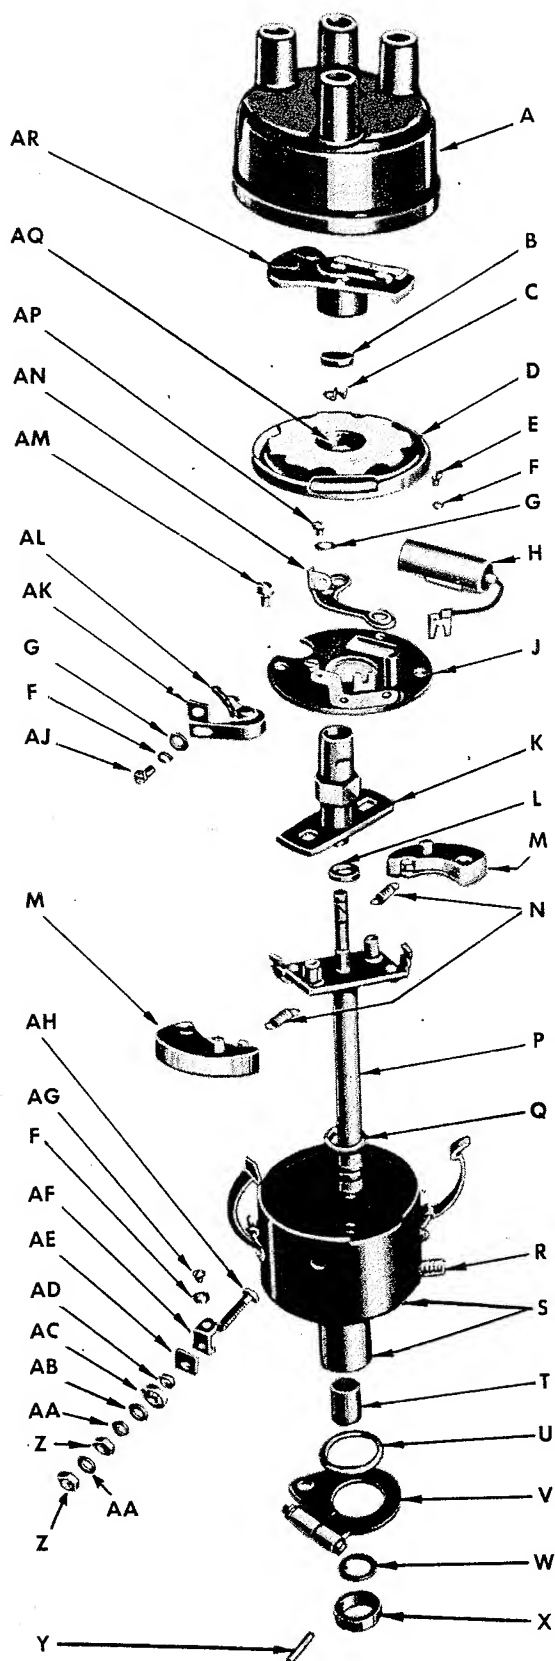

Key	Part Name	Ford Part No.	Willys Part No.	Group No.
A	CAP, assembly . . . .	FM-GPW-12106-B . .	WO-A-9307 . . . .	0603-1
B	WICK . . . . .	FM-GPW-12133 . . . .	WO-A-1671 . . . .	0603
C	RING . . . . .	FM-GPW-12177 . . . .	WO-A-1653 . . . .	0603
D	SEAL . . . . .	FM-GPW-12094 . . . .	WO-A-9316 . . . .	0603-1
E	SCREW . . . . .	FM-31026-S7 . . . . .	WO-A-1670 . . . .	0603
F	WASHER . . . . .	FM-34801-S7 . . . . .	WO-A-1669 . . . .	0603
G	WASHER . . . . .	FM-34701-S7 . . . . .	WO-A-1667 . . . .	0603
H	CONDENSER . . . . .	FM-GPW-12300 . . . .	WO-A-1631 . . . .	0603
J	PLATE, assembly . . . .	FM-GPW-12010-B . . .	WO-A-9309 . . . .	0603-1
K	PLATE . . . . .	FM-GPW-12176-B . . .	WO-A-9308 . . . .	0603-1
L	WASHER . . . . .	FM-GPW-12120 . . . .	WO-A-1672 . . . .	0603
M	WEIGHT . . . . .	FM-GPW-12188-B . . .	WO-A-9314 . . . .	0603-1
N	SPRING SET . . . . .	FM-GPW-12084-B . . .	WO-A-10047 . . . .	0603-1
P	SHAFT . . . . .	FM-GPW-12178-B . . .	WO-A-9312 . . . .	0603-1
Q	WASHER . . . . .	FM-GPW-12182 . . . .	WO-A-1673 . . . .	0603
R	OILER . . . . .	FM-B-10141 . . . . .	WO-107128 . . . .	0603
S	BASE, assembly . . . .	FM-GPW-12139-B . . .	WO-A-9313 . . . .	0603-1
T	BEARING . . . . .	FM-GPW-12082 . . . .	WO-A-1681 . . . .	0603
U	WASHER . . . . .	FM-GPW-12267 . . . .	WO-A-1654 . . . .	0603
V	ARM . . . . .	FM-GPW-12155 . . . .	WO-A-1674 . . . .	0603
W	WASHER . . . . .	FM-GPW-12193 . . . .	WO-106740 . . . .	0603
X	COLLAR . . . . .	FM-GPW-12195 . . . .	WO-A-1659 . . . .	0603
Y	RIVET . . . . .	FM-72867-S . . . . .	WO-A-1685 . . . .	0603
Z	NUT . . . . .	FM-34079-S7 . . . . .	WO-A-5260 . . . .	0603
AA	WASHER . . . . .	FM-34803-S7 . . . . .	WO-5168 . . . . .	0603-1
AB	WASHER . . . . .	FM-34703-S7 . . . . .	WO-A-5262 . . . .	0603-1
AC	WASHER . . . . .	FM-GPW-12157 . . . .	WO-A-10280 . . . .	0603-1
AD	BUSHING . . . . .	FM-GPW-12167 . . . .	WO-A-10278 . . . .	0603-1
AE	INSULATION . . . . .	FM-GPW-12166 . . . .	WO-A-10277 . . . .	0603-1
AF	CONNECTOR . . . . .	FM-GPW-12165 . . . .	WO-A-10276 . . . .	0603-1
AG	SCREW . . . . .	FM-26451-S7 . . . . .	WO-A-9315 . . . .	0603-1
AH	POST . . . . .	FM-GPW-12163 . . . .	WO-A-10279 . . . .	0603-1
AJ	SCREW . . . . .	FM-36787-S7 . . . . .	WO-A-1633 . . . .	0603
AK	CLIP . . . . .	FM-GPW-12217 . . . .	WO-A-1663 . . . .	0603
AL	ARM, assembly . . . .	FM-GPW-12162 . . . .	WO-A-1570 . . . .	0603
AM	SCREW . . . . .	FM-350110-S7 . . . .	WO-A-9318 . . . .	0603-1
AN	CONTACT . . . . .	FM-GPW-12218 . . . .	WO-A-1564 . . . .	0603
AP	SCREW . . . . .	FM-31027-S8 . . . . .	WO-A-1668 . . . .	0603
AQ	WASHER . . . . .	FM-GPW-12095 . . . .	WO-A-9317 . . . .	0603-1
AR	ROTOR . . . . .	FM-GPW-12200 . . . .	WO-A-1658 . . . .	0603

RA PD 342270

FIGURE 06-6—DISTRIBUTOR ASSEMBLY (DUSTPROOF TYPE)—EXPLODED VIEW




06-6	FM-26451-S7	WO-A-9315	SCREW, dustproof distributor terminal post connector.....	1	
06-6	FM-GPW-12094	WO-A-9316	SEAL, dustproof distributor breaker plate (AL-IAD-2015).....	1	
06-6	FM-GPW-12178-B	WO-A-9312	SHAFT, drive, dustproof distributor (AL-IGS-1134-LA).....	1	
	FM-GPW-12175-B	WO-A-9311	SHAFT, drive, dustproof distributor, w/GOVERNOR, assembly (AL-IGS-2134-LA).....	1	
06-6	FM-GPW-12084-B	WO-A-10047	SPRING SET, dustproof distributor governor weight (AL-IGB-350-S).....	1	
06-6	FM-GPW-12095	WO-A-9317	WASHER, dustproof distributor plate (AL-IAD-12).....	1	
06-6	FM-GPW-12157	WO-A-10280	WASHER, insulating, dustproof distributor terminal post (AL-IGL-9).....	1	
06-6	FM-GPW-12188-B	WO-A-9314	WEIGHT, governor, dustproof distributor, assembly (AL-IGC-2168-L).....	1	
			<b>0604—IGNITION COIL</b>		
	FM-GPW-12030	WO-A-1526	BRACKET, ignition coil (AL-IC-17980D).....	1	
	FM-33796-S2	WO-5914	NUT, reg., hex., S, 1/4-28NF-2.....	2	.0258
	FM-357689-S7	WO-635886	STUD, S, cd-pltd., 1/4-20NC x 1 x 1/4-28NF-2.....	2	.0451
	FM-GPW-12064	WO-631105	WASHER, plain, S, black enameled, 5/8 in.....	2	
	FM-351274-S7	WO-53024	WASHER, lock, S, cd-pltd., internal-external tooth, 1/4 in. (GM-174916).....	4	
	FM-34745-S2	WO-52702	WASHER, plain, S, SAE., 1/4 in.....	2	
	FM-GPA-12000		COIL, ignition, 12V. (Note 1).....	1	1.63
	FM-GPW-12000	WO-A-1424	COIL, ignition, w/BRACKET and WASHER, assembly.....	1	
	FM-GPW-12000-B	WO-A-7792	COIL, ignition, w/BRACKET and WASHER, assembly (coil does not have bottom ground connection) (AL-IG-4070L).....	1	
01-2, 3			<b>0604A—IGNITION WIRING</b>		
	FM-GPW-12091-A	WO-301435	BUSHING, spark plug cable support (rubber, 1/16 in. hole).....	1	
	FM-GPW-14321	WO-A-5083	CABLE, coil primary (low tension) (Note 2).....	1	
06-12	FM-GPW-12298-B	WO-A-1420	CABLE, coil secondary (high tension) (Note 2).....	1	
	FM-GPW-12287	WO-A-1412	CABLE, spark plug, No. 1 (Note 2).....	1	
06-12	FM-GPW-12284	WO-A-1414	CABLE, spark plug, No. 2 (Note 2).....	1	
06-12	FM-GPW-12283	WO-A-1416	CABLE, spark plug, No. 3 (Note 2).....	1	
	FM-GPW-12286	WO-A-1418	CABLE, spark plug, No. 4 (Note 2).....	1	
	FM-GPW-18364	WO-A-6757	KIT, repair, ignition wiring (superseded by KIT, FM-GPW-18364-B, WO-A-7844).....	1	
			(Consists of:		
		WO-A-1412	1 CABLE, spark plug No. 1		
		WO-A-1414	1 CABLE, spark plug No. 2		
		WO-A-1416	1 CABLE, spark plug No. 3		
		WO-A-1418	1 CABLE, spark plug No. 4		
		WO-A-1420	1 CABLE, coil, secondary		
	FM-GPW-12298-B	WO-A-7844	KIT, repair, ignition wiring (supersedes KIT, FM-GPW-18364, WO-A-6757).....	1	.88
	FM-GPW-18364-B		(Consists of:		
		WO-A-1412	1 CABLE, No. 1		
		WO-A-1414	1 CABLE, No. 2		
		WO-A-1416	1 CABLE, No. 3		
		WO-A-1418	1 CABLE, No. 4		
		WO-A-5083	1 CABLE, coil, primary		
	FM-GPW-12298-B	WO-A-1420	1 CABLE, coil, secondary		

Note 1—Only for vehicles modified by MWO ORD G503-W7 (see page 3). Note 2—Also in KIT, FM-GPW-18364-B, WO-A-7844.

## GROUP 06—ELECTRICAL (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
18-1	3320-9N-12113-A G067-0906045 G166-0398794  9150-2066C-C1 G503-0340680	FM-9N-12113-A FM-B-14463 FM-GPW-12006 FM-B-14466	WO-327257 WO-393594 WO-307556 WO-A-1652 WO-314369	<b>0604A—IGNITION WIRING (Cont'd)</b>		
				SEAL, weather, spark plug cables, distributor end (rubber) (superseded by SEAL, FM-9N-12113-A, WO-393594) . . . . .	5	.0217
				SEAL, weather, spark plug cables, distributor end (supersedes SEAL, WO-327257) . . . . .	5	.0042
				TERMINAL, coil primary cable . . . . .	2	.0065
				TERMINAL, spark plug cables, high tension (AL-IG-94) . . . . .	5	
				TERMINAL, spark plug cables and coil secondary cable . . . . .	5	
		FM-11A-12425 FM-01A-12410 FM-GPW-12405  FM-GPW-3685-B FM-GPW-3685 FM-26457-S7  FM-GPW-3686 FM-GPW-3686-B FM-356229-S7	WO-A-1096 WO-637863 WO-A-538  WO-A-6814 WO-A-2518 WO-A-6813 WO-52131  WO-A-2517 WO-A-6811 WO-A-1350	<b>0604B—SPARK PLUGS</b>		
				CAP, spark plug insulator . . . . .	4	
				GASKET, spark plug (VC-2066C-C1) (MDR-AM-504K) (also in GASKET SET, FM-GPW-18387, WO-A-1537) . . . . .	4	
				PLUG, spark, w/GASKET, assembly (14MM) (AL type-AN-7) <i>AL type-AN-7, 2 1/4" x 1 1/4"</i> . . . . .	4	.293
				<b>0604C—IGNITION LOCK</b>		
				HANDLE, ignition switch . . . . .	1	
				KEY, ignition switch . . . . .	1	
				NUT, mounting, ignition switch (DM-53170A) . . . . .	1	
				SCREW, ignition switch terminal (mach., rd-hd., S., cd-pltd, No. 8 (0.164)-32NC-2 x 1/4) . . . . .	2	
				SWITCH, ignition, key type, assembly . . . . .	1	
18-1	2760-5941 G671-5636599 G518-7000186  G116-0400021 2980-10-311A	FM-GPW-3686 FM-GPW-3686-B FM-356229-S7  FM-GPW-10850 FM-GPW-10850-B	WO-A-2517 WO-A-6811 WO-A-1350  WO-A-5231 WO-A-8186	SWITCH, ignition, keyless type, assembly (DM-6282) . . . . .	1	.538
				WASHER, lock, internal tooth, S., cd-pltd., No. 8 (0.164) (ignition switch terminal) (DM-51104) . . . . .	2	.0026
				<b>0605—INSTRUMENTS</b>		
				AMMETER, 50 amp., assembly (AL-10075-A) (superseded by AMMETER, FM-GPW-10850-B, WO-A-8186) . . . . .	1	2.04
				AMMETER, 50 amp. (AL-10311A) (supersedes AMMETER, FM-GPW-10850, WO-A-5236) . . . . .	1	
				NUT, mach. screw, hex., S., No. 10 (0.190)-32NF (AL-8170) (Willlys only) . . . . .	4	
				WASHER, lock, S., No. 10 (0.190) (AL-2229) (Willlys only) . . . . .	2	
				BRACKET, mounting, ammeter (AL-9288-A) (Willlys only) . . . . .	1	
				BRACKET, mounting, fuel gage (AL-10063) (Willlys only) . . . . .	1	

18-1	G116-0400771	WO-A-8131	BRACKET, mounting, oil pressure gage and heat indicator (AL-21508) (Willys only)	2	
	G503-0194062	WO-A-1268	GAGE, fuel, assembly (AL-9799-A) (superseded by GAGE, FM-GPW-9280, WO-A-8184)	1	1.043
	G121-0194050	WO-A-8184	GAGE, fuel (AL-10313-A) (supersedes GAGE, WO-A-1268)	1	
		WO-A-1269	GAGE, fuel, assembly (Note 1)	1	
			GAGE, oil pressure, assembly (AL-1017-1) (superseded by GAGE, FM-GPW-9273, WO-A-8190)	1	
18-1	G121-0194050	WO-A-8190	GAGE, oil pressure, assembly (AL-10310-A) (supersedes GAGE, WO-A-1269)	1	1.29
		WO-6536	NUT, mach., screw, hex., S, No. 10 (0.190)-32NF (AL-2235) (Willys only)	4	
		WO-A-8129	WASHER, lock, S, No. 10 (0.190) (AL-2229) (Willys only)	2	
		WO-662420	GROMMET, heat indicator tube through dash (rubber, $\frac{3}{8}$ in.)	1	.0212
	G503-0232469	WO-A-1270	INDICATOR, heat, assembly (AL-10014-A) (superseded by INDICATOR, FM-GPW-10883, WO-A-8188)	1	
18-1	G503-0232469	WO-A-8188	INDICATOR, heat, assembly (Motor Meter) (AL-10312) (supersedes INDICATOR, WO-A-1270)	1	2.12
<b>0605C—PANEL LIGHT</b>					
	H004-0501303	WO-A-1748	ADAPTER, instrument panel light (DM-29392)	2	.0982
	H004-0504780	WO-A-1334	SHIELD, instrument panel light, assembly	2	.0614
06-12	3320-GPW-13710	WO-A-1411	SOCKET, instrument panel light, w/CABLE, assembly (includes two SOCKETS)	1	.136
<b>0606—SWITCHES</b>					
	3320-GPWS-18935	FM-GPWS-18935	CONDENSER, cranking motor switch and regulator terminal (Note 1)	2	
06-7	G503-7036865	FM-G8T-11661	CONTROL, lockout, lighting switch, assembly (DM-5943)	1	
06-7		FM-31045-S7	HANDLE, lighting and blackout driving rotary switch (DM-53875-A)	1	
			SCREW, mach. (S, cd-pltd., special, fil-hd., No. 8 (0.164)-32NC-2 x $\frac{3}{8}$ (DM-53895))	1	
	G503-7036866	WO-A-6152	KNOB, blackout driving lamp switch, w/set SCREW, assembly	1	
	G503-7088755	WO-A-1348	KNOB, lighting switch, w/set SCREW, assembly (DM-5944)	1	
		WO-A-1352	KNOT, instrument panel light switch, w/set SCREW, assembly (DM-5999)	1	
		WO-A-1565	NUT, starting switch terminal (hex., S, cop-pltd., thin, $\frac{3}{16}$ -24NF-2)	2	
		WO-A-11869	PLATE, escutcheon, rotary lighting switch	1	
		WO-A-5197	SCREW, lighting switch terminal (mach., fil-hd., S, cd-pltd., No. 8 (0.164)-32NC x $\frac{5}{16}$ )	7	.0026
	G518-7000186	WO-A-1350	WASHER, lock, keyed, internal tooth, S, cd-pltd., No. 8 (0.164) (DM-51104)	7	
	G503-0393790	WO-A-6149	SWITCH, blackout driving light, assembly (DM-398) (includes: KNOB, w/set SCREW and attaching parts)	1	
		WO-A-1351	SWITCH, blackout driving light, assembly (Willys only, after serial 163750)	1	
		WO-A-1353	NUT, hex., S, $\frac{3}{8}$ -24NF-2 (DM-53414)	1	
		WO-52332	WASHER, lock, shakeproof, $\frac{3}{8}$ in. (DM-52947)	1	
		WO-A-12056	SWITCH, dimmer, headlight, foot, assembly (has closed type terminals)	1	
18-1	G503-0303785	WO-638979	SWITCH, dimmer, headlight, foot, assembly (CL-9654) (has push-in type terminals)	1	.228
		WO-51492	SCREW, mach., rd-hd., S, cd-pltd., $\frac{1}{4}$ -20NC-2 x $\frac{1}{2}$	3	
	H001-1518007	WO-52706	WASHER, lock, reg., S, $\frac{1}{4}$ in. (GM-103319)	3	

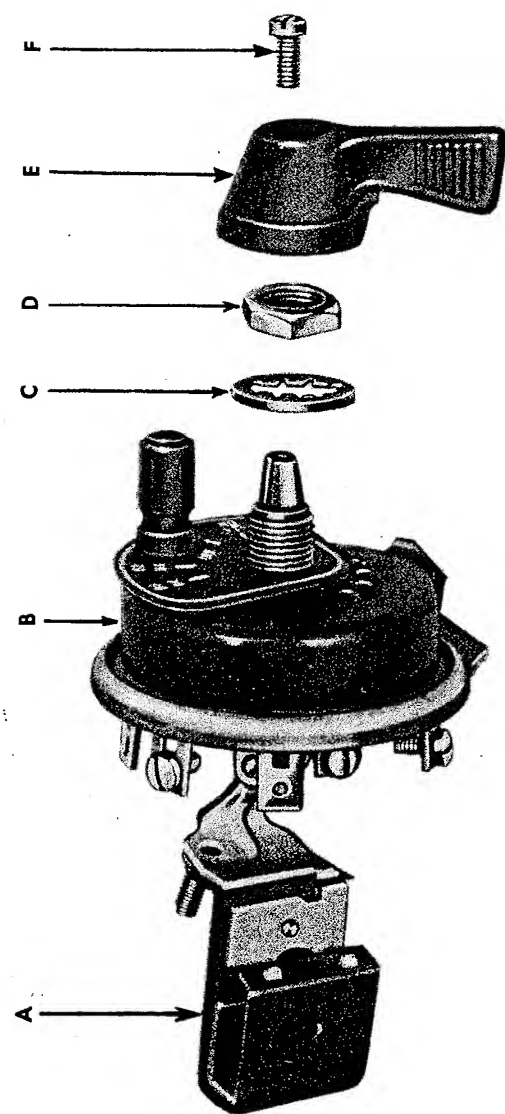

Key	Part Name	Ford Part No.	Willlys Part No.	Group No.
A	BREAKER	FM-GPW-12250-C	WO-A-1349	0606D
B	SWITCH, assembly	FM-G8T-11649	WO-A-11866	0606
C	WASHER	FM-34922-S	WO-636528	0606
D	NUT	FM-356036-S8	WO-A-11871	0606
E	HANDLE	FM-G8T-11661	WO-A-11868	0606
F	SCREW	FM-31045-S7	WO-A-11870	0606

RA PD 342276

FIGURE 06-7—LIGHTING SWITCH (ROTARY TYPE)

## GROUP 06—ELECTRICAL (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
18-1	G116-1793792 H001-5147511	FM-GPW-13740 FM-26456-S7 FM-356229-S7	WO-A-1333 WO-A-1353 WO-52131 WO-A-1350	0606—SWITCHES (Cont'd)  SWITCH, instrument panel light (DM-5995) NUT, mounting, hex., S., $\frac{3}{8}$ -24NF-2 (DM-53414) (Willys only) SCREW, mach., rd-hd., S., cd-pltd., No. 8 (0.164)-32NC-2 x $\frac{1}{4}$ WASHER, lock, keyed, internal tooth, S., cd-pltd., No. 8 (0.164)	1 1 2 2	.293   .0026

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--




## GROUP 06—ELECTRICAL (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>0606B—CHASSIS WIRING (Cont'd)</b>		
		FM-GPW-14589	WO-A-1289	CLIP, S., closed, $\frac{7}{16}$ in., $\frac{13}{32}$ bolt hole (under foot rest to floor pan bolt).....	1	.0083
		FM-356305-S	WO-52768	WASHER, plain, S., $\frac{21}{64}$ in. ....	1	.0137
		FM-GPW-14566	WO-78932	CLIP, S., zn-pltd., $\frac{5}{8}$ in., $\frac{1}{4}$ in. bolt hole.....	2	
	H001-0716540	FM-355836-S7	WO-6352	NUT, mach. screw, hex., S., cd-pltd., No. 10 (0.190)-24NC-2 (GM-110633).....	2	
		FM-355131-S	WO-5064	SCREW, machine, rd-hd., S., No. 10 (0.190)-24NC-2 x $\frac{5}{8}$ .....	2	
	H001-7025621	FM-34803-S7	WO-52221	WASHER, lock, reg., S., cd-pltd., No. 10 (0.190) (GM-120217).....	2	
06-12	3320-GPW-14487-A	FM-GPW-14487-A	WO-635895	CONNECTOR (3 wire).....	3	.0248
06-12	3320-GPW-14487-B	FM-GPW-14487-B	WO-635981	CONNECTOR (2 wire).....	1	.0121
		FM-GPW-13437-A	WO-662276	GROMMET, wiring harness through dash, $\frac{5}{8}$ in. ....	1	.0212
		FM-GPW-13434-A	WO-345961	GROMMET, wiring harness through dash, trailer coupling socket cable through floor pan, $\frac{13}{32}$ in. (Note 1).....	4	.0212
		FM-GPWS-14407	WO-A-6355	HARNES, wiring, body (Note 1).....	1	
	3320-GPW-14401-A	FM-GPW-14401-A		HARNES, wiring, body, long (superseded by HARNES, FM-GPW-14401-D).....	1	
	3320-GPW-14401-B	FM-GPW-14401-B		HARNES, wiring, body, long (superseded by HARNES, FM-GPW-14401-D).....	1	
	3320-GPW-14401-C	FM-GPW-14401-C		HARNES, wiring, body, long (superseded by HARNES, FM-GPW-14401-D) (also in KIT, FM-GPW-18361-B, WO-A-7845).....	1	
06-12	3320-GPW-14401-D	FM-GPW-14401-D	WO-A-5048	HARNES, wiring, body, long (supersedes HARNES, FM-GPW-14401-A-B-C) (used with dimmer SWITCH, FM-GPW-13532, WO-638979).....	1	
	3320-GPW-14401-F	FM-GPW-14401-F	WO-A-9220	HARNES, wiring, body, long (used with dimmer SWITCH, WO-A-12056).....	1	
			WO-A-1551	HARNES, wiring, body, left side, short (superseded by HARNES, FM-GPW-14402-B, WO-A-6154).....	1	
06-12	3320-GPW-14402	FM-GPW-14402	WO-A-6154	HARNES, wiring, body, left side, short (superseded by HARNES, FM-GPW-14402-B)	1	
	3320-GPW-14402-B	FM-GPW-14402-B		HARNES, wiring, body, left side, short (supersedes HARNES, FM-GPW-14402, WO-A-1551) (used with separate blackout and lighting switches).....	1	
				HARNES, wiring, body, left side, short.....	1	
06-12	3320-GPW-14446	FM-GPW-14402-A	WO-A-9144	HARNES, wiring, chassis, left side (also in KIT, FM-GPW-18361-B, WO-A-7845).....	1	
06-12	3320-GPW-14305	FM-GPW-14446	WO-A-5061	HARNES, wiring, generator to generator regulator and filter (Ford only) (also in KIT, FM-GPW-18361-B, WO-A-7845).....	1	
		FM-GPW-14305	WO-A-5074	HARNES, wiring, generator to voltage regulator (Willys only).....	1	
	3320-GPW-14305-D	FM-GPW-14305-D	WO-A-7824	HARNES, wiring, generator to voltage regulator (Note 2).....	1	
06-12	3320-GPW-14305-C	FM-GPW-14305-C	WO-A-5981	HARNES, wiring (includes the following 4 cables: ammeter to horn circuit breaker, filter (battery ammeter) to ammeter, filter (coil ignition switch) to ignition switch to gasoline gage circuit breaker, filter (regulator battery ammeter) to ammeter.....	1	
	3320-GPW-14425	FM-GPW-14425	WO-A-1665	HARNES, wiring, headlight (also in KIT, FM-GPW-18361-B, WO-A-7845) (has metal conduit).....	1	
06-12	3320-GPW-14425-B	FM-GPW-14425-B	WO-A-7825	HARNES, wiring, headlight (has fabric conduit).....	1	

3320-GPW-18361	FM-GPW-18361	WO-A-6758	KIT, repair, wiring harness.	1	3.682
3320-GPW-18361-D	FM-GPW-18361-D		KIT, repair, wiring harness.	1	
3320-GPW-18361-B	FM-GPW-18361-B	WO-A-7845	KIT, repair, wiring harness.	1	
			(Consists of:		
	FM-GPW-14457	WO-A-5078	2 CABLE, filter to starter switch		
	FM-GPW-14456	WO-A-5079	1 CABLE, filter to junction block		
	FM-GPW-14459	WO-A-5073	1 CABLE, filter to junction block		
	FM-GPW-14406	WO-A-5070	1 CABLE, gas gage to tank		
	FM-GPW-14416	WO-A-5080	1 CABLE, gas gage to circuit breaker		
	FM-GPW-14409	WO-A-5081	1 CABLE, horn to junction block		
	FM-GPW-14458	WO-A-5072	1 CABLE, ignition switch to ammeter		
	FM-GPW-14465	WO-A-5082	1 CABLE, generator regulator to junction block		
	FM-GPW-14305	WO-A-5074	1 HARNESS, wiring, generator		
	FM-GPW-14401-C	WO-A-5048	1 HARNESS, wiring, body, long		
	FM-GPW-14446	WO-A-5061	1 HARNESS, wiring, chassis		
	FM-GPW-14425	WO-A-1665	1 HARNESS, wiring, headlight		
<b>0606D—CIRCUIT BREAKERS</b>					
G503-0125900	FM-GPW-12250-A	WO-A-1733	BREAKER, circuit, 5 amp. (between ignition switch and gas gage on instrument board) (superseded by BREAKER, FM-GPW-12250E, WO-A-15804).	1	.424
G503-0125901	FM-GPW-12250-B	WO-A-1734	BREAKER, circuit, 15 amp. (between ammeter and horn) (superseded by BREAKER, FM-GPW-12250-E, WO-A-15804).	1	.424
G104-1526008	FM-GPW-12250-E	WO-A-15804	BREAKER, circuit, 15 amp. (supersedes BREAKER, FM-GPW-12250-A, WO-A-1733; BREAKER, FM-GPW-12250-B, WO-A-1734)	2	
H001-4135621	FM-34052-S2	WO-6214	NUT, mach-screw, hex, S, No. 8 (0.164)-32NC-2.	4	
H001-1518004	FM-26496-S	WO-5780	SCREW, mach., rd-hd., S, No. 8 (0.164)-32NC-2 x 5/8.	4	
G503-0325902	FM-34802-S2	WO-52705	WASHER, lock, reg., S, No. 8 (0.164) (GM-106496).	4	
	FM-GPW-12250-C	WO-A-1349	BREAKER, circuit, 30 amp. (also included w/lighting SWITCH, assembly (DM-53097-A).	1	.244
<b>0606E—JUNCTION BLOCKS</b>					
3320-GPW-14448-C	FM-GPW-14448		BLOCK, junction (superseded by BLOCK, FM-GPW-14448-C).	1	
	FM-GPW-14448-C	WO-639599	BLOCK, junction, 2 post (headlight wires) (supersedes BLOCK, FM-GPW-14448).	2	.179
	FM-355131-S	WO-5064	SCREW, mach., rd-hd., S, No. 10 (0.190)-24NC-2 x 5/8.	4	
H001-7025621	FM-34803-S7	WO-52221	WASHER, lock, reg., S, cd-pltd., No. 10 (0.190).	4	
3320-GPW-14448-B	FM-GPW-14448-B		BLOCK, junction (superseded by BLOCK, FM-GPW-14448-D).	1	
3320-GPW-14448-D	FM-GPW-14448-D	WO-A-1490	BLOCK, junction, 6 post (body wiring harness) (supersedes BLOCK, FM-GPW-14448-B).	1	.358
	FM-355160-S	WO-5272	SCREW, mach., rd-hd., S, No. 10 (0.190)-24NC-2 x 3/4.	2	
H001-7025621	FM-34803-S7	WO-52221	WASHER, lock, reg., S, cd-pltd., No. 10 (0.190).	2	
3320-GPA-13189	FM-GPA-13189		RESISTOR, blackout driving light (Note 2).	1	
3320-356299-S	FM-356299-S	WO-A-1089	WASHER, terminal to block screw, special, S, 1/4 in.	10	

06-7

Note 1—Only for vehicles modified by MWO ORD G503-W2 (see page 3). Note 2—Only for vehicles modified by MWO ORD G503-W7 (see page 3).

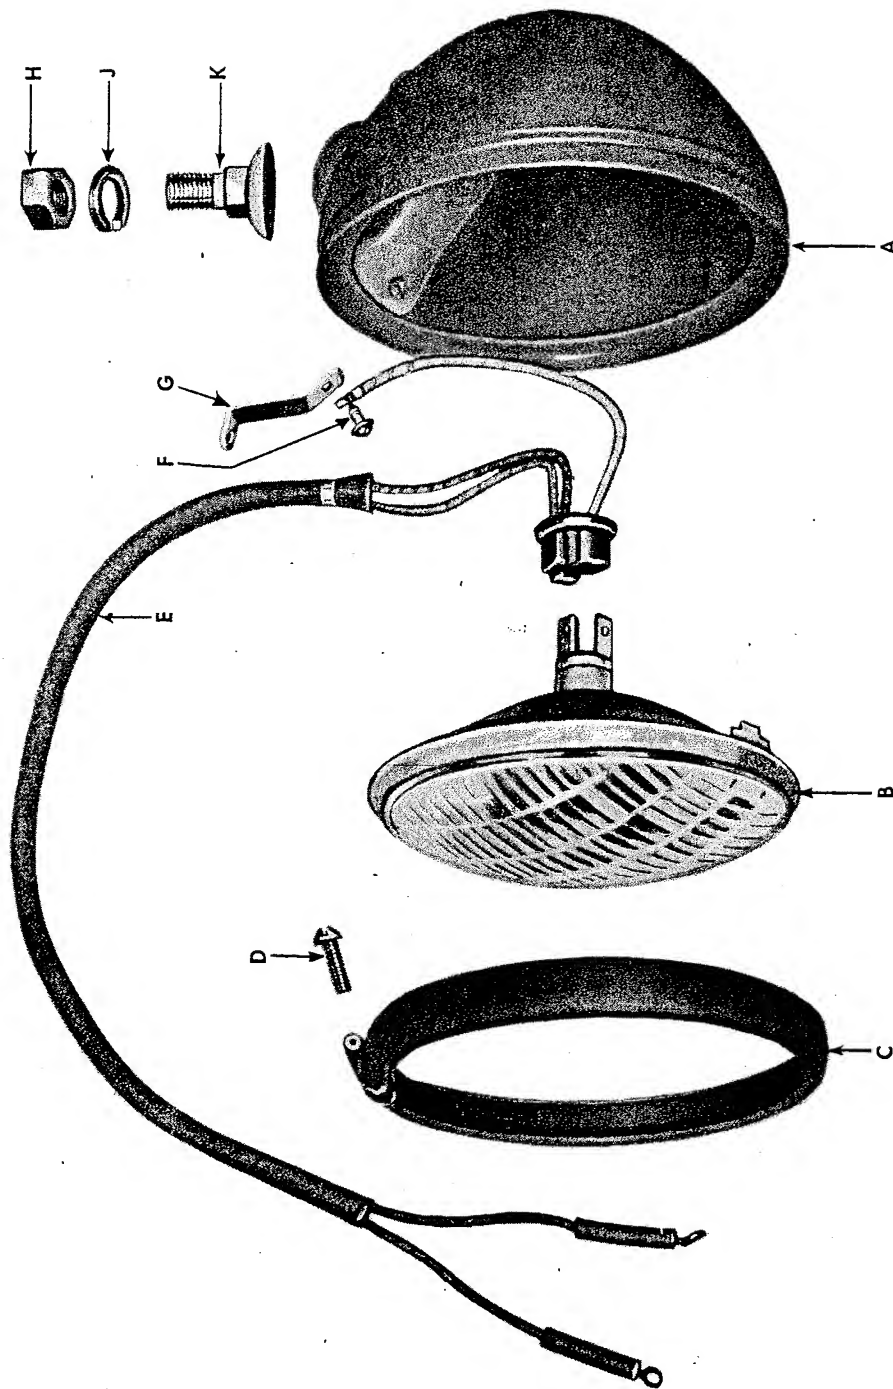

Key	Part Name	Ford Part No.	Willys Part No.	Group No.
A	HOUSING, assembly	FM-GPW-13012	WO-A-15586	0607
B	LAMP UNIT, assembly	FM-GPW-13007	WO-A-1033	0607A
C	DOOR, assembly	FM-GPW-13043	WO-A-1036	0607
D	SCREW	FM-38095-S	WO-A-1037	0607
E	WIRE, assembly (left-hand)	FM-GPW-13076	WO-A-1362	0607
	WIRE, assembly (right-hand)	FM-GPW-13075	WO-A-1363	0607
F	SCREW	FM-32706-S	WO-A-1032	0607
G	RETAINER	FM-GPW-13015	WO-A-1031	0607
H	NUT	FM-33846-S2	WO-5916	0607
J	WASHER	FM-34809-S	WO-5009	0607
K	BOLT	FM-GPW-13022	WO-A-1361	0607

RA PD 342256

FIGURE 06-8—HEADLIGHT ASSEMBLY

## GROUP 06—ELECTRICAL (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>0606F—TRAILER ELECTRIC COUPLING</b> (Only for vehicles modified by MWO ORD G503-WS)		
		FM-GPW-5186	WO-A-6393	BOLT, eye, safety chain.....	2	.0425
		FM-09B-14362	WO-A-6356	CABLE, trailer, coupling socket to body ground.....	1	.258
	G102-0400526	FM-11YS-18149-B	WO-A-6587	COVER, assembly (WEB-11935-B).....	1	
			WO-A-8088	COVER, terminal (WEB-110242) (Willlys only).....	3	
	H001-4135681	FM-34079-S7	WO-53061	NUT, hex., S., cd-pltd., No. 10 (0.190)-32NF-2 (socket terminal) (WEB-110477) (GM-120614).....	8	
		FM-11YS-18198-B	WO-A-6588	RETAINER, dust shield (WEB-20099).....	1	
	D017-0309544	FM-11YS-18193-B	WO-A-6589	SHIELD, dust (WEB-20098).....	1	
	F226-0242470	FM-11YS-18151-B	WO-A-6586	SOCKET, trailer electric coupling, assembly (WEB-3529) (less COVER).....	1	4.40
	H004-0355720	FM-11YS-18151-B	WO-A-6019	SOCKET, trailer electric coupling, w/COVER, assembly (to accommodate trailer) (WEB-3604) (includes COVER, INTERNAL PARTS, ATTACHING PARTS).....	1	
	D028-0204281	FM-11YS-18142-B	WO-53069	BOLT, hex-hd., S., cd-pltd., 1/4-28NF-2 x 1 (socket to body) (GM-120364) (Willlys only).....	2	
			WO-52921	BOLT, hex-hd., S., cd-pltd., 1/4-28NF-2 x 3/4 (socket to body) (GM-123450) (Willlys only).....	2	
	H001-5418341			BOLT, hex-hd., S., cd-pltd., 1/4-28NF-2 x 1/2 (Ford only).....	4	
		FM-20364-S7	WO-52847	NUT, hex., S., cd-pltd., 1/4-28NF-2 (GM-120367).....	4	
	H001-4167521	FM-33795-S7	WO-53313	WASHER, lock, reg, S., z-pltd., 1/4 in. (1 1/2 O.D. x 0.254 I.D. x 1/8 thk.).....	4	
	H001-7025681	FM-34805-S8	WO-53024	WASHER, lock, S., cd-pltd., 1/4 in. (internal, external tooth) (GM-174916).....	4	
	H001-7124701	FM-351274-S7	WO-A-8087	WASHER, terminal screw (br., No. 10 (0.190)) (WEB-110110).....	4	
	G074-1443015	FM-34753-S	WO-53194	WASHER, lock, S., parkerized, shakeproof, No. 10 (0.190) (GM-138534).....	4	
	H001-7021685	FM-34903-S2				
				<b>0607—HEADLIGHT</b>		
		FM-GPW-13020	WO-A-2873	BOLT, hold-down, headlight support, w/NUT and WASHER, assembly (S., 5/16-18NC-2).....	2	.023
06-8		FM-GPW-13022	WO-A-1361	BOLT, mounting, headlight (CB-CB-6012).....	2	
		FM-GPW-14436	WO-A-1731	CABLE, ground headlight.....	2	
		FM-32852-S7	WO-52993	SCREW, sheet metal, rd-hd., No. 10 (0.190) x 3/8 (cable to bracket).....	2	
		FM-GPW-13043	WO-A-1036	DOOR, headlight, assembly (CB-CB-8523).....	2	.326
06-8	G121-0155535	FM-38095-S	WO-A-1037	SCREW, mach., oval-fil-hd., S., No. 8 (0.164)-32NC-2 x 3/4 (CB-CB-5099).....	2	
		FM-GPW-13032	WO-A-2878	HINGE, headlight support.....	2	.105
		FM-20326-S2	WO-51485	BOLT, hex-hd., s-fin., 5/16-18NC-2 x 5/8 (GM-106324).....	4	
	H001-5419100	FM-33797-S2	WO-52350	NUT, reg., hex., s-fin., S., 5/16-18NC-2.....	4	
		FM-34806-S2	WO-51840	WASHER, lock, reg, S., 5/8 in.....	4	
	H001-1518008					


## GROUP 06—ELECTRICAL (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willis No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>0607—HEADLIGHT (Cont'd)</b>						
06-8	G503-0211411	FM-GPW-13012 FM-GPW-13006	WO-A-5586	HOUSING, headlight, assembly (CB-CB-10436) LIGHT, head, service, left, assembly (CB-215142) (superseded by LIGHT, assembly, FM-GPW-13006-A, WO-A-1304)	2	
	G503-0211411	FM-GPW-13006-A	WO-A-1304	LIGHT, head, service, left, assembly (supersedes LIGHT, assembly, FM-GPW-13006)	1	2.33
	G503-0211410	FM-GPW-13005		LIGHT, head, service, right, assembly (CB-215242) (superseded by LIGHT, assembly, FM-GPW-13005-A, WO-A-1305)	1	
06-8	G503-0211410	FM-GPW-13005-A	WO-A-1305	LIGHT, head, service, right, assembly (supersedes LIGHT, assembly, FM-GPW-13005)	1	2.46
06-8	G085-2307356	FM-33846-S2	WO-5916	NUT, reg., hex, S, 1/2-20NF-2	1	
	H001-1518011	FM-34809-S	WO-5009	WASHER, lock, reg., S, 1/2 in.	2	
		FM-33896-S2	WO-A-2466	NUT, wing, S, 3/8-18NC-2 (headlight mounting bracket bolt)	2	
		FM-357419-S2	WO-A-2875	PIN, clevis, headlight support bolt (S, 0.248 diam. x 25/64 lgh.)	2	.022
06-8	H001-0811025	FM-72003-S7	WO-5067	PIN, cotter, split, S, 1/8 x 1/2	2	
06-8		FM-GPW-13015	WO-A-1031	RETAINER, headlight mounting bolt (CB-CB-8010)	2	
	H001-7025621	FM-37206-S	WO-A-1032	SCREW, mach., rd-hd., S, No. 10 (0.190)-32NF-2 x 1/4 (CB-CB-4057)	2	
		FM-34803-S7	WO-52221	WASHER, lock, S, cd-pltd., No. 10 (0.190) (CB-CB-300)	2	
06-8	3320-GPW-13076	FM-GPW-13071	WO-A-2870	SUPPORT, headlight, left, assembly	1	.717
06-8	3320-GPW-13075	FM-GPW-13070	WO-A-2871	SUPPORT, headlight, right, assembly	1	.717
		FM-GPW-13076	WO-A-1362	WIRE, left headlight, assembly	1	.195
		FM-GPW-13075	WO-A-1363	WIRE, right headlight, assembly	1	.326
<b>0607A—LAMP-UNITS (Sealed Beam)</b>						
06-9	M001-0107347	FM-GPW-13152	WO-A-6145	LAMP-UNIT, blackout driving headlight, sealed, 6-8V., assembly (CB-CB-11267)	1	1.173
06-8	G503-0127853	FM-GPW-13007	WO-A-1033	LAMP-UNIT, headlight, sealed, 6V., assembly (CB-CB-8494)	2	.961
	3320-GPA-13007	FM-GPA-13007		LAMP-UNIT, headlight, sealed, 12V., assembly (Note 1)	2	
06-11	H004-0504417	FM-GP-13494-A	WO-A-1074	LAMP-UNIT, service tail and stop, sealed, 21-3 cp., assembly (CB-CB-9218) (ORD-504417)	1	.391
	3320-GPA-13494	FM-GPA-13494		LAMP-UNIT, service tail and stop, sealed, 21-3 cp., 12V., assembly (Note 1)	1	
	H004-0504423	FM-GP-13485-A	WO-A-1078	LAMP-UNIT, blackout stop, sealed, 3 cp., 6V., assembly (CB-CB-9234) (ORD-504423)	1	.424
	3320-GPA-13485	FM-GPA-13485		LAMP-UNIT, blackout stop, sealed, 3 cp., 12V., assembly (Note 1)	1	
06-11	H004-0504420	FM-GP-13491-A	WO-A-1075	LAMP-UNIT, blackout tail, sealed, 4 opening, 6V., assembly (CB-CB-9225) (ORD-504420)	2	.456
	3320-GPA-13491	FM-GPA-13491		LAMP-UNIT, blackout tail, sealed, 4 opening, 12V., assembly (Note 1)	2	

## 0607B—LAMPS

06-10	M001-0213230	FM-GPA-13466	WO-51804	LAMP, elec., incand., 12-16V., 3 cp., single tung. fl. (Commercial No. 67) (GM-142450) (Note 1).	2
	H104-0193059	FM-B-13466	WO-53474	LAMP, elec., incand., 6-8V., 3 cp., single tung. fl. (Commercial No. 63) (GM-142303) (superseded by LAMP, WO-53474).	2
		FM-48-15021	WO-52837	LAMP, elec., incand., 6-8V., 3 cp., single tung. fl. (Commercial No. 1265) (supersedes LAMP, FM-B-13466, WO-51804).	2
		FM-GPA-13462		LAMP, elec., incand., 6-8V., 1 cp., single tung. fl. (Commercial No. 51) (GM-115273)	2
				LAMP, elec., incand., 12-16V., 1 cp., single tung. fl. (Commercial No. 53) (GM-131282) (Note 1).	2
<b>0607D—BLACKOUT LIGHTS</b>					
NOTE: For blackout TAILLIGHT see group 0608					
06-9, 12	2300-11503	FM-GPW-13175	WO-A-6146	CABLE, blackout driving light, assembly (CB-CB-11503) (superseded by CABLE, FM-GPW-13175-C, WO-A-11770).	1
06-10	3320-GPW-13175-C	FM-GPW-13175-C	WO-A-11770	CABLE, blackout driving light, assembly (supersedes CABLE, WO-A-6146).	1
06-10	3320-GP-13210-B	FM-GPW-13210-B	WO-A-1070	DOOR, marker light, assembly (CB-CB-9204).	2
06-10		FM-28378-S2	WO-A-1072	SCREW, mach., oval-fil-hd., S, No. 8 (0.164)-32NC-2 x 7/8.	2
06-9		FM-GPW-13162	WO-A-6144	DOOR, blackout driving light, assembly (CB-CB-11193).	1
06-9		FM-31045-S2	WO-A-6148	SCREW, mach., oval-fil-hd., S, No. 8 (0.164)-32NC-2 x 3/8 (CB-CB-11263).	1
06-9	H001-1519006	FM-34902-S	WO-52754	WASHER, lock, S, internal tooth, flat type, No. 8 (0.164).	1
06-10	G179-7010624	FM-GPW-13209	WO-A-15304	GASKET, blackout light door.	1
06-9	3320-GP-13209-B	FM-GPW-13209-B	WO-A-1071	GASKET, marker light door (CB-CB-9281).	2
06-10		FM-GPW-13170	WO-A-6143	HOUSING, blackout driving light, assembly (CB-CB-11500).	1
06-10		FM-GPW-13217	WO-A-1439	HOUSING, marker light, w/WIRE, left, assembly (CB-CB-10461).	1
		FM-GPW-13216	WO-A-1440	HOUSING, marker light, w/WIRE, right, assembly (CB-CB-10462).	1
	2300-415342	FM-GPW-13201	WO-A-1436	LIGHT, marker, left, assembly (CB-415342).	1
06-10		FM-33798-S7	WO-A-1532	NUT, reg., hex., S, cd-pltd., 5/16-24NPF-2.	2
06-10		FM-34941-S7	WO-53029	WASHER, lock, S, cd-pltd., external tooth, flat type, 5/16 in.	2
	2300-415442	FM-GPW-13200	WO-A-1437	LIGHT, marker, right, assembly (CB-415442).	2
	3320-GPW-13150	FM-GPW-13150	WO-A-6142	LIGHT, driving, blackout, assembly (CB-11495) (superseded by LIGHT, assembly, FM-GPW-13150-C, WO-A-11768).	1
06-9	3320-GPW-13150-C	FM-GPW-13150-C	WO-A-11768	LIGHT, driving, blackout, assembly (supersedes LIGHT, assembly, FM-GPW-13150).	1
06-9	H001-4171585	FM-33799-S2	WO-53033	NUT, reg., hex., S, 3/8-16NC-2 (GM-123228).	1
06-9	H001-1518009	FM-34807-S2	WO-5010	WASHER, lock, reg., S, 3/8 in.	1
			WO-A-1082	NIPPLE, rubber, marker lamp.	2
			WO-A-5806	PAD, mounting, marker lamp (CB-CB-9276).	2
06-9		FM-GPW-13166	WO-A-6783	RING, mounting, blackout driving light lamp-unit (CB-CB-11199).	1
06-9		FM-40631-S7	WO-53071	SCREW, blackout driving light ground (CB-CB-7783) (GM-125760).	1
06-9		FM-GPW-13180	WO-A-6313	WASHER, adjusting, blackout driving light.	1
06-9		FM-GPW-13174	WO-A-6147	WIRE, ground, blackout driving light, assembly (CB-CB-11200).	1

Note 1—Only for vehicles modified by MWO ORD G503-W7. (see page 3).

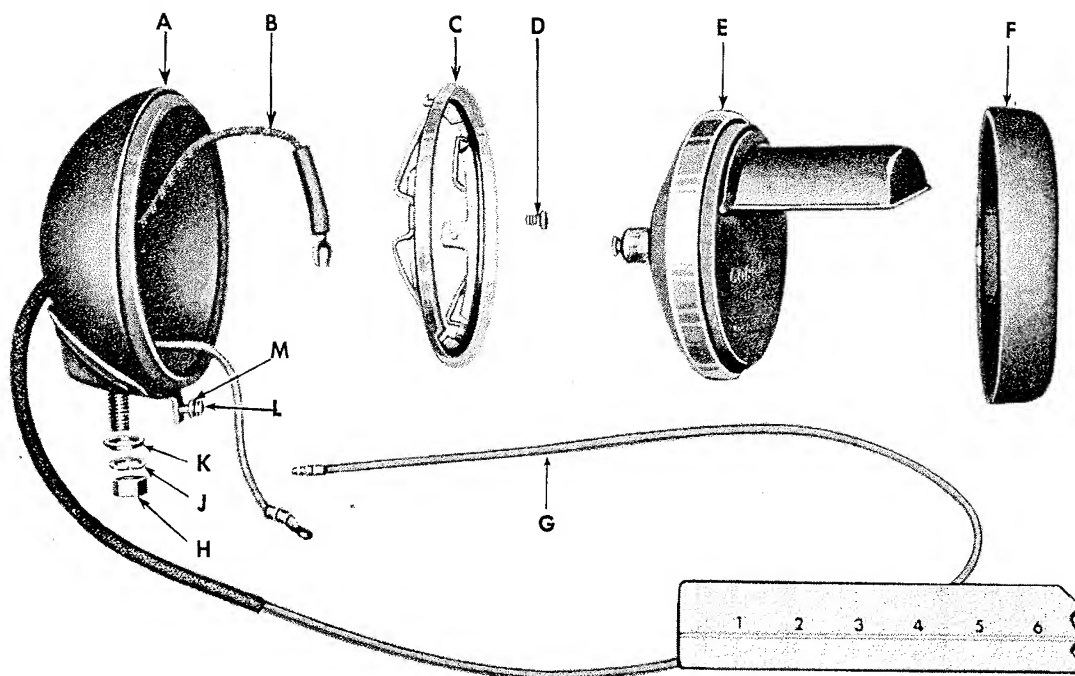


Key	Part Name	Ford Part No.	Willys Part No.	Group No.
A	HOUSING, assembly	FM-GPW-13170	WO-A-6143	0607D
B	WIRE	FM-GPW-13174	WO-A-6147	0607D
C	RING, assembly	FM-GPW-13166	WO-A-6783	0607D
D	SCREW	FM-40631-S7	WO-53071	0607D
E	LAMP-UNIT	FM-GPW-13152	WO-A-6145	0607A
F	DOOR, assembly	FM-GPW-13162	WO-A-6144	0607D
G	CABLE, assembly	FM-GPW-13175-C	WO-A-11770	0607D
H	NUT	FM-33799-S2	WO-53033	0607D
J	WASHER	FM-34807-S2	WO-5010	0607D
K	WASHER	FM-GPW-13180	WO-A-6313	0607D
L	SCREW	FM-31045-S2	WO-A-6148	0607D
M	WASHER	FM-34902-S	WO-52754	0607D


RA PD 342277

FIGURE 06-9—BLACKOUT DRIVING LIGHT ASSEMBLY

Key	Part Name	Ford Part No.	Willys Part No.	Group Number
A	WASHER	FM-34941-S7	WO-53029	0607D
B	NUT	FM-33798-S7	WO-A-1532	0607D
C	HOUSING, assembly	FM-GPW-13217	WO-A-1439	0607D
D	GASKET	FM-GP-13209-B	WO-A-1071	0607D
E	LAMP	FM-B-13466	WO-51804	0607B
F	DOOR, assembly	FM-GPW-13210-B	WO-A-1070	0607D
G	SCREW	FM-28378-S2	WO-A-1072	0607D

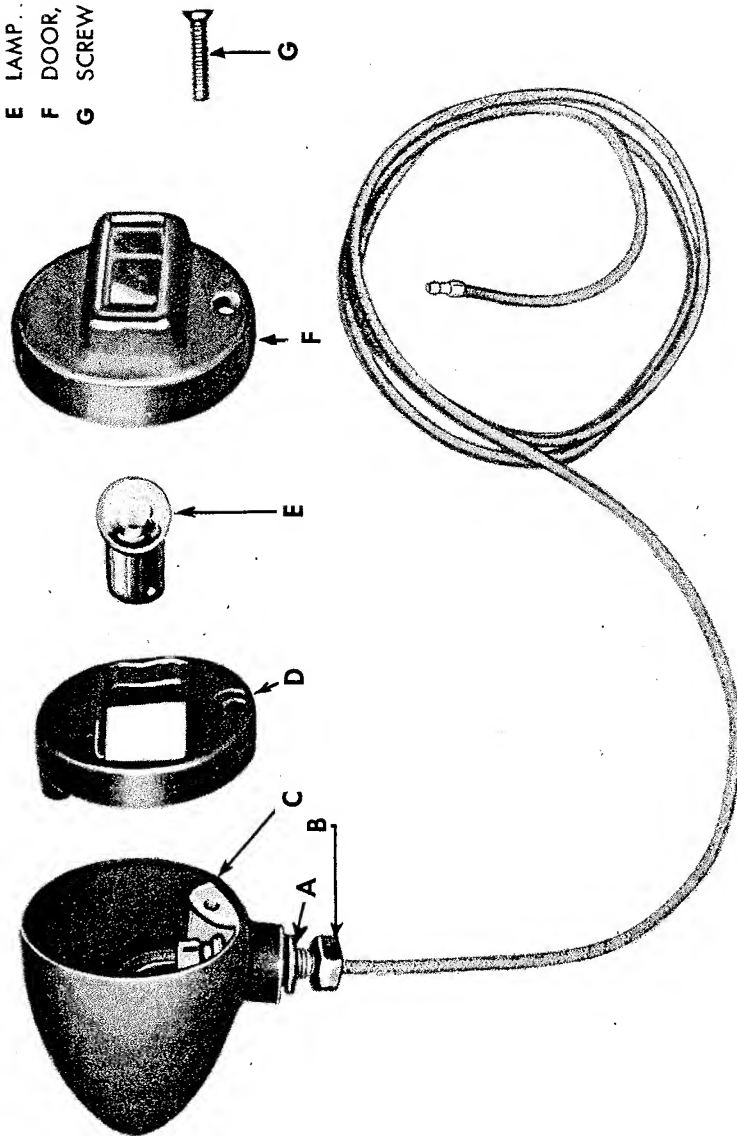



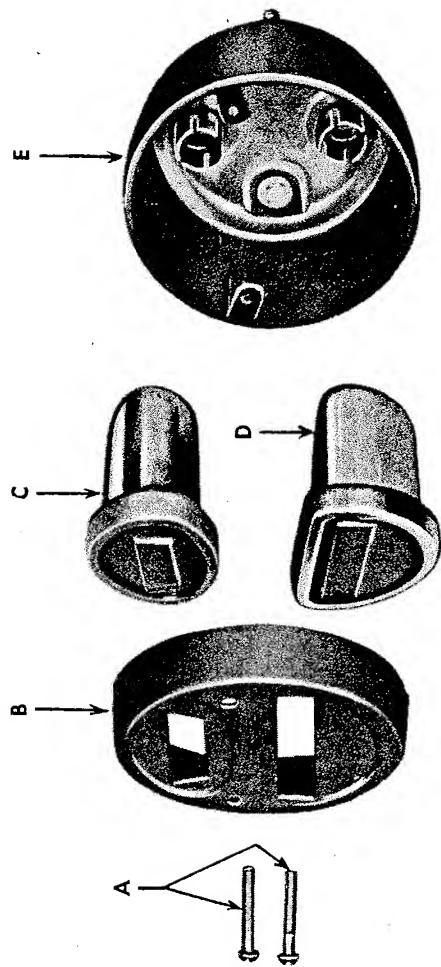

Key	Part Name	Ford Part No.	Willlys Part No.	Group No.
A	SCREW	FM-36931-S2	WO-A-1077	0608
B	DOOR	FM-GP-13448-B	WO-A-1076	0608
C	LAMP-UNIT	FM-GP-13494-A	WO-A-1074	0607A
D	LAMP-UNIT	FM-GP-13491-A	WO-A-1075	0607A
E	HOUSING	FM-GPW-13408-B	WO-A-1073	0608

RA PD 342230

FIGURE 06-11—TAIL AND STOP LIGHT ASSEMBLY

## GROUP 06—ELECTRICAL (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
06-11	3320-GPW-13410	FM-GPW-13410	WO-A-719	0608—TAILLIGHT	1	.179
	H004-0504432	FM-GP-13448-B	WO-A-1076		1	.125
	H004-0504430	FM-GP-13449-A	WO-A-1079		1	.125
06-11	G104-3067005	FM-36931-S2	WO-A-1077		4	
06-11	G121-0217900	FM-GPW-13408-B	WO-A-1073		2	
	H004-0504406	FM-GP-13405-B	WO-A-1064		1	1.662
	H004-0504413	FM-GP-13404-B	WO-A-1065		1	1.71
	H001-4167501	FM-33795-S7	WO-5790		4	
	H001-1518007	FM-34805-S2	WO-52706		4	

NOTE: For LAMP-UNIT see group 0607A

CABLE, blackout taillight to connector.....

DOOR, blackout tail and service tail and stop light, assembly (CB-CB-9231).....

DOOR, blackout tail and blackout stop light (CB-CB-9232).....

SCREW, taillight door (CB-CB-9233).....

HOUSING, tail and stop light, assembly (CB-CB-9212).....

LIGHT, blackout tail and service tail and stop, 6V., 7/8 stud lgh., assembly (CB-60142) (ORD-504406).....

LIGHT, blackout tail and blackout stop, 6V., 7/8 stud lgh., assembly (CB-60242) (ORD-504413).....

NUT, reg., hex., S, cd-pltd., 1/4-20NC-2.....

WASHER, lock, reg., S, 1/4 in.....



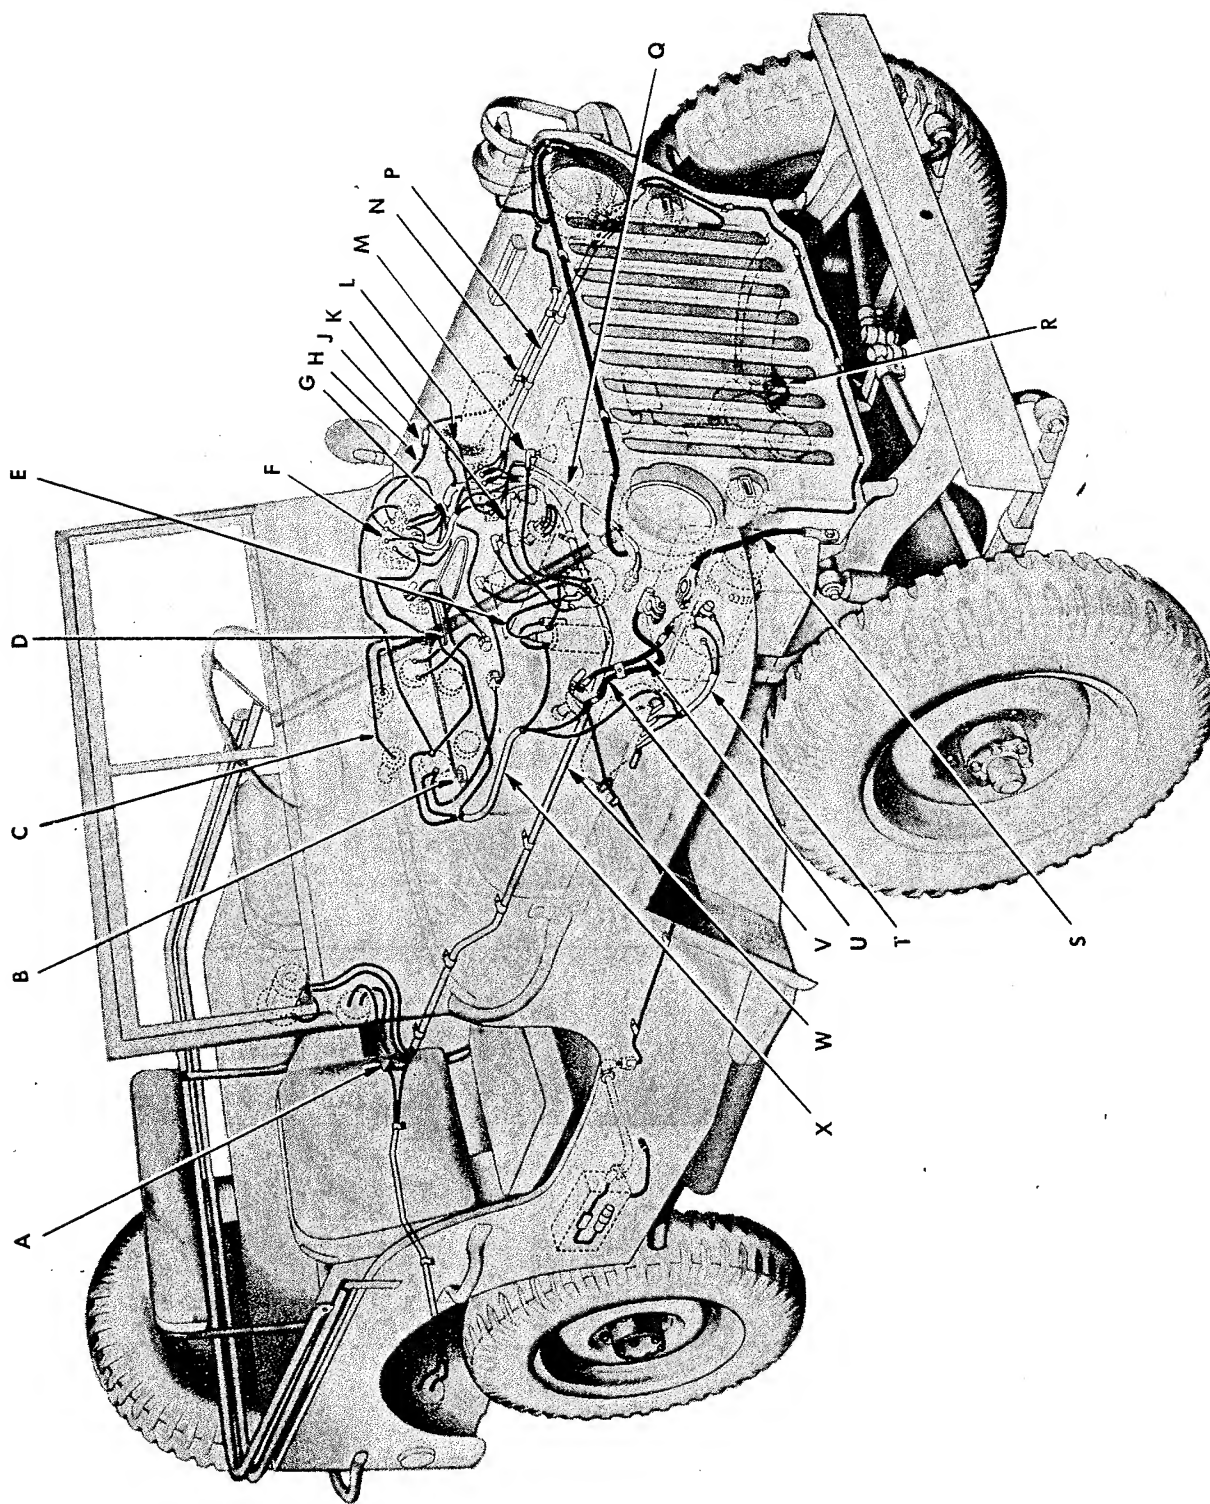


FIGURE 06-12—WIRING INSTALLATION

RA PD 342251

RA PD 342251A

FIGURE 06-12A—LEGEND FOR 06-12—WIRING INSTALLATION

## GROUP 06—ELECTRICAL (Cont'd)

Figure Number	Official Stock Number	Pièce Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>0610A—BATTERY HANGERS</b>		
		FM-GPW-10693		BRACKET, battery hold-down, center ( <i>Note 1</i> )	1	
		FM-GPW-10692		BRACKET, battery hold-down, end ( <i>Note 1</i> )	2	
	3320-GPW-5165	FM-GPW-5165	WO-A-1291	FRAME, hold-down, battery	1	.326
		FM-GPW-5175	WO-A-1164	BOLT, S., $\frac{5}{16}$ -18NC-2 x 9	2	.138
		FM-34806-S7	WO-300329	NUT, wing, S., $\frac{5}{16}$ -18NC-2	2	
	H001-7025711	FM-356305-S	WO-51833	WASHER, lock, reg., S., cd-pltd., $\frac{3}{8}$ in. (GM-103320)	2	
	3320-33897-S2	FM-33897-S2	WO-52768	WASHER, plain, S., $\frac{3}{8}$ in.	2	
				NUT, battery hold-down (wing, $\frac{3}{8}$ -16NC-2) ( <i>Note 1</i> )	6	.0083


Note 1—Only for vehicles modified by MWO ORD G503-W7. (see page 3).

Key	Part Name	Ford Part No.	Willlys Part No.	Group No.	Key	Part Name	Ford Part No.	Willlys Part No.	Group No.
A	CONNECTOR	FM-GPW-14487-A	WO-635895	0606B	M	CABLE	FM-GPW-12287	WO-A-1412	0604A
B	GAGE	FM-GPW-9275-A	WO-A-1292	0300A	N	CABLE	FM-GPW-13175-C	WO-A-11770	0607D
C	SOCKET, w/ CABLE, assembly	FM-GPW-13710	WO-A-1411	0605C	P	HARNESS	FM-GPW-14425	WO-A-1665	0606B
D	CABLE	FM-GPW-14458	WO-A-5072	0606B	Q	HARNESS	FM-GPW-14446	WO-A-5061	0606B
E	CABLE	FM-GPW-12298-B	WO-A-1420	0604A	R	STRAP	FM-GPW-14303	WO-A-1098	2603
F	SWITCH, assembly	FM-G8T-11649	WO-A-11866	0606	S	STRAP	FM-GPW-14301-B	WO-A-1320	0610B
G	HARNESS	FM-GPW-14402-B	WO-A-6154	0606B	T	HARNESS	FM-GPW-14305	WO-A-5074	0606B
H	CABLE	FM-GPW-13181	WO-A-6153	0606B	U	CABLE	FM-GPW-14431	WO-A-1454	0610B
J	CONNECTOR	FM-GPW-14487-B	WO-635981	0606B	V	CABLE	FM-GPW-14300	WO-A-1452	0610B
K	CABLE	FM-GPW-12284	WO-A-1414	0604A	W	HARNESS	FM-GPW-14401-D	WO-A-5048	0606B
L	CABLE	FM-GPW-14409	WO-A-5081	0609B	X	HARNESS	FM-GPW-14432	WO-A-5981	0606B

## GROUP 06—ELECTRICAL (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>0610A—BATTERY HANGERS (Cont'd)</b>		
	H001-1518008	FM-GPW-5168 FM-33896-S2 FM-34806-S2 FM-356305-S	WO-A-1757 WO-A-2466 WO-51833 WO-52768	STRAP, battery frame to front fender. NUT, wing, S., $\frac{5}{16}$ -18NC-2. WASHER, lock, reg., S., $\frac{5}{16}$ in. (GM-103320) WASHER, plain, S., $\frac{2}{4}$ in.	1 1 1 1	.0083
				<b>0610B—BATTERY CABLES AND CONNECTIONS</b>		
			WO-335912	BOLT, terminal clamp, w/NUT, assembly (superseded by BOLT, assembly FM-350343-S16, WO-9093).	2	
06-12		FM-350343-S16	WO-A-9093	BOLT, terminal clamp, w/NUT, assembly (supersedes BOLT, assembly, WO-335912).	2	
06-12	3320-GPW-14300	FM-GPW-14300	WO-A-1452	CABLE, battery to starting switch, positive.	1	.472
	3320-GPW-14431	FM-GPW-14431	WO-A-1454	CABLE, starting switch to cranking motor.	1	.212
		FM-34056-S16	WO-A-9094	NUT, terminal clamp bolt (hex., S., cd-pltd., $\frac{5}{16}$ -18NC-2).	2	
			WO-A-1320	STRAP, battery ground.	1	
06-12	3320-GPW-14301-B	FM-GPW-14301-B	WO-635883	STRAP, battery ground (14 $\frac{1}{2}$ in.).	1	.261
	H001-5421240	FM-24369-S	WO-50151	BOLT, hex-hd., S., $\frac{3}{8}$ -24NF-2 x $\frac{1}{8}$ (GM-106285).	1	
	H001-4167600	FM-33800-S	WO-5901	NUT, reg., hex., S., $\frac{3}{8}$ -24NF-2 (GM-103026).	1	
	H001-1518009	FM-34807-S2	WO-A-1680	WASHER, lock, reg., S., $\frac{3}{8}$ in. (GM-103321).	1	
		FM-34747-S7	WO-A-1680	WASHER, plain, S., cd-pltd., $\frac{3}{8}$ in.	1	
	3320-11A-14452	FM-11A-14452	WO-371400	TERMINAL, battery cable.	1	.0425
	3320-19B-14451	FM-19B-14451	WO-372668	TERMINAL, battery, positive cable clamp.	1	
				<b>0610B-1—BATTERY CABLES AND CONNECTIONS (12 Volt)</b> (Only for vehicles modified by MWO ORD G503-W2)		
	3320-GPWS-14301	FM-GPWS-14301		CABLE, battery ground.	1	
	3320-GPW-14300-B	FM-GPW-14300-B		CABLE, battery to cranking motor switch.	1	
	3320-GPWS-14447	FM-GPWS-14447		CONNECTOR, battery, series.	1	
		FM-33797-S16		NUT, battery series connector.	2	
	3320-GPW-14555	FM-GPW-14555		TERMINAL, battery to cranking motor switch.	1	
	3320-GPA-14451-C	FM-GPA-14451-C		TERMINAL, negative, battery cable.	1	
	3320-GPA-14450-C	FM-GPA-14450-C		TERMINAL, positive, battery cable.	1	

Key	Part Name	Ford Part No.	Willys Part No.	Group No.
A	RETAINER .....	FM-GPW-7050.....	WO-640017 .....	0703
B	BEARING .....	FM-GPW-7025-A...	WO-636885.....	0703
C	RAIL .....	FM-GPW-7240.....	WO-A-1156 .....	0706B
D	HOUSING, assembly .....	FM-GPW-7204.....	WO-635857 .....	0706A
E	LEVER, assembly.....	FM-GPW-7210-A...	WO-A-1380 .....	0706A
F	CAP .....	FM-BB-7220.....	WO-A-1379 .....	0706A
G	WASHER .....	FM-BB-7228.....	WO-635863.....	0706A
H	SPRING .....	FM-GPW-7227.....	WO-392328.....	0706A
J	PLATE .....	FM-GPW-7211-B...	WO-A-7260 .....	0706A
K	FORK .....	FM-GPW-7231.....	WO-636197 .....	0706C
L	GEAR.....	FM-GPW-7100.....	WO-636879.....	0704
M	BEARING .....	FM-GP-7065.....	WO-A-916 .....	0704
N	SHAFT.....	FM-GPW-7061.....	WO-A-519 .....	0704
P	WASHER .....	FM-GPW-7080.....	WO-A-410 .....	0704
Q	GEAR.....	FM-GPW-7102.....	WO-638798.....	0704
R	COUNTERSHAFT .....	FM-GPW-7111.....	WO-638948.....	0704C
S	WASHER .....	FM-GPW-7126.....	WO-A-879 .....	0704C
T	WASHER .....	FM-GPW-7129-A...	WO-635811 .....	0704C
U	CASE, assembly .....	FM-GPW-7005.....	WO-A-1148 .....	0701
V	SLEEVE .....	FM-GPW-7106.....	WO-637833.....	0704
W	HUB .....	FM-GPW-7105.....	WO-A-6319 .....	0704
X	BEARING .....	FM-GPW-7120.....	WO-639422.....	0703
Y	GEAR.....	FM-GPW-7017.....	WO-A-5554 .....	0703
Z	GEAR.....	FM-GPW-7113.....	WO-A-8977 .....	0704C
AA	WASHER .....	FM-GPW-7119.....	WO-635812.....	0704C

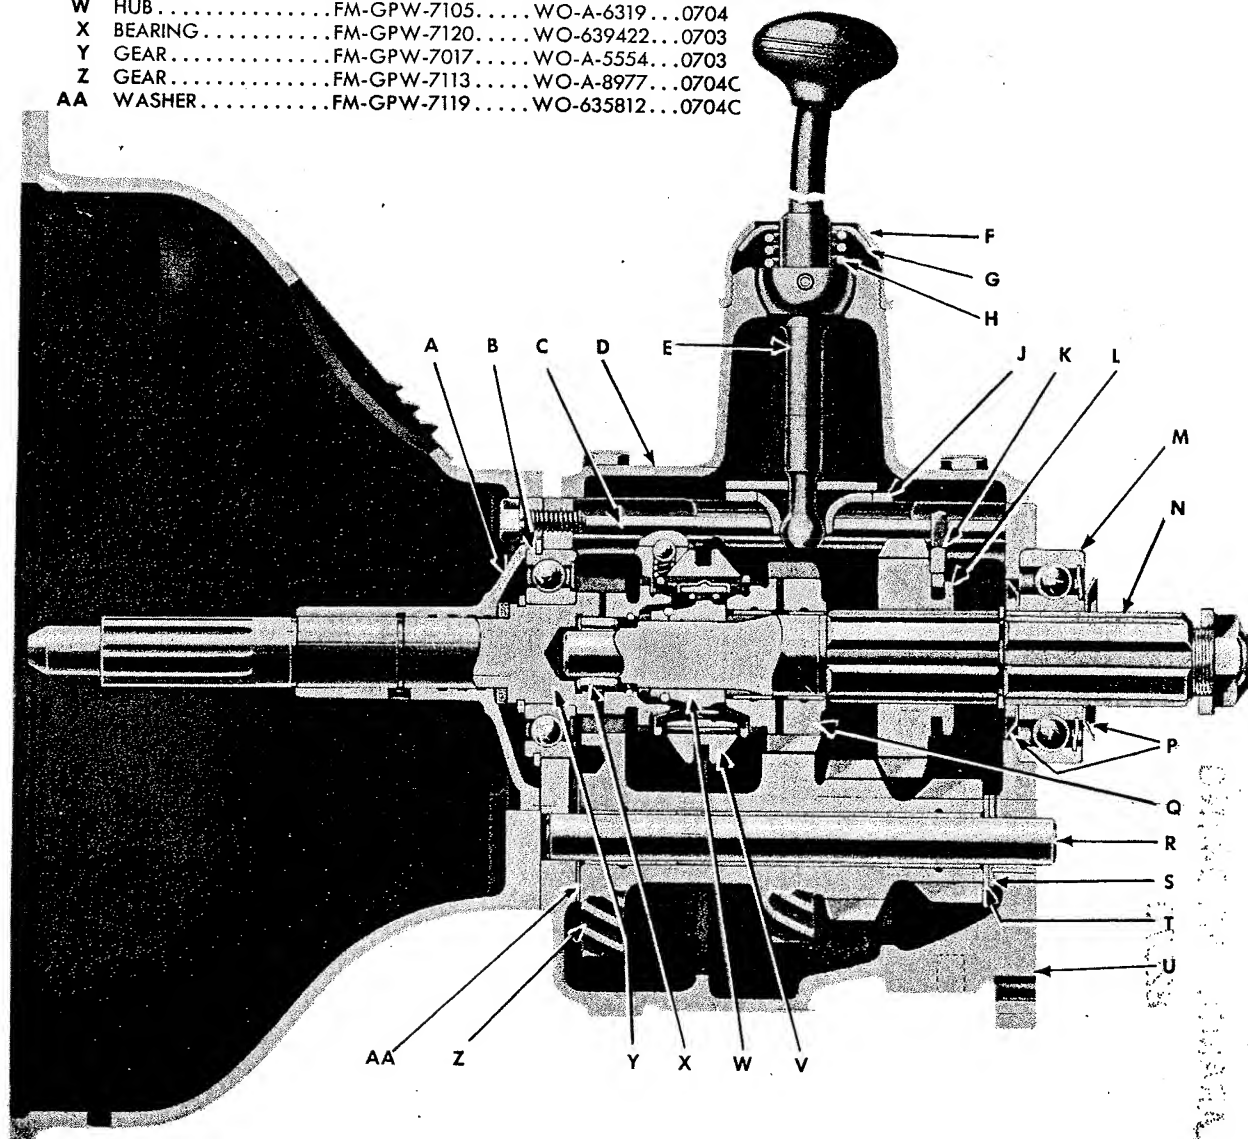


RA PD 342283

FIGURE 07-1—TRANSMISSION ASSEMBLY—SECTIONAL VIEW

POST OFFICE BOX 791  
LARAMIE, WYOMING

82070

SNL G-503

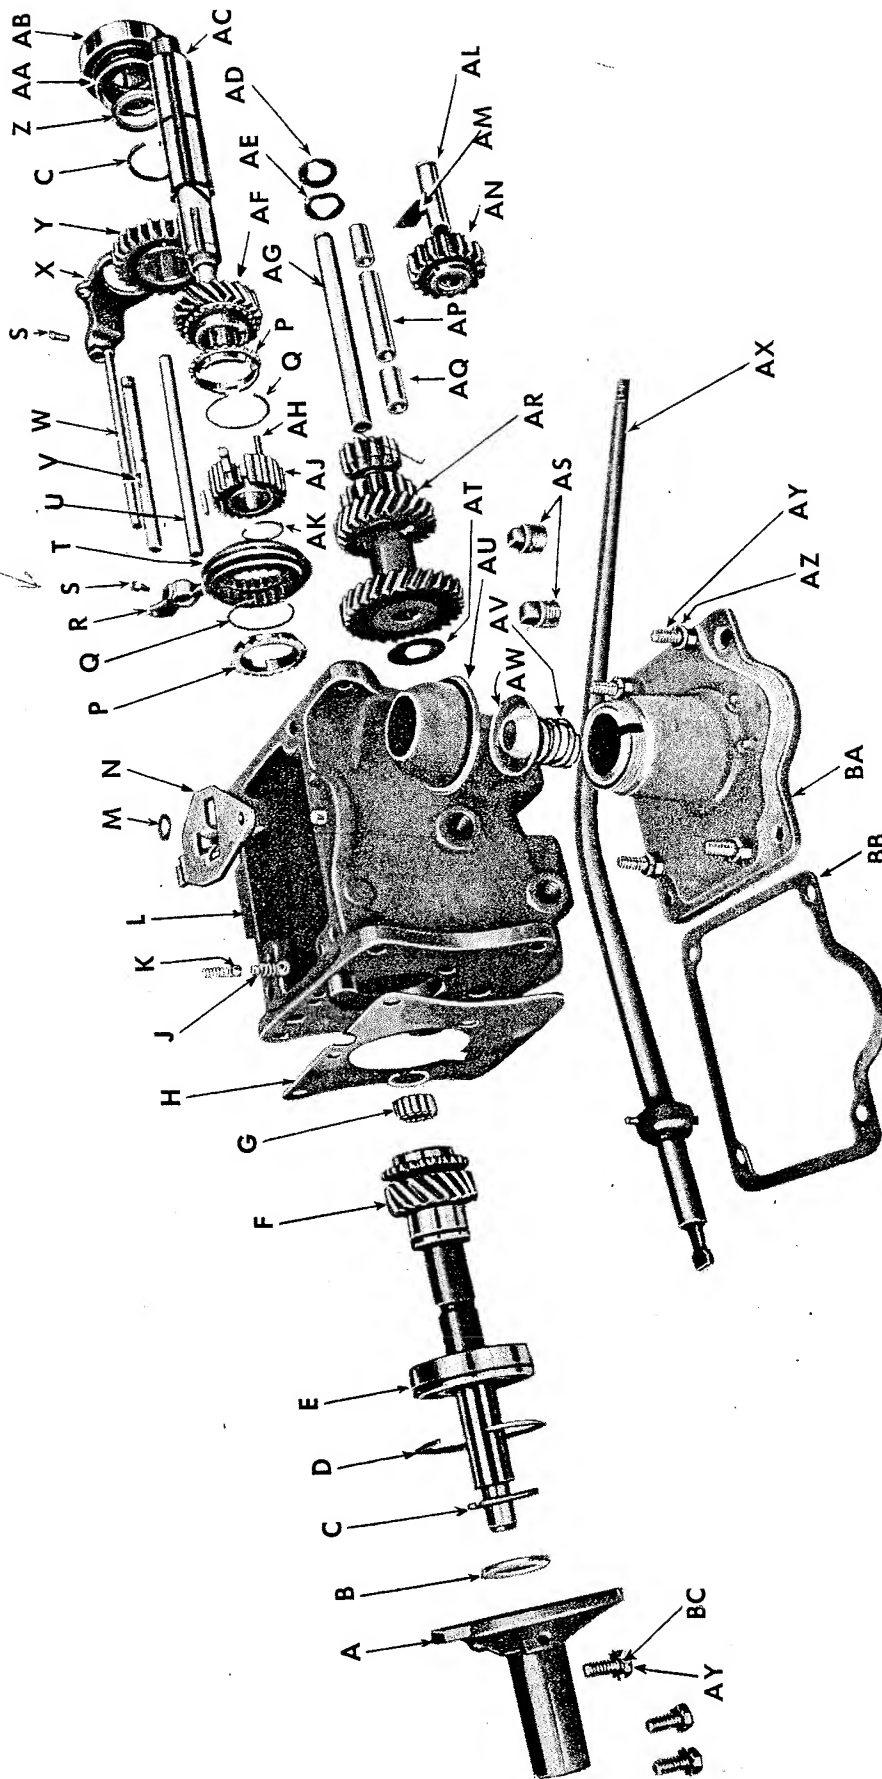

RA PD 342287

FIGURE 07-2—TRANSMISSION ASSEMBLY—EXPLODED VIEW

Key	Part Name	Ford Part No.	Willlys Part No.	Group No.	Key	Part Name	Ford Part No.	Willlys Part No.	Group No.
A	RETAINER.....	FM-GPW-7050.....	WO-640017.....	0703	AC	SHAFT.....	FM-GPW-7061.....	WO-A-519.....	0704
B	OIL SEAL.....	FM-GPW-7052.....	WO-640018.....	0703	AD	WASHER.....	FM-GPW-7126.....	WO-A-879.....	0704C
C	SNAP RING.....	FM-GPW-7064.....	WO-635844.....	0703	AE	WASHER.....	FM-GPW-7129-A.....	WO-635811.....	0704C
D	SNAP RING.....	FM-B-7070.....	WO-635846.....	0703	AF	GEAR.....	FM-GPW-7102.....	WO-638798.....	0704
E	BEARING.....	FM-GPW-7025-A.....	WO-636885.....	0703	AG	COUNTERSHAFT.....	FM-GPW-7111.....	WO-638948.....	0704C
F	GEAR.....	FM-GPW-7017.....	WO-A-5554.....	0703	AH	PLATE.....	FM-GPW-7116.....	WO-637832.....	0704
G	BEARING.....	FM-GPW-7120.....	WO-639422.....	0703	AJ	HUB.....	FM-GPW-7105.....	WO-A-6319.....	0704
H	GASKET.....	FM-GPW-7051-B.....	WO-637495.....	0701	AK	SNAP RING.....	FM-GPW-7059.....	WO-637835.....	0704
J	SPRING.....	FM-GPW-7234.....	WO-635837.....	0706B	AL	SHAFT.....	FM-GPW-7140.....	WO-638952.....	0704C
K	BALL.....	FM-353081-S.....	WO-635838.....	0706B	AM	PLATE.....	FM-GPW-7155.....	WO-638949.....	0704C
L	CASE, assembly.....	FM-GPW-7005.....	WO-A-1148.....	0701	AN	GEAR.....	FM-GPW-7141.....	WO-636882.....	0704C
M	SPRING.....	FM-GPW-7208.....	WO-635839.....	0706A	AP	SPACER.....	FM-GPW-7115.....	WO-A-880.....	0704C
N	PLATE.....	FM-GPW-7211-B.....	WO-A-7260.....	0706A	AQ	BUSHING.....	FM-GPW-7121.....	WO-A-878.....	0704C
P	RING.....	FM-GPW-7107.....	WO-637834.....	0704	AR	GEAR.....	FM-GPW-7113.....	WO-A-8977.....	0704C
Q	SPRING.....	FM-GPW-7109.....	WO-637831.....	0704	AS	PLUG.....	FM-353064.....	WO-5140.....	0701
R	FORK.....	FM-GPW-7230.....	WO-636196.....	0706C	AT	WASHER.....	FM-GPW-7119.....	WO-635812.....	0704C
S	SCREW.....	FM-GPW-7245.....	WO-636200.....	0706C	AU	CAP.....	FM-BB-7220.....	WO-A-1379.....	0706A
T	SLEEVE.....	FM-GPW-7106.....	WO-637833.....	0704	AV	SPRING.....	FM-GPW-7227.....	WO-392328.....	0706A
U	RAIL.....	FM-GPW-7241.....	WO-A-1155.....	0706B	AW	WASHER.....	FM-BB-7228.....	WO-635863.....	0706A
V	RAIL.....	FM-GPW-7240.....	WO-A-1156.....	0706B	AX	LEVER.....	FM-GPW-7210-A.....	WO-A-1380.....	0706A
W	PIN.....	FM-GPW-7206.....	WO-635836.....	0706C	AY	BOLT.....	FM-20366-S.....	WO-6428.....	0706A
X	FORK.....	FM-GPW-7231.....	WO-636197.....	0706C	AZ	WASHER.....	FM-34806-S7.....	WO-51833.....	0706A
Y	GEAR.....	FM-GPW-7100.....	WO-636879.....	0704	BA	HOUSING, assembly.....	FM-GPW-7204.....	WO-635857.....	0706A
Z	SPACER.....	FM-GPW-7062.....	WO-A-738.....	0704	BB	GASKET.....	FM-GPW-7223.....	WO-635861.....	0706A
AA	WASHER.....	FM-GPW-7080.....	WO-A-410.....	0704	BC	WASHER.....	FM-34941-S7.....	WO-53029.....	0703
AB	BEARING.....	FM-GP-7065.....	WO-A-916.....	0704					

FIGURE 07-2A—LEGEND FOR 07-2—TRANSMISSION ASSEMBLY—EXPLODED VIEW



## GROUP 07—TRANSMISSION

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>GROUP 07—TRANSMISSION</b> <b>0700—TRANSMISSION ASSEMBLY</b>		
01-1	9410-AS2-T-84-J	FM-GPW-7000 FM-24489-S FM-355597-S FM-24409-S7 FM-33800-S7 FM-34807-S2	WO-A-7596  WO-A-1145 WO-52379 WO-630101 WO-6606 WO-52542 WO-5010	TRANSMISSION, w/release BEARING, assembly (includes: clutch release BEARING, clutch bearing CARRIER, clutch bearing carrier SPRING, clutch control LEVER, clutch control lever CABLE) TRANSMISSION, w/gear shift LEVER, assembly (WG-AS2-T-84-J) BOLT, hex-hd., S, $\frac{3}{8}$ -24NF-2 x 1 $\frac{1}{2}$ BOLT, hex-hd., S, $\frac{3}{8}$ -24NF-2 x 2 $\frac{1}{2}$ (dowel) BOLT, hex-hd., S, cd-pltd., $\frac{3}{8}$ -24NF-2 x 1 $\frac{1}{2}$ NUT, reg., hex., S, cd-pltd., $\frac{3}{8}$ -24NF-2 WASHER, lock, S, SAE std., $\frac{3}{8}$ in.	1 1 2 2 4 8 8	47.26
07-1, 2	9410-AT-84J-1A	FM-GPW-7005-A FM-GPW-7005	WO-A-1148	<b>0701—CASE</b> CASE, transmission CASE, transmission, assembly (WG-T-84J-1A) (includes: oil retaining CUP and countershaft washer PIN)	1 1	8.31
07-2	9410-T-84D-14C	FM-GPW-7051-B FM-GPW-18356	WO-637495 WO-A-1542	GASKET, transmission case to flywheel housing (Victorite, 0.015 thk.) (WG-T84D-14C) (also in GASKET SET, FM-GPW-18356-B, WO-A-7832) GASKET SET, transmission (superseded by GASKET SET, FM-GPW-18356-B, WO-A-7832)	1 1	
		FM-GPW-7223 FM-GPW-7051-B FM-GPW-7756 FM-GPW-18356-B	WO-635861 WO-637495 WO-A-1435 WO-A-7832	(Consists of: 1 GASKET, gearshift lever housing 1 GASKET, main drive gear bearing retainer 1 GASKET, transmission to transfer case) GASKET SET, transmission (supersedes GASKET SET, FM-GPW-18356, WO-A-1542)	1	
07-2		FM-GPW-7051-B FM-GPW-7223 FM-GPW-7052 FM-GPW-7207 FM-353064-S	WO-637495 WO-635861 WO-640018 WO-635862 WO-5140	(Consists of: 1 GASKET, case to flywheel housing 1 GASKET, gearshift lever housing 1 OIL SEAL, main gear bearing retainer 1 PACKING, gearshift lever housing) PLUG, drain and filler, transmission (pipe, sq-hd., 1, $\frac{1}{2}$ in.)	2	.0125
	H012-1340035	FM-GPW-7025		<b>0703—MAIN DRIVE GEAR AND BEARINGS</b> BEARING, transmission main drive gear (FB-1207-GF) (superseded by BEARING, FM-GPW-7025-A, WO-636885)	1	1.19

07-1, 2	H012-1340035	FM-GPW-7025-A	WO-636885	BEARING, ball, annular, single row, single oil shield, snap ring groove (2.834 O.D. x 1.378 I.D.) (transmission main drive gear) (FB-1207-MGF) (WG-X-3204-ML) (supersedes BEARING, FM-GPW-7025)	1	
07-1, 2	9410-T-84G-26	FM-GPW-7120	WO-639422	BEARING, roller, S, spherical end type, 0.527 lgth. x 0.1875 diam. (transmission main drive gear pilot) (BN-C-1110-Q) (WG-T-84G-26)	13	.0033
07-1, 2	9410-T-84J-16A	FM-GPW-7017	WO-A-5554	GEAR, main drive, transmission (S, 17 teeth, 2.048 O.D.) (WG-T-84J-16A)	1	4.94
07-2	3320-GPW-7015	FM-GPW-7015	WO-A-5553	GEAR, main drive, transmission, w/BEARINGS, assembly (WG-AT-84J-16A)	1	6.304
	9410-T-84J-54	FM-GPW-7052	WO-640018	OIL SEAL, transmission main drive gear bearing retainer (WG-T-84J-54) (also in GASKET SET, FM-GPW-18356-B, WO-A-7832)	1	.0047
07-1, 2	9410-T-84J-6	FM-GPW-7050	WO-640017	RETAINER, transmission main drive gear bearing (WG-T-84J-6)	1	1.19
	H001-1013018	FM-20366-S	WO-6428	BOLT, hex-hd., S, $\frac{5}{16}$ -18NC-2 x $\frac{7}{8}$ (GM-106325)	3	
07-2		FM-34941-S7	WO-33029	WASHER, lock, S, cd-pltd., external tooth, flat type, $\frac{5}{16}$ in.	3	.0019
07-2	9410-T-84-17	FM-GPW-7064	WO-635844	SNAP RING, transmission main drive gear ( $1\frac{1}{2}$ in. I.D.) (WG-T-84-17)	1	.0192
07-2	G104-1769814	FM-B-7070	WO-635846	SNAP RING, transmission main drive gear bearing ( $2\frac{1}{16}$ in. I.D.) (WG-B-7070)	1	.0217
	9410-T-84G-25	FM-GPW-7063	WO-639423	SNAP RING, transmission main drive gear pilot roller bearing (1.062 O.D.) (WG-T-84G-25)	1	.0018
<b>0704—MAIN SHAFT, GEARS AND BEARINGS</b>						
07-1, 2	H012-1314035	FM-GP-7065	WO-A-916	BEARING, ball, annular, single row, 1.378 bore, 3.1496 O.D., 0.8268 width (transmission main shaft, rear end) (MRC-307) (SKF-6307-Z) (ND-7607)	1	1.45
	9410-T-84C-19	FM-GPW-7104	WO-635820	BUSHING, transmission main shaft second speed gear (superseded by BUSHING, FM-GPW-7104-A, WO-640006)	1	.0448
07-1, 2	9410-T-84F-12A	FM-GPW-7100	WO-640006	BUSHING, transmission main shaft second speed gear (WG-T-84C-19) (supersedes BUSHING, FM-GPW-7104, WO-635820)	1	
07-1, 2	9410-T-84F-11A	FM-GPW-7102	WO-636879	GEAR, sliding, transmission main shaft, low and reverse (3.265 O.D. x $1\frac{1}{4}$ thk., 25 teeth) (WG-T-84F-12A)	1	1.89
			WO-638798	GEAR, transmission main shaft, second speed, w/BUSHING, assembly (2.090 O.D., 24 teeth) (WG-T-84F-11A)	1	2.79
07-1, 2	9410-T-84J-2 $\frac{1}{2}$	FM-GPW-7105	WO-A-6319	HUB, transmission main shaft second and high speed clutch (WG-T-84J-2 $\frac{1}{2}$ )	1	1.906
		FM-GPW-7082	WO-A-15428 *	OIL SEAL, transmission main shaft (Note 1)	1	
07-2	9410-T-84F-13	FM-GPW-7116	WO-637832	PLATE, shifting, transmission main shaft synchronizer (WG-T-84F-13)	3	.0039
07-2	9410-T-84F-14	FM-GPW-7107	WO-637834	RING, blocking, transmission main shaft synchronizer (WG-T-84F-14)	2	.424
07-1, 2	9410-T-84H-2	FM-GPW-7061	WO-A-519	SHAFT, main, transmission (dld. f/c-pin) (WG-T-84F-12)	1	3.44
			WO-A-518	SHAFT, main, transmission, w/GEARS, assembly	1	
			WO-A-6317	SHAFT, main, transmission, w/GEARS, and blocking RING, assembly (WG-1AT-84H-2)	1	11.47
07-1, 2	9410-T-84F-15	FM-GPW-7106	WO-637833	SLEEVE, transmission main shaft second and high speed clutch (WG-T-84F-15)	1	1.564
07-2	9410-4886	FM-GPW-7059	WO-637835	SNAP RING, transmission main shaft second and high speed clutch hub ( $1\frac{1}{2}$ in. I.D.) (WG-4686)	1	.0124
07-2	3320-GPW-7062	FM-GPW-7062	WO-A-738	SPACER, transmission main shaft bearing (WG-T-84J-28)	1	.0885
		FM-GPW-7062-B	A-15427	SPACER, transmission main shaft bearing (Note 1)	1	
07-2	9410-4682-K	FM-GPW-7109	WO-637831	SPRING, transmission main shaft synchronizer (WG-4682-K)	2	.0036
		FM-GPW-7124	WO-A-6318	SYNCHRONIZER, transmission main shaft, w/blocking RING, assembly (WG-1AT-84J-2 $\frac{1}{2}$ )	1	3.54
07-1, 2; 08-1, 2	9410-T-84H-137	FM-GPW-7080	WO-A-410	WASHER, oil retaining, transmission main shaft (WG-T-184H-137)	2	.0143

Note 1—Used in only transmission with raised "H" on case near filler hole.

## GROUP 07—TRANSMISSION (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>0704C—COUNTERSHAFT AND REVERSE IDLER SHAFTS, GEARS AND BEARINGS</b>						
07-2	9410-T-84J-187 9410-T-84-85A	FM-GPW-7121 FM-GPW-7143	WO-A-878	BUSHING, transmission countershaft gear (WG-T-84J-167) BUSHING, transmission reverse idler gear (superseded by BUSHING, FM-GPW-7143-A, WO-635804)	2	.166
	9410-T-84-85A	FM-GPW-7143-A	WO-635804	BUSHING, transmission reverse idler gear (WG-T-84-85A) (supersedes BUSHING, FM-GPW-7143)	1	.045
07-1, 2	9410-T-84G-J3	FM-GPW-7111	WO-638948 WO-A-739	COUNTERSHAFT, transmission (WT-T-84G-J3) GEAR, cluster, transmission countershaft, w/BUSHING and SPACER, assembly (WG-AT-84F-8)	1	.619
07-1, 2	9410-T-84J-8 9410-AT-84F-10A	FM-GPW-7113 FM-GPW-7141	WO-A-8977 WO-636882	GEAR, cluster, transmission countershaft GEAR, transmission reverse idler, w/BUSHING, assembly (O.D. 2.167 x 0.996 thk., 16 teeth) (WG-AT-84F-10A)	1	6.47
07-2	9410-T-84J-31	FM-357417-S	WO-A-524	PIN, transmission countershaft washer (WG-T-84J-31)	1	1.63
07-2	9410-T-84G-48	FM-GPW-7155	WO-638949	PLATE, lock, transmission countershaft and reverse idler shaft (WG-T-84G-48)	1	.0167
07-2	9410-T-84G-J35	FM-GPW-7140	WO-638952	SHAFT, transmission reverse idler gear (WG-T-84G-J35)	1	.195
07-2	9410-T-84G-28	FM-GPW-7115	WO-A-880	SPACER, transmission countershaft gear bushing (WG-T-84J-28)	1	.126
07-1, 2	9410-T-84B-30A 9410-T-84-29	FM-GPW-7119 FM-GPW-7129	WO-635812	WASHER, thrust, transmission countershaft, front (WG-T-84B-30A) WASHER, thrust, transmission countershaft, rear (superseded by WASHER, FM-GPW-7129-A, WO-635811)	1	.0318
07-1, 2	9410-T-84-29	FM-GPW-7129-A	WO-635811	WASHER, thrust, transmission countershaft, rear (bz.) (WG-T-84-29) (supersedes WASHER, FM-GPW-7129)	1	.0432
07-1, 2	9410-T-84J-29	FM-GPW-7126	WO-A-879	WASHER, thrust, transmission countershaft, rear (S.) (WG-T-84J-29)	1	.101
<b>0706A—GEARSHIFT LEVER AND PARTS</b>						
07-1, 2	9410-C8-2 1/2 8080-39Q20 9410-4496K	FM-GPW-7217 FM-GPW-7213 FM-BB-7220 FM-GPW-1111286-A3 FM-GPW-7223	WO-A-1381 WO-A-971 WO-A-1379 WO-A-3783 WO-635861	BALL, fulcrum, transmission gearshift lever (WG-C8-2 1/2) BALL, transmission gearshift lever (rubber) CAP, transmission gearshift lever housing (WG-4496-K) COVER, transmission gearshift lever housing (rubber) GASKET, transmission gearshift lever housing (WG-T-84-115) (also in GASKET SET, FM-GPW-18356-B, WO-A-7832)	1	.0833
07-2	9410-T-84-115			HOUSING, transmission gearshift lever, assembly (includes: PLATES and RIVET)	1	.285
07-1, 2	9410-T-84A-148	FM-GPW-7204	WO-635857	BOLT, hex-hd., S., 5/16-18NC-2 x 7/8 (GM-106325)	1	.006
07-2	H001-1013018 H001-7025711	FM-20366-S FM-34806-S7	WO-6428 WO-51833	WASHER, lock, S., cd-pltd., SAE std., 5/8 in.	4	2.183
07-2	9410-AC-84J-2A	FM-GPW-7210		LEVER, transmission gearshift	4	

01-1, 07-1, 2; 18-1	FM-GPW-7210-A	WO-A-1380	LEVER, transmission gearshift, assembly (WG-AC-84J-2A).....	1	1.42
	FM-GPW-7207	WO-635862	PACKING, transmission gearshift lever housing (also in GASKET SET, FM-GPW-18356-B, WO-A-7832).....	1	.0041
	FM-357418-S	WO-635840	PIN, fulcrum, transmission gearshift lever guide plate (WG-T-84-30).....	1	.0508
	FM-GPW-7221	WO-A-1382	PIN, transmission gearshift lever fulcrum ball (WG-C-84B-12A).....	1	.0559
	FM-GPW-7214	WO-635859	PLATE, guide, transmission gearshift lever (WG-T-84B-32) (superseded by PLATE, FM-GPW-7211-B, WO-A-7260).....	1	.0585
	FM-GPW-7216	WO-635841	PLATE, guide, transmission gearshift lever (superseded by PLATE, FM-GPW-7211-B, WO-A-7260).....	1	
07-1, 2	FM-GPW-7211-B	WO-A-7261	PLATE, guide, transmission gearshift lever (superseded by PLATE, FM-GPW-7211-B, WO-A-7260).....	1	
	FM-62216-S	WO-635860	FM-GPW-7214, WO-635859 and WO-635841, and FM-GPW-7216, WO-A-7261).....	1	.538
07-2	FM-GPW-7208	WO-635839	RIVET, S, fl-hd., $\frac{3}{8}$ x $\frac{1}{8}$ (transmission gearshift lever housing) (WG-X-3089BH)	2	
07-1, 2	FM-GPW-7227	WO-392328	SPRING, transmission gearshift lever guide plate (WG-T-84-31).....	1	.0163
07-1, 2	FM-BB-7228	WO-635863	SPRING, support, transmission gearshift lever (WG-4498K).....	1	.0274
			WASHER, transmission gearshift lever housing cap (WG-4497).....	1	.03
<b>0706B—GEARSHIFT RAILS AND PARTS</b>					
07-2	FM-353081-S	WO-635838	BALL, poppet, transmission gearshift rail (S, $\frac{3}{8}$ O.D.) (WG-X-2136).....	2	
	FM-GPW-7056	WO-637503	CUP, oil retaining, transmission second and high speed gearshift rail.....	1	.094
07-1, 2	FM-GPW-7233	WO-A-1385	PLUNGER, transmission gearshift rail interlock (WG-84J-86A).....	1	.0663
07-2	FM-GPW-7240	WO-A-1156	RAIL, shift, transmission low speed and reverse gear (WG-T-84J-21).....	1	.619
07-2	FM-GPW-7241	WO-A-1155	RAIL, shift, transmission second and high speed gear (WG-T-84J-20A).....	1	.733
07-2	FM-GPW-7234	WO-635837	SPRING, transmission gearshift rail poppet ball (WG-T-84-42).....	2	.0096
<b>0706C—GEARSHIFT FORKS</b>					
07-1, 2	FM-GPW-7231	WO-636197	FORK, shift, transmission low speed and reverse gear (WG-T-84C-24A).....	1	1.091
07-2	FM-GPW-7230	WO-636196 -	FORK, shift, transmission second and high speed gear (WG-T-84C-23A).....	1	.847
07-2	FM-GPW-7206	WO-635836	PIN, guide, transmission gearshift fork (WG-T-84-22).....	1	.123
07-2	FM-GPW-7245	WO-636200	SCREW, lock, transmission gearshift fork (WG-4418-M).....	2	.0347
<b>GROUP 08—TRANSMISSION TRANSFER CASE</b>					
<b>0800—TRANSFER CASE ASSEMBLY</b>					
01-2	FM-GPW-7700	WO-A-1195	CASE, transfer, assembly (for use with external contracting type hand brake).....	1	72.46
	FM-24408-S	WO-52911	BOLT, hex-hd., S, $\frac{3}{8}$ -16NC-2 x 1 $\frac{1}{8}$ .....	5	
	FM-24388-S7	WO-51405	BOLT, hex-hd., S, cd-pltd., $\frac{3}{8}$ -16NC-2 x 1.....	1	
	FM-34807-S2	WO-5010	WASHER, lock, S, SAE std., $\frac{3}{8}$ in.....	6	
	FM-GPW-7704B	WO-A-8859	CASE, transfer, w/hand BRAKE, assembly (for use with internal expanding type hand brake).....	1	

## GROUP 08—TRANSMISSION TRANSFER CASE (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>0800—TRANSFER CASE ASSEMBLY (Cont'd)</b>						
	8080-BM117	FM-GPW-18355	WO-A-1543	GASKET SET, transfer case overhaul (superseded by GASKET SET, FM-GPW-18355-B, WO-A-7443)	1	
				(Consists of:		
		FM-GP-7746	WO-A-1134	2 GASKET, output shaft oil seal		
		FM-GPW-7773	WO-A-957	1 GASKET, output shaft front bearing cap		
		FM-GP-7709	WO-A-954	1 GASKET, transfer case bottom cover		
		FM-GPW-7703	WO-A-1509	1 GASKET, transfer case rear cover		
		FM-GPW-7756	WO-A-1435	1 GASKET, transfer case to transmission		
		FM-GP-7770-A	WO-A-958	2 OIL SEAL, output shaft		
	H013-0500007	FM-GP-7798	WO-A-974	2 OIL SEAL, shift rod		
	3320-GPW-18355-B	FM-GPW-18355-B	WO-A-7443	GASKET SET, transfer case overhaul (supersedes GASKET SET, FM-GPW-18355, WO-A-1543)	1	.244
				(Consists of:		
		FM-CPW-7773	WO-A-957	1 GASKET, output shaft front bearing cap		
		FM-GPW-7707	WO-A-1509	1 GASKET, rear cover		
		FM-GPW-7709	WO-A-954	1 GASKET, bottom cover		
		FM-GP-7746	WO-A-1134	2 GASKET, oil seal		
		FM-GPW-7756	WO-A-1435	1 GASKET, transfer case to transmission		
	3320-GPW-18317	FM-GPW-18317	WO-A-7445	OIL SEAL SET, transfer case	1	.912
				(Consists of:		
		FM-GP-7770-A	WO-A-958	2 OIL SEAL, output shaft		
		FM-GP-7798-A	WO-A-974	2 OIL SEAL, shift rod		
<b>0801—CASE AND COVERS</b>						
08-2	8080-5951X	FM-GPW-7754	WO-A-934	BREATHER, transfer case, assembly (SP-5951X)	1	5.685
08-1, 2	8080-18-19-8	FM-GPW-7774	WO-A-956	CAP, transfer case output shaft front bearing (SP-18-19-8)	1	.0125
	G102-0305579	FM-355554-S	WO-A-1136	BOLT, hex-hd., S, head dld. f/c-pin, $\frac{3}{8}$ -16NC-3 x 1 (SP-122-D)	5	.0042
	G102-0306828	FM-356205-S	WO-A-1135	WASHER, flat, copper, $\frac{3}{8}$ I.D. x $\frac{5}{8}$ O.D. x $\frac{1}{2}$ thk. (SP-477W)	5	
		FM-GPW-7769	WO-A-9077	CAP, transfer case output shaft rear bearing, less bushing	1	
08-2; 12-6	3320-GPW-7768	FM-GPW-7768	WO-A-1507	CAP, transfer case output shaft rear bearing, w/BUSHING, assembly (SP-6452X)	1	2.704
				(Note 1)		
	G102-0305579	FM-355554-S	WO-A-1136	BOLT, hex-hd., S, head dld. f/c-pin, $\frac{3}{8}$ -16NC-3 x 1 (SP-122-D)	1	.0125
	8080-SP634-D	FM-355533-S	WO-A-1137	BOLT, hex-hd., S, head dld. f/c-pin, $\frac{3}{8}$ -16NC-3 x 2 (SP-634-D)	3	.0258
	G102-0306828	FM-356205-S	WO-A-1135	WASHER, flat, copper, $\frac{3}{8}$ I.D. x $\frac{5}{8}$ O.D. x $\frac{1}{2}$ thk. (SP-477W)	4	.0042

Note 1—For use with external contracting type hand brake.

Key	Part Name	Ford Part No.	Willys Part No.	Group Number
A	COVER.....	FM-GPW-7706.....	WO-A-1508.....	.0801
B	NUT.....	FM-356134-S18.....	WO-A-520.....	.0802
C	GEAR.....	FM-GP-7722.....	WO-A-1510.....	.0802
D	BEARING.....	FM-GP-7065.....	WO-A-916.....	.0704
E	SHIELD.....	FM-GPW-7080.....	WO-A-410.....	.0704
F	GEAR.....	FM-GP-7742.....	WO-A-999.....	.0804
G	BEARING.....	FM-GP-7718-A.....	WO-A-924.....	.0804
H	SHAFT.....	FM-GP-7743.....	WO-A-998.....	.0804
J	GEAR.....	FM-GPW-7762.....	WO-A-992.....	.0803
K	SHAFT.....	FM-GP-7761.....	WO-A-975.....	.0803
L	BEARING.....	FM-GP-7719.....	WO-A-1007.....	.0803
M	OIL SEAL.....	FM-GP-7770-A.....	WO-A-958.....	.0803
N	SHIELD.....	FM-GP-7776.....	WO-A-1111.....	.0803
P	YOKE.....	FM-GP-7729.....	WO-A-1106.....	.0803
Q	NUT.....	FM-356125-S.....	WO-A-980.....	.0803
R	CAP.....	FM-GPW-7774.....	WO-A-956.....	.0801
S	CUP.....	FM-01Y-1202.....	WO-52883.....	.0803
T	CONE and ROLLERS.....	FM-GP-7723.....	WO-51575.....	.0803
U	GEAR.....	FM-GP-7766.....	WO-A-989.....	.0803
V	GEAR.....	FM-GP-7765.....	WO-A-988.....	.0803
W	SHAFT.....	FM-GP-7763.....	WO-A-1764.....	.0803
X	GEAR.....	FM-GP-17285.....	WO-A-1511.....	.0810
Y	GEAR.....	FM-GPW-17271.....	WO-A-1512.....	.0810
Z	CASE.....	FM-GPW-7705.....	WO-A-1503.....	.0801


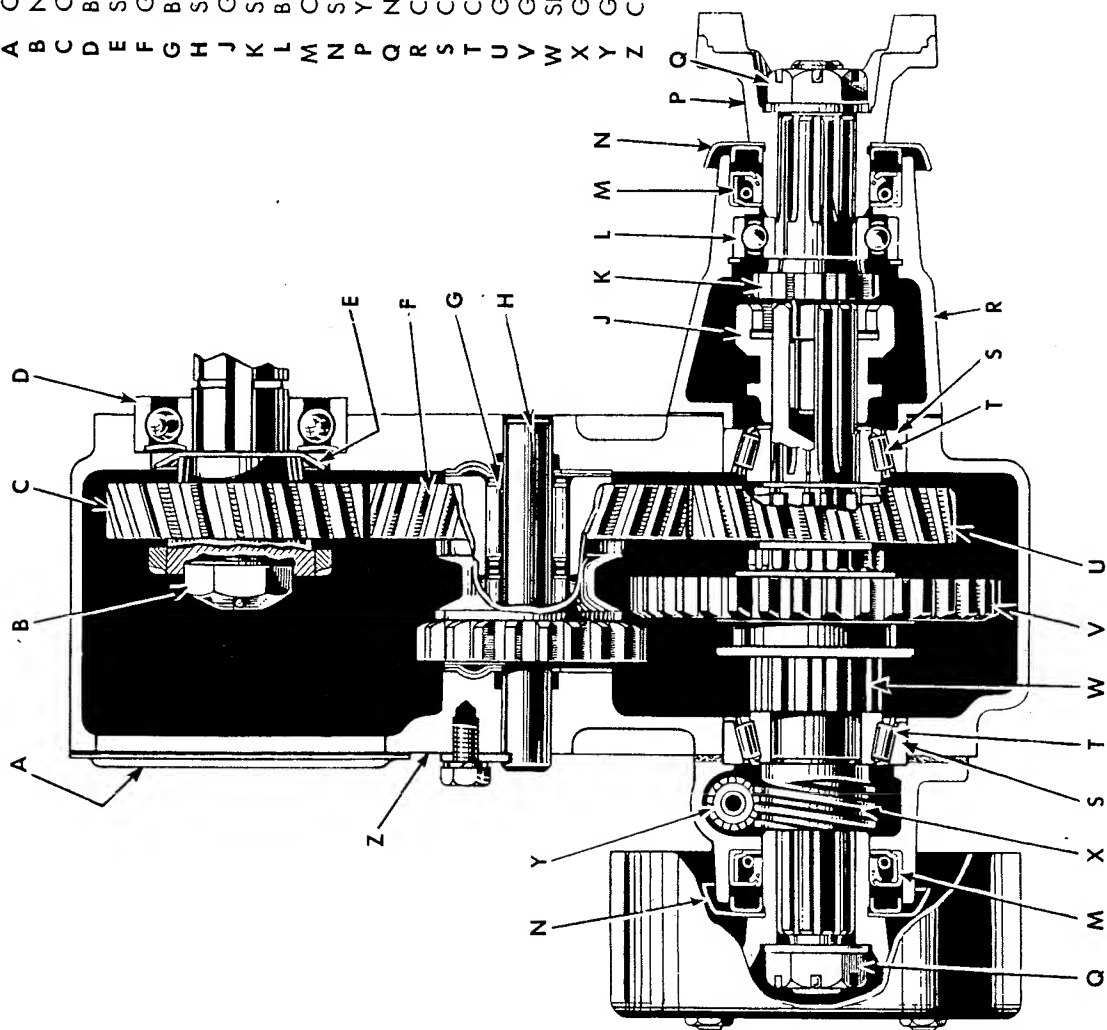


FIGURE 08-1—TRANSFER CASE ASSEMBLY—SECTIONAL VIEW

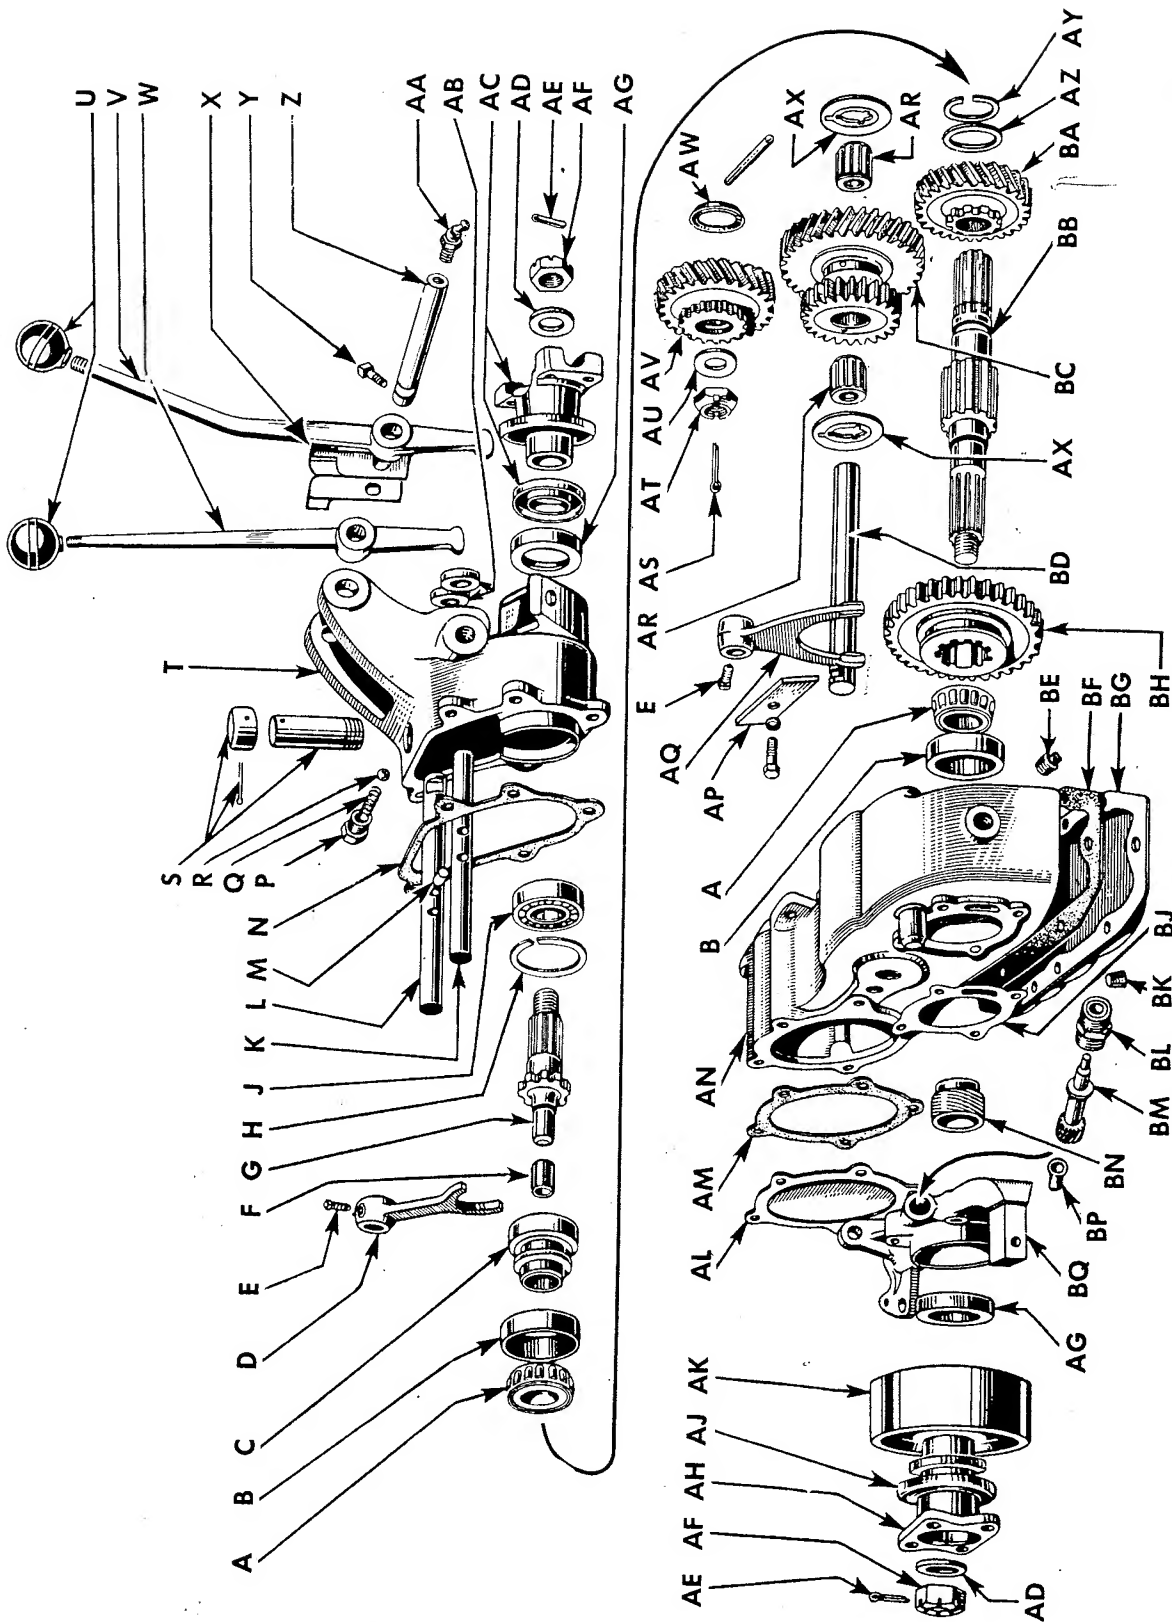

RA PD 342241

FIGURE 08-2—TRANSFER CASE ASSEMBLY—EXPLODED VIEW

Key	Part Name	Ford Part No.	Willys Part No.	Group Number	Key	Part Name	Ford Part No.	Willys Part No.	Group Number
A	CONE and ROLLERS	FM-GP-7723	WO-51575	0803	AJ	SHIELD	FM-GP-7776	WO-A-1111	0803
B	CUP	FM-01Y-1202	WO-52883	0803	AK	DRUM	FM-GP-2614	WO-A-1002	1201
C	GEAR	FM-GP-7762	WO-A-992	0803	AL	COVER	FM-GPW-7706	WO-A-1508	0801
D	FORK	FM-GPW-7711	WO-A-960	0805A	AM	GASKET	FM-GPW-7707	WO-A-1509	0801
E	SCREW	FM-355550-S	WO-A-963	0805A	AN	CASE	FM-GPW-7705	WO-A-1503	0801
F	BUSHING	FM-GP-7777-A	WO-A-987	0803	AP	PLATE	FM-GP-7767	WO-A-1001	0804
G	SHAFT	FM-GP-7761	WO-A-975	0803	AQ	FORK	FM-GP-7712	WO-A-959	0805A
H	SNAP RING	FM-GP-7783	WO-A-976	0803	AR	BEARING	FM-GP-7718-A	WO-A-924	0804
J	BEARING	FM-GP-7719	WO-A-1007	0803	AS	PIN	FM-72089-S	WO-5134	0802
K	ROD	FM-GPW-7786	WO-A-1504	0805	AT	NUT	FM-356134-S18	WO-A-520	0802
L	ROD	FM-GP-7787	WO-A-962	0805	AU	WASHER	FM-356519-S	WO-A-1410	0802
M	INTER LOCK	FM-GP-7789	WO-A-965	0805	AV	GEAR	FM-GP-7722	WO-A-1510	0802
N	GASKET	FM-GPW-7773	WO-A-957	0801	AW	WASHER	FM-GPW-7080	WO-A-410	0704
P	PLUG	FM-355698-S	WO-A-967	0805	AX	WASHER	FM-GP-7744	WO-A-1000	0804
Q	SPRING	FM-GP-7788	WO-A-966	0805	AY	SNAP RING	FM-GP-7784	WO-A-991	0803
R	BALL	FM-353075-S	WO-5599	0805	AZ	WASHER	FM-GP-7771	WO-A-990	0803
S	BREATHER, assembly	FM-GPW-7754	WO-A-934	0801	BA	GEAR	FM-GP-7766	WO-A-989	0803
T	CAP	FM-GPW-7774	WO-A-956	0801	BB	SHAFT	FM-GPW-7736	WO-A-8841	0803
U	BALL	FM-GP-7213	WO-A-971	0805B	BC	GEAR	FM-GP-7742	WO-A-999	0804
V	LEVER	FM-GPW-7793	WO-A-1505	0805B	BD	SHAFT	FM-GP-7743	WO-A-998	0804
W	LEVER	FM-GPW-7710	WO-A-1506	0805B	BE	PLUG	FM-353064-S	WO-5140	0801
X	SPRING	FM-GP-7799	WO-A-970	0805B	BF	GASKET	FM-GP-7709	WO-A-954	0801
Y	SCREW	FM-355378-S	WO-A-973	0805B	BG	COVER	FM-GP-7708	WO-A-953	0801
Z	PIN	FM-GP-7796	WO-A-972	0805B	BH	GEAR	FM-GP-7765	WO-A-988	0803
AA	FITTING	FM-353035-A-S8	WO-638224	0805B	BJ	SHIM SET	FM-GPW-18360	WO-A-6753	0801
AB	SEAL	FM-GP-7798-A	WO-A-974	0805	BK	PLUG	FM-353053	WO-A-1104	0801
AC	YOKE	FM-GP-7729	WO-A-1106	0803	BL	SLEEVE	FM-GPW-17333	WO-636396	0810
AD	WASHER	FM-356504-S	WO-636570	0803	BM	GEAR	FM-GPW-17271	WO-A-1512	0810
AE	PIN	FM-72089-S	WO-5134	0803	BN	GEAR	FM-GP-17285	WO-A-1511	0810
AF	NUT	FM-356125-S	WO-A-980	0803	BP	BUSHING	FM-GP-17277	WO-A-985	0810
AG	OIL SEAL	FM-GP-7770-A	WO-A-958	0803	BQ	CAP, w/BUSHING, assembly	FM-GPW-7768	WO-A-1507	0801
AH	FLANGE	FM-GP-4863	WO-A-1105	0803					

FIGURE 08-2A—LEGEND FOR 08-2—TRANSFER CASE ASSEMBLY—EXPLODED VIEW



## GROUP 08—TRANSMISSION TRANSFER CASE (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>0801—CASE AND COVERS (Cont'd)</b>						
12-3	3320-GPW-7768	FM-GPW-7768-B	WO-A-9330	CAP, transfer case output shaft rear bearing, w/BUSHING, assembly (SP-18-19-28) (Note 1)	1	
12-3		FM-350280-S	WO-A-9336	BOLT, hex-hd., S, dld. f/lkg-wire, $\frac{3}{8}$ -16NC-3 x 1	1	
		FM-350281-S	WO-A-9337	BOLT, hex-hd., S, dld. f/lkg-wire, $\frac{3}{8}$ -16NC-3 x 2 $\frac{1}{4}$	1	
		FM-350282-S	WO-A-9334	BOLT, hex-hd., S, dld. f/lkg-wire, $\frac{3}{8}$ -16NC-3 x 2 $\frac{1}{2}$	2	
		FM-356205-S	WO-A-1135	WASHER, flat, copper, $\frac{3}{8}$ I.D. x $\frac{5}{8}$ O.D. x $\frac{1}{8}$ thk.	4	.0042
08-1, 2 08-2			WO-A-9331	WIRE, locking	as req.	
	8080-18-15-9	FM-GPW-7705	WO-A-1503	CASE, transfer (SP-18-15-9)	1	11.11
08-1, 2		FM-GP-7708	WO-A-953	COVER, transfer case, bottom (SP-18-16-3)	1	.554
	H001-7025711	FM-20326-S7	WO-51485	BOLT, hex-hd., S, cd-pitd., $\frac{3}{8}$ -18NC-2 x $\frac{5}{8}$	10	
		FM-34806-S7	WO-51833	WASHER, lock, reg., S, cd-pitd., $\frac{5}{16}$ in.	10	
		FM-GPW-7706	WO-A-1508	COVER, transfer case, rear (SP-18-267-4)	1	.179
08-2	H001-1518007	FM-24348-S	WO-6412	BOLT, hex-hd., S, $\frac{3}{8}$ -16NC-2 x $\frac{3}{4}$	5	
	8080-18-155-2	FM-34807-S	WO-5010	WASHER, lock, reg., S, $\frac{3}{8}$ in.	5	
08-2		FM-GP-7709	WO-A-954	GASKET, transfer case bottom cover (SP-18-155-2) (also in GASKET SET, FM-GPW-18355-B, WO-A-7443)	1	.0585
	8080-18-223-2	FM-GPW-7773	WO-A-957	GASKET, transfer case output shaft front bearing cap (SP-18-223-2) (also available in GASKET SET, FM-GPW-18355-B, WO-A-7443)	1	
08-2	8080-18-324-2	FM-GPW-7707	WO-A-1509	GASKET, transfer case rear cover (SP-18-324-2) (also in GASKET SET, FM-GPW-18355-B, WO-A-7443)	1	.0112
	8080-18-352-5	FM-GPW-7756	WO-A-1435	GASKET, transfer case to transmission (SP-18-352-5) (also in GASKET SET, FM-GPW-18355-B, WO-A-7443)	1	
08-2		FM-353053-S	WO-A-1104	PLUG, drain, transfer case (pipe, I., ck-hd., $\frac{1}{2}$ in.) (SP-18-39-2)	1	
		FM-353064-S	WO-5140	PLUG, filler, transfer case (pipe, sq-hd., I., $\frac{1}{2}$ in.)	1	.0125
08-2	8080-18-228-7	FM-GP-7782-A	WO-A-982	SHIM, transfer case output shaft rear bearing cap (0.003 thk.) (SP-18-228-7) (also in SHIM SET, FM-GPW-18360, WO-A-6753)	as req.	
	8080-18-228-8	FM-GP-7782-B	WO-A-983	SHIM, transfer case output shaft rear bearing cap (0.010 thk.) (SP-18-228-8) (also in SHIM SET, FM-GPW-18360, WO-A-6753)	as req.	
08-2	8080-18-228-9	FM-GP-7782-C	WO-A-984	SHIM, transfer case output shaft rear bearing cap (0.031 thk.) (SP-18-228-9) (also in SHIM SET, FM-GPW-18360, WO-A-6753)	as req.	
	3320-GPW-18360	FM-GPW-18360	WO-A-6753	SHIM SET, transfer case output shaft rear bearing cap	as req.	.179
				(Consists of:		
				4 SHIM (0.003 thk.)		
				2 SHIM (0.010 thk.)		
				2 SHIM (0.031 thk.)		

## 0802—DRIVE GEAR

08-1, 2	8080-18-8-7	FM-GP-7722	WO-A-1510	GEAR, drive, transfer case (O.D. 4.104 in., 27 teeth) (SP-18-8-7)	1	4.06
08-1, 2		FM-356134-S18	WO-A-520	NUT, transmission mainshaft (S, hex., slotted, 7/16-16NC-2) (WG-T-9-50P)	1	
08-2	H001-0811055	FM-72089-S	WO-5134	PIN, cotter, split, S, 1/8 x 1 3/4	1	
08-2	9410-T84J-50 1/2-A	FM-356519-S	WO-A-1410	WASHER, transmission mainshaft nut (S, plain, 1 1/8 O.D. x 2 1/8 I.D. x 5/8 thk.) (WG-T-84J-50 1/2-A)	1	
<b>0803—OUTPUT SHAFT, GEARS, BEARINGS</b>						
08-1, 2	H012-1303030	FM-GP-7719	WO-A-1007	BEARING, ball, annular, single row, bore 1.1811 x 0.6299 (transfer case output clutch shaft) (MRC-206) (SKF-6206) (ND-3206)	1	.88
	8080-18-24-1	FM-GP-7777		BUSHING, transfer case output clutch shaft pilot (superseded by BUSHING, FM-GP-7777-A, WO-A-981)	1	
08-2	8080-18-24-1	FM-GP-7777-A	WO-A-987	BUSHING, transfer case output clutch shaft pilot (SP-18-24-1) (supersedes BUSHING, FM-GP-7777)	1	.0492
08-1, 2	H012-6136260	FM-GP-7723	WO-51575	CONE and ROLLERS, transfer case output shaft bearing (1.3125 diam. x 0.740 wide) (TIM-14131) (BT-BT-14131)	2	.44
08-1, 2	H012-6217320	FM-O1Y-1202	WO-52883	CUP, transfer case output shaft bearing (TIM-14276) (BT-BT-14276)	2	.192
	8080-K2-1-28	FM-GP-4865		FLANGE, companion, transfer case output shaft, rear (SP-K2-1-28) (for use with external contracting type hand brake)	1	1.86
	8080-K2-1-28-X	FM-GP-4863	WO-A-1105	FLANGE, companion, transfer case output shaft, rear, w/SHIELD, assembly (SP-K2-1-28-X) (contracting type brake)	1	
08-2, 09-1, 12-3	3320-GPW-4863	FM-GPW-4863	WO-116714	FLANGE, companion, transfer case output shaft, rear (SP-K2-1-68X) (for use with internal expanding type brake)	1	
08-1, 2; 12-3	8080-1244	FM-356125-S	WO-A-980	NUT, hex., slotted, S, 3/4-20NF-3 (SP-1244)	1	.0167
08-2, 12-3	H001-0811055	FM-72089-S	WO-5134	PIN, cotter, split, S, 1/8 x 1 3/4	1	.0217
12-3	8080-18-223-3	FM-356504-S	WO-636570	WASHER, special, flat	1	
		FM-GP-7746	WO-A-1134	GASKET, transfer case output shaft front and rear bearing cap oil seal (SP-18-223-3) (also in GASKET SET, FM-GPW-18355-B, WO-A-7443)	2	
08-1, 2	8080-18-166-1	FM-GP-7762	WO-A-992	GEAR, clutch, transfer case output shaft (10 internal teeth, 1.088 bore x 1.755 wide face, 2.411 diam.) (SP-18-466-1)	1	2.12
08-1, 2	8080-18-8-2	FM-GP-7765	WO-A-988	GEAR, sliding, transfer case output shaft (5.571 O.D. x 1.192 wide, 27 teeth) (SP-18-8-2)	1	5.001
08-1, 2	8080-18-8-1	FM-GP-7766	WO-A-989	GEAR, transfer case output shaft (4.101 O.D., 1.250 bore x 1.713, 27 teeth) (SP-18-8-1)	1	3.83
08-1, 2	H013-0500068	FM-GP-7770-A	WO-A-958	OIL SEAL, transfer case output shaft front and rear bearing cap (SP-62-463-2) (also in OIL SEAL SET, FM-GPW-18317, WO-A-7445)	2	
08-1	8080-5866X	FM-GP-7763	WO-A-1764	SHAFT, output, transfer case, w/BUSHING, assembly	1	5.865
08-2	G503-7036544	FM-GPW-7736	WO-A-8841	SHAFT, output, transfer case, w/NUT and WASHER, assembly (SP-18-362-4-5866-X)	1	
08-1, 2	8080-18-362-3	FM-GP-7761	WO-A-975	SHAFT, transfer case output clutch (SP-18-362-3)	1	2.71
	3320-GPW-7726	FM-GPW-7726	WO-A-8835	SHAFT, transfer case output clutch, w/NUT and WASHER	1	
	3320-GP-7747	FM-GP-7747	WO-A-978	SHIELD, dust, transfer case companion flange and universal joint end yoke (superseded by SHIELD, FM-GP-7776, WO-A-1111)	2	.038
08-1, 2	8080-5962X	FM-GP-7776	WO-A-1111	SHIELD, dust, transfer case companion flange and universal joint end yoke (SP-5962-X) (supersedes SHIELD, FM-GP-7747, WO-A-978)	2	.0906

Note 1—For use with internal expanding type hand brake.


## GROUP 08—TRANSMISSION TRANSFER CASE (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
0803—OUTPUT SHAFT, GEARS, BEARINGS (Cont'd)						
08-2	8080-22-381-19	FM-GP-7783	WO-A-976	SNAP RING, transfer case output clutch shaft bearing (SP-22-381-19)	1	.0251
08-2	8080-18-381-2	FM-GP-7784	WO-A-991	SNAP RING, transfer case output shaft (SP-18-381-2)	1	.0212
08-2	8080-710-W	FM-GP-7771	WO-A-990	WASHER, thrust, transfer case output shaft (SP-710-W)	1	.0542
01-2, 08-1, 2	8080-K2-4-88X	FM-GP-7729	WO-A-1106	YOKE, end, universal joint, transfer case, front (SP-K2-4-88X)	1	1.645
08-2	H001-0811055	FM-356125-S	WO-A-980	NUT, hex., slotted, S., $\frac{3}{4}$ -20NF-3	1	.0167
		FM-72089-S	WO-5134	PIN, cotter, split, S., $\frac{1}{8}$ x $1\frac{1}{4}$	1	
		FM-356504-S	WO-636570	WASHER, special, flat, $\frac{3}{4}$ in.	1	.0217
		0804—INTERMEDIATE SHAFT, GEAR, AND BEARINGS				
08-1, 2	H012-0708218	FM-GP-7718-A	WO-A-924	BEARING, transfer case intermediate shaft gear (HY-94322)	2	.228
08-1, 2	8080-18-5-1	FM-GP-7742	WO-A-999	GEAR, transfer case intermediate shaft (O.D. 4.962, 33 teeth) (SP-18-5-1)	1	7.20
08-2	8080-31-246-2	FM-GP-7767	WO-A-1001	PLATE, lock, transfer case intermediate shaft (SP-31-246-2)	1	.0046
08-1, 2	8080-1518009	FM-24328-S	WO-52189	BOLT, hex-hd., S., $\frac{3}{8}$ -16NC-2 x $\frac{5}{8}$	1	
		FM-34807-S2	WO-5010	WASHER, lock, S., SAE std., $\frac{3}{8}$ in.	1	
		FM-GP-7743	WO-A-998	SHAFT, transfer case, intermediate (SP-18-187-1)	1	.244
		FM-GP-7744	WO-A-1000	WASHER, thrust, transfer case intermediate shaft gear (SP-690-W)	2	.179
0805—SHIFTER RODS AND PARTS						
08-2	H002-0100140	FM-353075-S	WO-5599	BALL, poppet, transfer case shift rod (SP-50-80-1) (S., $\frac{3}{8}$ in.)	2	.0133
08-2	H013-0500007	FM-GP-7789	WO-A-965	INTERLOCK, transfer case shift rod (SP-18-12-1)	1	.0872
		FM-GP-7798		OIL SEAL, transfer case shift rod (SP-13-463-1) (superseded by OIL SEAL, FM-GP-7798-A, WO-A-974)	2	
		FM-GP-7798-A1		OIL SEAL, transfer case shift rod (superseded by OIL SEAL, FM-GP-7798-A, WO-A-974)	2	
		FM-GP-7798-A	WO-A-974	OIL SEAL, transfer case shift rod (SP-13-463-1) (also in OIL SEAL SET, FM-GPW-18317, WO-A-7445) (supersedes OIL SEAL, FM-GP-7798 and FM-GP-7798-A1)	2	
08-2	H013-0500007			PLUG, transfer case shift rod poppet (SP-854-D)	2	.0217
08-2	8080-854-D	FM-355698-S	WO-A-967	ROD, shift, transfer case, direct and underdrive (SP-18-67-5)	1	.782
08-2	8080-18-67-5	FM-GPW-7786	WO-A-1504	ROD, shift, transfer case, front wheel drive (SP-18-67-2)	1	.635
08-2	8080-18-67-2	FM-GP-7787	WO-A-962	SPRING, transfer case shift rod poppet (SP-22-72-5)	2	.0083
08-2	G102-0306647	FM-GP-7788	WO-A-966			
08-2	G102-0307508		WO-A-964	WIRE, lock, transfer case shift fork (16 gage) (SP-LW-1)	2	

## 0805A—FORKS

08-2	8080-18-66-1	FM-GP-7712	WO-A-959	FORK, transfer case shift rod, direct and underdrive (SP-18-66-1).....	1	.961
08-2	8080-18-66-7	FM-GPW-7711	WO-A-960	FORK, transfer case shift rod, front wheel drive (SP-18-66-7).....	1	1.026
08-2		FM-355550-S	WO-A-963	SCREW, set, S., $\frac{3}{8}$ -24NF, head did., f/c-pin, $\frac{3}{4}$ in. diam. (SP-7450).....	2	.0258
0805B—SHIFT LEVER AND PARTS						
08-2	8080-39-Q-20	FM-GP-7213	WO-A-971	BALL, transfer case shift lever handle (SP-39-Q-20).....	2	
08-2	3320-GPW-1101735-A	FM-353035-S8 FM-GPW-1101735-A	WO-638224 WO-A-3784	FITTING, grease, 45 degree (transfer case shift lever pivot pin) (AD-1636).....	1	.0591
01-2, 08-2, 18-1	8080-25-Q-1055	FM-GPW-7793	WO-A-1505	GROMMET, transfer case shift levers (leather).....	1	.358
01-2, 08-2, 18-1	8080-25-Q-1056	FM-GPW-7710	WO-A-1506	LEVER, shift, transfer case, direct and underdrive (SP-25-Q-1055).....	1	1.14
08-2	8080-363-SP	FM-GP-7796	WO-A-972	LEVER, shift, transfer case, front wheel drive (SP-25-Q-1056).....	1	1.14
08-2	8080-433-D	FM-355378-S	WO-A-973	PIN, pivot, transfer case shift lever (SP-363-SP).....	1	.179
08-2	G160-0389772	FM-GP-7799	WO-A-970	SCREW, set, sq-hd., S., $\frac{5}{16}$ -18NC-2 x $\frac{1}{2}$ (SP-433-D).....	1	.0167
				SPRING, transfer case shift lever (SP-97-Q-13).....	2	.0104
0809—MOUNTINGS						
	3320-355741-S	FM-355741-S	WO-A-147	BOLT, support, transfer case (hex-hd., S., $\frac{1}{2}$ -20NF x 3).....	1	.0641
	G085-2307356	FM-38846-S2	WO-5916	NUT, reg., hex., S., $\frac{1}{2}$ -20NF-2.....	1	
	H001-1518011	FM-34809-S	WO-5009	WASHER, lock, S., SAE std., $\frac{1}{2}$ in.....	1	
	3320-GPW-5084	FM-356524-S	WO-634762	WASHER, S., $1\frac{1}{2}$ O.D. x $\frac{21}{32}$ I.D. x $\frac{1}{16}$ thk.....	1	.0125
	3320-74-6038	FM-GPW-5084 FM-74-6038	WO-A-6740	CUP, retaining, transfer case support insulator.....	1	.0498
	3320-74-6038-A	FM-74-6038-A	WO-634758	INSULATOR, transfer case support (superseded by INSULATOR, FM-74-6038-A, WO-634758).....	1	.167
	3320-GPW-7781-A	FM-GPW-7781-A	WO-634759	INSULATOR, transfer case support (supersedes INSULATOR, FM-74-6038) SNUBBER, transfer case support insulator.....	1	.0782
0810—SPEEDOMETER DRIVE GEARS						
08-2	G067-2300040	FM-GP-17277	WO-A-985	ADAPTER, speedometer (ORD-B7044232) (Note 1).....	1	
08-1, 2	8080-18-452-2	FM-GP-17285	WO-A-1511	BUSHING, speedometer drive gear, transfer case (SP-475-2) (also in GEAR SET, FM-GPW-18314, WO-A-7837).....	1	
08-1, 08-2, 12-3	8080-18-453-3	FM-GPW-17271	WO-A-1512	GEAR, drive, speedometer, transfer case (SP-18-452-2) (also in GEAR SET, FM-GPW-18314, WO-A-7837).....	1	
	3320-GPW-18314	FM-GPW-18314	WO-A-7837	GEAR, driven, speedometer, transfer case (SP-18-453-3) (also in GEAR SET, FM-GPW-18314, WO-A-7837).....	1	.145
				GEAR SET, speedometer drive, transfer case.....	1	
				(Consists of:		
			WO-A-985	1 BUSHING		
			WO-A-1511	1 GEAR, drive		
			WO-A-1512	1 GEAR, driven		
08-2, 12-3	8080-18-454-2	FM-GPW-17333	WO-636396	SLEEVE, speedometer driven gear, transfer case (SP-18-454-2).....	1	.228


Note 1—Only for vehicles modified by MWO ORD G503-W9. (See page 3).

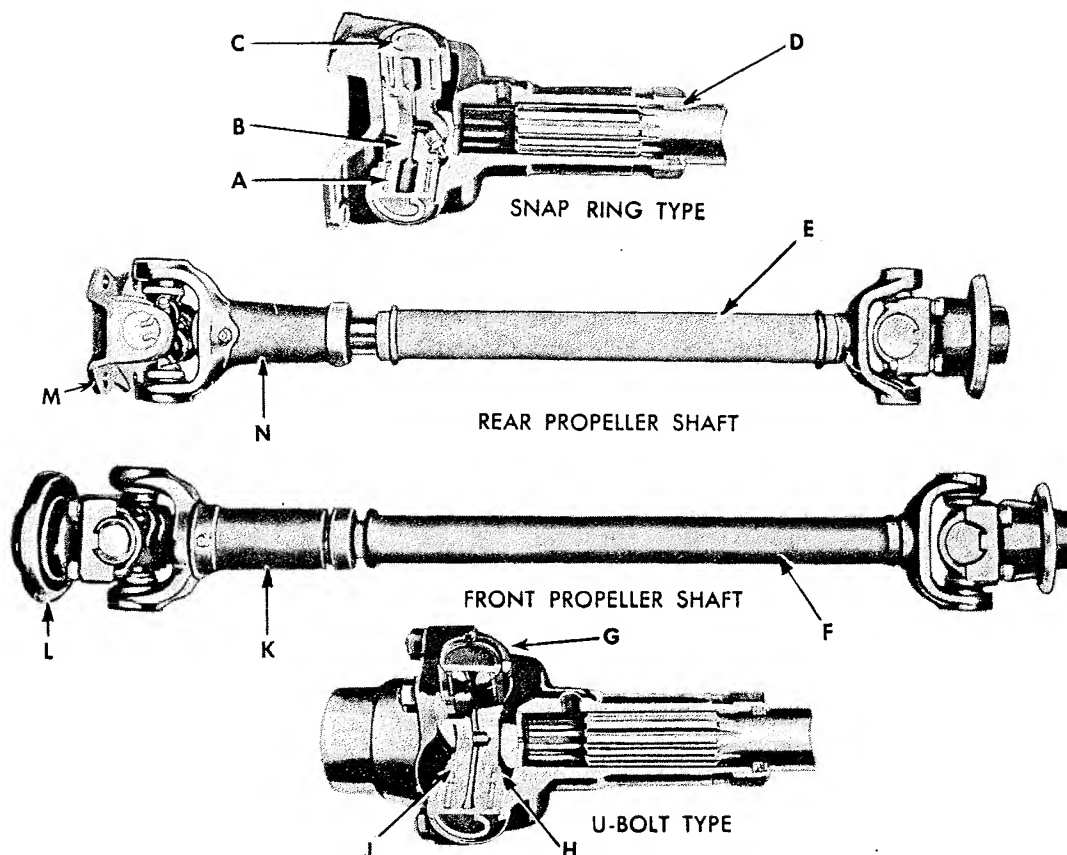

Key	Part Name	Ford Part No.	Willys Part No.	Group No.
A	BEARING.....	FM-GPW-7074.....	WO-A-8270.....	0902
B	JOURNAL.....	FM-GPW-7084.....	WO-A-1426.....	0902
C	SNAP RING.....	FM-01Y-7096.....	WO-A-945.....	0902
D	WASHER.....	FM-GP-7097.....	WO-A-943.....	0902
E	TUBE.....	FM-GPW-4605.....	WO-A-1429.....	0901
F	TUBE.....	FM-GPW-3370.....	WO-A-1428.....	0901
G	U-BOLT.....	FM-01Y-4529.....	WO-A-490.....	0902
H	RETAINER.....	FM-01Y-7083.....	WO-A-940.....	0902
J	GASKET.....	FM-01T-7078-A.....	WO-A-941.....	0902
K	SHAFT, assembly.....	FM-GPW-3365.....	WO-A-1326.....	0901
L	FLANGE.....	FM-GP-4863.....	WO-A-1105.....	0803
M	YOKE.....	FM-GP-4866.....	WO-A-950.....	0902
N	SHAFT, assembly.....	FM-GPW-4602.....	WO-A-1327.....	0901

RA PD 342274

FIGURE 09-1—PROPELLER SHAFTS AND UNIVERSAL JOINTS

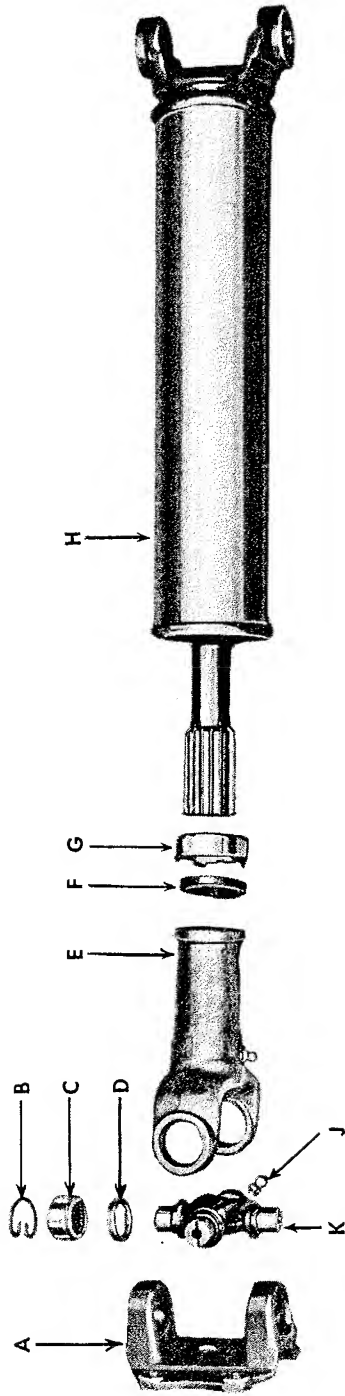

Key	Part Name	Ford Part No.	Willys Part No.	Group Number
A	YOKE.....	FM-GP-4866	WO-A-950	0902
B	SNAP RING.....	FM-01Y-7096	WO-A-945	0902
C	BEARING.....	FM-GPW-7074	WO-A-8270	0902
D	RETAINER.....	FM-01Y-7083	WO-A-940	0902
E	YOKE.....	FM-GP-4841	WO-A-935	0902
F	WASHER.....	FM-GP-7097	WO-A-943	0902
G	CAP.....	FM-GP-7077	WO-A-942	0902
H	TUBE.....	FM-GPW-4605	WO-A-935	0901
J	FITTING.....	FM-353043-57	WO-638792	0902
K	JOURNAL.....	FM-GPW-7084	WO-A-1426	0902

RA PD 342226

FIGURE 09-2—REAR PROPELLER SHAFT AND UNIVERSAL JOINT

GROUP 09—PROPELLER SHAFT AND UNIVERSAL JOINTS

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
GROUP 09—PROPELLER SHAFT AND UNIVERSAL JOINTS						
0901—PROPELLER SHAFT ASSEMBLIES						
09-1	8080-8996-SF	FM-GPW-3365	WO-A-1326	SHAFT, propeller, front, assembly (SP-8996-SF)	1	10.52
09-1	8080-8897-SF	FM-GPW-4602	WO-A-1327	SHAFT, propeller, rear, assembly (SP-8997-SF)	1	12.28


## GROUP 09—PROPELLER SHAFT AND UNIVERSAL JOINTS (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>0901—PROPELLER SHAFT ASSEMBLIES (Cont'd)</b>						
09-1	G503-7036583	FM-GPW-3370	WO-A-1428	TUBE, front propeller shaft, assembly (SP-K2-62-210-212-1907)	1	
09-1, 9-2	3320-GPW-4605	FM-GPW-4605	WO-A-1429	TUBE, rear propeller shaft, assembly (SP-K2-62-210-212-1718)	1	3.54
<b>0902—UNIVERSAL JOINTS</b>						
09-1, 2		FM-GPW-7074	WO-A-1434	BEARING, universal joint, assembly (also in KIT, FM-21C-18397-B, WO-A-1433)	16	
09-2	G104-1531588	FM-GP-7077	WO-A-942	CAP, dust, propeller shaft sleeve yoke (SP-K2-14-69)	2	.0494
09-2	H002-0504203	FM-353043-S7	WO-638792	FITTING, grease, 1/4-28NF (AD-1641) (GM-110347)	4	
09-1	G104-2194015	FM-O1T-7078-A	WO-A-941	GASKET, propeller shaft universal joint trunnion (SP-KS-86-89)	16	
09-1, 2		FM-GPW-7084	WO-A-1426	JOURNAL, universal joint, assembly (also in KIT, FM-21C-18397-B, WO-A-1433)	4	
	G104-1648701	FM-GPW-18397		KIT, repair, propeller shaft universal joint (superseded by KIT, FM-21C-18397-B, WO-A-1433)	1	2.085
	G104-1648701	FM-21C-18397-B	WO-A-1433	KIT, repair, propeller shaft universal joint (SP-K5-21-X) (supersedes KIT, FM-21C-18397-B, WO-A-1433)	1	
				(Consists of:		
		FM-GPW-7074	WO-A-1434	4 BEARING, assembly		
		FM-GPW-7084	WO-A-1426	1 JOURNAL, assembly		
		FM-O1Y-7096	WO-A-945	4 SNAP RING		
09-1, 2	G104-1769782	FM-O1Y-7083	WO-A-940	RETAINER, propeller shaft universal joint trunnion gasket (SP-K2-76-17)	16	
09-1, 2	G104-1767649	FM-GP-7733	WO-A-979	SHIELD, dust, propeller shaft flange	1	
	G104-1769782	FM-O1Y-7096	WO-A-945	SNAP RING, propeller shaft universal joint trunnion bearing (SP-K2-7-29) (also in KIT, FM-21C-18397-B, WO-A-1433)		
09-1	G085-2212230	FM-O1Y-4529	WO-A-490	U-BOLT, propeller shaft universal joint bearing (3/8-24NF) (SP-K2-94-29)	10	.0217
		FM-33784-S2	WO-A-941	NUT, reg., hex., S, 5/16-24NF-3 (SP-5-74-11)	6	.0641
		FM-GP-4533		STRAP, propeller shaft universal joint U-bolt nut	12	
09-1, 2	H001-7025711	FM-34806-S7	WO-51833	WASHER, lock, S, cd-pltd., SAE std., 5/16 in.	3	.0104
	C104-1842846	FM-GP-7097	WO-A-943	WASHER, seal, propeller shaft sleeve yoke (cork, split, 1 I.D. x 1 3/4 O.D. x 5/8 thk.) (SP-K2-16-53)	12	
09-1, 2	G104-1882251	FM-GP-4866	WO-A-950	YOKE, flange, propeller shaft (SP-K2-2-329)	2	.0129
	3320-GP-7092	FM-GP-7092	WO-A-936	YOKE, sleeve, propeller shaft, assembly	1	1.352
09-2	G104-1882330	FM-GP-4841	WO-A-935	YOKE, sleeve, propeller shaft, w/PLUG, assembly (SP-K2-3-198X)	2	1.81

# **GROUP 10—FRONT AXLE** **1000—FRONT AXLE ASSEMBLY**

GROUP 10—FRONT AXLE				
1000—FRONT AXLE ASSEMBLY				
3320-GPW-3001	FM-GPW-3001	WO-A-1212	AXLE, front, assembly (Bendix joints) (SP-2058-1) ( <i>Note 1</i> )	1
		WO-A-1387	AXLE, front, assembly (Rzeppa joints) (SP-7658-2) ( <i>Note 1</i> )	1
		WO-A-1765	AXLE, front, assembly (Spicer joints) (SP-SKA-34172) ( <i>Note 1</i> )	1
		WO-A-6442	AXLE, front, assembly (Tracta joints) ( <i>Note 1</i> )	1
		WO-A-6029	AXLE, front, w/BRAKES, DRUMS and HUBS, assembly (WO-A-6029 has either Tracta or Bendix universal joints; FM-GPW-3001 has Rzeppa universal joints. Complete assemblies are interchangeable).	1
		WO-A-5498	AXLE, front, w/BRAKES, DRUMS and HUBS, assembly (Bendix joints) ( <i>Note 2</i> )	1
				154.25

*Note 1*—These four axles are interchangeable as assemblies. *Note 2*—These three axles are interchangeable as assemblies.

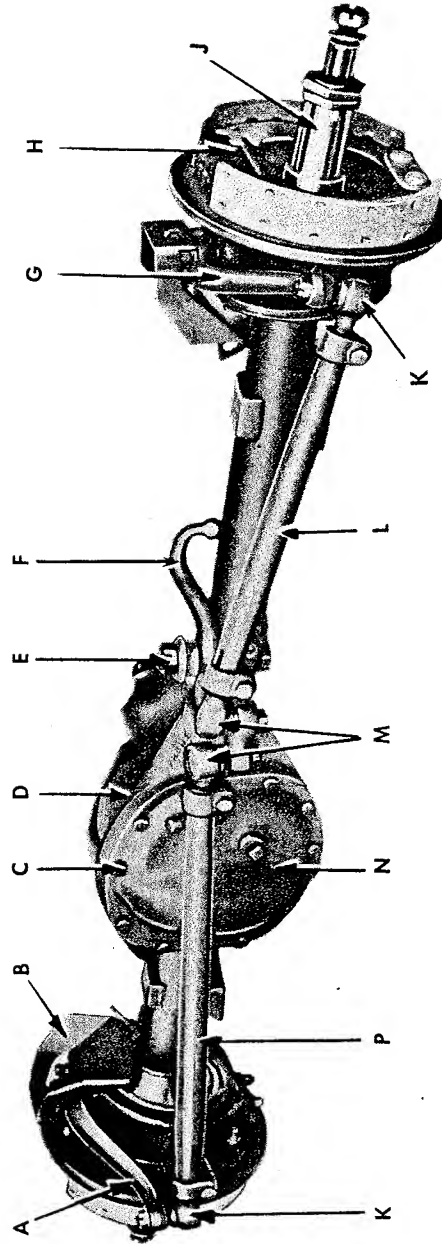

Key	Part Name	Ford Part No.	Willlys Part No.	Group No.
A	ARM	FM-GP-3112	WO-A-1710	1006
B	GUARD	FM-GPW-2096	WO-A-1457	1209B
C	BOLT	FM-20046-S2	WO-51523	1001
D	HOUSING, w/TUBE, assembly	FM-GPW-3074	WO-A-1703	1001
E	NUT	FM-356124-S	WO-A-876	1401
F	CRANK, bell	FM-GPW-3131-B	WO-A-8249	1401
G	ARM	FM-GPW-3113	WO-A-1712	1006
H	BRAKE, assembly (L.H.)	FM-GPW-2011	WO-A-1496	1200
J	SPINDLE, assembly	FM-GP-3105	WO-A-851	1006
K	END, assembly	FM-GP-3292	WO-A-847	1402
L	TUBE	FM-GPW-3282	WO-A-1709	1402
M	END, assembly	FM-GP-3291	WO-A-838	1402
N	COVER	FM-GP-4016-A	WO-A-10231	1001
P	TUBE	FM-GP-3281	WO-A-1705	1402


RA PD 342275

**FIGURE 10-1—FRONT AXLE ASSEMBLY AND STEERING LINKAGE**





CHUCK LEWIS MOTORS  
POST OFFICE BOX 791  
LARAMIE, WYOMING  
82070

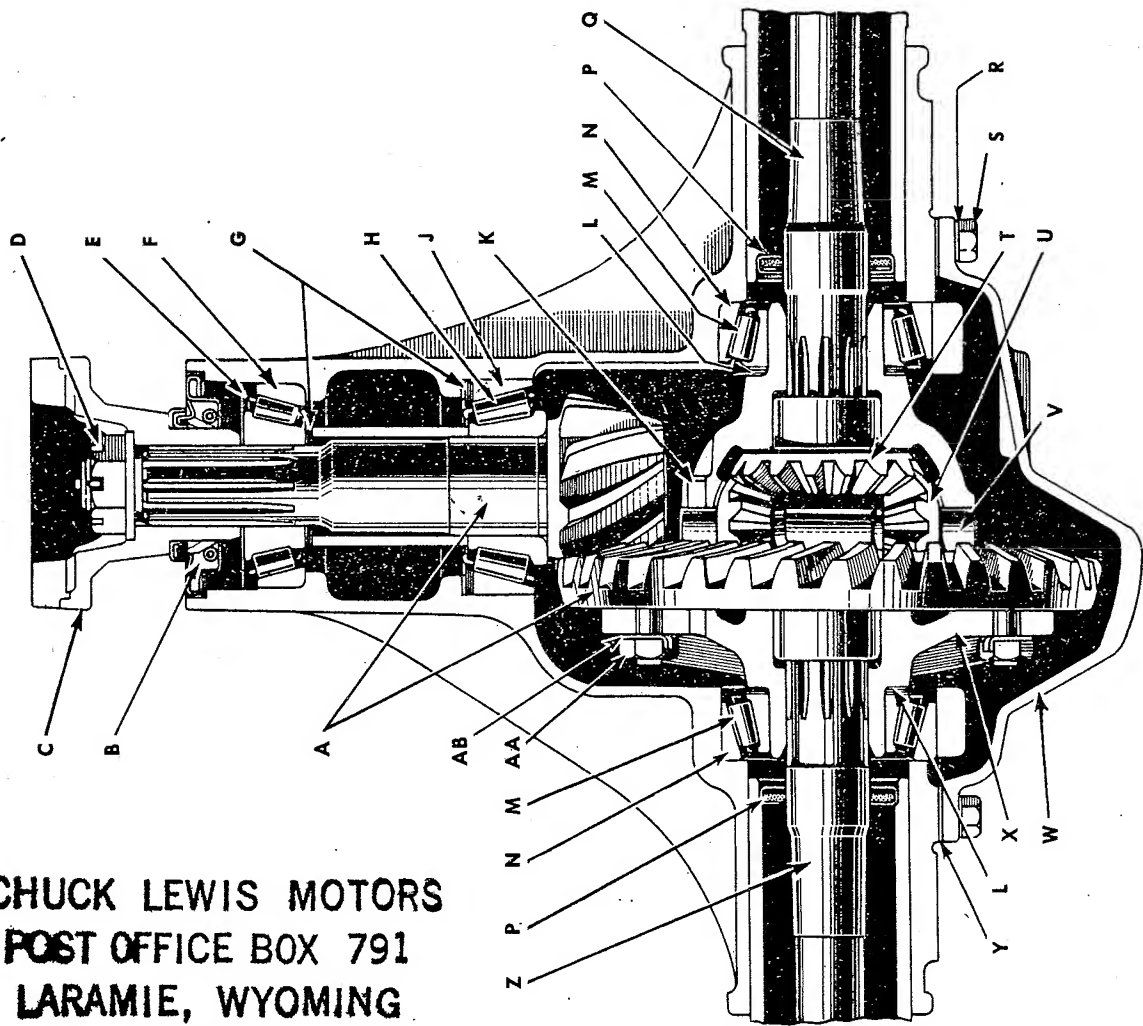


Key	Part Name	Ford Part No.	Willlys Part No.	Group No.
A	GEAR SET	FM-GPW-14209	WO-A-789	1003
B	OIL SEAL	FM-GP-4676-A	WO-639265	1003
C	YOKE	FM-GP-4842	WO-A-1445	1003
D	NUT	FM-356126-S	WO-636569	1003
E	CONE and ROLLERS	FM-GP-4630	WO-52878	1003
F	CUP	FM-GP-4628	WO-52879	1003
G	SHIM SET	FM-GPW-18386	WO-A-6745	1003
H	CONE and ROLLERS	FM-86H-4621	WO-52876	1003
J	CUP	FM-86H-4616	WO-52877	1003
K	PIN	FM-GP-4241	WO-636360	1003
L	SHIM SET	FM-GPW-18388	WO-A-6744	1003
M	CONE and ROLLERS	FM-GP-4221	WO-52880	1003
N	CUP	FM-GP-4222	WO-52881	1003
P	OIL SEAL	FM-GP-3034	WO-A-779	1007
Q	SHAFT	FM-GP-3017-A	WO-A-1729	1007
R	WASHER	FM-34941-S7	WO-53029	1001
S	BOLT	FM-20046-S2	WO-51523	1001
T	GEAR	FM-GPW-4236	WO-A-794	1003
U	PINION	FM-GPW-4215	WO-A-796	1003
V	SHAFT	FM-GP-4211	WO-A-798	1003
W	COVER	FM-GP-4016-A	WO-A-10231	1001
X	CASE	FM-GP-4206	WO-A-793	1003
Y	GASKET	FM-GP-4035	WO-A-782	1001
Z	SHAFT	FM-GP-3016-A	WO-A-1727	1007
AA	SCREW	FM-355511-S	WO-A-871	1003
AB	STRAP	FM-GP-4281	WO-A-792	1003

FIGURE 10-2—DIFFERENTIAL ASSEMBLY—SECTIONAL VIEW

RA PD 342231

## GROUP 10—FRONT AXLE (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>1001—HOUSING</b>		
10-1, 2	8080-16976	FM-GP-4015 FM-GP-4016 FM-GP-4016-A	WO-A-781 WO-A-10231	COVER, axle housing (superseded by COVER, FM-GP-4016-A, WO-A-10231) COVER, axle housing (SP-16976) (superseded by COVER, FM-GP-4016-A, WO-A-10231) COVER, axle housing (supersedes COVER, FM-GP-4015; and COVER, FM-GP-4016, WO-A-781)	1 1	1.76
10-1, 2	H001-1013461	FM-20046-S2	WO-51523	BOLT, hex-hd., S., $\frac{5}{16}$ -18NC-2 x $\frac{3}{4}$	10	
10-2		FM-34941-S7	WO-53029	WASHER, lock, S., cd-pltd., external tooth, flat type $\frac{5}{16}$ in.	10	
10-2	8080-16409	FM-GP-4035	WO-A-782	GASKET, axle housing cover (SP-16409) (also in GASKET SET, FM-GPW-18365-B, WO-A-7830)	1	
10-1, 3	8080-17310-X	FM-GPW-3074	WO-A-1703	HOUSING, front axle, w/TUBE, assembly (SP-17310-X)	1	.039
		FM-358048-S	WO-636577	PLUG, drain, axle housing (SP-S-780)	1	30.19
		FM-353051-S	WO-636538	PLUG, filler, axle housing (SP-50-39-4)	1	
	8080-16979	FM-GP-4022	WO-A-870	PLUG, vent, axle housing (SP-16979)	1	.07
				<b>1003—DIFFERENTIAL CASE, GEARS, PINION AND BEARINGS</b> (Items in this group are the same for front and rear axles)		
10-2		FM-355699-S	WO-636527	BOLT, differential case bearing cap (hex-hd., S., $\frac{1}{2}$ -13NC x $2\frac{1}{4}$ (SP-A-1358-1))	4	.0167
		FM-34922-S	WO-636528	WASHER, lock, hv., S., internal tooth, flat type, $\frac{1}{2}$ in.	4	
10-2	8080-16386	FM-GP-4206	WO-A-793	CASE, differential (SP-16386)	1	
10-2	H012-6146900	FM-GP-4221	WO-52880	CONE and ROLLERS, differential case bearing (1.625 bore x 1.000) (TIM-24780)	2	.57
10-2	H012-6160380	FM-86H-4671	WO-52876	CONE and ROLLERS, differential drive pinion inner bearing (1.375 bore x 1.125) (TIM-31593)	1	.641
10-2	H012-6122200	FM-GP-4630	WO-52878	CONE and ROLLERS, differential drive pinion outer bearing (1.125 bore x 0.875) (TIM-02872)	1	
10-2	H012-6220960	FM-GP-4222	WO-52881	CUP, differential case bearing (3.000 O.D. x 0.8125 wide) (TIM-24721)	1	.505
10-2	H012-6224700	FM-86H-4616	WO-52877	CUP, differential drive pinion inner bearing (3.00 O.D. x 0.9375 wide) (TIM-31520)	2	.31
10-2	H012-6209750	FM-GP-4628	WO-52879	CUP, differential drive pinion outer bearing (2.875 O.D. x 0.6875 wide) (TIM-02820)	1	.342
	8080-16969X	FM-GPW-4207		DIFFERENTIAL, assembly (superseded by DIFFERENTIAL, assembly, FM-GPW-4212, WO-A-788)	1	.293
		FM-GPW-4212	WO-A-788	DIFFERENTIAL, assembly (SP-16968-X) (includes CASE, GEARS and PINIONS) (supersedes DIFFERENTIAL, assembly, FM-GPW-4207)	1	
	8080-S-171	FM-GP-4661	WO-636565	GASKET, differential drive pinion shaft oil seal (SP-S-171) (also in GASKET SET, FM-GPW-18365-B, WO-A-7830)	1	17.43
10-2	8080-16385	FM-GPW-4236	WO-A-794	GEAR, differential, side (2.758 O.D. x $1\frac{1}{8}$ in. wide, 16 teeth) (SP-16385) (also in KIT, FM-GPW-18389, WO-A-6816)	1	

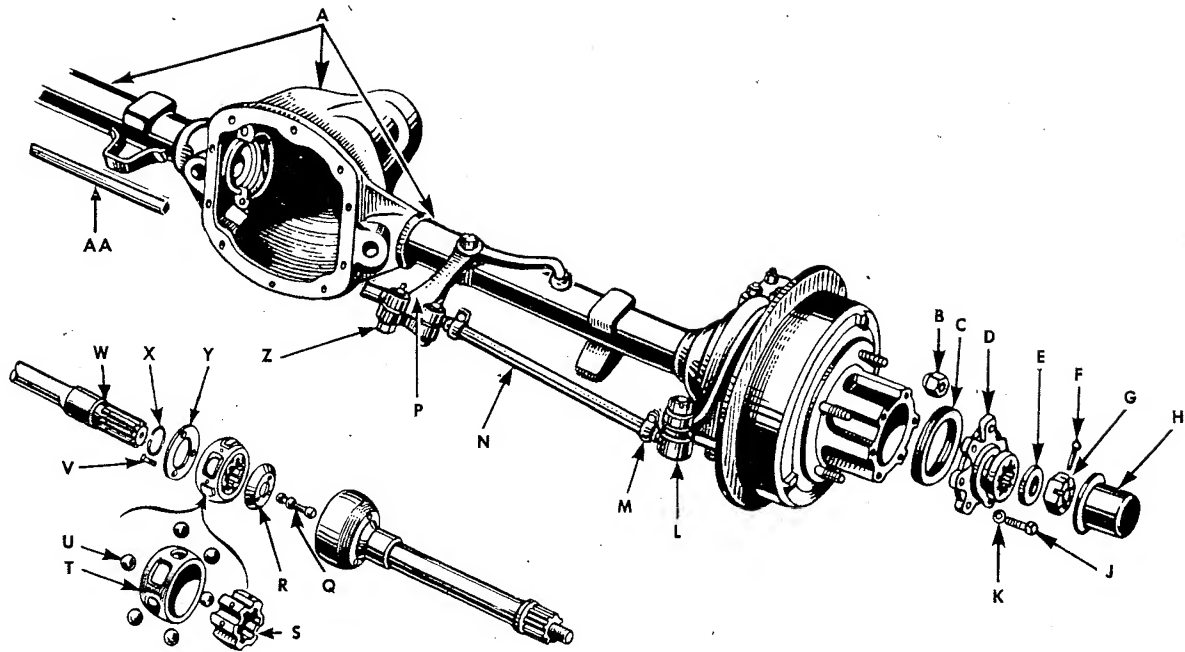

Key	Part Name	Ford Part No.	Willys Part No.	Group No.
A	HOUSING.....	FM-GPW-3074.....	WO-A-1703.....	1001
B	NUT.....	FM-GP-1013.....	WO-A-475.....	1007
C	SHIM SET.....	FM-GPW-18336.....	WO-A-6881.....	1007
D	FLANGE.....	FM-GP-3204.....	WO-A-868.....	1007
E	WASHER.....	FM-356504-S.....	WO-636570.....	1007
F	PIN.....	FM-72089-S.....	WO-5134.....	1007
G	NUT.....	FM-356126-S.....	WO-636569.....	1007
H	CAP.....	FM-GP-1139.....	WO-A-869.....	1302
J	BOLT.....	FM-GP-1110.....	WO-A-760.....	1007
K	WASHER.....	FM-34807-S2.....	WO-5010.....	1007
L	END, assembly.....	FM-GP-3292.....	WO-A-847.....	1402
M	CLAMP.....	FM-51-3287.....	WO-A-1706.....	1402
N	TUBE.....	FM-GPW-3282.....	WO-A-1709.....	1402
P	CRANK, bell.....	FM-GPW-3131-B.....	WO-A-8249.....	1401 ✓
Q	PIN.....	FM-GP-3218.....	WO-A-1723.....	1007
R	PILOT.....	FM-GP-3219.....	WO-A-1722.....	1007
S	RACE.....	FM-GP-3221.....	WO-A-1720.....	1007
T	CAGE.....	FM-GP-3215-A.....	WO-A-1719.....	1007
U	BALL.....	FM-358074-S.....	WO-A-1721.....	1007
V	SCREW.....	FM-24622-S.....	WO-A-1725.....	1007
W	SHAFT.....	FM-GP-3017-A.....	WO-A-1729.....	1007
X	SNAP RING.....	FM-GP-3216.....	WO-A-1726.....	1007
Y	RETAINER.....	FM-GP-3217.....	WO-A-1724.....	1007
Z	END, assembly.....	FM-GP-3291.....	WO-A-838.....	1402
AA	TUBE.....	FM-GP-3281.....	WO-A-1705.....	1402

RA PD 342281

FIGURE 10-3—FRONT AXLE HOUSING, SHAFT AND RELATED PARTS


## GROUP 10—FRONT AXLE (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
10-2	8080-16412X	FM-GPW-4209	WO-A-789	<b>1003—DIFFERENTIAL CASE, GEARS, PINIONS AND BEARINGS</b> (Cont'd) (Items in this group are the same for front and rear axles)  GEAR, drive, differential, w/PINION (SP-16412-X) (matched set). (also in KIT, FM-GPW-18384, WO-A-6816) KIT, repair, differential case gears. (Consists of: 2 GEAR, side 2 PINION, differential 1 SHAFT, pinion 2 WASHER, thrust, pinion 2 WASHER, thrust, side gear) KIT, repair, differential drive gear and pinion. (Consists of: 1 GEAR, drive, w/PINION 1 NUT, hex., slotted, S, $\frac{3}{4}$ -16NF-3 8 SCREW, drive gear 4 STRAP, lock) OIL SEAL, differential drive pinion bearing (superseded by OIL SEAL, FM-GP-4676-A, WO-639265) OIL SEAL, differential drive pinion bearing (leather) (SP-14223) (supersedes OIL SEAL, FM-GP-4676, WO-636569) PIN, lock, differential pinion shaft (SP-13449) PINION, differential (1.140 O.D., 10 teeth) (SP-15926) (also in KIT, FM-GPW-18389, WO-A-6816) SCREW, differential drive gear (SP-6-73-414) (also in KIT, FM-GPW-18384, WO-A-6816) SHAFT, differential pinion (SP-16075) (also in KIT, FM-GPW-18389, WO-A-6816) SHIELD, dust, universal joint end yoke, differential drive pinion shaft (SP-15099) SHIM, adjusting, differential case bearing (0.003 thk.) (SP-S-58) (also in SHIM SET, FM-GPW-18388, WO-A-6744) SHIM, adjusting, differential case bearing (0.005 thk.) (SP-S-59) (also in SHIM SET, FM-GPW-18388, WO-A-6744) SHIM, adjusting, differential case bearing (0.010 thk.) (SP-S-74) (also in SHIM SET, FM-GPW-18388, WO-A-6744) SHIM, adjusting, differential case bearing (0.030 thk.) (SP-S-75) (also in SHIM SET, FM-GPW-18388, WO-A-6744)	1	
	3320-GPW-18389	FM-GPW-18389	WO-A-6743		1	3.93
	8080-16385	FM-GPW-4236	WO-A-794			
		FM-GPW-4215	WO-A-796			
		FM-GP-4211	WO-A-798			
		FM-GP-4230	WO-A-797			
		FM-GP-4228	WO-A-795			
	3320-GPW-18384	FM-GPW-18384	WO-A-6816		1	10.25
		FM-GPW-4209	WO-A-789			
		FM-356126-S	WO-636569			
		FM-355511-S	WO-A-871			
		FM-GP-4281	WO-A-792			
		FM-GP-4676	WO-636569			
10-2	H013-0500071	FM-GP-4676-A	WO-639265		1	.228
10-2	8080-13449	FM-GP-4241	WO-636360		1	
10-2	8080-15926	FM-GPW-4215	WO-A-796		1	.0355
10-2	8080-6-73-414	FM-355511-S	WO-A-871		2	
10-2	8080-16075	FM-GP-4211	WO-A-798		8	.0125
	8080-15099	FM-GP-4666	WO-636568		1	
	8080-S-58	FM-GP-4229-A	WO-A-784		1	
	8080-S-59	FM-GP-4229-B	WO-A-785		as req.	
	8080-S-74	FM-GP-4229-C	WO-A-786		as req.	
	8080-S-75	FM-GP-4229-D	WO-A-787		as req.	



## GROUP 10—FRONT AXLE (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>1006—STEERING KNUCKLE, FLANGE AND ARM</b>						
10-1	8080-17302-X	FM-GPW-3113	WO-A-1712	ARM, steering knuckle, upper left (SP-17302-X) (includes king PIN and lock PIN)	1	3.08
10-1, 5	8080-17301-X	FM-GPW-3112	WO-A-1710	ARM, steering knuckle, upper right (SP-17301-X) (includes king PIN and lock PIN)	1	3.08
10-5	H001-4171601	FM-33786-S2	WO-636575	NUT, hex., S., $\frac{3}{8}$ x 24NF-2	8	
		FM-357703-S	WO-A-1714	STUD, S., $\frac{3}{8}$ x 24NF-3 x 2 (SP-S-962)	4	
		FM-GPW-3325	WO-A-5504	STUD, S., $\frac{3}{8}$ x 24NF-3 x 2	4	
	H001-1518009	FM-34807-S2	WO-5010	WASHER, lock, S., SAE std., $\frac{3}{8}$ in.	8	
	8080-6-73-1117	FM-355526-S	WO-A-821	BOLT, hex-hd., S., $\frac{3}{8}$ x 24NF-3 x 1 $\frac{1}{8}$ (steering knuckle stop) (SP-6-73-1117)	2	.0125
	8080-17003	FM-33911-S2	WO-A-873	NUT, lock, hex., S., $\frac{3}{8}$ x 24NF-3 (SP-6-75-101)	2	
		FM-GP-3205		BUSHING, front wheel spindle, inside (superseded by BUSHING, FM-GP-3205-A, WO-A-853)	2	
10-4, 5	8080-17003	FM-GP-3205-A	WO-A-853	BUSHING, front wheel spindle, inside (bz., 1.251 I.D. x 1.376 O.D. x $\frac{7}{8}$ wide) (WP-17003) supersedes BUSHING, FM-GP-3205)	8	1.271
10-5	8080-17048-X	FM-GP-3140	WO-A-828	CAP, king pin bearing, lower, assembly (SP-17048-X) (includes king PIN and lock PIN)	2	
10-4	H001-4171601	FM-33786-S2	WO-636575	NUT, hex., S., $\frac{3}{8}$ x 24NF-2	8	
10-5		FM-357703-S	WO-A-1714	STUD, S., $\frac{3}{8}$ x 24NF-3 x 2	8	
	H001-1518009	FM-34807-S2	WO-5010	WASHER, lock, S., SAE std., $\frac{3}{8}$ in.	8	
10-4, 5	H012-6133330	FM-GP-3161	WO-52940	CONE and ROLLERS, king pin bearing (0.625 bore x $\frac{3}{8}$ wide) (TIM-11590)	4	.375
10-4, 5	H012-6216140	FM-GP-3162	WO-52941	CUP, king pin bearing (1.687 O.D. x $\frac{3}{8}$ wide) (TIM-11520)	4	.179
	8080-17041	FM-GP-1092	WO-A-820	GASKET, steering knuckle oil seal (SP-17041) (also in GASKET SET, FM-GPW-18365-B, WO-A-7830)	2	.0236
10-5	8080-17222	FM-GP-3149-A	WO-A-812	KNUCKLE, steering, left (SP-17222)	1	3.03
10-5	8080-17221	FM-GP-3148-A	WO-A-811	KNUCKLE, steering, right (SP-17221)	1	3.03
		FM-GP-3135	WO-A-819	OIL SEAL, felt, steering knuckle (half) (SP-17019) (also in GASKET SET, FM-GPW-18365-B, WO-A-7830)	4	
10-4, 5	8080-17135-X	FM-GP-1088	WO-A-813	OIL SEAL, steering knuckle, assembly (half) (SP-17135-X)	4	.326
10-4	8080-16991	FM-GP-3115	WO-A-824	PIN, king (SP-16991)	4	.155
10-4	8080-S-957	FM-GP-3122	WO-A-825	PIN, lock, king pin (S., $\frac{1}{8}$ O.D. x $\frac{3}{8}$ lgh.) (SP-S-957)	4	.0062
10-5		FM-353064-S	WO-5140	PLUG, filler, steering arm knuckle (SP-50-39-2)	2	.0125
	8080-17133-X	FM-GP-1089	WO-A-814	RETAINER, steering knuckle oil seal (SP-17133-X)	4	
10-5		FM-24327-S7	WO-52132	BOLT, hex-hd., S., cd-pltd., $\frac{3}{8}$ x 24NF-2 x $\frac{5}{8}$	16	.0026
10-5		FM-34941-S7	WO-53029	WASHER, lock, S., cd-pltd., external tooth, flat type, $\frac{3}{8}$ in.	16	.0019
	8080-16992-1	FM-GP-3117-A	WO-A-830	SHIM, adjusting, king pin bearing (0.003 thk.) (SP-16992-1) (also in SHIM SET, FM-GPW-18338, WO-A-6882)	as req.	
	8080-16992-2	FM-GP-3117-B	WO-A-831	SHIM, adjusting, king pin bearing (0.005 thk.) (SP-16992-2) (also in SHIM SET, FM-GPW-18338, WO-A-6882)	as req.	

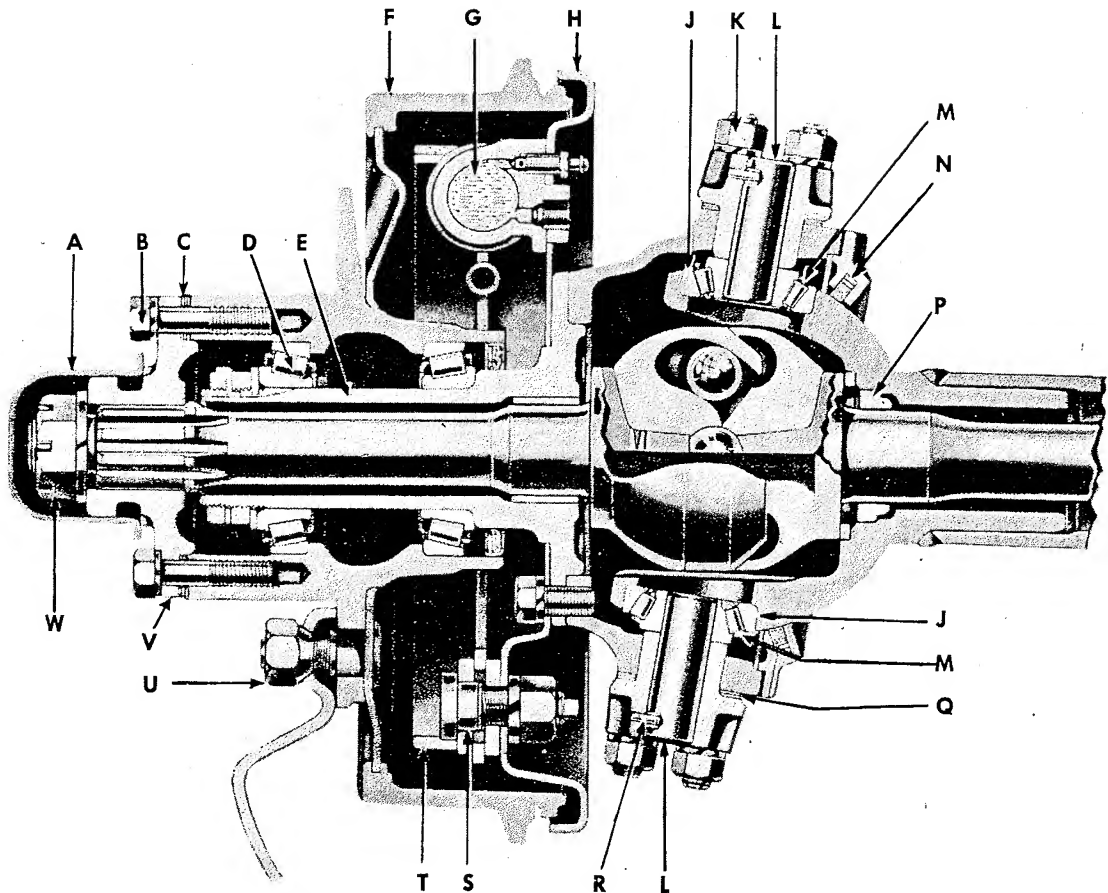


Key	Part Name	Ford Part No.	Willys Part No.	Group No.
A	CAP.....	FM-GPW-1139.....	WO-A-869.....	1302
B	BOLT.....	FM-GP-1110.....	WO-A-760.....	1007
C	SHIM.....	FM-GP-3208-A.....	WO-A-862.....	1007
D	CONE and ROLLERS.....	FM-GP-1201.....	WO-52942.....	1301A
E	SPINDLE.....	FM-GP-3105.....	WO-A-851.....	1006
F	HUB and DRUM (L.H.).....	FM-GP-1103.....	WO-A-1689.....	1302
	HUB and DRUM (R.H.).....	FM-GP-1102.....	WO-A-1690.....	1302
G	CYLINDER, assembly.....	FM-GPW-2061.....	WO-A-1484.....	1207
H	PLATE.....	FM-GP-2013.....	WO-A-8898.....	1203
J	CUP.....	FM-GP-3162.....	WO-52941.....	1006
K	NUT.....	FM-33786-S2.....	WO-636575.....	1006
L	PIN.....	FM-GP-3115.....	WO-A-824.....	1006
M	CONE and ROLLERS.....	FM-GP-3161.....	WO-52940.....	1006
N	OIL SEAL.....	FM-GP-1088.....	WO-A-813.....	1006
P	BUSHING.....	FM-GP-3205-A.....	WO-A-853.....	1006
Q	SHIM.....	FM-GPW-18338.....	WO-A-6882.....	1006
R	PIN.....	FM-GP-3122.....	WO-A-825.....	1006
S	PIN.....	FM-91A-2027.....	WO-637889.....	1203
T	SHOE, assembly.....	FM-GP-2018.....	WO-116549.....	1202
U	NUT (L.H. thd.).....	FM-GP-1013.....	WO-A-475.....	1302A
	NUT (R.H. thd.).....	FM-GP-1012.....	WO-A-476.....	1302A
V	FLANGE.....	FM-GP-3204.....	WO-A-868.....	1007
W	NUT.....	FM-356126-S.....	WO-636569.....	1007

RA PD 342271

FIGURE 10-4—FRONT AXLE STEERING KNUCKLE,  
UNIVERSAL JOINT AND RELATED PARTS—SECTIONAL VIEW



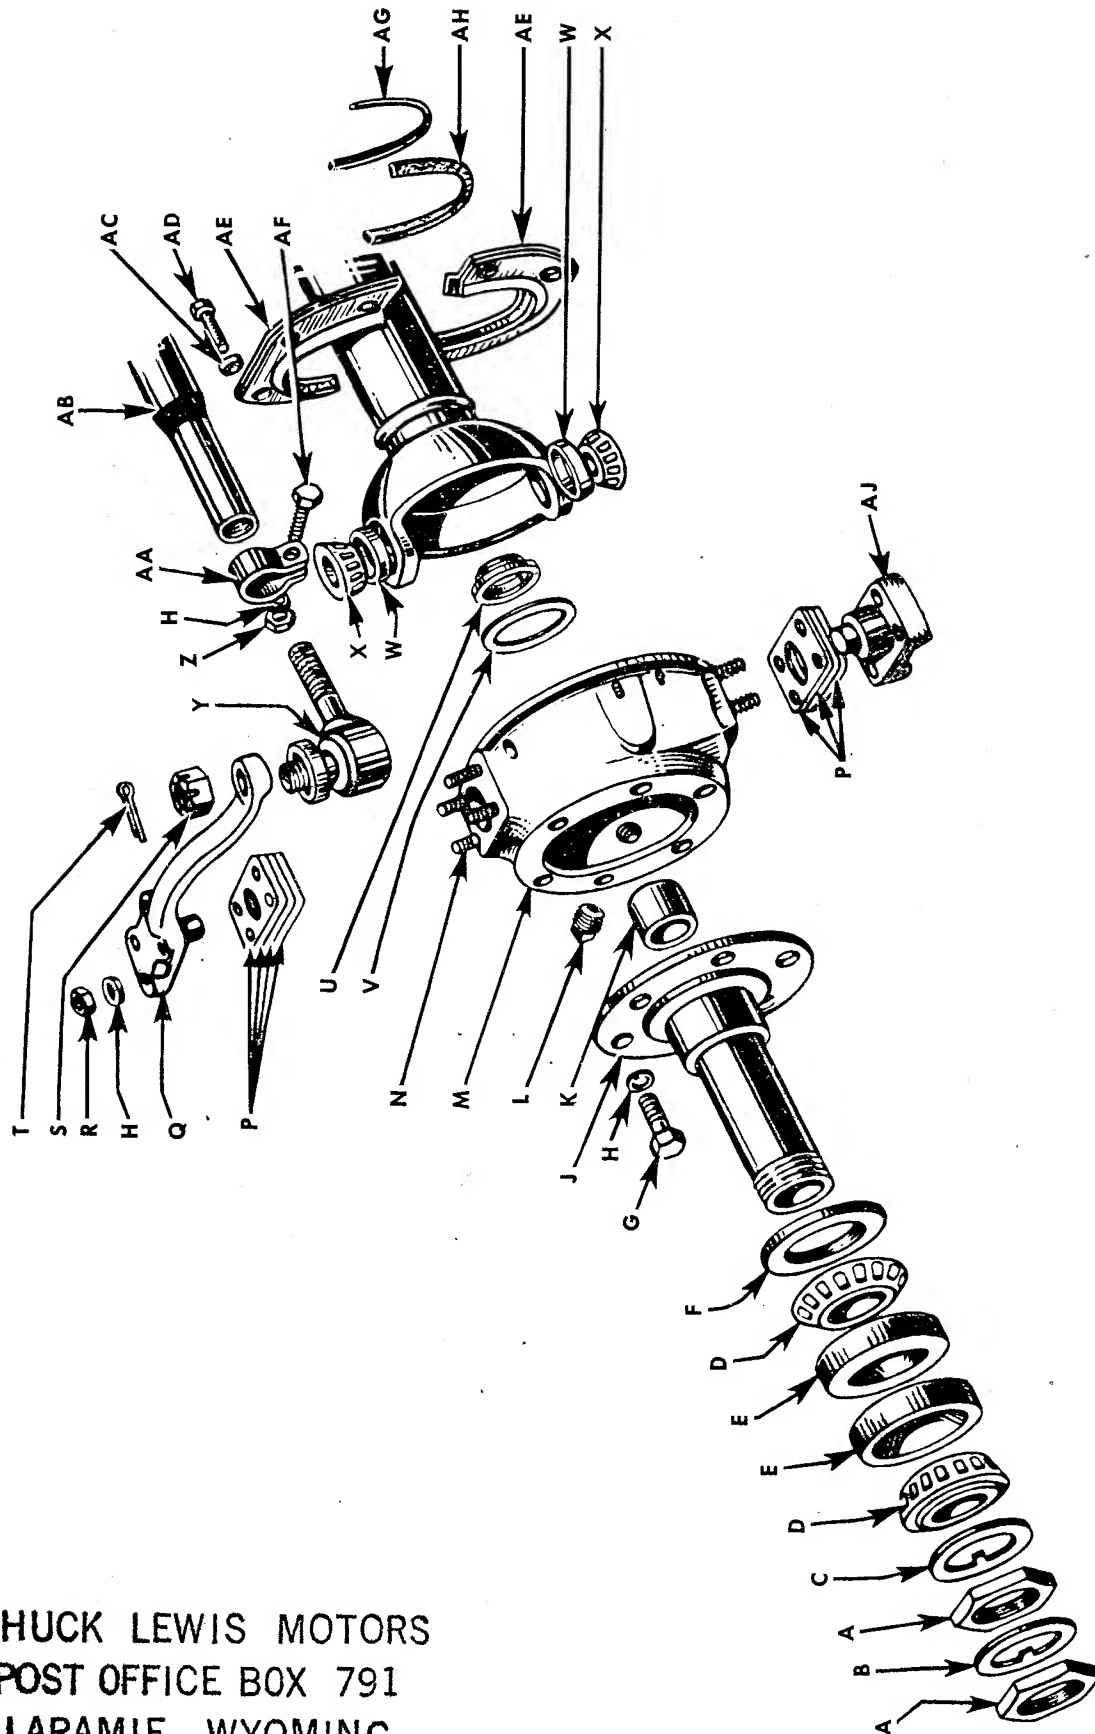

RA PD 342280

FIGURE 10-5—FRONT AXLE STEERING KNUCKLE AND RELATED PARTS—EXPLODED VIEW


CHUCK LEWIS MOTORS  
POST OFFICE BOX 791  
LARAMIE, WYOMING  
82070

Key	Part Name	Ford Part No.	Willys Part No.	Group No.	Key	Part Name	Ford Part No.	Willys Part No.	Group No.
A	NUT.....	FM-GP-4252.....	WO-A-866.....	1301A	T	PIN.....	FM-72034-S.....	WO-A-1642.....	1402
B	WASHER.....	FM-GP-1124.....	WO-A-867.....	1301A	U	BUSHING.....	Willys only.....	WO-A-6362.....	1007
C	WASHER.....	FM-GP-1218.....	WO-A-865.....	1301A	V	WASHER.....	FM-GP-3374.....	WO-A-780.....	1007
D	CONE and ROLLERS.....	FM-GP-1201.....	WO-52942.....	1301A	W	CUP.....	FM-GP-3162.....	WO-52941.....	1006
E	CUP.....	FM-GP-1202.....	WO-52943.....	1301A	X	CONE and ROLLERS.....	FM-GP-3161.....	WO-52940.....	1006
F	OIL SEAL.....	FM-GP-1177.....	WO-A-864.....	1301B	Y	END, assembly.....	FM-GP-3292.....	WO-A-847.....	1402
G	BOLT.....	FM-355552-S.....	WO-5140.....	1006	Z	NUT.....	FM-33800-S7.....	WO-52542.....	1402
H	WASHER.....	FM-34807-S2.....	WO-5010.....	1006	AA	CLAMP.....	FM-51-3287.....	WO-A-1706.....	1402
J	SPINDLE.....	FM-GP-3105.....	WO-A-851.....	1006	AB	TUBE.....	FM-GPW-3281.....	WO-A-1705.....	1402
K	BUSHING.....	FM-GP-3205-A.....	WO-A-853.....	1006	AC	WASHER.....	FM-34941-S7.....	WO-53029.....	1006
L	PLUG.....	FM-353064-S.....	WO-5140.....	1006	AD	BOLT.....	FM-24327-S7.....	WO-52132.....	1006
M	KNUCKLE.....	FM-GP-3148-A.....	WO-A-811.....	1006	AE	OIL SEAL.....	FM-GP-1088.....	WO-A-813.....	1006
N	STUD.....	FM-357703-S.....	WO-A-1714.....	1006	AF	BOLT.....	FM-24916-S2.....	WO-A-1707.....	1402
P	SHIM SET.....	FM-GPW-18338.....	WO-A-6882.....	1006	AG	STRIP.....	FM-GP-3139.....	WO-A-818.....	1006
Q	ARM.....	FM-GPW-3112.....	WO-A-1710.....	1006	AH	OIL SEAL.....	FM-GP-3135.....	WO-A-819.....	1006
R	NUT.....	FM-33786-S2.....	WO-636575.....	1006	AJ	CAP.....	FM-GP-3140.....	WO-A-828.....	1006
S	NUT.....	FM-351059-S7.....	WO-10558.....	1402					

## GROUP 10—FRONT AXLE (Cont'd)

SNL G-503

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>1006—STEERING KNUCKLE, FLANGE AND ARM (Cont'd)</b>						
	8080-16992-3	FM-GP-3117-C	WO-A-832	SHIM, adjusting, king pin bearing (0.010 thk.) (SP-16992-3) (also in SHIM SET, FM-GPW-18338, WO-A-6882)	as req.	
	8080-16992-4	FM-GPW-3117-D	WO-A-833	SHIM, adjusting, king pin bearing (0.030 thk.) (SP-16992-4) (also in SHIM SET, FM-GPW-18338, WO-A-6882)	as req.	
10-4, 5	3320-GPW-18338	FM-GPW-18338	WO-A-6882	SHIM SET, adjusting, king pin bearing (Consists of: 4 SHIM, 0.003 thk. 4 SHIM, 0.005 thk. 8 SHIM, 0.010 thk. 6 SHIM, 0.030 thk.)	1	.228
10-1, 4, 5	8080-17202-X	FM-GP-3105	WO-A-851	SPINDLE, front wheel, w/BUSHING, assembly (SP-17202-X)	2	3.763
10-5		FM-355552-S	WO-A-877	BOLT, hex-hd., S, $\frac{3}{8}$ -24NF-2 x $\frac{3}{4}$	12	.0167
10-5	H001-1518009	FM-34807-S2	WO-5010	WASHER, lock, S, SAE std., $\frac{3}{8}$ in.	12	
10-5	8080-16983	FM-GP-3139	WO-A-818	STRIP, pressure, steering knuckle oil seal (rubber) (SP-16983) (also in GASKET SET, FM-GPW-18365-B, WO-A-7830)	4	
<b>1007—AXLE SHAFTS AND UNIVERSAL JOINTS</b>						
10-3, 6		FM-358074-S	WO-A-1721	BALL, universal joint (S, $\frac{11}{16}$ ) (for Rzeppa joint) (also in KIT, FM-GPW-18391, WO-A-7111)	12	
10-5			WO-A-6362	BUSHING, front axle shaft, outer (SP-17361) (NP-38493) (required when replacing Bendix or Rzeppa joint with Tracta)	2	
10-3, 6		FM-GP-3215-A	WO-A-1719	CAGE, front axle universal joint (SP-17230) (for Rzeppa joint) (also in KIT, FM-GPW-18391, WO-A-7111)	2	
10-3, 4		FM-GP-3204	WO-A-868	FLANGE, drive, front axle shaft (SP-17153)	2	1.385
10-3, 4	8080-6-13-124	FM-GP-1110	WO-A-760	BOLT, hex-hd., S, $\frac{3}{8}$ -16NC-2 x $1\frac{1}{2}$ (SP-G-13-124)	12	.0155
10-3, 4	H001-4217800	FM-356126-S	WO-636569	NUT, hex, slotted, S, $\frac{3}{4}$ -16NF-3 (SP-S-1135)	2	.0167
10-3	H001-0811055	FM-72089-S	WO-5134	PIN, cotter, split S, $\frac{1}{8}$ x $1\frac{1}{4}$	2	
10-3	H001-1518009	FM-34807-S2	WO-5010	WASHER, lock, S, SAE std., $\frac{3}{8}$ in.	12	
10-3		FM-356504-S	WO-636570	WASHER, plain, S, $\frac{3}{4}$ in. (SP-1056)	2	.0217
			WO-A-6361	JOINT, universal, axle shaft, assembly (SP-17356-X)	2	
			WO-A-6471	KIT, repair, axle shaft and universal joint, left (Tracta joint)	1	
			WO-A-6472	KIT, repair, axle shaft and universal joint, right (Tracta joint)	1	

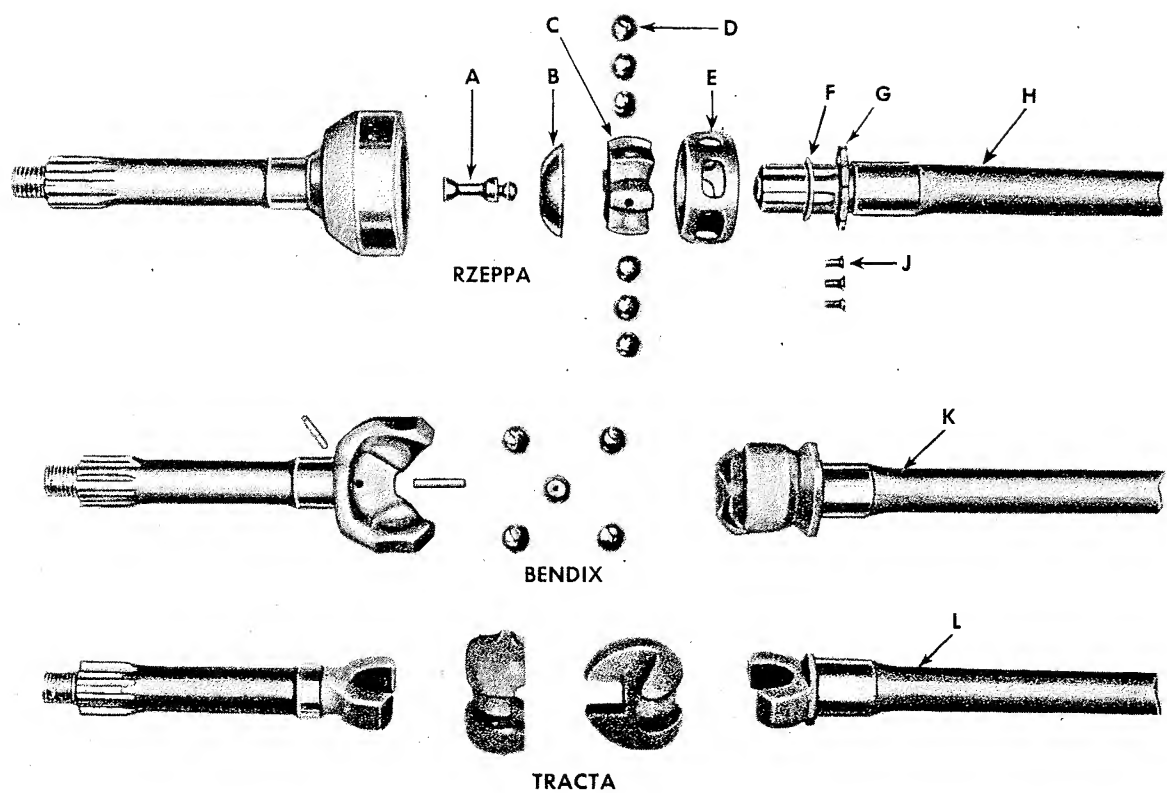

Key	Part Name	Ford Part No.	Willys Part No.	Group No.
A	PIN.....	FM-GP-3218.....	WO-A-1723.....	1007
B	PILOT.....	FM-GP-3219.....	WO-A-1722.....	1007
C	RACE.....	FM-GP-3221.....	WO-A-1720.....	1007
D	BALL.....	FM-358074-S.....	WO-A-1712.....	1007
E	CAGE.....	FM-GP-3215-A.....	WO-A-1719.....	1007
F	SNAP RING.....	FM-GP-3216.....	WO-A-1726.....	1007
G	RETAINER.....	FM-GP-3217.....	WO-A-1724.....	1007
H	SHAFT.....	FM-GP-3016-A.....	WO-A-1727.....	1047
J	SCREW.....	FM-24622-S2.....	WO-A-1725.....	1007
K	SHAFT, w/JOINT, assembly.....		WO-A-8837.....	1007
L	SHAFT, w/JOINT, assembly.....		WO-A-6030.....	1007

RA PD 342273

FIGURE 10-6—FRONT AXLE UNIVERSAL JOINTS

## GROUP 10—FRONT AXLE (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>1007—AXLE SHAFTS AND UNIVERSAL JOINTS (Cont'd)</b>		
	3320-GPW-18391	FM-GPW-18391	WO-A-7111	KIT, repair, front axle universal joint (for Rzeppa joint)	1	9.37
				(Consists of:		
				12 BALL, universal joint		
		FM-358074-S	WO-A-1712	2 CAGE, universal joint ball		
		FM-GP-3215-A	WO-A-1719	2 PILOT, universal joint		
	8080-17233	FM-GP-3219	WO-A-1722	2 PIN, universal joint pilot		
	8080-17224	FM-GP-3218	WO-A-1723	2 RACE, universal joint ball, inner		
	8080-17231	FM-GP-3221	WO-A-1720	2 RETAINER, axle shaft, universal joint		
	8080-17216	FM-GP-3217	WO-A-1724	2 SNAP RING, axle shaft retainer		.0016
		FM-GP-3216	WO-A-1726	6 SCREW, axle shaft retainer		
		FM-24622-S	WO-A-1725	OIL SEAL, axle shaft, inner end (SP-17036)		.0938
10-2	H013-0500030	FM-GP-3034	WO-A-779	OIL SEAL, front axle shaft, outer end (SP-17153) (use with Bendix or Rzeppa joints)	2	.0943
	H013-0500034	FM-GP-3031-A	WO-A-778	PILOT, front axle universal joint (SP-17233) (for Rzeppa joint) (also in KIT,	2	.375
10-3, 6		FM-GP-3219	WO-A-1722	FM-GPW-18391, WO-A-7111)		
10-3, 6		FM-GP-3218	WO-A-1723	PIN, front axle universal joint pilot (SP-17224) (for Rzeppa joint) (also in KIT,	2	.156
10-3, 6		FM-GP-3221	WO-A-1720	FM-GPW-18391, WO-A-7111)		
10-3, 6		FM-GP-3217	WO-A-1724	RACE, front axle universal joint, inner (SP-17231) (for Rzeppa joint) (also in KIT,	2	
10-3, 6		FM-24622-S2	WO-A-1725	FM-GPW-18391, WO-A-7111)		
10-2, 3	8080-17122-4	FM-GP-3017-A	WO-A-1729	RETAINER, axle shaft, front axle universal joint (SP-17216) (for Rzeppa joint) (also in KIT, FM-GPW-18391, WO-A-7111)	6	2.981
10-2, 6	8080-17122-3	FM-GP-3016-A	WO-A-6383	SCREW, fl-hd., S, No. 8 (0.164)-32NC-2 x 1 1/2 (SP-17217) (for Rzeppa joint) (also in KIT, FM-GPW-18391, WO-A-7111)	1	2.883
			WO-A-1727	SHAFT, front axle, inner, left (SP-17122-4) (for Rzeppa joint)	1	
			WO-A-6384	SHAFT, front axle, inner, right (SP-17122-3) (for Rzeppa joint)	1	
			WO-A-6382	SHAFT, front axle, inner, right (SP-17360-1) (NP-38492)	2	
			WO-A-1718	SHAFT, front axle, outer (SP-17359) (NP-38373)	1	
	8080-17121X	FM-GP-3200		SHAFT, front axle, outer (SP-17229) (for Rzeppa joint)	1	
	8080-17121X	FM-GP-3200-A	WO-A-1716	SHAFT, front axle, outer, w/universal JOINT, assembly (has Rzeppa universal joint) (superseded by SHAFT, FM-GP-3200-A, WO-A-1716)	1	13.37
10-6	8080-17128-4X	FM-GPW-3207-A	WO-A-6030	SHAFT, front axle, left, w/universal JOINT, assembly (SP-17121-X) (has Rzeppa universal joint) (supersedes SHAFT, FM-GP-3200)	1	
				SHAFT, front axle, left, w/universal JOINT, assembly (WO-A-6030 has Bendix or Tracta universal joint. FM-GPW-3207-A has Rzeppa universal joint. Complete assemblies are interchangeable)	1	16.52
			WO-A-810	SHAFT, front axle, left, w/universal JOINT, assembly (SP-17128-2X) (Bendix joint)	1	

3320-GPW-3227	FM-GPW-3227	WO-A-8836	SHAFT, front axle, left, w/universal JOINT and NUT, assembly (WO-A-8836 has Bendix or Tracta universal joint. FM-GPW-3227 has Rzeppa universal joint. Complete assemblies are interchangeable).	1	
8080-17128-3X	FM-GPW-3206-A	WO-A-6031	SHAFT, front axle, right, w/universal JOINT, assembly (WO-A-6031 has Bendix or Tracta universal joint. FM-GPW-3206-A has Rzeppa universal joint. Complete assemblies are interchangeable).	1	16.42
10-6	FM-GPW-3226	WO-A-809 WO-A-8837	SHAFT, front axle, right, w/universal JOINT, assembly (SP-17128-3X) (Bendix joint).	1	
10-4	FM-GP-3208-A	WO-A-862	SHIM, adjusting, front axle universal joint (0.010 thk.) (SP-17155-1) (also in SHIM SET, FM-GPW-18336, WO-A-6881).	1	
10-3	FM-GP-3208-B	WO-A-863	SHIM, adjusting, front axle universal joint (0.030 thk.) (SP-17155-2) (also in SHIM SET, FM-GPW-18336, WO-A-6881).	as req.	
	FM-GPW-18336	WO-A-6881	SHIM SET, adjusting, front axle universal joint (SP-1056) (at drive flange).	1	.489
	FM-GP-3208-A	WO-A-862	(Consists of:		
	FM-GP-3208-B	WO-A-863	6 SHIM, 0.010 thk.		
10-3, 6	FM-GP-3216	WO-A-1726	3 SHIM, 0.030 thk.)		
10-5	FM-GP-3374	WO-A-780	SNAP RING, front axle universal joint shaft retainer (SP-17218) (for Rzeppa joint) (also in KIT, FM-GPW-18391, WO-A-7111).	2	.0016
			WASHER, thrust, front axle shaft to housing (SP-S-953).	2	.0839

157

## GROUP 11—REAR AXLE

## 1100—REAR AXLE ASSEMBLY

8080-2051-1 8080-2051-1	FM-GPW-4001	WO-A-445 WO-A-5500	AXLE, rear, assembly (4.88 ratio).	1	
3320-GPW-18366	FM-GPW-18366	WO-A-1545	AXLE, rear, w/BRAKES, DRUMS and HUBS, assembly (WO-A-5500 includes brake line tubes. FM-GPW-4001 does not include brake line tubes).	1	79.55
			GASKET SET, rear axle (superseded by GASKET SET, FM-GPW-18366-B, WO-A-7831).	1	.0938
			(Consists of:		
	FM-GP-4035	WO-A-782	1 GASKET, axle housing cover		
	FM-GP-4032	WO-A-904	2 GASKET, axle shaft, outer end		
	FM-GP-4661	WO-636565	1 GASKET, drive pinion shaft oil seal		
	FM-GP-3034	WO-A-779	1 OIL SEAL, axle shaft, inner end		
	FM-GP-4676-A	WO-639265	2 OIL SEAL, drive pinion shaft		
	FM-GPW-1177	WO-A-864	2 OIL SEAL, wheel bearing		
3320-GPW-18366-B	FM-GPW-18366-B	WO-A-7831	GASKET SET, rear axle (supersedes GASKET SET, FM-GPW-18366, WO-A-1545).	1	.15
			(Consists of:		
	FM-GP-4035	WO-A-782	1 GASKET, axle housing cover		
	FM-GP-4032	WO-A-904	2 GASKET, axle shaft, outer end		
	FM-GP-4661	WO-636565	1 GASKET, drive pinion shaft oil seal		

SNL G-503

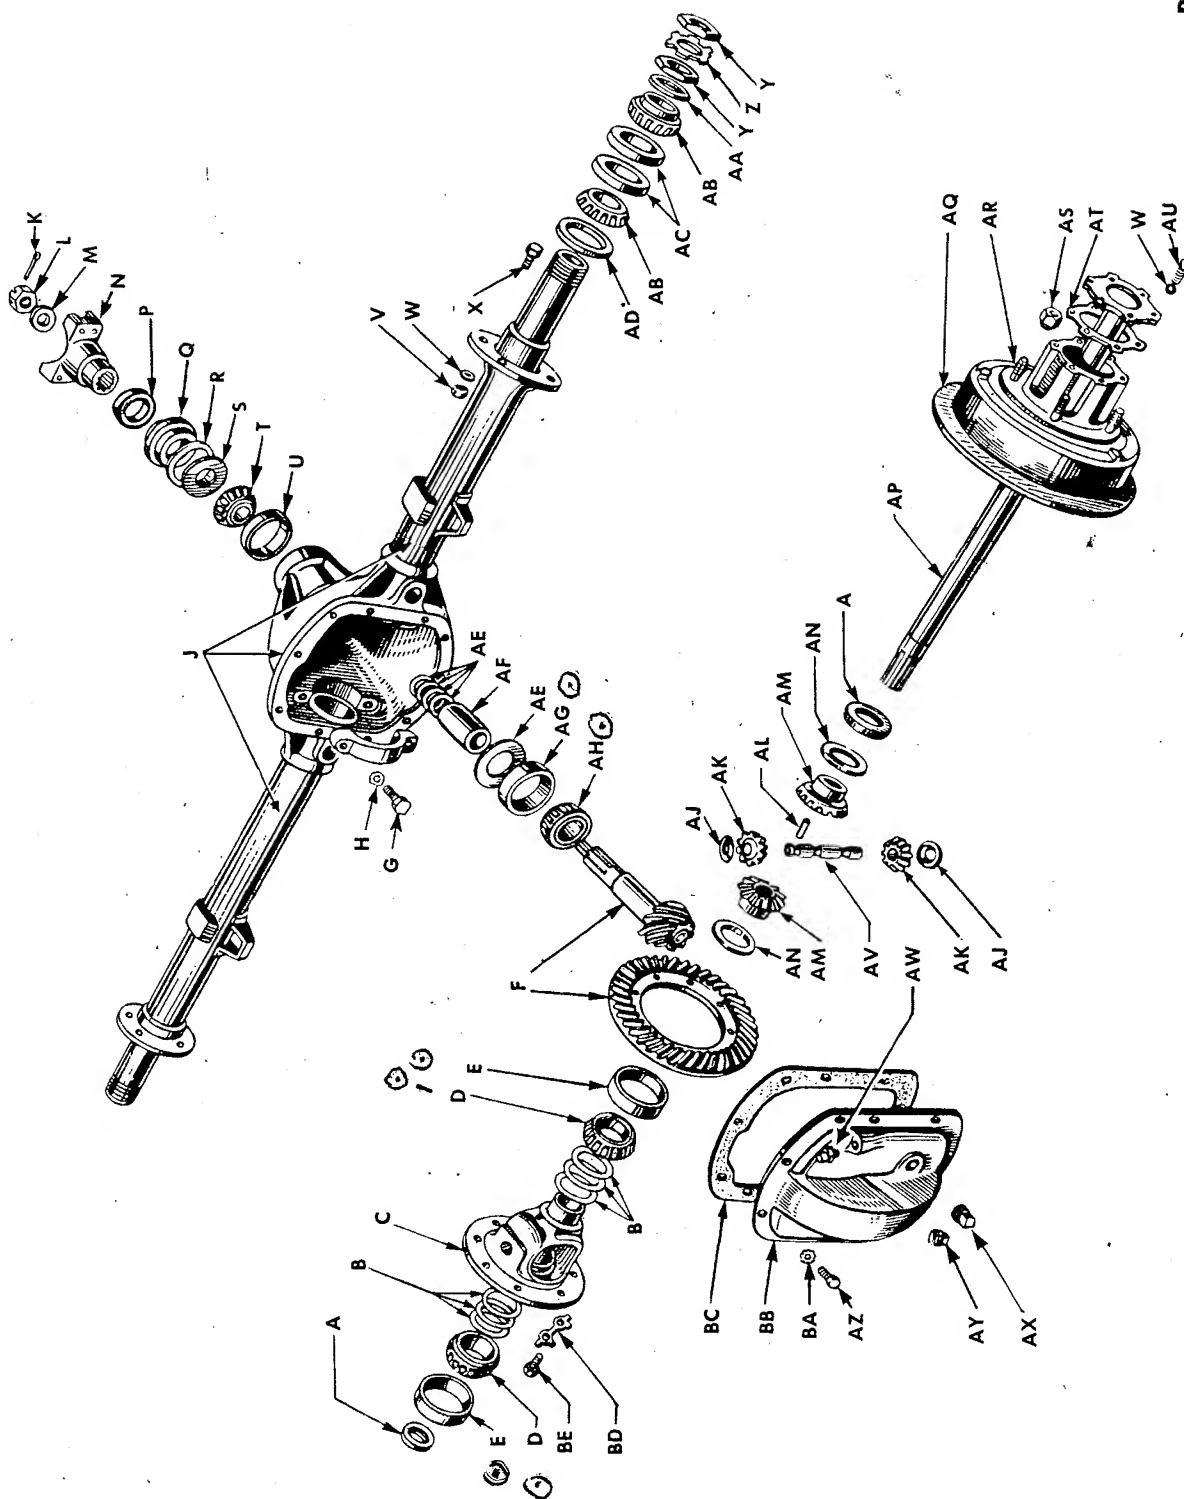


FIGURE 11-1—REAR AXLE ASSEMBLY—EXPLODED VIEW

Key	Part Name	Ford Part No.	Willlys Part No.	Group No.	Key	Part Name	Ford Part No.	Willlys Part No.	Group No.
A	OIL SEAL	FM-GP-3034	WO-A-779	1102	AD	OIL SEAL	FM-GP-1177	WO-A-864	1301B
B	SHIM SET	FM-GPW-18388	WO-A-6744	1104	AE	SHIM SET	FM-GPW-18386	WO-A-6745	1104
C	CASE	FM-GP-4206	WO-A-793	1104	AF	SPACER	FM-GP-4668	WO-A-799	1104
D	CONE and ROLLERS	FM-GP-4221	WO-52880	1104	AG	CUP	FM-86H-4616	WO-52877	1104
E	CUP	FM-GP-4222	WO-52881	1104	AH	CONE and ROLLERS	FM-86H-4621	WO-52876	1104
F	GEAR SET	FM-GPW-4209	WO-A-789	1104	AJ	WASHER	FM-GP-4230	WO-A-797	1104
G	BOLT	FM-355699-S	WO-636527	1104	AK	PINION	FM-GPW-4215	WO-A-796	1104
H	WASHER	FM-34922-S	WO-636528	1104	AL	PIN	FM-GP-4241	WO-636360	1104
J	HOUSING, assembly	FM-GPW-4004	WO-A-888	1101	AM	GEAR	FM-GPW-4236	WO-A-794	1104
K	PIN	FM-357202-S	WO-636571	1104	AN	WASHER	FM-GP-4228	WO-A-795	1104
L	NUT	FM-356126-S	WO-636569	1104	AP	SHAFT	FM-GPW-4234	WO-A-901	1102
M	WASHER	FM-356504-S	WO-636570	1104	AQ	DRUM	FM-GP-1102	WO-A-1690	1302
N	YOKE, w/SHIELD, assembly	FM-GP-4842	WO-A-1445	1104	AR	BOLT	FM-GP-1107	WO-A-474	1302A
P	SHIELD	FM-GP-4666	WO-636568	1104	AS	NUT	FM-GP-1012	WO-A-476	1302A
Q	OIL SEAL	FM-GP-4676-A	WO-639265	1104	AT	GASKET	FM-GP-4032	WO-A-904	1102
R	GASKET	FM-GP-4661	WO-636565	1104	AU	BOLT	FM-GP-1110	WO-A-760	1102
S	SLINGER	FM-GP-4619	WO-636566	1104	AV	SHAFT	FM-GP-4211	WO-A-798	1104
T	CONE and ROLLERS	FM-GP-4630	WO-52878	1104	AW	PLUG	FM-GP-4022	WO-A-870	1101
U	CUP	FM-GP-4628	WO-52879	1104	AX	PLUG	FM-353051-S	WO-636538	1101
V	NUT	FM-37786-S2	WO-636575	1203	AY	PLUG	FM-358048-S	WO-636577	1101
W	WASHER	FM-34807-S2	WO-5010	1203	AZ	BOLT	FM-20046-S2	WO-51523	1101
X	BOLT	FM-355578-S	WO-A-903	1203	BA	WASHER	FM-34941-S7	WO-53029	1101
Y	NUT	FM-GP-4252	WO-A-866	1301A	BB	COVER	FM-GP-4016-A	WO-A-10231	1101
Z	WASHER	FM-GP-1124	WO-A-867	1301A	BC	GASKET	FM-GP-4035	WO-A-782	1101
AA	WASHER	FM-GP-1218	WO-A-865	1301A	BD	STRAP	FM-GP-4281	WO-A-792	1104
AB	CONE and ROLLERS	FM-GP-1201	WO-52942	1301A	BE	SCREW	FM-355511-S	WO-A-871	1104
AC	CUP	FM-GP-1202	WO-52943	1301A					

FIGURE 11-1A—LEGEND FOR 11-1—REAR AXLE ASSEMBLY—EXPLODED VIEW



## GROUP 11—REAR AXLE (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>1101—HOUSING ASSEMBLY</b>						
11-1	8080-16976	FM-GP-4015	WO-A-781	COVER, axle housing (superseded by COVER, FM-GP-4016-A, WO-A-10231)	1	1.76
	8080-16976	FM-GP-4016		COVER, axle housing (SP-16976) (superseded by COVER, FM-GP-4016-A, WO-A-10231)	1	
11-1	8080-16976	FM-GP-4016-A	WO-A-10231	COVER, axle housing (supersedes COVER, FM-GP-4015; and COVER FM-GP-4016, WO-A-781)	1	
11-1	H001-1013461	FM-20046-S2	WO-51523	BOLT, hex-hd., S, $\frac{3}{16}$ -18NC-2 x $\frac{3}{4}$	10	
11-1	8080-16409	FM-34941-S7	WO-53029	WASHER, lock, S, cd-pltd., external tooth, flat type, $\frac{3}{16}$ in.	10	.0019
11-1		FM-GP-4035	WO-A-782	GASKET, axle housing cover (SP-16409) (also in GASKET SET, FM-GPW-18366-B, WO-A-7831)	1	
11-1	8080-17226-X	FM-GPW-4004	WO-A-888	HOUSING, rear axle, w/TUBE, assembly (SP-17226-X)	1	27.14
11-1		FM-358048-S	WO-636577	PLUG, drain, axle housing (SP-S-780)	1	
11-1		FM-353051-S	WO-636538	PLUG, filler, axle housing (SP-50-39-4)	1	
11-1	8080-16979	FM-GP-4022	WO-A-870	PLUG, vent, axle housing (SP-16979)	1	
<b>1102—AXLE DRIVE SHAFTS</b>						
11-1	8080-17146	FM-GP-4032	WO-A-904	GASKET, rear axle shaft, outer end (SP-17146) (also in GASKET SET, FM-GPW-18366-B, WO-A-7831)	2	.0015
11-1	H013-0500030	FM-GPW-4259	WO-A-6439	GUIDE, rear axle shaft (SP-17377)	2	
	G503-0384602	FM-GP-3034	WO-A-779	OIL SEAL, axle shaft, inner end (SP-17036)	2	
11-1	G503-0384601	FM-GP-4235	WO-A-902	SHAFT, rear axle, left (SP-17144-4)	1	1.89
11-1	8080-6-73-124	FM-GPW-4234	WO-A-901	SHAFT, rear axle, right (SP-17144-3)	1	2.932
	H001-1518009	FM-GP-1110	WO-A-760	BOLT (hex-hd., S, $\frac{3}{8}$ -16NC-3 x $1\frac{1}{2}$ ) (SP-6-73-124)	12	.0155
		FM-34807-S2	WO-5010	WASHER, lock, S, SAE std., $\frac{3}{8}$ in.	12	
<b>1104—DIFFERENTIAL CASE, GEARS, PINION AND BEARINGS</b> (Items in this group are the same for front and rear axles)						
11-1		FM-355699-S	WO-636527	BOLT, differential case bearing cap (hex-hd., S, $\frac{1}{2}$ -13NC x $2\frac{1}{4}$ ) (SP-A-1358-1)	4	.0167
11-1		FM-34922-S	WO-636528	WASHER, lock, S, internal tooth, flat type, $\frac{1}{2}$ in.	4	
11-1	8080-16383	FM-GP-4206	WO-A-793	CASE, differential (SP-16383)	1	
11-1	H012-6146900	FM-GP-4221	WO-52880	CONE and ROLLERS, differential case bearing (1.625 bore x 1.000) (TIM-24780)	2	
11-1	H012-6160380	FM-86H-4621	WO-52876	CONE and ROLLERS, differential drive pinion inner bearing (1.375 bore x 1.125) (TIM-31593)	1	.641

11-1	H012-6122200	FM-GP-4630	WO-52878	CONE and ROLLERS, differential drive pinion outer bearing (1.125 bore x .875) (TIM-02872).....	2	.505
11-1	H012-6220960	FM-GP-4222	WO-52881	CUP, differential case bearing (3.000 O.D. x .8125 wide) (TIM-24721).....	2	.342
11-1	H012-6224700	FM-86H-4616	WO-52877	CUP, differential drive pinion inner bearing (3.000 O.D. x .9375 wide) (TIM-31520).....	1	.293
11-1	H012-6209750	FM-GP-4628	WO-52879	CUP, differential drive pinion outer bearing (2.875 O.D. x .6875 wide) (TIM-02820).....	1	
	8080-16968-X	FM-GPW-4207		DIFFERENTIAL, assembly (superseded by DIFFERENTIAL, assembly, FM-GPW-4212, WO-A-788).....	1	
	8080-16968-X	FM-GPW-4212	WO-A-788	DIFFERENTIAL, assembly (SP-16068-X) (includes CASE, GEARS, and PINIONS) (supersedes DIFFERENTIAL, assembly, FM-GPW-4207).....	1	17.43
11-1		FM-GP-4661	WO-636565	GASKET, differential drive pinion shaft oil seal (SP-S-171) (also in GASKET SET, FM-GPW-18365-B, WO-A-7830).....	1	
11-1		FM-GPW-4236	WO-A-794	GEAR, differential, side (2.758 O.D. x 1 3/8 in. wide, 16 teeth) (SP-16385) (also in KIT, FM-GPW-18389, WO-A-6816).....	2	
11-1	8080-16412-X	FM-GPW-4209	WO-A-789	GEAR, drive, differential, w/PINION (SP-16412-X) (matched set) (also in KIT, FM-GPW-18384, WO-A-6816).....	1	3.93
	3320-GPW-18389	FM-GPW-18389	WO-A-6743	KIT, repair, differential case gears.....	1	
		FM-GP-4236	WO-A-794	(Consists of: 2 GEAR, side		
		FM-GPW-4215	WO-A-796	2 PINION, differential		
	8080-16075	FM-GP-4211	WO-A-798	1 SHAFT, pinion		
		FM-GP-4230	WO-A-797	2 WASHER, thrust, pinion		
		FM-GP-4228	WO-A-795	2 WASHER, thrust, side gear		
	3320-GPW-18384	FM-GPW-18384	WO-A-6816	KIT, repair, differential drive gear and pinion.....	1	10.25
		FM-356126-S	WO-636569	(Consists of: 1 NUT, hex., slotted, S., 3/4-16NF-3		
		FM-355511-S	WO-A-871	8 SCREW, drive gear		
		FM-GPW-4209	WO-A-789	1 GEAR, drive, w/PINION		
		FM-GP-4281	WO-A-792	4 STRAP, lock		
		FM-GP-4676		OIL SEAL, differential drive pinion bearing (superseded by OIL SEAL, FM-GP-4676-A, WO-639265).....	1	.228
11-1	H013-0500071	FM-GP-4676-A	WO-639265	OIL SEAL, differential drive pinion bearing (leather) (SP-14223) (supersedes OIL SEAL, FM-GP-4676).....	1	
11-1	8080-13449	FM-GP-4241	WO-636360	PIN, lock, differential pinion shaft (SP-13449).....	1	.0355
11-1	8080-15926	FM-GPW-4215	WO-A-796	PINION, differential (1.140 O.D., 10 teeth) (SP-15926) (also in KIT, FM-GPW-18389, WO-A-6816).....	2	
11-1	8080-6-73-414	FM-355511-S	WO-A-871	SCREW, differential driven gear (SP-6-73-414) (also in KIT, FM-GPW-18384, WO-A-6816).....	8	.0125
11-1	8080-16075	FM-GP-4211	WO-A-798	SHAFT, differential pinion (SP-16075) (also in KIT, FM-GPW-18389, WO-A-6816).....	1	
11-1		FM-GP-4666	WO-636568	SHIELD, dust, universal joint end yoke, differential drive pinion shaft (SP-15099).....	1	
	8080-S-58	FM-GP-4229-A	WO-A-784	SHIM, adjusting, differential case bearing (0.003 thk.) (SP-S-58) (also in SHIM SET, FM-GPW-18388, WO-A-6744).....	as req.	
	8080-S-59	FM-GP-4229-B	WO-A-785	SHIM, adjusting, differential case bearing (0.005 thk.) (SP-S-59) (also in SHIM SET, FM-GPW-18388, WO-A-6744).....	as req.	
	8080-S-74	FM-GP-4229-C	WO-A-786	SHIM, adjusting, differential case bearing (0.010 thk.) (SP-S-74) (also in SHIM SET, FM-GPW-18388, WO-A-6744).....	as req.	
	8080-S-75	FM-GP-4229-D	WO-A-787	SHIM, adjusting, differential case bearing (0.030 thk.) (SP-S-75) (also in SHIM SET, FM-GPW-18388, WO-A-6744).....	as req.	


CRUICK LEWIS MOTORS  
BOULDER, WYOMING  
801925

## GROUP 11—REAR AXLE (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>1104—DIFFERENTIAL CASE, GEARS, PINION AND BEARINGS (Cont'd)</b> (Items in this group are the same for front and rear axles)						
		FM-GP-4229-E	WO-A-800	SHIM, adjusting, differential case bearing (0.015 thk.)	as req.	
	8080-S-112	FM-GP-4660-A		SHIM, adjusting, differential drive pinion, large (0.003 thk.) (SP-S-112) (also in SHIM SET, FM-GPW-18386, WO-A-6745)	as req.	
	8080-S-113	FM-GP-4660-B	WO-A-801	SHIM, adjusting, differential drive pinion, large (0.005 thk.) (SP-S-113) (also in SHIM SET, FM-GPW-18386, WO-A-6745)	as req.	
	8080-S-114	FM-GP-4660-C	WO-A-802	SHIM, adjusting, differential drive pinion, large (0.010 thk.) (SP-S-114) (also in SHIM SET, FM-GPW-18386, WO-A-6745)	as req.	
	8080-S-638	FM-GP-4659-A	WO-A-803	SHIM, adjusting, differential drive pinion bearing, small (0.003 thk.) (SP-S-638) (also in SHIM SET, FM-GPW-18386, WO-A-6745)	as req.	
	8080-S-638-1	FM-GP-4659-B	WO-A-804	SHIM, adjusting, differential drive pinion bearing, small (0.005 thk.) (SP-S-683-1) (also in SHIM SET, FM-GPW-18386, WO-A-6745)	as req.	
	8080-S-638-2	FM-GP-4659-C	WO-A-805	SHIM, adjusting, differential drive pinion bearing, small (0.010 thk.) (SP-S-638-2) (also in SHIM SET, FM-GPW-18386, WO-A-6745)	as req.	
	8080-S-638-3	FM-GP-4659-D	WO-A-806	SHIM, adjusting, differential drive pinion bearing, small (0.030 thk.) (SP-S-638-S) (also in SHIM SET, FM-GPW-18386, WO-A-6745)	as req.	
11-1	3320-GPW-18388	FM-GPW-18388	WO-A-6744	SHIM SET, adjusting, differential case bearing	1	.148
				(Consists of:		
		FM-GPW-4229-A	WO-A-784	2 SHIM, 0.003 thk.		
		FM-GP-4229-B	WO-A-785	2 SHIM, 0.005 thk.		
		FM-GP-4229-O	WO-A-786	3 SHIM, 0.010 thk.		
		FM-GP-4229-D	WO-A-787	3 SHIM, 0.030 thk.)		
11-1	3320-GPW-18386	FM-GPW-18386	WO-A-6745	SHIM SET, adjusting, differential drive pinion bearing	1	.358
				(Consists of:		
		FM-GP-4660-A	WO-A-800	4 SHIM, large, 0.003 thk.		
		FM-GP-4660-B	WO-A-801	4 SHIM, large, 0.005 thk.		
		FM-GP-4660-C	WO-A-802	4 SHIM, large, 0.010 thk.		
		FM-GP-4659-A	WO-A-803	4 SHIM, small, 0.003 thk.		
		FM-GP-4659-B	WO-A-804	4 SHIM, small, 0.005 thk.		
		FM-GP-4659-C	WO-A-805	4 SHIM, small, 0.010 thk.		
		FM-GP-4659-D	WO-A-806	4 SHIM, small, 0.030 thk.)		
11-1	8080-13575	FM-GP-4619	WO-636566	SLINGER, oil, differential drive pinion bearing (SP-13575)	1	.0191
11-1	8080-15367	FM-GP-4668	WO-A-799	SPACER, differential drive pinion bearing (SP-15367)	1	.212
11-1		FM-GP-4281	WO-A-792	STRAP, lock, differential drive gear screw (also in KIT, FM-GPW-18384, WO-A-6816)	4	

11-1	8080-16323-2	FM-GP-4228	WO-A-795	WASHER, thrust, differential side gear (SP-16323-2) (also in KIT, FM-GPW-18389, WO-A-6816)	2	
11-1	8080-16322-2	FM-GP-4230	WO-A-797	WASHER, thrust, differential pinion (SP-16322-2) (also in KIT, FM-GPW-18389, WO-A-6816)	2	
11-1	8080-K2-4-108-X	FM-GP-4842	WO-A-1445	YOKE, end, universal joint, differential drive pinion shaft, w/SHIELD, assembly (SP-K2-4-108-X)	1	1.645
11-1	H001-4217800	FM-356126-S	WO-636569	NUT, hex, slotted, S, $\frac{3}{4}$ -16NF-3 (SP-S-1135)	1	.0167
11-1	H001-0811304	FM-357202-S	WO-636571	PIN, cotter, split, S, $\frac{1}{4}$ x $1\frac{1}{2}$	1	
11-1		FM-356504-S	WO-636570	WASHER, flat, S, ( $\frac{3}{4}$ I.D. x $1\frac{1}{2}$ O.D. x $\frac{1}{8}$ thk.) (SP-S-1056)	1	.0217
<b>GROUP 12—BRAKE</b>						
<b>1200—BRAKE ASSEMBLY (Note 1)</b>						
10-1	0820-47047	FM-GPW-2011	WO-A-1496	BRAKE, front, left, assembly (not pre-adjusted)	1	
	0820-47048	FM-GPW-2010	WO-A-1497	BRAKE, front, left, assembly (BX-47047) (pre-adjusted)	1	3.845
	0820-47050	FM-GPW-2211-B	WO-A-6109	BRAKE, front, right, assembly (not pre-adjusted)	1	3.845
	0820-47051	FM-GPW-2210-B	WO-A-6108	BRAKE, front, right, assembly (BX-47048) (pre-adjusted)	1	3.845
				BRAKE, rear, left, assembly (not pre-adjusted)	1	3.845
				BRAKE, rear, left, assembly, $\frac{3}{4}$ in. (BX-47050) (pre-adjusted)	1	3.845
				BRAKE, rear, right, assembly (not pre-adjusted)	1	
				BRAKE, rear, right, assembly, $\frac{3}{4}$ in. (BX-47051) (pre-adjusted)	1	3.845
<b>1201—HAND BRAKE PARTS (External Contracting Type)</b>						
12-2, 6	8080-5900-X	FM-GP-2648	WO-A-1009	BAND, hand brake, w/LINING, assembly (SP-5900-X)	1	1.482
12-2, 6	H001-4167501	FM-355352-S7	WO-A-1019	BOLT, hex-hd., S, cd-pltd., $\frac{1}{4}$ -20NC-2 x $2\frac{1}{4}$ (SP-856-D) (WG-X-2428-A)	1	.0167
12-2, 6	H001-1518007	FM-33795-S7	WO-5790	NUT, reg., hex., S, cd-pltd., $\frac{1}{4}$ -20NC-2	2	
12-2, 6	8080-10-B-18	FM-34805-S2	WO-52706	WASHER, lock, S, SAE Std., $\frac{1}{2}$ in.	1	.0833
12-6	G134-0381800	FM-01T-2642	WO-A-1016	BOLT, adjusting, hand brake (SP-10-B-18)	1	
		FM-01T-2616	WO-A-1016	BOLT, hand brake band anchor clip (superseded by BOLT, FM-GPW-2616, WO-A-1020)	1	.0217
12-2	8080-887-D	FM-GPW-2616	WO-A-1020	BOLT, hand brake band anchor clip (hex-hd., S, $\frac{3}{16}$ -18NC-2 x $1\frac{1}{2}$ ) (SP-887-D) (super-sedes BOLT, FM-01T-2616, WO-A-1016)	1	.0217
12-6	3320-GPW-2848	FM-GPW-2848	WO-639010	BRACKET, hand brake handle tube, w/SPRING and SCREW, assembly	1	.489
		FM-24347-S2	WO-51396	BOLT, hex-hd., S, $\frac{3}{16}$ -24NF-2 x $\frac{3}{4}$	2	
		FM-33798-S7	WO-A-1532	NUT, reg., hex., s-fin., S, cd-pltd., $\frac{3}{16}$ -24NF-2	2	
		FM-34706-S2	WO-5437	WASHER, plain, S, $\frac{3}{16}$ in.	2	
		FM-34806-S7	WO-51833	WASHER, lock, reg., S, cd-pltd., $\frac{3}{16}$ in.	2	
01-2	H001-7025711	FM-GPW-2598	WO-A-1008	BRAKE, hand, assembly (SP-5815-X)	1	2.51
12-6	3320-GPW-2853	FM-GPW-2853	WO-A-1241	CABLE, hand brake handle, w/TUBE, assembly	1	1.303
12-2, 6	8080-5-B-15	FM-GPW-2632	WO-A-1003	CAM, operating, hand brake (SP-5-B-15)	2	.0774
		FM-GPW-2279	WO-638780	CLAMP, hand brake cable tube (at transfer case rear bearing cap)	1	.0627
		FM-24367-S7	WO-50929	BOLT, hex-hd., S, $\frac{3}{16}$ -24NF-2 x $\frac{1}{2}$	1	
		FM-34806-S7	WO-51833	WASHER, lock, reg., S, cd-pltd., $\frac{3}{16}$ in.	1	


Note 1—All Ford and Willys BRAKE assemblies are interchangeable with each other.

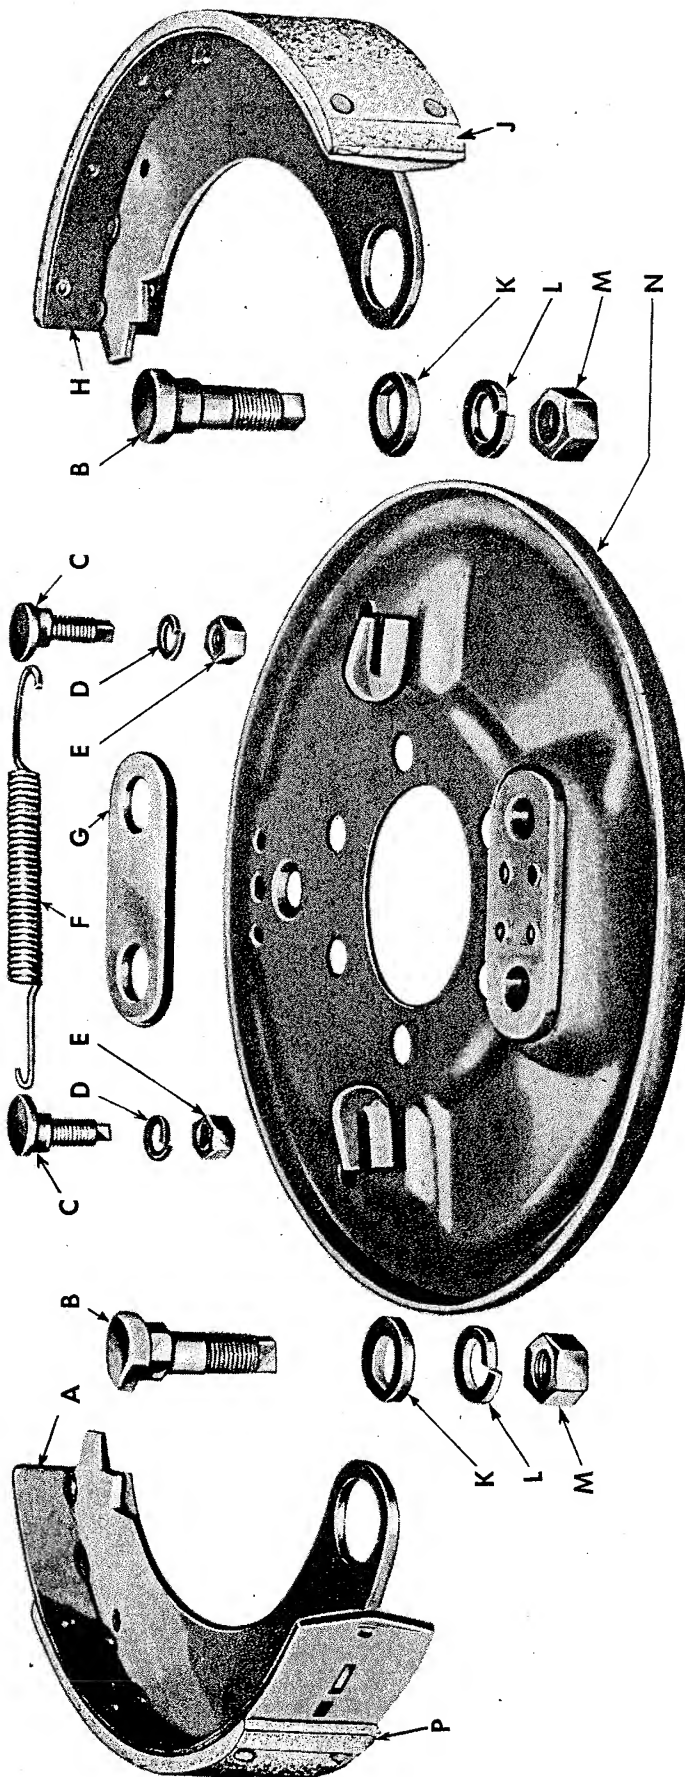

Key	Part Name	Ford Part No.	Willys Part No.	Group No.
A	SHOE, assembly . . .	FM-GP-2019 . . .	WO-116550 . . .	1202
B	PIN . . .	FM-91A-2027 . . .	WO-637899 . . .	1203
C	ECCENTRIC . . .	FM-GP-2038 . . .	WO-A-754 . . .	1203
D	WASHER . . .	FM-34807-S2 . . .	WO-5010 . . .	1203
E	NUT . . .	FM-33800-S7 . . .	WO-52542 . . .	1203
F	SPRING . . .	FM-GP-2035 . . .	WO-637905 . . .	1203
G	PLATE . . .	FM-91A-2030 . . .	WO-637901 . . .	1203
H	SHOE, assembly . . .	FM-GP-2018 . . .	WO-116549 . . .	1202
J	LINING . . .	FM-GP-2021 . . .	WO-116551 . . .	1202
K	CAM . . .	FM-GP-2028 . . .	WO-637900 . . .	1203
L	WASHER . . .	FM-351466-S24 . . .	WO-637923 . . .	1203
M	NUT . . .	FM-33846-S2 . . .	WO-5916 . . .	1203
N	PLATE, assembly . . .	FM-GP-2013 . . .	WO-A-8898 . . .	1203
P	LINING . . .	FM-GP-2022 . . .	WO-116552 . . .	1202

RA PD 342286

FIGURE 12-1—BRAKE ASSEMBLY—EXPLODED VIEW

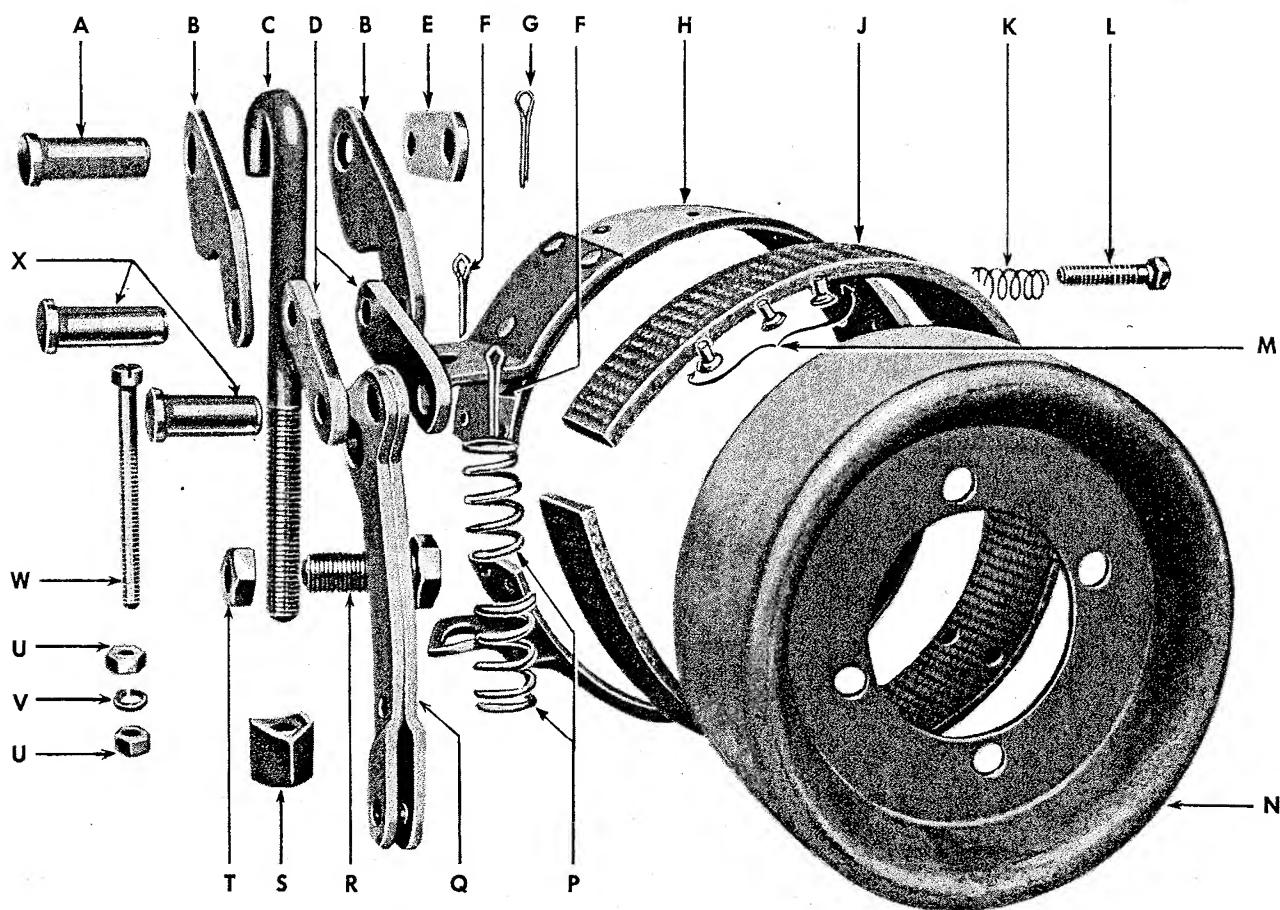

Key	Part Name	Ford Part No.	Willys Part No.	Group No.
A	PIN.....	FM-73928-S7.....	WO-A-1004.....	1201
B	CAM.....	FM-GPW-2632.....	WO-A-1003.....	1201
C	BOLT.....	FM-01T-2642.....	WO-A-1016.....	1201
D	LINK.....	FM-GPW-2659.....	WO-A-1228.....	1201
E	LINK.....	FM-GPW-2630.....	WO-A-1005.....	1201
F	PIN.....	FM-72034-S.....	WO-A-1642.....	1201
G	PIN.....	FM-72017-S.....	WO-5020.....	1201
H	BAND, assembly.....	FM-GP-2648.....	WO-A-1009.....	1201
J	LINING.....	FM-GP-2620.....	WO-A-1014.....	1201
K	SPRING.....	FM-01T-2640.....	WO-A-1021.....	1201
L	BOLT.....	FM-GPW-2616.....	WO-A-1020.....	1201
M	RIVET.....	FM-64647-S.....	WO-A-1015.....	1201
N	DRUM.....	FM-GP-2614.....	WO-A-1002.....	1201
P	SPRING.....	FM-01T-2634.....	WO-A-1017.....	1201
Q	CRANK.....	FM-GPW-2656.....	WO-A-1226.....	1201
R	BOLT.....	FM-355752-S7.....	WO-A-1227.....	1201
S	NUT.....	FM-01T-2805.....	WO-A-1018.....	1201
T	NUT.....	FM-33927-S7.....	WO-52925.....	1201
U	NUT.....	FM-33795-S7.....	WO-52217.....	1201
V	WASHER.....	FM-34805-S2.....	WO-52706.....	1201
W	BOLT.....	FM-355352-S7.....	WO-A-1019.....	1201
X	PIN.....	FM-73904-S7.....	WO-311003.....	1201

RA PD 342258

FIGURE 12-2—HAND BRAKE (EXTERNAL CONTRACTING TYPE)—EXPLODED VIEW

## GROUP 12—BRAKE (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>1201—HAND BRAKE PARTS (External Contracting Type) (Cont'd)</b>		
		FM-GPW-2272	WO-A-1735	CLAMP, hand brake cable tube (at air cleaner bracket).....	1	.0291
		FM-24367-S2	WO-50929	BOLT, hex-hd., S., $\frac{5}{16}$ -24NF-2 x $\frac{7}{8}$ .....	1	
		FM-33798-S7	WO-A-1532	NUT, reg., hex., S., cd-pltd., $\frac{5}{16}$ -24NF-2.....	1	
		FM-34806-S7	WO-51833	WASHER, lock, reg., S., cd-pltd., $\frac{5}{16}$ in.....	1	
	H001-7025711	FM-34746-S7	WO-A-1533	WASHER, plain, S., cd-pltd., $\frac{5}{16}$ in.....	1	
		FM-GPW-2270-B	WO-A-5393	CLIP, hand brake cable tube (at flywheel housing).....	1	.0207
		FM-20308-S	WO-51763	BOLT, hex-hd., S., $\frac{1}{4}$ -20NC-2 x $\frac{1}{2}$ .....	1	
	H001-1518007	FM-34805-S2	WO-52706	WASHER, lock, reg., S., $\frac{1}{4}$ in.....	1	
			WO-A-1795	CLIP, support, hand brake cable tube (tube to rear engine insulator).....	1	
12-2, 6	8080-S-B-16	FM-GPW-2656	WO-A-1226	CRANK, hand brake cable, assembly (SP-5-B-16).....	1	.261
12-2		FM-355752-S7	WO-A-1227	BOLT, hex-hd., S., $\frac{1}{16}$ -20NF-2 x $1\frac{1}{4}$ .....	1	.0833
12-2		FM-33927-S7	WO-52925	NUT, thin, hex., S., cd-pltd., $\frac{1}{16}$ -20NF-2.....	1	
08-2,						
12-2, 6	8080-20-B-62	FM-GP-2614	WO-A-1002	DRUM, hand brake (SP-20-B-62).....	1	1.01
	H001-5421280	FM-355551-S	WO-A-997	BOLT, hex-hd., S., $\frac{3}{8}$ -20NF-3 x $1\frac{1}{8}$ (SP-6-73-218).....	4	
12-6		FM-33786-S2*	WO-636575	NUT, reg., hex., S., $\frac{3}{8}$ -20NF-3.....	4	
	H001-1518009	FM-34807-S2	WO-5010	WASHER, lock, S., SAE std., $\frac{3}{8}$ in.....	4	.16
		FM-GPW-2782	WO-639244	HANDLE, hand brake.....	1	
		FM-92047-S	WO-51904	SCREW, machine, rd-hd., br-pltd., type "U", No. 6 (0.138) x $\frac{5}{16}$ .....	2	
12-6, 18-2	3320-GPW-2780	FM-GPW-2780	WO-A-1242	HANDLE, hand brake, w/CABLE and TUBE, assembly.....	1	1.873
	H001-0121668	FM-20324-S2	WO-52168	BOLT, hex-hd., S., $\frac{1}{4}$ -20NC-2 x $\frac{5}{8}$ (GM-121668) (to dash panel).....	2	
	H001-4167501	FM-33795-S7	WO-5790	NUT, reg., S., cd-pltd., $\frac{1}{4}$ -20NC-2.....	2	
12-6		FM-357553-S18	WO-392468	PIN, clevis, S., $\frac{1}{4}$ x $\frac{3}{4}$ (hand brake cable to crank).....	1	.0167
	H001-0811026	FM-72008-S	WO-5433	PIN, cotter, split, S., $\frac{1}{16}$ x $\frac{5}{8}$ .....	1	
	H001-1518007	FM-34805-S2	WO-52706	WASHER, lock, S., SAE std., $\frac{1}{4}$ in.....	2	
12-2	8080-4-B-26	FM-GP-2620	WO-A-1014	LINING, hand brake (SP-4-B-26) (also in LINING SET, FM-GPW-18377, WO-A-6759)	1	
12-2		FM-64647-S	WO-A-1015	RIVET, tubular, ck-hd., br., $\frac{3}{4}$ x $\frac{5}{16}$ (SP-238-R) (also in LINING SET, FM-GPW-18377, WO-A-6759).....	14	
	3320-GPW-18377	FM-GPW-18377	WO-A-6759	LINING SET, hand brake.....	1	.717
				(Consists of:		
				1 LINING		
				15 RIVET)		
		FM-GP-2620	WO-A-1014	LINK, hand brake cable crank.....	2	.049
12-2, 6	3320-GPW-2659	FM-GPW-2659	WO-A-1228	LINK, hand brake cam to transfer case (SP-3-Q-74).....	1	.0419
12-2, 6	8080-3-Q-74	FM-GPW-2630	WO-A-1005	PIN, clevis, S., $\frac{3}{8}$ x $\frac{7}{8}$ (SP-153-SP).....	1	.0125
12-6		FM-73889-S7	WO-A-1006	PIN, cotter, split, S., $\frac{1}{8}$ x $\frac{3}{4}$ .....	1	
12-2	H001-0811050	FM-72017-S	WO-5020			





Key	Part Name	Ford Part No.	Willlys Part No.	Group Number
A	EXTENSION.....	FM-GPW-2853-B.....	WO-A-15149.....	1201-1
B	HANDLE, w/TUBE, assembly.....	FM-GPW-2774.....	WO-A-15150.....	1201-1
C	CAP.....	FM-GPW-7768-B.....	WO-A-9330.....	0801
D	GEAR.....	FM-GPW-17271.....	WO-A-1512.....	0810
E	SLEEVE.....	FM-GPW-17333.....	WO-636396.....	0810
F	SHOE, assembly.....	FM-GPW-2648.....	WO-A-10324.....	1201-1
G	DRUM.....	FM-GPW-2614.....	WO-A-9332.....	1201-1
H	BOLT.....	FM-350311-S.....	WO-A-6084.....	1201-1
J	NUT.....	FM-356125-S.....	WO-A-980.....	0803
K	PIN.....	FM-72089-S.....	WO-5134.....	0803
L	WASHER.....	FM-356504-S.....	WO-636570.....	0803
M	FLANGE.....	FM-GP-4863.....	WO-A-1105.....	0803
N	SPRING.....	FM-GPW-2634.....	WO-A-10337.....	1201-1
P	BOLT.....	FM-350281-S.....	WO-A-9337.....	0801
Q	LEVER.....	FM-GPW-2653-B.....	WO-A-9137.....	1201-1

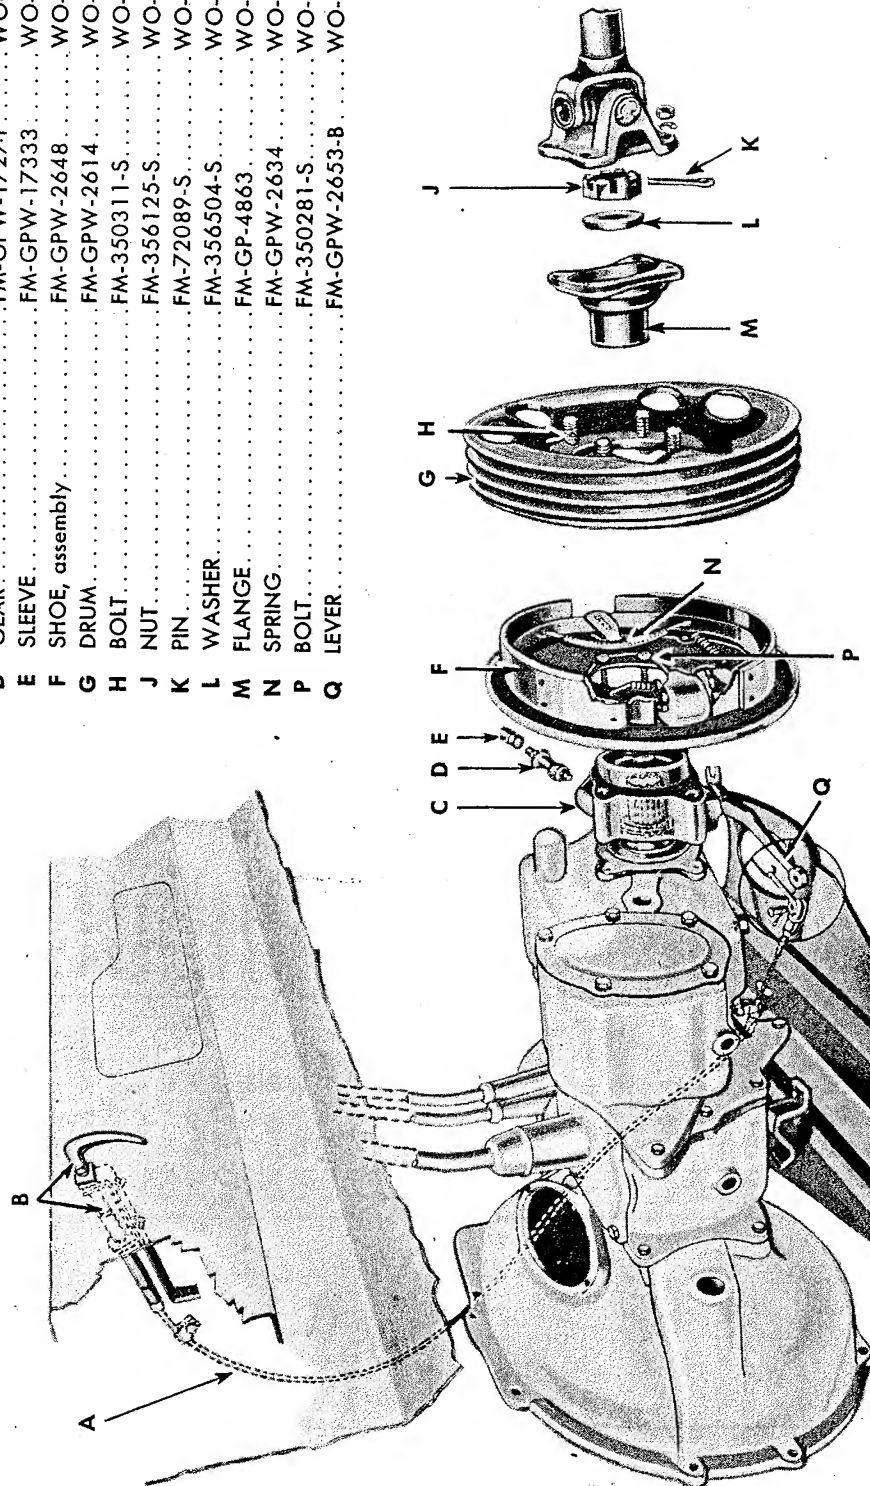


FIGURE 12-3—HAND BRAKE, INTERNAL EXPANDING TYPE

## GROUP 12—BRAKE (Cont'd)


Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
12-3	8080-6563-X	FM-GPW-2653 FM-33979-S FM-352690-S7 FM-356403-S FM-GPW-2620-B FM-351915-S FM-GPW-18377-B  FM-GPW-2620-B FM-351915-S FM-GPW-2642  FM-GPW-2592 FM-GPW-2805  FM-355872-S  FM-73869-S FM-GPW-2621  FM-GPW-2616-B FM-GPW-2615 FM-GPW-2648 FM-GPW-2591 FM-GPW-2640  FM-GPW-7291 FM-GPW-2634 FM-GPW-2633  FM-GP-2021	WO-A-17254 WO-5781 WO-A-9339 WO-A-9338 WO-A-10329 WO-640102 WO-116712  WO-A-10329 WO-640102 WO-A-10334  WO-A-8860 WO-A-10335  WO-53379  WO-A-15137 WO-A-10320  WO-A-10331 WP-A-10332 WO-A-10324 WO-A-8848 WO-A-10336  WO-635681 WO-A-10337 WO-10338  WO-116551	1201-1—HAND BRAKE PARTS (Internal Expanding Type) (Cont'd)  LEVER, operating, hand brake, assembly (includes BUSHING) (SP-6563-X)..... NUT, hex., S., castle, $\frac{3}{8}$ -24NF-3 (SP-58-J)..... STUD, S., cop. or cd-pltd., $\frac{3}{8}$ -24NF-3, threaded one end (SP-223-V)..... WASHER, S., 0.390 I.D. x $\frac{3}{4}$ O.D. x 0.962 thk. (SP-14-W)..... LINING, hand brake..... RIVET, tubular br., $\frac{3}{8}$ x 0.099 (BX-70-S-25)..... LINING SET, hand brake, w/RIVETS (SP-S35-V)..... (Consists of: 2 LINING, hand brake 18 RIVET, lining to shoe) LINK, hand brake operating lever (S., 0.1892 O.D. x $3\frac{1}{16}$ lgh., No. 12-28NF-2 thd.) (BX-47674) (SP-27-B-62)..... LINK, hand brake retracting spring..... NUT, hand brake operating lever (special, hex., S., No. 12-28NF-2) (BX-47675) (SP-417-J)..... NUT, lock, hand brake operating lever nut (hex., S., No. 12-28NF-2) (BX-901835-K6) (SP-418-J)..... PIN, clevis, hand brake ratchet tube ( $\frac{3}{8}$ x $1\frac{1}{16}$ )..... PLATE, backing, hand brake, w/anchor PIN and spring RAMP, assembly (BX-47656) (SP-6524-X)..... SCREW, adjusting, hand brake, L.H. thd. (BX-47668) (SP-991-D)..... SCREW, adjusting, hand brake, R.H. thd. (BX-47669) (SP-992-D)..... SHOE, hand brake, w/LINING, assembly (BX-47661) (SP-6525-X)..... SPACER, hand brake conduit clamp (S., $\frac{21}{64}$ I.D. x $1\frac{1}{16}$ O.D. x $\frac{3}{8}$ thk.)..... SPRING, hand brake operating lever spacer (29 coils, flat ends, $2\frac{3}{8}$ in. free lgh.) (BX-47676) (SP-34-B-23)..... SPRING, hand brake ratchet tube..... SPRING, return, hand brake shoe (35 coils, $2\frac{23}{64}$ in. free lgh.) (BX-47677) (SP-34-B-24)..... SPRING, return, hand brake shoe, adjusting end (29 coils, $3\frac{13}{16}$ in. free lgh.) (BX-47678) (SP-34-B-25).....  1202—SHOES AND FACINGS  LINING, brake shoe, forward (BX-1067-S-3) (also in LINING SET, FM-GPW-18367, WO-116600).....	1 1 1 1 2 16 1  1 1 1 1 1 1 1 1 1 2 1 1 1 1 1 4	1.482
12-3						
12-3						
12-1						

## GROUP 12—BRAKE (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>1202—SHOES AND FACINGS (Cont'd)</b>						
12-1		FM-GP-2022	WO-116552	LINING, brake shoe, reverse (BX-1067-S-4) (also in LINING SET, FM-GPW-18367, WO-116600)	4	
		FM-351915-S	WO-374586	RIVET, tubular, br., $\frac{3}{8}$ x $\frac{1}{8}$ (BX-129-S-6) (also in LINING SET, FM-GPW-18367, WO-116600)	80	
	H017-0540242	FM-GPW-18367	WO-116600	LINING, SET, brake shoe (BX-44517) (for 2 wheels)	1	1.14
		FM-GP-2021	WO-116551	(Consists of: 2 LINING, forward		
		FM-GP-2022	WO-116552	2 LINING, reverse		
		FM-351915-S	WO-374586	42 RIVETS		
10-4, 12-1	G503-0125800	FM-GP-2018	WO-116549	SHOE, brake, forward, w/LINING, assembly (BX-1141-S-1)	4	.619
12-1	G503-0125801	FM-GP-2019	WO-116550	SHOE, brake, reverse, w/LINING, assembly (BX-1141-S-2)	4	.554
<b>1203—BRAKE SHOE SUPPORT</b>						
12-1	0820-41876	FM-GP-2028	WO-637900	CAM, brake shoe anchor pin (BX-41876)	8	.0489
12-1, 6	0820-45771	FM-GP-2038	WO-A-754	ECCENTRIC, brake shoe (BX-45771)	8	.0407
12-1, 6	G518-7001420	FM-33800-S7	WO-52542	NUT, reg., hex., S., cd-pltd., $\frac{3}{8}$ -24NPF-2	8	
12-1, 6	H001-1518009	FM-34807-S2	WO-5010	WASHER, lock, S., SAE std., $\frac{3}{8}$ in.	8	
10-4, 12-1, 12-6	G085-2319320	FM-91A-2027	WO-637899	PIN, brake shoe anchor (BX-39953)	8	.0641
12-1, 6	G085-2307356	FM-33846-S2	WO-5916	NUT, reg., hex., S., $\frac{1}{2}$ -20NPF-2	8	
12-1	9680-A-450	FM-351466-S24	WO-637923	WASHER, lock, S., $\frac{1}{2}$ in. (BX-41665)	8	.007
			WO-A-450	PLATE, backing, front and rear brake, assembly (superseded by PLATE, assembly, FM-GP-2013, WO-A-8898)	4	
10-4, 12-1, 12-6	0820-47054	FM-GP-2013	WO-A-8898	PLATE, backing, front and rear brake, assembly (BX-47054) (Note 1) (supersedes PLATE, assembly WO-A-450)	4	.619
11-1, 12-6		FM-355578-S	WO-A-903	BOLT, hex-hd., S., $\frac{3}{8}$ -24NPF-2 x $1\frac{1}{8}$ (for rear plate)	12	.0217
11-1	H001-4171601	FM-33786-S2	WO-636575	NUT, hex., $\frac{3}{8}$ -24NPF-2 (SP-6-74-11)	12	
11-1	H001-1518009	FM-34807-S2	WO-5010	WASHER, lock, S., SAE std., $\frac{3}{8}$ in.	12	
12-1	G085-2320185	FM-91A-2030	WO-637901	PLATE, brake shoe anchor pin (BX-39956)	4	.0508
12-1	G503-0389782	FM-GP-2035	WO-637905	SPRING, return, brake shoe (BX-41545)	4	.0251
<b>1204—PEDAL AND SPRING</b>						
12-6		FM-358006-S8	WO-640038	FITTING, lubricating, hydraulic type, straight, ball seal, $\frac{1}{8}$ -27 NPT. (brake pedal shaft)	1	
		FM-GPW-2454-A	WO-A-8477	PAD, brake pedal (supersedes PAD, FM-GPW-2454, WO-A-1359)	1	

12-6	FM-GPW-2454	WO-A-1359	PAD, brake pedal, assembly (superseded by PAD, FM-GPW-2454A, WO-A-8477)	1
12-6	FM-24426-S	WO-6157	BOLT, hex-hd., S, $\frac{5}{16}$ -18NC-2 x $1\frac{1}{4}$	1
02-3, 12-6, 18-1	FM-GPW-2452-A	WO-A-1386	PEDAL, brake, assembly (superseded by PEDAL, FM-GPW-2452-B, WO-A-8253)	1
	FM-GPW-2452-B	WO-A-8253	PEDAL, brake, assembly (supersedes PEDAL, FM-GPW-2452-A, WO-A-1386)	1
02-3	FM-GPW-2473	WO-A-493	RETAINER, pedal shaft, assembly (Willis only)	1
		WO-A-495	SHAFT, brake pedal, assembly	1
<b>1205—MASTER CYLINDER</b>				
12-6	FM-GPW-2138	WO-A-1354	BAR, tie, brake master cylinder	1
	FM-20046-S	WO-51523	BOLT, hex-hd., S, $\frac{5}{16}$ -18NC-2 x $\frac{3}{4}$	1
	FM-355444-S	WO-52836	BOLT, hex-hd., S, $\frac{5}{16}$ -24NF-2 x 3	1
	FM-33798-S7	WO-A-1532	NUT, reg., hex., S, cd-pltd., $\frac{5}{16}$ -24NF-2	1
	FM-34806-S7	WO-51833	WASHER, lock, reg., S, $\frac{5}{16}$ in.	2
12-4, 6	FM-GP-2077	WO-637605	BOLT, brake master cylinder outlet fitting (LO-3473)	1
12-6	FM-GPW-2462	WO-A-183	BOLT, eye, brake master cylinder to pedal ( $\frac{1}{16}$ -20NF-2)	1
12-6	FM-33802-S2	WO-5939	NUT, reg., hex., s-fin., S, $\frac{1}{16}$ -20NF-2	1
	FM-72016-S	WO-5020	PIN, cotter, split, S, $\frac{3}{32}$ x $\frac{3}{4}$	1
	FM-356394-S2	WO-52835	WASHER, plain, S, $\frac{1}{16}$ in.	1
	FM-GP-2180		BOOT, brake master cylinder (LO-S-FC-6011) (superseded by BOOT, FM-GP-2180-A, WO-637602)	1
12-4, 6	FM-GP-2180-A	WO-637602	BOOT, brake master cylinder (also in KIT, FM-GPW-18370-B, WO-A-7838) (super-	1
			sedes BOOT, FM-GP-2180)	1
12-4, 6	FM-GP-2162	WO-637608	CAP, filler, brake master cylinder, assembly (LO-S-FC-6018-E)	1
	FM-GP-2183	WO-637586	CUP, brake master cylinder check valve (rubber, $\frac{19}{32}$ in. diam.) (LO-S-FC-2919-B)	1
12-4	FM-GP-2173	WO-637590	CUP, brake master cylinder, primary (rubber, 1 in. diam.) (LO-S-FD-2108-F) (also in KIT, FM-GPW-18370-B, WO-A-7838)	1
			CUP, brake master cylinder, secondary (rubber, 1 in. diam.) (LO-S-FD-2109-B)	1
12-6	FM-GP-2170	WO-637595	CYLINDER, master, brake	1
	FM-GP-2155	WO-637582	CYLINDER, master, brake, assembly (LO-FE-1444)	1
	FM-GP-2140	WO-A-556	BOLT, hex-hd., S, $\frac{5}{16}$ -18NC-2 x 3	1
	FM-355398-S2	WO-51798	WASHER, lock, reg., S, cd-pltd., $\frac{5}{16}$ in.	2.04
	FM-34806-S7	WO-51833	WASHER, plain, S, $\frac{5}{16}$ in.	.0167
	FM-34746-S2	WO-52274	FITTING, outlet, brake master cylinder (LO-S-FC-5727-A)	1
12-4, 6	FM-GP-2076	WO-A-557	GASKET, brake master cylinder filler cap (LO-S-FC-6019)	.122
12-4	FM-GP-2167	WO-637612	GASKET, brake master cylinder outlet fitting (LO-S-FC-602) (also in KIT, FM-GPW-18370-B, WO-A-7838)	.0138
12-4, 6	FM-91A-2152	WO-637604	GASKET, brake master cylinder outlet fitting bolt (LO-S-FC-603) (also in KIT, FM-GPW-18370-B, WO-A-7838)	.0042
12-4, 6	FM-91A-2151	WO-637606	KIT, repair, brake master cylinder (superseded by KIT, FM-GPW-18370-B, WO-A-7838)	.0042
		WO-A-6836	(Consists of:	1
			1 BOOT	
	FM-GP-2180	WO-637602	1 CUP, primary (1 in. diam.)	
	FM-GP-2173	WO-637590	1 GASKET, outlet fitting	
	FM-91A-2152	WO-637604		

Note 1—Attaching parts for front backing plate are the same as used on SPINDLE, FM-GP-3105.

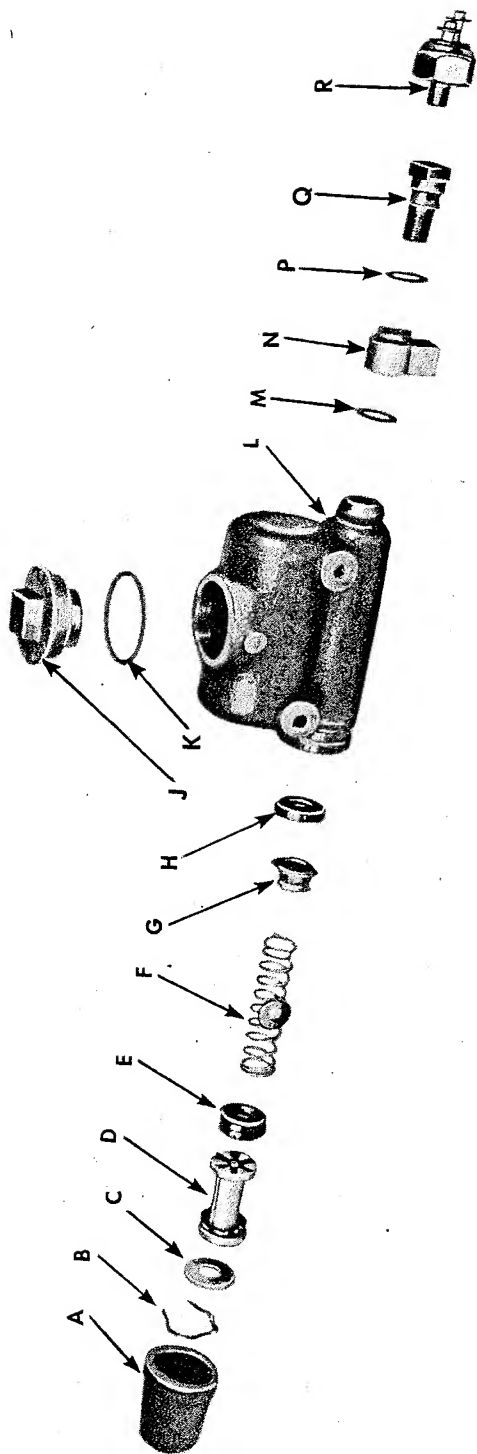

Key	Part Name	Ford Part No.	Willys Part No.	Group Number
A	BOOT.....	FM-GP-2180-A.....	WO-637602.....	1205
B	WIRE.....	FM-GP-2174.....	WO-637598.....	1205
C	PLATE.....	FM-GP-2188.....	WO-637597.....	1205
D	PISTON.....	FM-GP-2169.....	WO-637591.....	1205
E	CUP.....	FM-GP-2173.....	WO-637590.....	1205
F	SPRING, w/RETAINER, assembly.....	FM-GP-2145.....	WO-637587.....	1205
G	VALVE.....	FM-GP-2175.....	WO-637584.....	1205
H	SEAT.....	FM-GP-2160.....	WO-637583.....	1205
J	CAP.....	FM-GP-2162.....	WO-637608.....	1205
K	GASKET.....	FM-GP-2167.....	WO-637612.....	1205
L	TANK.....	FM-GP-2155.....	WO-637582.....	1205
M	GASKET.....	FM-91A-2152.....	WO-637604.....	1205
N	FITTING.....	FM-GP-2076.....	WO-A-557.....	1205
P	GASKET.....	FM-91A-2151.....	WO-637606.....	1205
Q	BOLT.....	FM-GP-2077.....	WO-637605.....	1205
R	SWITCH.....	FM-11A-13480.....	WO-A-1271.....	0606

FIGURE 12-4—BRAKE MASTER CYLINDER ASSEMBLY—EXPLODED VIEW

## GROUP 12—BRAKE (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>1205—MASTER CYLINDER (Cont'd)</b>		
	9240-FC-5380	FM-GP-2169 FM-GP-2160 FM-GP-2175 FM-GP-2174 FM-GPW-18370	WO-637591 WO-637583 WO-637584 WO-637598 WO-115961	KIT, repair, brake master cylinder (Cont'd) 1 PISTON, assembly 1 SEAT, valve 1 VALVE, check, assembly 1 WIRE, lock, piston stop KIT, repair, brake master cylinder (superseded by KIT, FM-GPW-18370-B, WO-A-7838)	1	
	3320-GPW-18370-B	FM-GP-2180 FM-GP-2173 FM-GP-2169 FM-GP-2160 FM-GP-2175 FM-GPW-18370-B	WO-637602 WO-637590 WO-637591 WO-637583 WO-637584 WO-A-7838	(Consists of: 1 BOOT 1 CUP, primary 1 PISTON 1 SEAT, valve 1 VALVE, check) KIT, repair, brake master cylinder (supersedes KIT, WO-A-6836, and KIT, FM-GPW-18370, WO-115961)	1	.782
12-4		FM-GP-2180-A FM-GP-2173 FM-91A-2152 FM-91A-2151 FM-GP-2169 FM-GP-2160 FM-GP-2175 FM-GP-2174 FM-GP-2169	WO-637602 WO-637590 WO-637604 WO-637606 WO-637591 WO-637583 WO-637584 WO-637598 WO-637591	(Consists of: 1 BOOT 1 CUP, primary 1 GASKET, outlet 1 GASKET, outlet bolt 1 PISTON 1 SEAT 1 VALVE 1 WIRE, lock) PISTON, brake master cylinder, assembly (LO-S-FC-6007) (also in KIT, FM-GPW-18370-B, WO-A-7838)	1	
12-4	9240-FC-2918-A	FM-GP-2188 FM-GP-2176	WO-637597 WO-637585	PLATE, stop, brake master cylinder piston (LO-S-FC-2926) RETAINER, brake master cylinder check valve cup (1 in. diam. cylinder) (LO-S-FC-2918-A)	1	.0243
12-6	9240-FC-3678-A	FM-GP-2143-A FM-GP-2160	WO-637596 WO-637599 WO-637583	RING, brake master cylinder secondary cup (brass $\frac{1}{16}$ in. wide) (LO-S-FC-3678-A) ROD, push, brake master cylinder (LO-S-FC-6014)	1	.0344
12-4		FM-GPW-5118 FM-GP-2145	WO-A-647 WO-637587	SEAT, brake master cylinder check valve (LO-S-FC-6010) (also in KIT, FM-GPW-18370-B, WO-A-7838) SHIELD, brake cylinder, assembly SPRING, return, brake master cylinder piston, w/RETAINER, assembly (LO-S-FC-6009)	1	.179
12-4	9240-FC-6009				1	.391
					1	.0792

## GROUP 12—BRAKE (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>1205—MASTER CYLINDER (Cont'd)</b>						
12-4	9240-FD-4564	FM-GP-2155	WO-637582	TANK, supply, brake master cylinder (LO-S-FD-4564)	1	
12-4	9240-FC-2917	FM-GP-2175	WO-637584	VALVE, check, brake master cylinder, assembly (LO-S-FC-2917) (also in KIT, FM-GPW-18370-B, WO-A-7838)	1	
12-4	9240-FC-2927	FM-GP-2174	WO-637598	WIRE, lock, piston stop, brake master cylinder (LO-S-FC-2927) (also in KIT, FM-GPW-18370-B, WO-A-7838)	1	
<b>1207—WHEEL CYLINDERS</b>						
12-5		FM-GPW-2206	WO-A-6117	BOOT, rear wheel cylinder (for $\frac{3}{4}$ in. cylinder) (LO-FC-8779) (also in KIT, FM-GPW-18368, WO-A-6133)	4	
12-5	G085-2221780	FM-GPW-2206-A2	WO-637546	BOOT, wheel cylinder (for 1 in. and $\frac{1}{8}$ in. cylinder) (LO-FC-5994) (also in KIT, FM-GPW-18371, WO-115962; and KIT, FM-GPW-18372, WO-115963)	8	
		FM-91A-2201	WO-637579	CUP, front brake wheel cylinder (1 in. diam.) (LO-S-FC-1499) (also in KIT, FM-GPW-18371, WO-115962)	4	
		FM-GP-2201	WO-637544	CUP, rear brake wheel cylinder ( $\frac{1}{8}$ in. diam.) (LO-S-FC-3023) (also in KIT, FM-GPW-18372, WO-115963)	4	
		FM-GPW-2201	WO-A-6116	CUP, rear brake wheel cylinder, ( $\frac{3}{4}$ in. diam.) (LO-FC-4158) (also in KIT, FM-GPW-18368, WO-A-6133)	4	
10-4, 12-5	G503-0145854	FM-GPW-2061	WO-A-1484	CYLINDER, wheel, front brake, assembly (1 in. diam.) (LO-FD-7379) (BX-45908)	2	.847
		FM-GP-2192	WO-637789	CYLINDER, wheel, rear brake ( $\frac{1}{8}$ in. diam.) (LO-FD-4664)	2	
		FM-GPW-2135	WO-A-6111	CYLINDER, wheel, rear brake ( $\frac{3}{4}$ in. diam.) (LO-FC-8782)	2	
12-6	G503-0145855	FM-GPW-2261	WO-A-6110	CYLINDER, wheel, rear brake, assembly ( $\frac{3}{4}$ in. diam.) (LO-FD-7568-A) (BX-46491)	2	
12-5, 6		FM-GP-2261	WO-637787	CYLINDER, wheel, rear brake, assembly ( $\frac{1}{8}$ in. diam.) (LO-FD-4665) (BX-41887)	2	.847
12-5		FM-20300-S7	WO-51738	BOLT, hex-hd., S, $\frac{1}{4}$ -20NC-2 x $\frac{3}{8}$ (BX-62-S-176)	8	
		FM-34905-S2	WO-52483	WASHER, lock, S, internal tooth, flat type, $\frac{1}{4}$ in.	8	
	9240-FC-5381	FM-GPW-18371	WO-115962	KIT, repair, front brake wheel cylinder (1 in. diam.) (LO-FC-5381)	1	.228
				(Consists of: 2 BOOT 2 CUP)		
	9240-FC-5382	FM-GP-2206-A2	WO-637546	KIT, repair, rear brake wheel cylinder ( $\frac{1}{8}$ in. diam.)	1	
		FM-91A-2201	WO-637579	(Consists of: 2 BOOT 2 CUP)		
		FM-GPW-18372	WO-115963			
		FM-GP-2206-A2	WO-637546			
		FM-GP-2201	WO-637544			
	9240-FC-8418	FM-GPW-18368	WO-A-6133	KIT, repair, rear brake wheel cylinder ( $\frac{3}{4}$ in. diam.) (LO-FC-8418)	1	.228
				(Consists of: 2 BOOT		
		FM-GPW-2206	WO-A-6117			

		FM-GPW-2201	WO-A-6116	2 CUP	
12-5	9240-FC-5997	FM-GP-2194	WO-637577	PISTON, front brake wheel cylinder, assembly (LO-FC-5997) (1 in. diam.)	.123
	9240-FC-5998	FM-GP-2196	WO-637541	PISTON, rear brake wheel cylinder, assembly (LO-S-FC-5998) ( $\frac{1}{8}$ in. diam.)	.129
	9240-FC-8778	FM-GPW-2196	WO-A-6113	PISTON, rear wheel cylinder, assembly (LO-FC-8778) ( $\frac{3}{4}$ in. diam.)	.0513
12-5, 6	9240-FC-5993	FM-GP-2208	WO-637540	SCREW, bleeder, brake wheel cylinder (LO-S-FC-5993)	.0152
12-5	9240-FC-5992	FM-GP-2205	WO-637580	SPRING, front brake wheel cylinder cup (LO-FC-5992)	.0098
	9240-FC-6003	FM-GP-2204	WO-637545	SPRING, rear brake wheel cylinder cup (LO-FC-6003)	

Key	Part Name	Ford Part No.	Willis Part No.	Group Number
A	BOOT	FM-GP-2206-A2	WO-637546	1207
B	PISTON	FM-GP-2194	WO-637577	1207
C	WASHER	FM-34905-S2	WO-52483	1207
D	BOLT	FM-20300-S7	WO-51738	1207
E	CYLINDER, assembly	FM-GPW-2061	WO-A-1484	1207
F	CUP	FM-91A-2201	WO-637579	1207
G	SCREW	FM-GP-2208	WO-637540	1207
H	SPRING	FM-GP-2205	WO-637580	1207


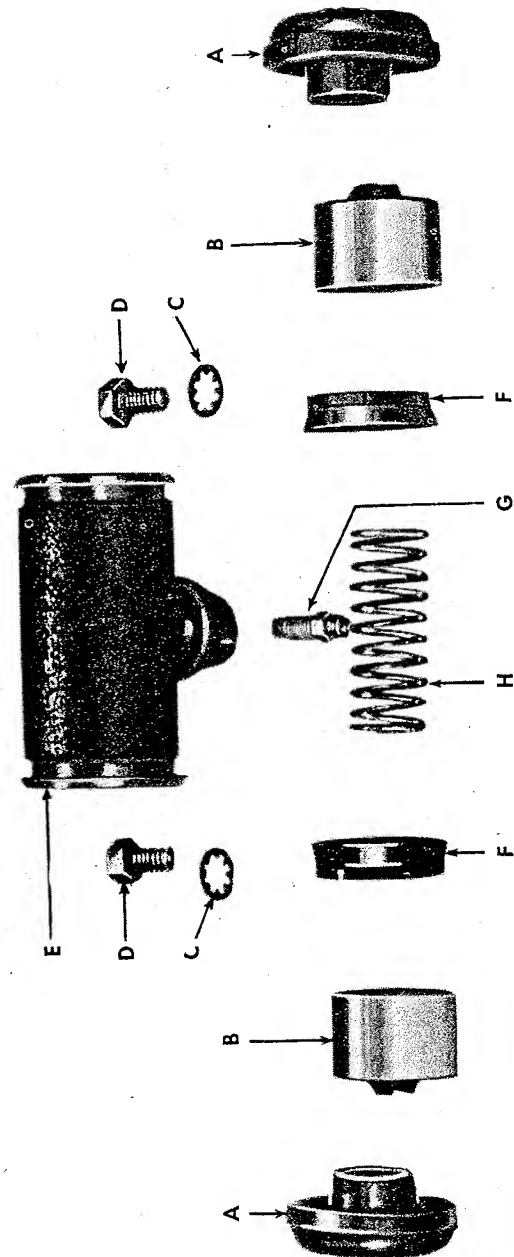


FIGURE 12-5—BRAKE WHEEL CYLINDER ASSEMBLY—EXPLODED VIEW



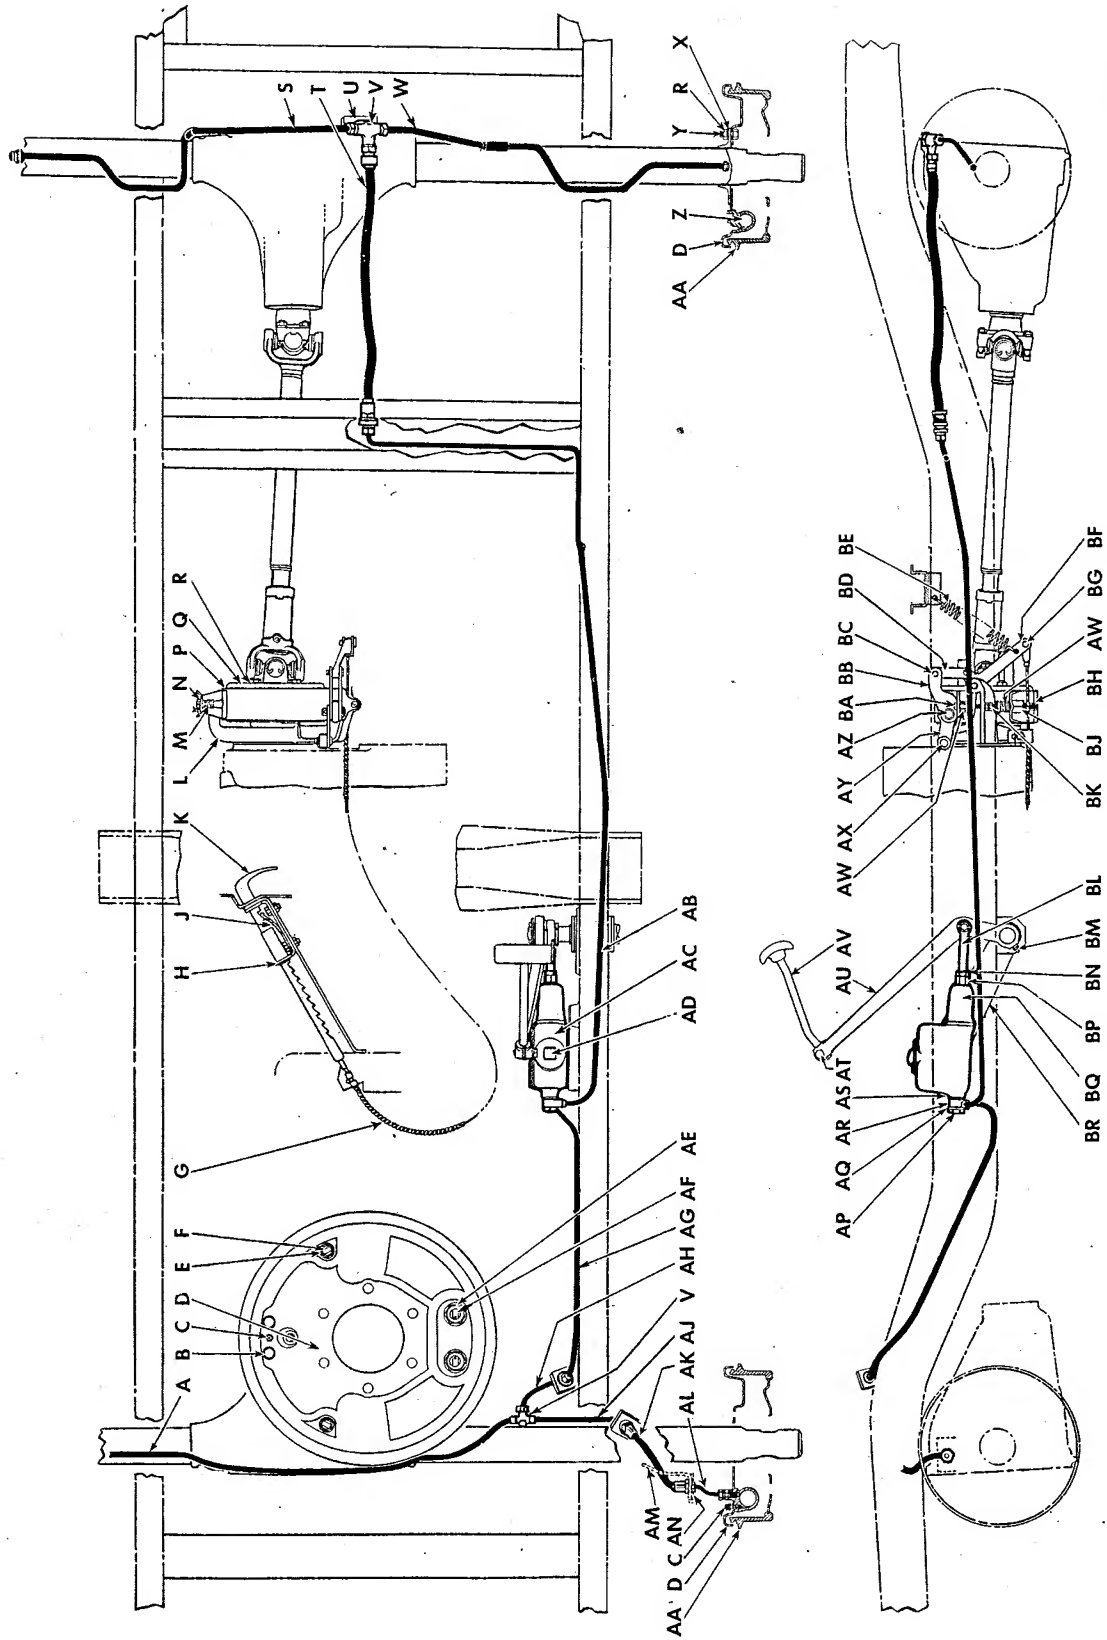

RA PD 342290

FIGURE 12-6—BRAKE SYSTEM

Key	Part Name	Ford Part No.	Willlys Part No.	Group No.	Key	Part Name	Ford Part No.	Willlys Part No.	Group No.
A	TUBE, assembly	FM-GPW-2266	WO-A-1376	1209C	AJ	TUBE, assembly	FM-GPW-2263	WO-A-1501	1209C
B	BOLT	FM-20300-S7	WO-51738	1207	AK	HOSE	FM-GPW-2079	WO-A-1460	1209B
C	SCREW	FM-GP-2208	WO-637540	1207	AL	TUBE, assembly	FM-GPW-2298	WO-A-1488	1209C
D	PLATE, assembly	FM-GP-2013	WO-A-8898	1203	AM	GUARD	FM-GPW-2096	WO-A-1457	1209B
E	NUT	FM-33800-S7	WO-52542	1203	AN	CLIP	FM-78-2814-A	WO-637427	1209C
F	ECCENTRIC	FM-GP-2038	WO-A-754	1203	AP	BOLT	FM-GP-2077	WO-637605	1205
G	CABLE, w/TUBE, assembly	FM-GPW-2853	WO-A-1241	1201	AQ	GASKET	FM-91A-2151	WO-637606	1205
H	BRACKET, assembly	FM-GPW-2848	WO-639010	1201	AR	FITTING	FM-GP-2076	WO-A-557	1205
J	SPRING	FM-GPW-2793	WO-635681	1201	AS	GASKET	FM-91A-2152	WO-637604	1205
K	HANDLE, w/CABLE, assembly	FM-GPW-2780	WO-A-1242	1201	AT	BOLT	FM-24426	WO-6157	1204
L	CAP	FM-GPW-7768	WO-A-1507	0801	AU	PEDAL, assembly	FM-GPW-2452-B	WO-A-8253	1204
M	SPRING	FM-01T-2640	WO-A-1021	1201	AV	PAD, assembly	FM-GPW-2454	WO-A-1359	1204
N	BOLT	FM-GPW-2616	WO-A-1020	1201	AW	SPRING	FM-01T-2634	WO-A-1017	1201
P	BAND, assembly	FM-GP-2648	WO-A-1009	1201	AX	PIN	FM-73889-S7	WO-A-1006	1201
Q	DRUM	FM-GP-2614	WO-A-1002	1201	AY	LINK	FM-GPW-2630	WO-A-1005	1201
R	NUT	FM-33786-S2	WO-636575	1201	AZ	PIN	FM-73928-S7	WO-A-1004	1201
S	TUBE, assembly	FM-GPW-2267	WO-A-5226	1209C	BA	BOLT	FM-355352-S7	WO-A-1019	1201
T	HOSE	FM-GP-2078	WO-637424	1209B	BB	CAM	FM-GPW-2632	WO-A-1003	1201
U	BRACKET	FM-GPW-2274	WO-A-5227	1209D	BC	PIN	FM-73904-S7	WO-311003	1201
V	TEE	FM-GP-2074	WO-A-5227	1209C	BD	LINK	FM-GPW-2659	WO-A-1228	1201
W	TUBE, assembly	FM-GPW-2268	WO-637432	1209C	BE	SPRING	FM-GPW-2635	WO-A-5335	1201
X	WASHER	FM-34807-S2	WO-5010	1203	BF	CRANK, assembly	FM-GPW-2656	WO-A-1226	1201
Y	BOLT	FM-355578-S	WO-A-903	1203	BG	PIN	FM-357553-S18	WO-392468	1201
Z	CYLINDER, assembly	FM-GPW-2261	WO-A-6110	1207	BH	BOLT	FM-01T-2642	WO-A-1016	1201
AA	DRUM		WO-A-472	1302	BJ	NUT	FM-01T-2805	WO-A-1018	1201
AB	TUBE, assembly	FM-GPW-2265	WO-A-5224	1209C	BK	NUT	FM-33795-S2	WO-52217	1201
AC	CYLINDER, assembly	FM-GP-2140	WO-A-556	1205	BL	BOLT	FM-GPW-2462	WO-A-183	1205
AD	CAP, assembly	FM-GP-2162	WO-637608	1205	BM	FITTING	FM-358006-S8	WO-640038	1204
AE	NUT	FM-33846-S2	WO-5916	1203	BN	NUT	FM-33802-S2	WO-5939	1205
AF	PIN	FM-91A-2027	WO-637899	1203	BP	ROD	FM-GP-2143-A	WO-637599	1205
AG	TUBE, assembly	FM-GPW-2264	WO-A-1377	1209C	BQ	BOOT	FM-GP-2180-A	WO-637602	1205
AH	HOSE	FM-GPW-2078	WO-A-1373	1209B	BR	BAR	FM-GPW-2138	WO-A-1354	1205

FIGURE 12-6A—LEGEND FOR 12-6—BRAKE SYSTEM

## GROUP 12—BRAKE (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
10-1; 12-6 12-6	9240-FC-7626		WO-A-561	<b>1209B—HOSES</b>  BOLT, fitting, front wheel brake hose, cylinder end (hex-hd., 3⁄8-24NF-2, special) (LO-FC-7626)..... GASKET, brake hose fitting bolt (superseded by GASKET, FM-GP-2087, WO-637426) GASKET, brake hose fitting (LO-S-FC-5795) (supersedes GASKET, WO-A-562)..... GUARD, front wheel brake hose, assembly..... HOSE, front brake to axle, assembly (6 in. long) (LO-FC-8553) (superseded by HOSE, WO-A-15802)..... HOSE, front brake to axle, assembly (6 in. long) (synthetic) (supersedes HOSE, FM-GPW-2079, WO-A-1460)..... HOSE, front brake at axle tee, assembly (11 in. long) (LO-FC-8502) (superseded by HOSE, WO-A-15801)..... HOSE, front brake at axle tee, assembly (11 in. long) (synthetic) (supersedes HOSE, FM-GPW-2078, WO-A-1393) HOSE, rear brake at axle tee, assembly (15 in. long) (LO-FC-5784) (superseded by HOSE, WO-A-15803)..... HOSE, rear brake at axle tee, assembly (15 in. long) (synthetic) (supersedes HOSE, FM-GP-2078, WO-637424).....  <b>1209C—TUBES AND CLIPS</b>  CLAMP, axle brake tube..... NUT, mach. screw, sq., S, No. 10 (0.190)-32NF-2..... SCREW, mach., rd-hd., S, No. 10 (0.190)-32NF-2 x 1..... CLIP, brake tube (closed, S, 5⁄16 in., 21⁄64 in. bolt hole)..... CLIP, brake tube (tube to side rail)..... CLIP, brake tube, 1⁄4 in. (under rear axle cover bolt)..... CLIP, brake tube (open, S, 5⁄16 in., 1⁄8 in. bolt hole) (1 used—brake tube to side rail reinforcement, 1 used—brake tube to frame cross member, 1 used—brake tube to master cylinder)..... BOLT, hex-hd., S, cd-pltd., No. 10 (0.190) x 1⁄2, type "B" thd. (clip to master cylinder)..... NUT, mach. screw, hex., S, No. 10 (0.190)-24NC-2..... SCREW, mach., rd-hd., S, cd-pltd., No. 10 (0.190)-24NC-2 x 5⁄8..... WASHER, lock, S, cd-pltd., No. 10 (0.190)..... CLIP, lock, spring, brake hose to frame bracket (LO-FC-3052)..... NUT, inverted flared tube, 3⁄16 in. (brake tube).....	2	
	9240-FC-1511	FM-GP-2087	WO-A-562		2	.0057
	9240-FC-5795	FM-GPW-2096	WO-637426		2	.31
		FM-GPW-2079	WO-A-1457		2	
			WO-A-1460		2	.212
12-6	G503-02-17821		WO-A-15802		2	
		FM-GPW-2078	WO-A-1373		1	.261
12-6	G503-02-17820		WO-A-15801		1	
		FM-GP-2078	WO-637424		1	.31
12-6	G503-02-17819		WO-A-15803		1	
		FM-GPW-2250	WO-A-1515		3	.0125
	FM-34141-S2	WO-6273	3			
	FM-27145-S2	WO-6383	3			
	FM-GPW-2244	WO-A-1378	2		.0324	
	FM-GPW-2223	WO-52839	2		.007	
	FM-GPW-2281	WO-637439	1			
		WO-A-5449	3			
		WO-52840	1			
	FM-355836-S2	WO-6352	2			
	FM-355131-S7	WO-5064	2			
	FM-34803-S7	WO-52221	2			
12-6	H001-7025621	FM-78-2814-A	WO-637427	6	.0083	
	G085-2219065	FM-GP-2133	WO-384710	14	.0104	

12-6	9240-FC-5778	FM-GP-2074	WO-637432	TEE, brake tube axle (LO-S-FC-5778).....	2	.0652
		FM-20384-S2	WO-6188	BOLT, hex-hd., S, $\frac{1}{4}$ -20NC-2 x $\frac{1}{2}$ .....	2	
	G085-2307348	FM-33795-S2	WO-5217	NUT, reg., hex., s-fin., S, $\frac{1}{4}$ -20NC-2.....	1	
	H001-1518007	FM-34805-S2	WO-52706	WASHER, lock, reg., S, $\frac{1}{4}$ in.....	2	
12-6	3320-GPW-2263	FM-GPW-2263	WO-A-1501	TUBE, brake axle tee to front left brake hose, assembly ( $\frac{3}{16}$ in. x 6.5 in. lgh.).....	1	.0961
12-6	3320-GPW-2266	FM-GPW-2266	WO-A-1376	TUBE, brake axle tee to right front brake hose, assembly ( $\frac{3}{16}$ in. x 33.12 in. lgh.).....	1	.244
12-6	3320-GPW-2268	FM-GPW-2268	WO-A-5225	TUBE, brake axle tee to left rear brake wheel cylinder, assembly ( $\frac{3}{16}$ in. x 27.38 in. lgh.).....	1	.179
			WO-A-630	TUBE, brake axle tee to left rear brake wheel cylinder ( $\frac{3}{16}$ in. x 13 $\frac{3}{32}$ in. lgh.) (before Willys serial No. 106763).....	1	
12-6	3320-GPW-2267	FM-GPW-2267	WO-A-5226	TUBE, brake axle tee to right rear brake wheel cylinder, assembly ( $\frac{3}{16}$ in. x 28.81 in. lgh.).....	1	.179
			WO-A-631	TUBE, brake axle tee to right rear wheel cylinder brake ( $\frac{3}{16}$ in. x 30 $\frac{3}{32}$ in. lgh.) (before Willys serial No. 106763).....	1	
12-6	3320-GPW-2298	FM-GPW-2298	WO-A-1488	TUBE, brake front wheel cylinder to axle hose, assembly ( $\frac{3}{16}$ in. x 5.72 in. lgh.).....	2	.114
12-6	3320-GPW-2264	FM-GPW-2264	WO-A-1377	TUBE, brake master cylinder to front hose, assembly ( $\frac{3}{16}$ in. x 21.81 in. lgh.).....	1	.163
12-6	3320-GPW-2265	FM-GPW-2265	WO-A-5224	TUBE, brake master cylinder to rear hose, assembly ( $\frac{3}{16}$ in. x 62.94 in. lgh.).....	1	.342
			WO-A-683	TUBE, brake master cylinder to rear hose ( $\frac{3}{16}$ in. x 38 $\frac{1}{16}$ in. lgh.) (before Willys serial No. 106763).....	1	
12-6		FM-GPW-2274	WO-A-5227	BRACKET, brake axle tee.....	1	.112
		FM-20366-S	WO-6428	BOLT, hex-hd., S, $\frac{3}{16}$ -18NC-2 x $\frac{1}{8}$ .....	2	
		FM-GPW-2082	WO-A-1487	BRACKET, front brake hose, right.....	1	.127
		FM-GPW-2084	WO-A-1486	BRACKET, front brake hose, left.....	1	.127
<b>GROUP 13—WHEELS, HUBS AND DRUMS</b>						
<b>1301—WHEEL ASSEMBLY</b>						
	G503-0124253	FM-GPW-1029	WO-A-5470	BOLT, wheel divided rim (S, $\frac{1}{2}$ -20NF-2 x 1 $\frac{1}{16}$ ) (KHW-25695).....	40	.0383
	G503-0314840	FM-GPW-1030	WO-A-5471	NUT, wheel divided rim bolt (hex., S, $\frac{1}{2}$ -20NF-2) (KHW-2277).....	40	.0226
		FM-GPW-1045	WO-A-5472	PLATE, instruction, combat wheels (KHW-25696).....	5	
	5200-25693	FM-GPW-1016	WO-A-5468	RIM, wheel, inner half (KHW-25693).....	5	1.662
	3320-GPW-1027	FM-GPW-1027	WO-A-5469	RIM, wheel, outer half (superseded by RIM, FM-GPW-1024, WO-A-5549).....	5	1.71
	5200-25917	FM-GPW-1024	WO-A-5549	RIM, wheel, w/DISK, assembly (16 x 4:00) (KHW-24562).....	5	
	5200-24562	FM-GP-1015	WO-A-465	RIM, wheel, w/DISK, assembly (16 x 4:50).....	5	
		FM-GPW-1025-C	WO-A-1799	RING, lock, wheel bead (6:00 x 16 tires on combat wheels) (KHW-25930).....	5	.994
	A44-0200545	FM-GPW-1015	WO-A-5488	WHEEL, assembly (16 x 4:50) (KHW-25692).....	5	
10-4, 5; 11-1	H012-6141280	FM-GP-1201	WO-52942	CONE and ROLLERS, wheel bearing, 1.625 bore x $1\frac{1}{16}$ wide (TIM-18590) (BOW-BT-18590).....	8	.538
10-5; 11-1	H012-6219420	FM-GP-1202	WO-52943	CUP, wheel bearing (2.875 O.D. x $\frac{1}{2}$ wide) (TIM-18520) (BOW-BT-18520).....	8	.277
10-5; 11-1	8080-17016	FM-GP-4252	WO-A-866	NUT, wheel bearing (hex., S, $1\frac{5}{8}$ -16) (SP-17016).....	8	.094
10-5; 11-1		FM-GP-1124	WO-A-867	WASHER, lock, wheel bearing nut (S, $1\frac{5}{8}$ in.).....	4	.0455
10-5; 11-1	8080-17015	FM-GP-1218	WO-A-865	WASHER, wheel bearing (S.) (SP-17015).....	4	.0174

## GROUP 13—WHEELS, HUBS AND DRUMS (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
10-5; 11-1	H013-0500128	FM-GP-1177	WO-A-864	1301B—SEALS OIL SEAL, wheel bearing (SP-17004) . . . . .	4	.142
10-3, 4 12-6	8080-17071 9680-A-472	FM-GP-1139	WO-A-869 WO-A-472 WO-A-1691	1302—HUBS AND DRUMS CAP, wheel hub (SP-17071) . . . . . DRUM, front and rear wheel brakes (KHW-24566) . . . . . HUB, front and rear wheel, w/BEARING, assembly (KHW-24659) . . . . . HUB, front and rear left wheel, w/DRUM, assembly (KHW-25647) . . . . . HUB, front and rear right wheel, w/DRUM, assembly (KHW-25646) . . . . .	2 4 4 2 2	.228  4.61 4.61
11-1 10-3, 4 10-4; 11-1	5200-24566 5200-24568 G503-0314838 G503-0314839	FM-GP-1108 FM-GP-1107 FM-GP-1013 FM-GP-1012	WO-A-473 WO-A-474 WO-A-475 WO-A-476	1302A—STUDS AND BOLTS BOLT, wheel hub (S, L.H. thd., 1/2-20NF-2 x 1 1/2) (KHW-24566) . . . . . BOLT, wheel hub (S, R.H. thd., 1/2-20NF-2 x 1 1/2) (KHW-24568) . . . . . NUT, wheel hub bolt (hex, S, 1/2-20NF-2 L.H. thd.) (KHW-24576) . . . . . NUT, wheel hub bolt (hex, S, 1/2-20NF-2 R.H. thd.) (KHW-24575) . . . . .	10 10 10 10	.0301 .0303 .0241 .0241
14-1	H012-07-09455 G503-7086585	FM-GPW-3171 FM-GPW-3332-A	WO-A-857 WO-A-622	GROUP 14—STEERING 1401—STEERING CONNECTING ROD (DRAG LINK) AND BELL CRANK BEARING, steering bell crank (SP-17212) (TR-B-1210) . . . . . COVER, dust, steering connecting rod (rubber) (CA-S-X-1109) (also in KIT, FM-GPW-18383, WO-A-6791) . . . . . CRANK, bell, steering drag link (superseded by CRANK, FM-GPW-3131-B, WO-A-8249) . . . . . CRANK, bell, steering drag link (SP-17307) (supersedes CRANK, FM-GPW-3131, WO-A-1211) . . . . . CRANK, bell, steering drag link (Note 1) . . . . . FITTING, lubricating, hydraulic type, straight, ball seal, 1/8-27NPT (AD-1980) . . . . . KIT, repair, steering connecting rod . . . . . (Consists of: 2 COVER 1 PLUG, adjusting, large	2 2 1 1 1 3 1	.179  2.25  .472
10-1, 3	8080-17307	FM-GPW-3131-B	WO-A-8249			
14-1	3320-GPW-3131	FM-GPW-3131	WO-A-1211			
10-1, 3	8080-17307	FM-GPW-3131-B	WO-A-8249			
14-1	3320-GPW-18383	FM-358006-S8 FM-GPW-18383	WO-A-5691 WO-640038 WO-A-6791			
		FM-GPW-3332-A FM-GPW-3323	WO-A-622 WO-630756			




## GROUP 14—STEERING

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>1401—STEERING CONNECTING ROD (DRAG LINK) AND BELL CRANK (Cont'd)</b>						
14-1	G503-7036588	FM-GPW-3326	WO-630753	PLUG, steering connecting rod ball seat spring (CA-S-5144) (also in KIT, FM-GPW-18393, WO-A-6791) . . . . .	2	
		FM-GPW-3305-B	WO-A-8252	ROD, connecting, steering (CA-D-822) . . . . .	1	
	9680-A-621	FM-GPW-3305	WO-A-621	ROD, connecting, steering . . . . .	1	
	G503-0373279	FM-GPW-3304	WO-A-619	ROD, connecting, steering, assembly (superseded by ROD, assembly, FM-GPW-3304-B, WO-A-8250) . . . . .	1	1.19
14-1	3320-GPW-3304-B	FM-GPW-3304-B	WO-A-8250	ROD, connecting, steering, assembly (supersedes ROD, assembly, FM-GPW-3304, WO-A-619) . . . . .	1	
	8080-17213	FM-GPW-3167	WO-A-858	SEAL, steering bell crank shaft bearing (SP-17213) (also in GASKET SET, FM-GPW-18365-B, WO-A-7830) . . . . .	2	.0057
14-1	G503-7036567	FM-GPW-3320	WO-630755	SEAT, ball, steering connecting rod (CA-S-5069) (also in KIT, FM-GPW-18383, WO-A-6791) . . . . .	3	
10-1	8080-17210	FM-GPW-3165	WO-A-855	SHAFT, steering bell crank . . . . .	1	1.124
		FM-356124-S	WO-A-876	NUT, slotted, hex., S., $\frac{3}{4}$ -20NF-2 (SP-S-1106) . . . . .	1	.0342
	H001-0811055	FM-72089-S	WO-5134	PIN, cotter, split, S., $\frac{1}{8}$ x $1\frac{1}{4}$ . . . . .	1	
14-1	8080-17205	FM-GPW-3170	WO-A-861	SHIELD, dust, steering bell crank bearing (SP-17205) . . . . .	1	.0121
	G503-7036584	FM-GPW-3336	WO-A-623	SHIELD, dust, steering connecting rod dust cover (CA-S-X-1110) (also in KIT, FM-GPW-18383, WO-A-6791) . . . . .	2	
14-1	G503-7036587	FM-GPW-3327	WO-630754	SPRING, steering connecting rod ball seat (CA-S-5145) (also in KIT, FM-GPW-18383, WO-A-6791) . . . . .	2	
	8080-17215	FM-GPW-3169	WO-A-860	WASHER, steering bell crank shaft, lower (SP-17215) . . . . .	1	.0152
	8080-17214	FM-GPW-3168	WO-A-859	WASHER, steering bell crank shaft, upper (SP-17214) . . . . .	1	.0122
<b>1402—TIE ROD</b>						
10-3, 5	8080-13439	FM-51-3287	WO-A-1706	CLAMP, steering knuckle tie rod socket (SP-13439) (TP-16MN8) . . . . .	4	.0641
10-5		FM-24916-S2	WO-A-1707	BOLT, hex-hd., S., $\frac{3}{8}$ -24NF x $1\frac{1}{2}$ (SP-6-73-326) (TP-6MN27) . . . . .	4	
10-5		FM-33800-S7	WO-52542	NUT, reg., hex., S., cd-pltd., $\frac{3}{8}$ -24NF-2 . . . . .	4	
		FM-34807-S2	WO-5010	WASHER, lock, reg., S., $\frac{3}{8}$ in. . . . .	4	
	H001-1518009	FM-78-3336	WO-A-844	COVER, dust, steering knuckle tie rod socket (SP-16067) (TP-14DM-43) . . . . .	2	
	G085-2371582	FM-GP-3290		END, steering knuckle tie rod, left, assembly (SP-17047-X) (superseded by END, assembly, FM-GP-3292, WO-A-847) . . . . .	2	
10-1, 3, 5	8080-17047-X		WO-A-847	END, steering knuckle tie rod, left, assembly (SP-17047-X) (TP-14SV90-A-7) (supersedes END, assembly, FM-GP-3290) . . . . .	2	.489

10-1, 3	8080-17046-X	FM-GP-3289	WO-A-838	END, steering knuckle tie rod, right, assembly (SP-17046-X) (superseded by END, assembly, FM-GP-3291, WO-A-838)	2	
10-5		FM-GP-3291	WO-A-838	END, steering knuckle tie rod, right, assembly (SP-17046-X) (TP-14SV89-A-7) (super-sedes END, assembly, FM-GP-3289)	2	.489
10-5	H001-0811040	FM-351059-S7	WO-10558	NUT, hex., slotted, S., $\frac{1}{2}$ -20NF	4	
	G503-0373270	FM-72034-S	WO-A-1642	PIN, cotter, split, S., $\frac{3}{32}$ x 1	4	
	G503-0373269	FM-GPW-3280	WO-A-1704	ROD, tie, steering knuckle, right, assembly (SP-17308-X) (includes tie rod END)	1	2.61
	3320-783332-A	FM-GPW-3279	WO-A-1708	ROD, tie, steering knuckle, left, assembly (SP-17309-X) (includes tie rod END)	1	2.35
10-1, 3	8080-17295-2	FM-78-3332-A	WO-A-6305	SEAL, dust, steering knuckle tie rod (Ford only)	4	
10-1, 3, 5	8080-17295-1	FM-GPW-3282	WO-A-1709	SPRING, steering knuckle tie rod socket stud (SP-17347) (TP-14-DS-20) (Willys only)	4	
		FM-GPW-3281	WO-A-1705	TUBE, steering knuckle left tie rod (14 $\frac{1}{2}$ in. long) (SP-17295-2)	1	
				TUBE, steering knuckle right tie rod (21.80 in. long) (SP-17295-1)	1	
<b>1403A—GEAR ASSEMBLY</b>						
14-2	3320-GPW-3590	FM-GPW-3590	WO-A-1116	ARM, steering gear	1	.961
14-2	7640-025060	FM-356077-S8	WO-639115	NUT, hex., S., $\frac{5}{8}$ -18NF-2	1	
14-2	H001-1518013	FM-34811-S	WO-5038	WASHER, lock, reg., S., $\frac{5}{8}$ in.	1	
14-2	H002-0100130	FM-GPW-3571	WO-639104	BALL, chr.-alloy-S, Grade 2, $\frac{5}{8}$ in. (steering gear worm)	22	.0055
14-2	7640-063996	FM-GPW-3517	WO-639190	BEARING, steering column, wheel end, assembly (RG-063996)	1	.138
14-2	7640-063011	FM-GPW-3587	WO-639090	BUSHING, steering gear housing, inner (RG-063011) (RG-063019)	1	.0306
14-2	7640-063012	FM-GPW-3576	WO-639091	BUSHING, steering gear housing, outer (RG-063012) (RG-063020)	1	.0371
14-2	3320-GPW-3509	FM-GPW-3509	WO-A-1199	COLUMN, steering, w/BEARING, assembly	1	.717
	9680-390510	FM-GPW-3583	WO-390510	COVER, steering column oil hole (Willys only)	1	
14-2	7640-502540	FM-20386-S7	WO-639116	COVER, steering gear housing, side, assembly (GR-502540)	1	.619
		FM-34836-S7	WO-51486	BOLT, hex-hd., s-fin., S., cd-pltd., $\frac{5}{16}$ -18NC-2 x 1	4	
14-2	7640-T-126000	FM-GPW-3568	WO-A-1760	WASHER, lock, hv., S., cd-pltd., $\frac{5}{16}$ in.	4	
	7640-020122	FM-355426-S	WO-639107	COVER, steering gear housing, upper (RG-T-126000)	1	.228
	G085-1543023	FM-356303-S	WO-639121	BOLT, hex-hd., s-fin., alloy-S, $\frac{5}{16}$ -18NC-2 x $\frac{3}{4}$ (RG-020122)	3	.0258
14-2	H012-6200730	FM-34836-S7	WO-5051	WASHER, copper (RG-092021)	3	.0083
	7640-T-129001	FM-GPW-3552	WO-639102	CUP, steering gear worm ball (RG-400025)	2	.117
14-2	7640-T-13086	FM-GPW-3581	WO-639119	GASKET, steering gear housing side cover (RG-T-129001)	1	.0036
	7640-503284	FM-GPW-3504	WO-A-1239	GEAR, steering, w/o WHEEL, assembly (RG-T-13086)	1	9.074
		FM-GPW-3545	WO-A-740	HOUSING, steering gear, assembly (RG-503284)	1	2.139
		FM-24555-S	WO-51371	BOLT, hex-hd., S., $\frac{1}{4}$ -20NF-2 x 3	2	
		FM-355433-S2	WO-51612	BOLT, hex-hd., S., $\frac{1}{4}$ -20NF-2 x 4 (Ford only)	1	
14-2	H013-0500017	FM-33802-S2	WO-5939	BOLT, hex-hd., S., $\frac{1}{4}$ -20NF-2 x 4 (Willys only)	1	.102
		FM-34921-S	WO-52874	NUT, reg., hex., S., $\frac{1}{4}$ -20NF-2	3	
14-2		FM-GPW-3591-A	WO-639095	WASHER, lock, hv., S., internal tooth, flat type, $\frac{1}{8}$ in.	3	
14-2		FM-74121-S	WO-51091	OIL SEAL, steering gear lever shaft (RG-032075)	1	
14-2		FM-358064-S	WO-5085	PLUG, expansion, steering gear housing (1 $\frac{1}{4}$ in.)	1	
14-2	7640-401100	FM-GPW-3589	WO-639103	PLUG, filler, steering gear housing (pipe, I., $\frac{1}{8}$ in.)	1	.0023
14-2	7640-021116	FM-GPW-3577	WO-639118	RING, retaining, steering gear worm ball (RG-401100)	2	.07
14-2		FM-33927-S7	WO-52925	SCREW, adjusting, steering gear lever shaft (RG-021116)	1	
14-2	7640-028093	FM-GPW-3518	WO-639192	NUT, thin, hex., S., cd-pltd., $\frac{1}{4}$ -20	1	.0081
				SEAT, steering column upper bearing spring (RG-028093)	1	



Key	Part Name	Ford Part No.	Willys Part No.	Group No.
A	WHEEL	FM-GPW-3600-A	WO-A-6858	1404
B	BEARING	FM-GPW-3517	WO-639190	1403A
C	SEAT	FM-GPW-3518	WO-639192	1403A
D	SPRING	FM-GPW-3520	WO-639191	1403A
E	NUT	FM-GPW-3655	WO-A-633	1404
F	BUTTON	FM-GPW-3627	WO-A-634	0609B
G	WASHER	FM-GPW-3631	WO-A-750	0609B
H	FERRULE	FM-GPW-3635-B	WO-A-751	0609B
J	SPRING	FM-GPW-3626	WO-638884	0609B
K	CUP	FM-GPW-3646	WO-638885	0609B
L	CABLE, assembly	FM-GPW-14171	WO-A-752	0609B
M	COLUMN, assembly	FM-GPW-3509	WO-A-1199	1403A
N	CLAMP, assembly	FM-GPW-3506	WO-A-635	1405
P	SHIM SET	FM-GPW-18374	WO-A-6760	1403A
Q	RING	FM-GPW-3589	WO-639103	1403A
R	CUP	FM-GPW-3552	WO-639102	1403A
S	SHAFT, and WORM, assembly	FM-GPW-3514	WO-A-8838	1403A
T	PLUG	FM-358064-S	WO-5085	1403A
U	SHAFT, assembly	FM-GPW-3575	WO-A-745	1403A
V	GASKET	FM-GPW-3581	WO-639119	1403A
W	SCREW	FM-GPW-3577	WO-639118	1403A
X	NUT	FM-33927-S7	WO-52925	1403A
Y	COVER	FM-GPW-3583	WO-639116	1403A
Z	HOUSING, assembly	FM-GPW-35415	WO-A-740	1403A
AA	PLUG	FM-74121-S	WO-51091	1403A
AB	BUSHING	FM-GPW-3587	WO-639090	1403A
AC	BUSHING	FM-GPW-3576	WO-639091	1403A
AD	ARM	FM-GPW-3590	WO-A-1116	1403A
AE	WASHER	FM-34811-S	WO-5038	1403A
AF	NUT	FM-356077-S8	WO-639115	1403A
AG	OIL SEAL	FM-GPW-3591-A	WO-639095	1403A
AH	BALLS	FM-GPW-3571	WO-639104	1403A
AJ	COVER	FM-GPW-3568	WO-A-1760	1403A
AK	RING	FM-GPW-3652	WO-A-747	0609B
AL	BRUSH	FM-GPW-13836	WO-A-302	0609B

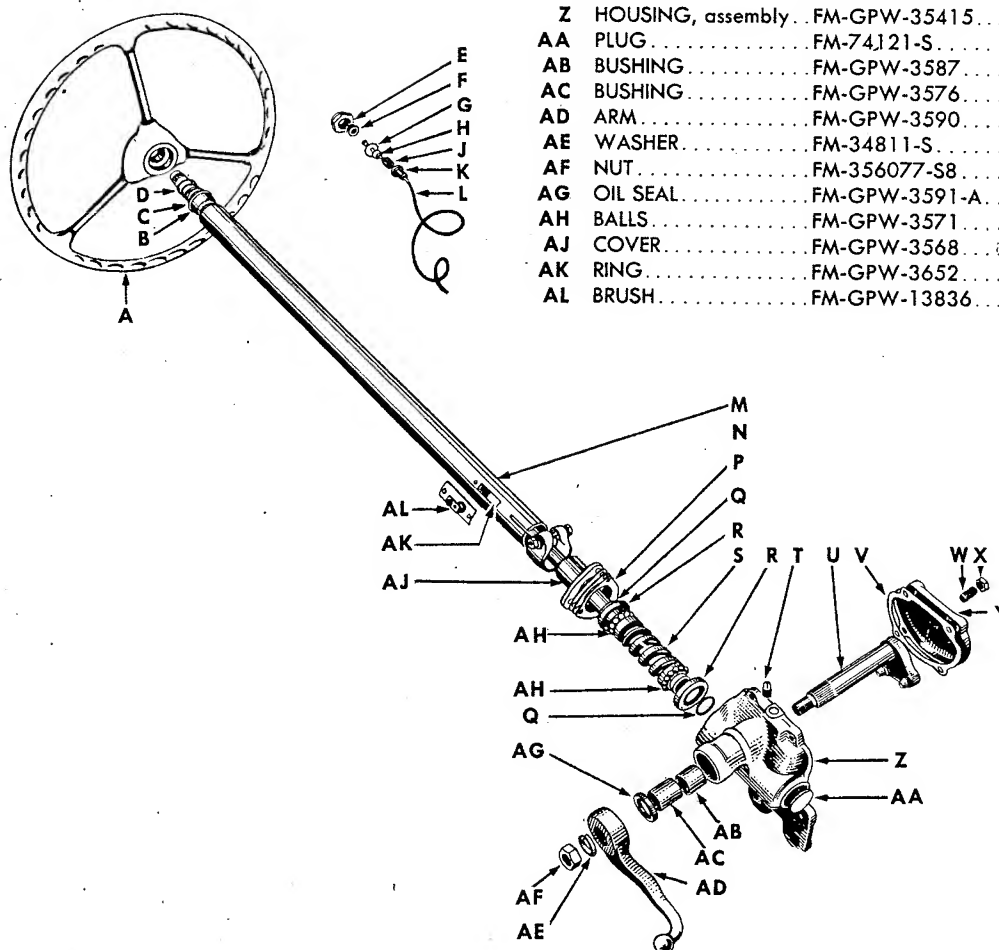

RA PD 342246

FIGURE 14-2—STEERING GEAR ASSEMBLY—EXPLODED VIEW

## GROUP 14—STEERING

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>1403A—GEAR ASSEMBLY (Cont'd)</b>						
14-2	7640-503308	FM-GPW-3524	WO-A-742	SHAFT and WORM, steering gear, w/horn button NUT, assembly (superseded by SHAFT, assembly, FM-GPW-3514, WO-A-8838)	1	2.51
	7640-503308	FM-GPW-3514	WO-A-8838	SHAFT and WORM, steering gear, w/horn button NUT, assembly (RG-503308) (supersedes SHAFT, assembly, FM-GPW-3524, WO-A-742)	1	2.281
14-2	F065-0101500	FM-GPW-3575	WO-A-745	SHAFT, lever, steering gear, assembly (RG-7698-4 $\frac{5}{8}$ )	1	.0029
	3320-GPW-3563	FM-GPW-3563	WO-638918	SHIM, steering gear mounting	as req.	
14-2	7640-033046	FM-GPW-3593	WO-639108	SHIM, steering gear housing upper cover (S, 0.002 thk.) (RG-033046) (also in SHIM SET, FM-GPW-18374, WO-A-6760)	as req.	
	7640-033047	FM-GPW-3594	WO-639109	SHIM, steering gear housing upper cover (S, 0.003 thk.) (RG-033047) (also in SHIM SET, FM-GPW-18374, WO-A-6760)	as req.	
14-2	7640-033048	FM-GPW-3595	WO-639110	SHIM, steering gear housing upper cover (S, 0.010 thk.) (RG-033048) (also in SHIM SET, FM-GPW-18374, WO-A-6760)	as req.	
	3320-GPW-18374	FM-GPW-18374	WO-A-6760	SHIM SET, steering gear housing upper cover	1	.11
14-2	7640-033046	FM-GPW-3593	WO-639108	(Consists of: 2 SHIM, 0.002 thk. 2 SHIM, 0.003 thk. 2 SHIM, 0.010 thk.)		
	7640-033047	FM-GPW-3594	WO-639109	SNAP RING, steering column (Ford only)	2	.0036
14-2	7640-033048	FM-GPW-3595	WO-639110	SPACER, steering gear to frame bolt	1	.0033
	3320-GPW-3521	FM-GPW-3521	WO-A-1422	SPRING, steering column upper bearing (RG-401090)	1	.0217
14-2	7640-401090	FM-GPW-3520	WO-639191	WASHER, S, $\frac{1}{2}$ in. I.D. x $\frac{1}{4}$ O.D. (steering gear slotted hole)	1	
	FM-356439-S	FM-356439-S	WO-638381			
<b>1404—WHEEL ASSEMBLY</b>						
14-2; 18-1	9680-A-535		WO-A-535	WHEEL, steering, assembly (hard rubber) (superseded by WHEEL, FM-GPW-3600-A, WO-A-6858)	1	
	9680-A-6343		WO-A-6343	WHEEL, steering, assembly (superseded by WHEEL, FM-GPW-3600-A, WO-A-6858)	1	
14-2	3320-GPW-3600-A	FM-GPW-3600-A3	WO-A-6858	WHEEL, steering (superseded by WHEEL, FM-GPW-3600-A, WO-A-6858)	1	
	7640-026988	FM-GPW-3600-A	WO-A-6858	WHEEL, steering assembly (supersedes WHEEL, WO-A-535; and WHEEL, WO-A-6343; and WHEEL, FM-GPW-3600-A3)	1	3.05
14-2		FM-GPW-3655	WO-A-633	NUT, steering wheel and horn button (RG-026088)	1	.179

## GROUP 14—STEERING

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
14-2	7640-502282 H001-0116196 G166-0314832 H001-7025711  H001-0116190 G166-0314832 H001-7025711	FM-GPW-3682-A FM-GPW-3506 FM-21492-S2 FM-33798-S7 FM-34806-S7 FM-GPW-3511 FM-24347-S2 FM-33798-S7 FM-34806-S7 FM-GPW-3563 FM-GPW-3658	WO-A-1277 WO-A-635 WO-51308 WO-A-1532 WO-51833 WO-A-1276 WO-51396 WO-A-1532 WO-51833 WO-638918 WO-A-2859	1405—BRACKETS  BUSHING, steering column support..... CLAMP, steering column, assembly (RG-502282)..... BOLT, hex-hd., s-fin., alloy-S, 5/16-24NF-2 x 2..... NUT, reg., hex., s-fin., alloy-S, cd-pltd., 5/16-24NF-2..... WASHER, lock, reg., S, cd-pltd., 5/16 in..... CLAMP, steering column support..... BOLT, hex-hd., s-fin., alloy-S, 5/16-24NF-2 x 3/4 (BAOXIBA)..... NUT, reg., hex., s-fin., alloy-S, cd-pltd., 5/16-24NF-2..... WASHER, lock, reg., S, cd-pltd., 5/16 in..... SHIM, mounting, steering column..... SUPPORT, steering column.....	1 1 1 1 1 1 2 2 2 as req. 1	.108          .0029 .135
GROUP 15—FRAME AND BRACKETS						
1500—FRAME AND BRACKETS						
	FM-GPW-5113 FM-60416-S  FM-GPW-6030  FM-GPW-6029 FM-GPW-5341  FM-GPW-5337 FM-GPW-352126-S FM-357076-S FM-352127-S FM-GPW-5106 FM-60446-S FM-GPW-18075 FM-357074-S	WO-A-1152 WO-A-185 WO-5267 WO-A-420 WO-A-418  WO-A-421 WO-A-419  WO-A-500 WO-5215 WO-A-544 WO-5215  WO-A-415 WO-52832	BRACE, machine gun mounting plate..... BRACKET, brake pedal retracting spring..... RIVET, rd-hd., S., 5/16 x 3/4..... BRACKET, engine support, front, left (lower half) (Willys only)..... BRACKET, engine support, front, left (upper half) (Willys only)..... BRACKET, engine support, front, left (Ford only)..... BRACKET, engine support, front, right (lower half) (Willys only)..... BRACKET, engine support, front, right (upper half) (Willys only)..... BRACKET, engine support, front, right (Ford only)..... BRACKET, front and rear spring pivot..... RIVET, rd-hd., S., 3/8 x 1 (Willys only)..... BRACKET, front and rear spring shackle, assembly..... RIVET, rd-hd., S., 3/8 x 1 (Willys only)..... RIVET, huck, S., 3/8 x 1/16 (Ford only)..... RIVET, rd-hd., S., 3/8 x 1 1/8 (Ford only)..... BRACKET, front cross member, intermediate..... RIVET, rd-hd., S., 3/8 x 1/8..... BRACKET, front shock absorber, w/SHAFT, assembly (Ford only)..... RIVET, huck, S., 5/16 x 5/16.....	4 1 1 1 1 1 1 1 1 4 8 4 4 4 2 6 2 2	.407          .815 .358      .684	

FM-GPW-5095	WO-A-1204	BRACKET, front shock absorber, left, w/SHAFT, assembly (frame end)	1
FM-357008-S	WO-A-1205	BRACKET, front shock absorber, right, w/SHAFT, assembly (frame end) (Willys only)	1
FM-GPW-2073	WO-A-1341	BRACKET, master cylinder, assembly	1
FM-357008-S	WO-A-1283	RIVET, fl-hd., S., $\frac{1}{4}$ x $\frac{1}{16}$ (Ford only)	8
		BRACKET, mounting, front brake hose (frame end)	2
		RIVET, fl-hd., S., $\frac{1}{4}$ x $\frac{1}{16}$ (Ford only)	2
	WO-5249	RIVET, rd-hd., S. (Willys only)	2
	WO-638809	BRACKET, mounting, rear brake hose (Willys only)	1
	WO-A-1201	BRACKET, radiator	2
		RIVET, huck, S., $\frac{5}{16}$ x $\frac{5}{16}$ (Ford only)	2
		RIVET, rd-hd., S., $\frac{5}{16}$ x $\frac{13}{16}$ (Ford only)	2
	WO-5267	RIVET, rd-hd., S., $\frac{5}{16}$ x $\frac{3}{4}$ (Willys only)	4
		BRACKET, rear shock absorber, w/SHAFT, assembly (Ford only)	2
	WO-A-484	RIVET, plain, S., pointed, $\frac{5}{16}$ x $\frac{7}{8}$	2
	WO-A-485	BRACKET, rear shock absorber, left, w/SHAFT, assembly (Willys only)	1
	WO-A-1431	BRACKET, rear shock absorber, right, w/SHAFT, assembly (Willys only)	1
		BRACKET, support, body, rear (Willys only)	1
		BRACKET, support, radiator (Ford only)	2
	WO-A-1514	BRACKET, support, radiator grille guard (Ford only)	1
	WO-A-1202	BRACKET, support, radiator guard (Willys only)	1
	WO-A-508	BRACKET, support, radiator, left (Willys only)	1
		BRACKET, support, radiator, right	1
	WO-A-6740	RIVET, flat head, S., $\frac{5}{16}$ x $\frac{1}{16}$ (Ford only)	4
		CUP, retaining, transfer case insulator	1
	WO-A-1142	RIVET, plain, S., pointed, $\frac{5}{16}$ x $\frac{3}{4}$ (Ford only)	1
		FRAME, assembly (Willys only) (includes: BRACES, BRACKETS, CUPS, REIN- FORCEMENTS, RETAINERS, TUBES AND ATTACHING PARTS)	1
		FRAME, assembly (Ford only) (includes: BRACES, BRACKETS, CUPS, REIN- FORCEMENTS, RETAINERS, TUBES AND ATTACHING PARTS) (super- seded by FRAME, assembly, FM-GPW-5005-B)	1
	FM-GPW-5005-B	FRAME, assembly (Ford only) (supersedes FRAME, assembly, FM-GPW-5005)	1
		GUARD, exhaust pipe (after Willys serial 120700) (Willys only)	1
	WO-52945	BOLT, carriage, S., $\frac{3}{8}$ -16NC-2 x $\frac{7}{8}$ (guard to skid plate) (Willys only)	2
	WO-5919	BOLT, hex-hd., S., $\frac{3}{8}$ -24NF-2 x 1 (guard to frame) (Willys only)	1
	WO-5544	NUT, hex., S., $\frac{3}{8}$ -16NC-2 (Willys only)	2
	WO-52101	WASHER, plain, S., $\frac{3}{8}$ in., SAE ( $\frac{13}{16}$ O.D. x $\frac{13}{32}$ I.D. x $\frac{1}{16}$ thk.) (Willys only)	3
	WO-303922	WASHER, plain, S., $\frac{3}{8}$ in. (1 $\frac{1}{2}$ O.D. x $\frac{1}{16}$ I.D.) (Willys only)	1
	WO-5010	WASHER, lock, S., $\frac{3}{8}$ in. (Willys only)	3
	WO-A-1129	GUSSET, front bumper, lower left	1
	WO-A-1130	GUSSET, front bumper, lower right	1
	WO-A-1127	GUSSET, front bumper, upper left	1
	WO-A-1128	GUSSET, front bumper, upper right	1
	WO-A-1150	MEMBER, cross, frame, center	1
	WO-52832	RIVET, rd-hd., S., $\frac{3}{8}$ x $\frac{7}{8}$	2
		MEMBER, cross, frame, front (Ford only)	1

H001-0918009


## GROUP 15—FRAME AND BRACKETS (Cont'd)

Figure Number	Official Stock Number	Piece Mark of Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>1500—FRAME AND BRACKETS (Cont'd)</b>						
		FM-GPW-5025	WO-A-5127	MEMBER, cross, frame, intermediate, front, assembly	1	
		FM-20389-S	WO-50151	BOLT, hex-hd., s-fin., alloy-S, $\frac{3}{8}$ -24NPF-2 x 1 (Ford only)	6	
		FM-33800-S2	WO-5901	BOLT, hex-hd., s-fin., alloy-S, $\frac{3}{8}$ -24NPF-2 x $\frac{1}{8}$ (Willys only)	6	
		FM-34747-S7	WO-52101	NUT, hex., S, $\frac{3}{8}$ -24NPF-2	6	
		FM-34807-S2	WO-5010	WASHER, plain, S, cd-pltd., $\frac{3}{8}$ in. ( $\frac{1}{8}$ O.D. x $\frac{1}{16}$ I.D. x $\frac{1}{16}$ thk.)	2	
	H001-1518009	FM-GPW-5035	WO-A-547	WASHER, lock, S, $\frac{3}{8}$	6	
			WO-5326	MEMBER, cross, frame, rear	1	
			WO-50769	RIVET, fl-hd., S, $\frac{3}{8}$ x $\frac{1}{8}$ (Willys only)	2	
		FM-357100-S	WO-A-1153	RIVET, rd-hd., S, $\frac{3}{8}$ x $\frac{3}{4}$ (Willys only)	4	
			WO-52832	RIVET, rd-hd., S, $\frac{3}{8}$ x $\frac{1}{16}$ (Ford only)	8	
			WO-A-668	MEMBER, cross, frame, intermediate, rear (Willys only)	1	
			WO-A-549	RIVET, rd-hd., S, $\frac{3}{8}$ x $\frac{1}{8}$ (Willys only)	2	
				NUT, clinch, S, $\frac{1}{4}$ -28NPF-2 (MSP-F-2005) (Willys only)	2	
				NUT, clinch, S, $\frac{3}{8}$ -24NPF-2 (dash to frame brace; fender brace to frame) (MSP-F-2009) (Willys only)	2	
		FM-GPW-5077	WO-A-548	NUT, clinch, S, $\frac{3}{8}$ -24NPF-2 (splasher apron to frame) (MSP-F-2007) (Willys only)	11	
		FM-357100-S	WO-A-637	OUTRIGGER, body, rear	5	
				RIVET, rd-hd., S, $\frac{3}{8}$ x $\frac{1}{16}$ (Ford only)	4	
		FM-GPW-5125	WO-50769	RIVET, rd-hd., S, $\frac{3}{8}$ x $\frac{3}{4}$ (Willys only)	4	
		FM-GPW-5097	WO-A-1151	PLATE, mounting, machine gun	8	
			WO-A-534	PLATE, reinforcement, frame, rear	1	
			WO-52906	PLATE, reinforcement, frame, rear	1	
			WO-5010	RIVET, fl-hd., S, $\frac{3}{8}$ x $\frac{3}{4}$ (Willys only)	1	
	H001-1518009	FM-GPW-5291-B	WO-A-1253	WASHER, lock, S, $\frac{3}{8}$ in. (Willys only)	4	
				PLATE, skid, exhaust pipe guard (under frame) (used with external contracting type hand brake)	1	
		FM-23395-S	WO-52945	BOLT, carriage, sq-nk., S, $\frac{3}{8}$ -16NC-2 x $\frac{7}{8}$	1	
	H001-4167580	FM-33797-S7	WO-5544	NUT, reg, hex., s-fin., S, cd-pltd., $\frac{3}{8}$ -16NC-2 (GM-102635)	4	
	H001-1530009	FM-34747-S2	WO-52101	WASHER, plain, S, SAE std., $\frac{3}{8}$ in.	4	
	H001-1518009	FM-34807-S2	WO-5010	WASHER, lock, reg., S, $\frac{3}{8}$ in.	4	
			WO-A-8858	PLATE, skid, exhaust pipe guard (under frame) (used with internal expanding type hand brake)	1	
			WO-52945	BOLT, carriage, sq-nk., S, $\frac{3}{8}$ -16NC-2 x $\frac{7}{8}$ (plate to cross member)	4	
			WO-519	BOLT, hex-hd., S, $\frac{3}{8}$ -24NPF-2 x 1 (plate to frame)	1	
		FM-33797-S7	WO-5544	NUT, hex., S, $\frac{3}{8}$ -16NC-2	4	
	H001-1530009	FM-34747-S2	WO-52101	WASHER, plain, SAE std., $\frac{3}{8}$ in.	4	
			WO-303922	WASHER, S, $1\frac{1}{2}$ O.D. x $\frac{1}{16}$ I.D.	1	

04-1

15-1	H001-1518009	FM-34807-S2	WO-5010	WASHER, lock, S., reg., 3/8 in.	1
15-1			WO-A-493	RETAINER, pedal shaft, assembly (Willys only)	1
15-1			WO-A-416	SPACER, frame cross member, intermediate front bracket (Willys only)	2
		FM-GPW-17759	WO-A-1120	SPACER, front bumper gusset	2
			WO-A-1138	SUPPORT, battery, assembly (before Willys serial 120700) (Willys only)	1
			WO-A-5181	SUPPORT, battery, assembly (after Willys serial 120700) (Willys only)	1
	9680-A-1203		WO-A-50769	RIVET, rd-hd., S., 3/8 x 3/4	1
			WO-A-1203	TUBE, cross, frame, front (Willys only)	1
1502—PINTLE HOOK					
15-1			WO-A-6393	BOLT, eye, safety chain (after Willys serial 158372)	2
15-1		FM-GPW-5186	WO-6163	NUT, hex., S., 1/2-13NC-2	2
15-1	H001-1518011	FM-34809-S	WO-5009	WASHER, lock, S., 1/2 in.	2

.472

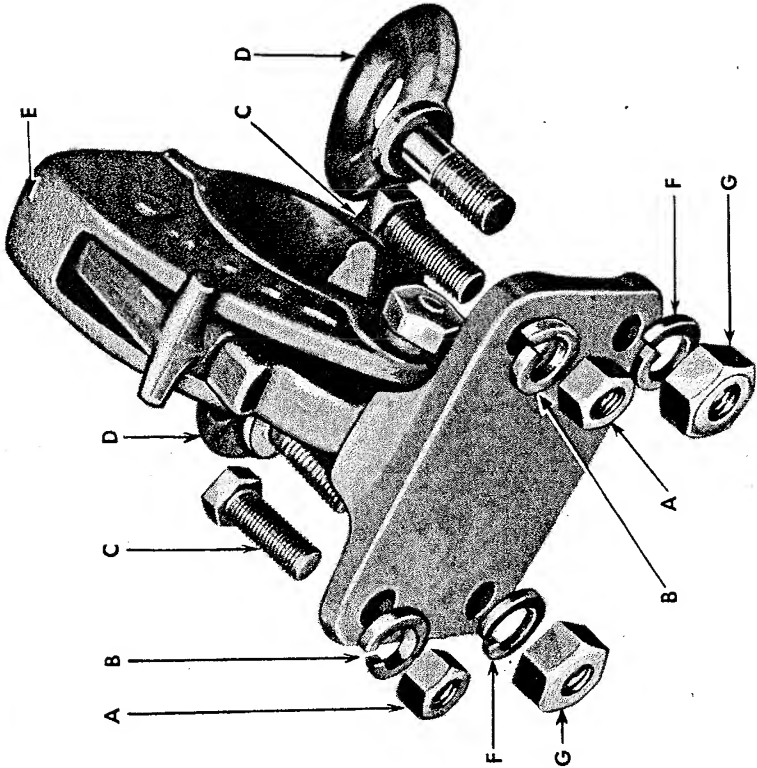

Key	Part Name	Ford Part No.	Willys Part No.	Group Number
A	NUT	FM-33802-S	WO-5939	1502
B	WASHER	FM-34808-S	WO-52349	1502
C	BOLT	FM-24411-S	WO-6923	1502
D	EYE BOLT	FM-GPW-5186	WO-A-6393	1502
E	HOOK	FM-GPW-5182	WO-A-593	1502
F	WASHER	FM-34809-S	WO-5009	1502
G	NUT	FM-33845-S2	WO-6163	1502

FIGURE 15-1—PINTLE HOOK

## GROUP 16—SPRINGS AND SHOCK ABSORBERS

1601—FRONT SPRING

0340-14375	FM-GPW-5330-A	WO-116458	CLIP, front spring leaf, small	4	.0205
3320-GPW-5313-A	FM-GPW-5313-B	WO-A-612-1	LEAF, front left spring, No. 1, w/BUSHING (36 1/4 in. between eye centers)	1	.912
	FM-GPW-5313-A	WO-A-613-1	LEAF, front right spring, No. 1, w/BUSHING (36 1/4 in. between eye centers)	1	.912
		WO-A-8463-1	LEAF, front spring, No. 1, w/BUSHING (for SPRING, WO-A-8463)	2	
0340-14376	FM-GPW-5315-B	WO-A-8464-1	LEAF, front right spring, No. 1, w/BUSHING (for SPRING, WO-A-8464)	1	.717
3320-GPW-5315-A	FM-GPW-5315-A	WO-A-612-2	LEAF, front left spring, No. 2 (36 1/4 in. long)	1	.717
		WO-A-613-2	LEAF, front right spring, No. 2 (36 1/4 in. long)	1	
		WO-A-8463-2	LEAF, front spring, No. 2 (for SPRING, WO-A-8463)	2	
		WO-A-8464-2	LEAF, front spring, No. 2 (for SPRING, WO-A-8464)	1	
3320-GPW-5316-B	FM-GPW-5316-B	WO-A-612-3	LEAF, front left spring, No. 3 (30 in. long)	1	
3320-GPW-5316-A	FM-GPW-5316-A	WO-A-613-3	LEAF, front right spring, No. 3 (30 in. long)	1	
		WO-A-8463-3	LEAF, front spring, No. 3 (for SPRING, WO-A-8463)	2	

Note 1—Only for vehicles modified by MWO ORD G503-W9. (see page 3).

Key	Part Name	Ford Part No.	Willys Part No.	Group No.
A	BUSHING	FM-GPW-5463-B	WO-A-8253	1602
B	SEAL	FM-GPW-5481	WO-A-515	1602
C	RETAINER	FM-GPW-5482	WO-A-1252	1602
D	U-BOLT	FM-GPW-5778	WO-A-513	1602
E	SPRING, assembly	FM-GPW-5311	WO-A-612	1601
F	LOCK, assembly	FM-GPW-5601	WO-A-6326	1602
G	PIN	FM-72035-S	WO-5021	1602
H	NUT	FM-34033-S18	WO-6436	1602
J	BOLT	FM-GPW-5468	WO-384228	1602
K	FITTING	FM-358006-S8	WO-640038	1602
L	SHACKLE, assembly	FM-GPW-5605	WO-A-6069	1601C
M	SHACKLE, assembly	FM-GPW-5602	WO-A-6068	1601C
N	BOLT	FM-GPW-5669	WO-A-6074	1601C
P	BUSHING	FM-GPW-5610	WO-A-6067	1601C
Q	SPRING, assembly	FM-GPW-5588-A	WO-A-6066	1601C

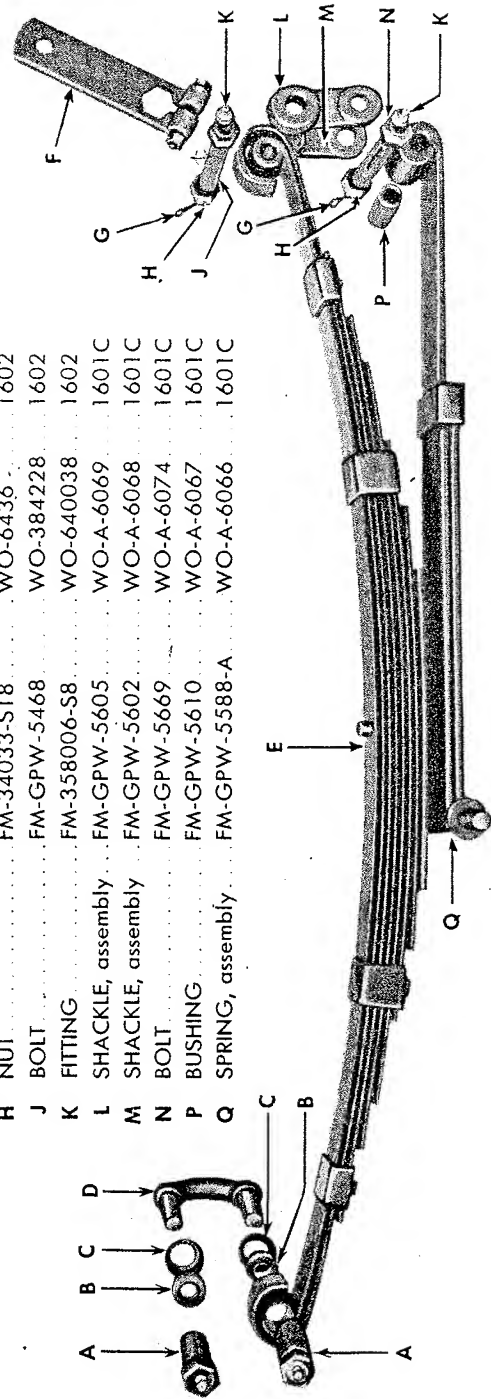


FIGURE 16-1—FRONT SPRING ASSEMBLY (WITH TORQUE REACTION SPRING)



## GROUP 16—SPRINGS AND SHOCK ABSORBER (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>1601—FRONT SPRINGS (Cont'd)</b>						
16-1	G503-0389792	FM-GPW-5311	WO-A-8464-3 WO-A-612	LEAF, front right spring, No. 3 (for SPRING, WO-A-8464) SPRING, front, left, assembly (WO-A-612 has wrap-around type clips; FM-GPW-5311 has open type clips; complete assemblies are interchangeable) (superseded by SPRING, assembly, WO-A-8463)	1	
20-1	G503-0389793	FM-GPW-5310-B FM-GPW-5310	WO-A-8463 WO-A-613 WO-A-8464	SPRING, front, assembly (10 leaf) (supersedes SPRING, assembly, FM-GPW-5311, WO-A-612 and SPRING, assembly, FM-GPW-5310, WO-A-613) (Note 1) SPRING, front, right, assembly (WO-A-613 has wrap-around type clips; FM-GPW-5310 has open type clips; complete assemblies are interchangeable) (superseded by SPRING, assembly, WO-A-8463) SPRING, front, right, assembly (Note 2)	1 2 1 1	4.01 4.01
<b>1601A—REAR SPRINGS</b>						
		FM-GPW-5345-B FM-GPW-5333-B	WO-116610 WO-116716	BOLT, rear spring, center ( $\frac{3}{16}$ -24NF-2 x 2 $\frac{3}{4}$ ) BOLT, rear spring, center, w/NUT, assembly ( $\frac{3}{16}$ -24NF-2 x 2 $\frac{3}{4}$ ) (for use with SPRING, WO-A-15728)	2	.0231
	G085-2307352 3320-GPW-5781-A	FM-33798-S2 FM-GPW-5781-A FM-GPW-5724-B FM-GPW-5724-A FM-GPW-5563	WO-5910 WO-359039 WO-116589 WO-116459 WO-A-614-1 WO-A-15728-1 WO-A-614-2 WO-A-15728-2 WO-A-614-3 WO-A-15728-3 WO-A-614 WO-A-15728	NUT, reg., hex., S, $\frac{5}{16}$ -24NF-2 BUSHING, rear spring eye (0.753 O.D. x 0.565 x 1.68 lgth.) CLIP, rear spring leaf, large CLIP, rear spring leaf, small LEAF, rear spring, No. 1, w/BUSHING (42 in. between eye centers) LEAF, rear spring, No. 1, w/BUSHING (for SPRING, WO-A-15728) LEAF, rear spring, No. 2 (42 in. long) LEAF, rear spring, No. 2 (for SPRING, WO-A-15728) LEAF, rear spring, No. 3 (36 in. long) LEAF, rear spring, No. 3 (for SPRING, WO-A-15728) SPRING, rear, assembly (superseded by SPRING, assembly, WO-A-15728) SPRING, rear, assembly (11 leaf) (supersedes SPRING, assembly, FM-GPW-5560, WO-A-614)	2 2 2 2 4 4 2 2 2 2 2 2 2 2 2 2	.0205 .02 1.01 .766 4.594
<b>1601B—SPRING BUMPERS</b>						
		FM-GPW-5783-A FM-24347-S2 FM-35798-S FM-34806-S2	WO-A-481 WO-51396 WO-5910 WO-51833	BUMPER, front and rear axle BOLT, hex-hd., s-fin., alloy-S, $\frac{5}{16}$ -24NF-2 x $\frac{3}{4}$ NUT, reg., hex., s-fin., S, $\frac{5}{16}$ -24NF-2 WASHER, lock, reg., S, $\frac{5}{16}$ in.	4 8 8 8	.118

20-1	WO-A-10285	SPACER, axle bumper (Note 2)	2
<b>1601C—TORQUE REACTION SPRING</b>			
16-1	3320-GPW-5608 3320-GPW-5609 G085-2307342 H001-0811052 3320-GPW-5604	FM-GPW-5608 FM-GPW-5609 FM-34033-S18 FM-72035-S FM-GPW-5604	1 1 1 1 1
	3320-GPW-5604-A	FM-GPW-5604-A	1
	3320-GPW-5607	FM-GPW-5607	1
	3320-GPW-5607-A	FM-GPW-5607-A	1
16-1	3320-GPW-5610 3320-GPW-5611 3320-GPW-5587-B	FM-GPW-5610 FM-GPW-5611 FM-GPW-5587-B	1 1 1
	3320-GPW-5587	FM-GPW-5587	1
	3320-GPW-5590	FM-GPW-5590	1
16-1	3320-GPW-5590-B 3320-GPW-5602 3320-GPW-5605	FM-GPW-5590-B FM-GPW-5602 FM-GPW-5605	1 1 1
	3320-GPW-5588	FM-GPW-5588	1
16-1	3320-GPW-5588-A2 FM-GPW-5588-A	FM-GPW-5588-A2 FM-GPW-5588-A	1 1
<b>1602—SHACKLES AND SPRING ATTACHING PARTS</b>			
16-1	3320-GPW-5468	FM-GPW-5468	3 or 4
16-1	G085-2307342 H001-0811052 3320-GPW-5463	FM-34033-S18 FM-72035-S FM-GPW-5463	3 or 4 3 or 4 3 or 4
16-1	0340-14315 0340-14314	FM-GPW-5463-B FM-GPW-5464	2 2 6

Note 1—Also used as front left spring on vehicles modified by MWO ORD G503-W8 (see page 3). Note 2—Only for vehicles modified by MWO ORD G503-W8 (see page 3).

## GROUP 16—SPRINGS AND SHOCK ABSORBER (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>1602—SHACKLES AND SPRING ATTACHING PARTS (Cont'd)</b>						
20-1	3320-GPW-5464-B	FM-GPW-5464-B	WO-A-8256	BUSHING, spring shackle, R.H. thd., assembly (front end of front right spring and rear end of rear left spring) (for all frame ends) (supersedes BUSHING, FM-GPW-5464, WO-634432)	6	
		FM-GPW-5705-C	WO-A-8578	CLIP, front left spring to axle housing (for use with SPRING, WO-A-8463)	2	
		FM-GPW-5453	WO-A-574	CLIP, front right spring to axle housing	1	.212
		FM-GPW-5453-B	WO-A-8289	CLIP, front right spring to axle housing (for use with SPRING, WO-A-8463)	1	
	0340-14257	FM-GPW-5455-B	WO-A-8291	CLIP, front right spring to axle housing (for use with SPRING, WO-A-8463)	1	
		FM-GPW-5455	WO-A-6511			
	3320-GPW-5705	FM-GPW-5705		CLIP, front right and left spring to axle housing (not used on left spring with torque reaction spring)	1 or 3	.212
	3320-GPW-5705-B	FM-GPW-5705-B	WO-A-575	CLIP, rear spring to axle housing (superseded by CLIP, FM-GPW-5705-B, WO-A-575)	4	
		FM-GPW-5705-C	WO-A-8578	CLIP, rear spring to axle housing (also 2 used front left spring to axle housing with torque reaction spring) (supersedes CLIP, FM-GPW-5705)	4 or 6	.195
	3320-GPW-5456	FM-GPW-5456	WO-339372	CLIP, rear spring to axle housing (for use with SPRING, FM-GPW-5560-B, WO-A-15728)	4	
				NUT, hex., S., special, $\frac{1}{16}$ -20NF (not used on left front spring with torque reaction spring)		
	H001-1518010	FM-34848-S2	WO-5938	WASHER, lock, reg., S., $\frac{1}{16}$ in.	12 or 16	.016
16-1	H002-0504207	FM-353023-S7	WO-638500	FITTING, lubricating, hydraulic type, 90 deg., ball seal, $\frac{1}{4}$ -28NS, tapered (AD-1911)	12 or 16	
16-1	H002-0504208	FM-358006-S8	WO-640038	FITTING, lubricating, hydraulic type, straight, ball seal, $\frac{1}{8}$ -27NPT (AD-1980)	4	.0342
		FM-GPW-5601	WO-A-6326	LOCK, spring shackle bolt, assembly	2	
		FM-21492-S2	WO-51308	BOLT, hex-hd., S., $\frac{5}{16}$ -24NF-2 x 2	1	.195
		FM-355433-S2	WO-51612	BOLT, hex-hd., S., $\frac{1}{16}$ -20NF-2 x $3\frac{3}{4}$ (lock to frame)	1	
		FM-33798-S	WO-5910	NUT, reg., hex., s-fin., S., $\frac{5}{16}$ -24NF-2	1	
		FM-34941-S7	WO-53029	WASHER, lock, S., cd-pltd., external tooth, flat type, $\frac{5}{16}$ in.	1	
		FM-GPW-5458	WO-A-568	PLATE, front right spring clip, w/SHAFT, assembly	1	.375
		FM-GPW-5460	WO-A-571	PLATE, rear left spring clip, w/SHAFT, assembly	1	.358
		FM-GPW-5459	WO-A-572	PLATE, spring clip, w/SHAFT, assembly (left front and right rear) (not used with torque reaction spring)	1	
16-1	0340-14409	FM-GPW-5482	WO-A-1252	RETAINER, spring shackle grease seal	1 or 2	.358
16-1	0340-14408	FM-GPW-5481	WO-A-515	SEAL, grease, spring shackle (PR-S-8361)	8	.0093
16-1	0340-14313	FM-GPW-5778	WO-A-513	U-BOLT, spring shackle, L.H. thd. (front end of front left spring and rear end of rear right spring)	8	.0127
	0340-14312	FM-GPW-5779	WO-A-514	U-BOLT, spring shackle, R.H. thd. (front end of front right spring and rear end of rear left spring)	2	.195
					2	.195

## 1603—SHOCK ABSORBERS AND MOUNTINGS

G503-7088715	WO-A-169	ABSORBER, shock, front, assembly (superseded by ABSORBER, assembly, FM-GPW-18045, WO-A-6902)	2	
G503-7088715	WO-A-6902	ABSORBER, shock, front, assembly (FM-GPW-18045 is manufactured by Gabriel Co.; WO-A-6902 is manufactured by Monroe Auto Equipment Co. MAE-11465; complete assemblies are interchangeable) (supersedes ABSORBER, assembly WO-A-169)	2	1.873
9680-A-170	WO-A-170	ABSORBER, shock, rear, assembly (superseded by ABSORBER, assembly, FM-GPW-18080, WO-A-6903)	2	
3320-GPW-18080	WO-A-6903	ABSORBER, shock, rear, assembly (FM-GPW-18080 is manufactured by Gabriel Co.; WO-A-6903 is manufactured by Monroe Auto Equipment Co., MAE-11466; complete assemblies are interchangeable) (supersedes ABSORBER, assembly, WO-A-170)	2	2.981
3320-GPW-18060	FM-GPW-18060	BUSHING, shock absorber mounting pin, rubber (superseded by BUSHING, FM-GPW-18060-A, WO-637936)	16	.0184
3320-GPW-18060-A	WO-637936	BUSHING, shock absorber mounting pin, rubber (HF-779) (supersedes BUSHING, FM-GPW-18060)	1	
9680-A-8810	WO-A-8810	Kit, repair, rear shock absorber (use this kit with WO-A-6903 ABSORBER only)		
		(Consists of:		
	WO-637936	4 BUSHING		
	WO-638343	1 DISK		
	WO-637810	1 GASKET		
	WO-116637	1 GUIDE, w/SEAL		
	WO-116632	1 NUT		
	WO-116630	1 PISTON		
	WO-116644	1 PLATE, adjusting		
	WO-116626	1 PLATE, valve backing		
	WO-116625	1 SEAT		
	WO-116636	1 SLEEVE		
	WO-116627	1 SPACER, metering		
	WO-116631	1 SPACER, piston nut		
	WO-637803	1 SPRING, intake valve		
	WO-116633	1 SPRING, valve		
	WO-116639	1 TUBE		
	WO-116624	1 VALVE, compression assembly		
	WO-637804	1 VALVE, intake		
	WO-116629	1 WASHER, piston support		
	WO-116634	1 WASHER, spring seat		
9680-A-8809	WO-A-8809	Kit, repair, front shock absorber (use this kit with WO-A-6902 ABSORBER only)	1	
		(Consists of:		
	WO-637936	4 BUSHING		
	WO-638343	1 DISK		
	WO-637810	1 GASKET		
	WO-116637	1 GUIDE, w/SEAL		
	WO-116632	1 NUT		
	WO-116630	1 PISTON		
	WO-116644	1 PLATE, adjusting		
	WO-116626	1 PLATE, valve		
	WO-116625	1 SEAT		

## GROUP 16—SPRINGS AND SHOCK ABSORBER (Cont'd)


Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>1603—SHOCK ABSORBERS AND MOUNTINGS (Cont'd)</b>		
				KIT, repair, rear shock absorber (Cont'd)		
			WO-116635	1 SLEEVE		
			WO-116628	1 SPACER, metering		
			WO-116631	1 SPACER, piston nut		
			WO-637803	1 SPRING, intake valve		
			WO-116633	1 SPRING, valve		
			WO-116638	1 TUBE		
			WO-116624	1 VALVE, compression, assembly		
			WO-637804	1 VALVE, intake		
			WO-116629	1 WASHER, piston support		
			WO-116634	1 WASHER, spring seat		
	FM-351505-S7		WO-A-227	WASHER, shock absorber mounting pin (S., cd-pltd., 1 1/4 O.D. x 1/4 I.D. x 5/8 thk.)	8	.0074
	FM-72037-S		WO-52946	PIN, cotter, split, S., 3/16 x 1	8	
				<b>GROUP 17—HOOD, FENDERS AND APRONS</b>		
				<b>1701—FENDERS</b>		
			WO-A-2662	ANTISQUEAK, front fender to cowl side panel, lower	2	
	FM-GPW-16132		WO-A-3158	ANTISQUEAK, front fender to cowl side panel, upper	2	
	FM-GPW-16159		WO-A-3179	BOLT, welding, S., 5/16-18NC x 5/8 (battery holder to fender)	1	
			WO-A-2843	BRACE, left front fender	1	
			WO-A-2844	BRACE, right front fender	1	
			WO-52600	BOLT, hex-hd., S., 3/8-24NF x 1 3/8 (brace to chassis)	4	
			WO-51304	WASHER, lock, reg., S., 3/8 in.	4	
			WO-52819	WASHER, plain, S., 3/8 in.	4	
	FM-GPW-16006		WO-A-2942	FENDER, front left, w/SPLASHER, assembly	1	
	FM-GPW-16005		WO-A-2943	FENDER, front right, w/SPLASHER, assembly	1	
	FM-20046-S2		WO-51523	BOLT, hex-hd., S., 5/16-18NC x 3/4 (fender to cowl)	8	
	FM-34130-S2		WO-6167	NUT, hex., S., 5/16-18NC	2	
	FM-356309-S7		WO-53025	WASHER, lock, S., cd-pltd., internal, external teeth, 5/16 in. (was WO-A-51833)	10	
	FM-34941-S7		WO-53029	WASHER, lock, S., external teeth, 5/16 in.	8	.0019
			WO-A-4116	WASHER, plain, S., 5/16 in.	8	
	FM-GPW-16105		WO-A-2891	FILLER, front fender brace, wood	2	

## 1702—SPLASH APRON

FM-GPW-16133	WO-A-3159	ANTISQUEAK, apron to frame.....	3	.0012
FM-GPW-16083	WO-A-2841	APRON, splash, left front fender, assembly.....	1	
FM-GPW-16082	WO-A-2842	APRON, splash, right front fender, assembly.....	1	
FM-20349-S2	WO-50163	BOLT, hex-hd., S., $\frac{3}{8}$ -24NF-2 x $\frac{3}{4}$ (apron to fender).....	4	
FM-20347-S2	WO-51396	BOLT, hex-hd., S., $\frac{5}{16}$ -24NF-2 x $\frac{3}{4}$ (apron to top of frame).....	1	
FM-356200-S7	WO-53026	WASHER, lock, S., cd-pltd., internal, external teeth, $\frac{3}{8}$ in.....	4	
FM-34806-S7	WO-51840	WASHER, lock, reg., S., cd-pltd., $\frac{5}{16}$ in.....	1	
FM-351370-S2	WO-71633	WASHER, plain, S., $\frac{5}{16}$ in.....	1	
	WO-50921	WASHER, plain, S., $\frac{3}{8}$ in.....	4	
FM-GPW-16128	WO-A-3096	BRACE, mounting, voltage regulator.....	2	
FM-350976-S2	WO-A-2375	NUT, clinch, $\frac{5}{16}$ -24NF-2 (regulator to apron).....	4	.0064
	WO-53135	WASHER, lock, S., cd-pltd., external teeth, $\frac{3}{8}$ in.....	4	

## 1704—HOOD

FM-GPW-16684	WO-A-3059	BRACKET, hood catch.....	2	
FM-20308-S7	WO-51514	BOLT, hex-hd., S., cd-pltd., $\frac{1}{4}$ -20NC-2 x $\frac{5}{8}$ (brkt. to hood).....	4	
FM-33795-S2	WO-5790	NUT, hex., S., $\frac{1}{4}$ -20NC-2.....	4	
FM-34805-S2	WO-52031	WASHER, lock, reg., S., $\frac{1}{4}$ in.....	4	
FM-34705-S2	WO-5121	WASHER, plain, S., $\frac{1}{4}$ in.....	4	
FM-GTB-16848-A	WO-A-4683	BUMPER, hood top windshield, assembly (wood).....	2	
	WO-A-4679	NUT, S., prong type, sleeve, No. 10 (0.190)-32NF-2.....	4	
	WO-6627	SCREW, rd-hd., S., No. 10 (0.190)-32NF-2 x $\frac{1}{8}$ (bumper to hood).....	4	
	WO-52221	WASHER, lock, reg., S., No. 10 (0.190).....	4	.128
	WO-A-2896	CATCH, hood, assembly.....	2	
FM-34803-S2	WO-52168	BOLT, hex-hd., S., $\frac{1}{4}$ -20NC-2 x $\frac{5}{8}$ .....	4	
FM-GPW-16892	WO-52217	NUT, reg., hex., S., $\frac{1}{4}$ -20NC-2.....	4	
FM-20324-S2	WO-52076	WASHER, lock, reg., S., $\frac{1}{4}$ in.....	4	
FM-33795-S2	WO-52702	WASHER, plain, S., $\frac{1}{4}$ in.....	4	
FM-34805-S2	WO-A-2188	HINGE, hood, assembly.....	1	.31
FM-GPW-16802	WO-A-2188	BOLT, hex-hd., S., $\frac{1}{4}$ -20NC-2 x $\frac{5}{8}$ .....	5	
FM-20324-S2	WO-52167	BOLT, hex-hd., S., $\frac{1}{4}$ -20NC-2 x $\frac{3}{4}$ .....	2	
FM-20344	WO-52031	WASHER, lock, reg., S., $\frac{1}{4}$ in.....	3	
FM-34805-S2	WO-53204	WASHER, lock, S., cd-pltd., internal, external teeth, $\frac{1}{4}$ in.....	6	
FM-34745-S2	WO-52702	WASHER, plain, S., $\frac{1}{4}$ in.....	5	
FM-GPW-16610	WO-A-3225	HOOD, assembly (after Willys serial 103545).....	1	
	WO-A-2836	HOOD, assembly (before Willys serial 103545).....	1	
FM-GTB-16847	WO-A-4680	WEBBING, hood top windshield bumper.....	2	
FM-32475-S2	WO-53103	SCREW, wood, ov-hd., S., No. 6 (0.138) x 1 (webbing to bumper).....	4	

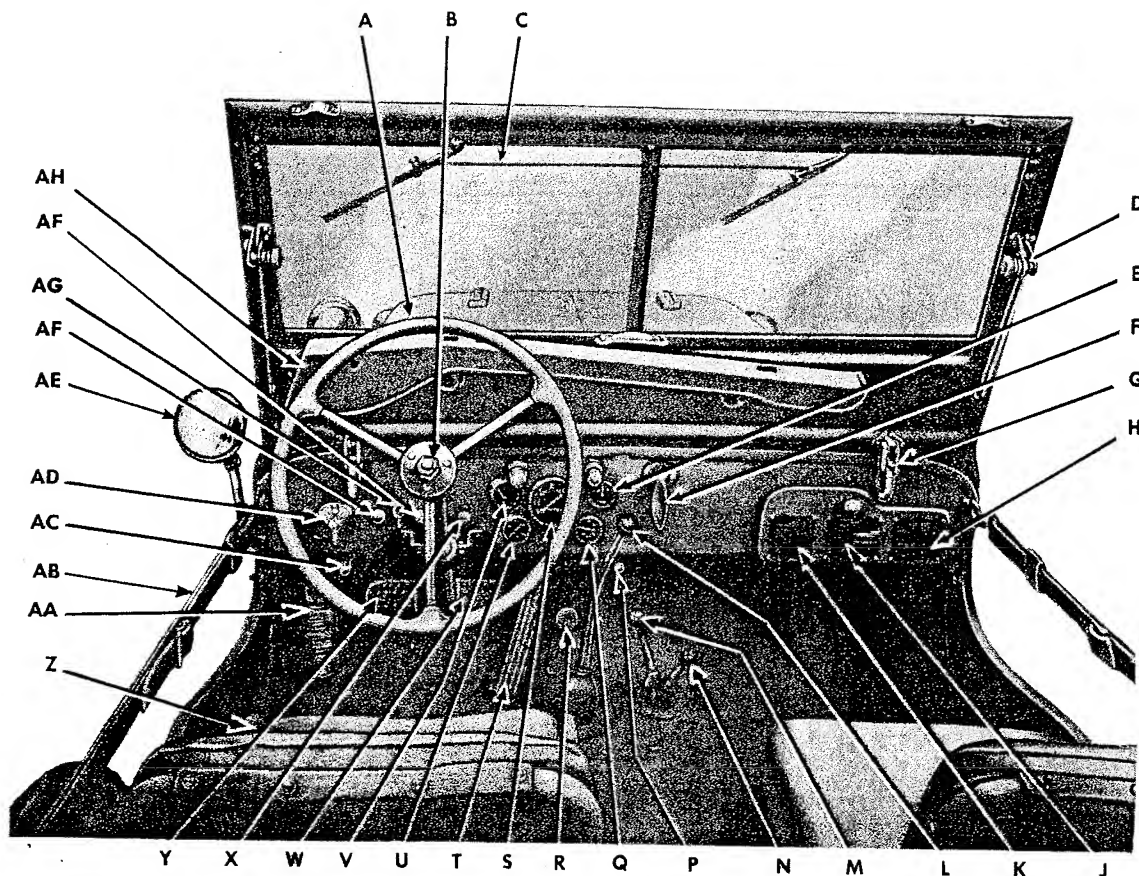

Key	Part Name	Ford Part No.	Willys Part No.	Group No.
A	WHEEL.....	FM-GPW-3600-A.....	WO-A-6858.....	1404
B	BUTTON.....	FM-GPW-3627.....	WO-A-634.....	0609B
C	WIPER SET.....	FM-GPW-17500.....	WO-A-11433.....	1811D
D	ARM.....	FM-GP-1103302.....	WO-A-2235.....	1811
E	AMMETER.....	FM-GPW-10850-B.....	WO-A-8186.....	0605
F	HANDLE, assembly.....	FM-GPW-2780.....	WO-A-1242.....	1201
G	CLAMP, assembly.....	FM-GP-1103482-A.....	WO-A-2227.....	1811
H	PLATE.....	FM-GPW-1101621-A.....	WO-A-1334.....	2203
J	PLATE.....	FM-GPW-1101629-A.....	WO-A-11757.....	2203
K	PLATE.....	FM-GPW-1101627-A.....	WO-A-1331.....	2203
L	LEVER.....	FM-GPW-7210-A.....	WO-A-1380.....	0706A
M	LEVER.....	FM-GPW-7710.....	WO-A-1506.....	0805B
N	LEVER.....	FM-GPW-7793.....	WO-A-1505.....	0805B
P	SWITCH.....	FM-9N-11450-A.....	WO-A-7225.....	0606
Q	INDICATOR.....	FM-GPW-10883.....	WO-A-8188.....	0605
R	REST.....	FM-GPW-9716.....	WO-A-1225.....	0303
S	SPEEDOMETER.....	FM-GPW-17255-A.....	WO-A-8180.....	2204
T	PEDAL.....	FM-GPW-9735-B.....	WO-A-6851.....	0303
U	GAGE.....	FM-GPW-9273.....	WO-A-8190.....	0605
V	GAGE.....	FM-GPW-9280.....	WO-A-8184.....	0605
W	PEDAL.....	FM-GPW-2452-B.....	WO-A-8253.....	1204
X	SWITCH.....	FM-GPW-13740.....	WO-A-1333.....	0606
Y	PEDAL.....	FM-GPW-7520.....	WO-A-405.....	0204
Z	TANK.....	FM-GPW-9002-B.....	WO-A-6618.....	0300
AA	EXTINGUISHER.....	FM-GPW-17100.....	WO-A-616.....	N.L.
AB	STRAP.....	FM-GPW-1131414.....	WO-A-2883.....	1804
AC	SWITCH.....	FM-GPW-13532.....	WO-638979.....	0606
AD	SWITCH.....	FM-G8T-11649.....	WO-A-11866.....	0606
AE	MIRROR.....	FM-21CS-17682-B.....	WO-A-2934.....	2202
AF	CONTROL.....	FM-GPW-9775-B.....	WO-A-7517.....	0303A
AG	SWITCH.....	FM-GPW-3686-B.....	WO-A-6811.....	0604C
AH	HOLDER.....	FM-GPW-1153100.....	WO-A-11319.....	1820

RA PD 342288

FIGURE 18-1—FRONT COMPARTMENT AND INSTRUMENT PANEL

## GROUP 18—BODY

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>GROUP 18—BODY</b> <b>1800—BODY</b>	1	
		FM-GPW-1000000	WO-A-12237	BODY, assembly..... (Includes: BOWS, top BRACES BRACKETS CLAMPS COMPARTMENT, glove COMPARTMENT, tool HANDLES LIGHT, tail MIRROR, rear view, outside SEALS SEATS ATTACHING PARTS) BODY, assembly..... (Includes: FLOORS PANELS)	1	
				<b>1800A—BODY HANDLES</b>		
		FM-GPW-1129672	WO-A-2389	HANDLE, body, outside, rear corner.....	2	
		FM-GPW-1129670	WO-A-2390	HANDLE, body, outside front.....	2	
		FM-20326-S2	WO-51485	BOLT, hex-hd., S, $\frac{5}{16}$ -18NC-2 x $\frac{5}{8}$ (handles to body).....	16	
		FM-33797-S2	WO-52350	NUT, hex., S, $\frac{5}{16}$ -18NC-2.....	16	
		FM-34806-S2	WO-51840	WASHER, lock, reg., S, $\frac{5}{16}$ in.....	16	
		FM-GPW-1154810-A	WO-A-2168	LOOP, footman (on body side panel).....	5	.028
	H001-1518008	FM-GPW-355836-S7	WO-6352	NUT, mach-screw, hex., S, cd-pltd., No. 10 (0.190)-24NC-2 (loop to sides).....	10	
		FM-GPW-355162-S2	WO-6290	SCREW, mach., fl-hd., S, No. 10 (0.190)-24NC-2 x $\frac{1}{2}$ .....	10	
		FM-GPW-34803-S7	WO-52221	WASHER, lock, reg., S, cd-pltd., No. 10 (0.190).....	10	
				<b>1800B—TOP</b>		
	H017-0501451	FM-GPW-1152700	WO-A-3216	DECK TOP.....	1	



## 200

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>1801—BODY MOUNTING PARTS</b>		
			WO-A-4415 WO-A-4414	LINER, body sill, thick LINER, body sill, thin	2 2	
				<b>1802—BODY PILLARS</b>		
			WO-A-2815 WO-A-2816 WO-52863 WO-5544 WO-5010 WO-5455	PILLAR, cowl, left PILLAR, cowl, right BOLT, hex-hd., S., $\frac{3}{8}$ -16NC-2 x $1\frac{1}{2}$ " (pillar to floor) NUT, hex., S., $\frac{3}{8}$ -16NC-2 WASHER, lock, reg., S., cd-pltd., $\frac{3}{8}$ in. WASHER, plain, S., $\frac{3}{8}$ in.	1 1 2 2 2 4	
	H001-1518009	FM-GPW-1102511 FM-GPW-1102510  FM-33799-S FM-34807-S2 FM-34747-S		BOLT, eye, safety strap (S., $\frac{3}{8}$ -16NC-2) NUT, hex., S., $\frac{3}{8}$ -16NC-2 (bolt to body) WASHER, lock, reg., S., $\frac{3}{8}$ in. BRACKET, engine crank retaining clamp, assembly BRACKET, retaining, engine crank FILLER, rear floor pan cross sill (wood) GUSSET, front floor toe board to frame, left, assembly GUSSET, front floor toe board to frame, right, assembly BOLT, hex-hd., S., $\frac{3}{8}$ -24NF-2 x $\frac{3}{4}$ WASHER, lock, S., external teeth, $\frac{3}{8}$ in. WASHER, lock, internal, external teeth, $\frac{3}{8}$ in. (GM-178551) WASHER, plain, S., $\frac{3}{8}$ in. NUT, clinch, special, S. ( $\frac{1}{4}$ in. pipe tap, std.) (for $\frac{1}{4}$ in. drain plug in floor) NUT, clinch, S., $\frac{1}{4}$ -20NC-2 (transmission cover) NUT, clinch, S., $\frac{5}{16}$ -24NF-2 (transmission cover and accelerator pedal) NUT, clinch, S., $\frac{3}{8}$ -16NC-2 (front floor rear cross sill, assembly) NUT, clinch, S., $\frac{5}{16}$ -18NC-2 (cowl side panel for front fender) NUT, wing, S., $\frac{5}{16}$ -18NC-2 (crank retaining brkt.) PAN, front floor BOLT, hex-hd., S., $\frac{3}{8}$ -16NC x $1\frac{1}{2}$ " (through left front cross sill) BOLT, hex-hd., S., $\frac{3}{8}$ -16NC x 2" (through front cross sills to frame brkt.) NUT, hex., S., $\frac{3}{8}$ -16NC-2	2 2 2 2 2 1 1 1 1 1 2 2 2 2 2 7 1 1 6 1 1 2 2 4	.099                .0064 .0125 .0032
	H001-1518009	FM-GPW-1102396 FM-33799-S2 FM-34807-S2 FM-GPW-1140449 FM-GPW-1140441 FM-GPW-1110895  FM-20349-S2  FM-355909-S2  FM-350976-S2 FM-351015-S FM-353202-S FM-33896-S FM-GPW-1111140 FM-20514-S2  FM-33739-S				

FM-356016-S	WO-52893	NUT, hex., S., stamped, $\frac{3}{8}$ -16NC-2	4	.0032
FM-34907-S7	WO-53135	WASHER, lock, S., cd-pltd., external teeth, $\frac{3}{8}$ in.	4	
FM-356200-S7	WO-53026	WASHER, lock, S., cd-pltd., internal, external teeth, $\frac{3}{8}$ in.	4	
	WO-50921	WASHER, plain, S., $\frac{3}{8}$	8	
FM-GPW-1111218	WO-A-12017	PAN, rear floor	1	
FM-20514-S2	WO-51405	BOLT, hex-hd., S., $\frac{3}{8}$ -16NC x 1 (to frame, left side)	1	
FM-356016-S	WO-51954	BOLT, hex-hd., S., $\frac{3}{8}$ -16NC-2 x 2 (to frame, right side)	1	.0032
FM-33799-S	WO-52893	NUT, hex., S., $\frac{3}{8}$ -16NC-2 (stamped)	1	
FM-34907-S7	WO-5544	NUT, hex., S., $\frac{3}{8}$ -16NC-2	1	
FM-356200-S7	WO-53135	WASHER, lock, S., cd-pltd., external teeth, $\frac{3}{8}$ in.	3	
	WO-53026	WASHER, lock, S., cd-pltd., internal, external teeth, $\frac{3}{8}$ in.	3	
	WO-50921	WASHER, plain, S., $\frac{3}{8}$ in.	2	
FM-GPW-1127847	WO-A-2756	PANEL, body, left side	1	
FM-GPW-1127846	WO-A-2757	PANEL, body, right side	1	
FM-GPW-1140324	WO-A-2758	PANEL, body, rear	1	
	WO-52857	BOLT, hex-hd., S., $\frac{3}{8}$ -18NC-2 x 1 $\frac{1}{2}$	2	
	WO-52845	NUT, hex., S., $\frac{3}{8}$ -18NC-2 (stamped)	2	
	WO-6167	NUT, hex., S., $\frac{3}{8}$ -18NC-2	2	
FM-356309-S7	WO-53025	WASHER, lock, S., cd-pltd., internal, external teeth, $\frac{3}{8}$ in.	4	
	WO-A-4116	WASHER, plain, S., $\frac{3}{8}$ in.	4	
FM-GPW-1102039	WO-A-12011	PANEL, cowl, left side	1	
FM-GPW-1102038	WO-A-12010	PANEL, cowl, right side	1	
FM-GPW-1102015	WO-A-12105	PANEL, cowl, top	1	
	WO-A-12025	PANEL, dash, assembly	1	
FM-GPW-1127851	WO-A-12023	PANEL, rear left wheel house, inner	1	
FM-GPW-1127849	WO-A-2771	PANEL, rear left wheel house, top	1	
FM-GPW-1127850	WO-A-12024	PANEL, rear right wheel house, inner	1	
FM-GPW-1127848	WO-A-2772	PANEL, rear right wheel house, top	1	
FM-GPW-1103446-A	WO-A-2939	PLATE, tapping, ax clamp	1	
FM-GPW-1111238	WO-A-2879	PLATE, tapping, driver's seat, front floor	1	
FM-GPW 1102130	WO-A-2190	PLATE, tapping, hood hinge (on cowl)	1	
FM-GPW-1128242	WO-A-2940	PLATE, tapping, shovel clamp	2	
FM-358019-S	WO-A-5120	PLUG, body drain hole cover (pipe, slotted, $\frac{1}{4}$ in.)	2	
FM-GPW-1162606	WO-A-3144	REST, foot, rear floor assembly	2	
FM-20326-S2	WO-51485	BOLT, hex-hd., S., $\frac{3}{8}$ -18NC x $\frac{5}{8}$ (to wheel house panel)	3	
FM-20346-S2	WO-51523	BOLT, hex-hd., S., $\frac{3}{8}$ -18NC x $\frac{3}{4}$ (to floor pan)	1	
FM-33797-S	WO-6167	NUT, hex., S., $\frac{3}{8}$ -18NC-2	4	
FM-34806-S2	WO-51840	WASHER, lock, reg, S., $\frac{5}{16}$ in.	4	
FM-34746-S2	WO-52274	WASHER, plain, S., $\frac{5}{16}$ in.	4	
FM-GPW-1140447	WO-A-2470	RETAINER, engine crank	2	
FM-GPW-1111155	WO-A-3222	RISER, front to rear floor pan, assembly	1	
	WO-51406	BOLT, hex-hd., S., $\frac{3}{8}$ -16NC-2 x 1 $\frac{1}{4}$	2	
FM-356016-S	WO-52893	NUT, hex., S., $\frac{3}{8}$ -16NC-2 (stamped)	2	
FM-33799-S	WO-5544	NUT, hex., S., $\frac{3}{8}$ -16NC-2	2	
FM-34907-S7	WO-53135	WASHER, lock, S., cd-pltd., external teeth, $\frac{3}{8}$ in.	4	
FM-356200-S7	WO-53026	WASHER, lock, S., cd-pltd., internal, external teeth, $\frac{3}{8}$ in.	4	
	WO-50921	WASHER, plain, S., $\frac{3}{8}$ in.	4	

H001-1518008

## GROUP 18—BODY (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>1802A—BODY PANELS (Cont'd)</b>						
		FM-27068-S	WO-52236	SCREW, mach., fl-hd., S, No. 10 (0.190)-24NC-2 x 3/8 (footman loop hole plug cap)	2	
		FM-GPW-1128244	WO-A-2968	SHEATH, ax.	1	
		FM-GPW-1110610	WO-A-2837	SILL, cross, front floor pan, left, assembly (Willys only)	1	
		FM-GPW-1110625	WO-A-2838	SILL, cross, front floor pan, right, assembly	1	
		FM-GPW-1110750	WO-A-2935	SILL, cross, front floor pan, rear, assembly	1	
		FM-GPW-1128286	WO-A-2948	SILL, cross, rear floor pan	1	
		FM-GPW-1144620	WO-A-2325	STRAINER, body side panel to wheel house	1	
		FM-GPW-1144606	WO-A-3120	SUPPORT, rear body to frame, inner	2	
			WO-A-2336	SUPPORT, rear body to frame, outer	2	
<b>1803—FLOOR MATS AND SEALS</b>						
		FM-GPW-1112110	WO-A-2982	COVER, floor, transmission	1	
		FM-24308-S2	WO-52170	BOLT, hex-hd., S, 1/4-20NC x 1/2 (to floor pan)	7	.0117
H001-1518007		FM-34805-S2	WO-52706	WASHER, lock, reg, S, 1/4 in.	7	
		FM-GPW-1112115	WO-A-2990	COVER, inspection, floor, brake cylinder	1	
		FM-24308-S2	WO-52170	BOLT, hex-hd., S, 1/4-20NC x 1/2	5	
		FM-34805-S2	WO-52706	WASHER, lock, reg, S, 1/4 in.	5	
H001-1518007		FM-GPW-1111331	WO-A-2759	COVER, rear floor pan, left, shock absorber, assembly	1	
		FM-GPW-1111330	WO-A-2760	COVER, rear floor pan, right, shock absorber, assembly	1	
		FM-GPW-1111162	WO-A-4592	COVER, trailer electric plug housing (after Willys serial 200679)	1	
		FM-GPW-1101735-A	WO-A-3784	GROMMET, floor, transfer shift lever (rubber)	1	.358
		FM-GPW-1112119	WO-12055	PLATE, floor seal, dimmer switch (Willys only)	1	
		FM-20344-S2	WO-A-2919	RING, floor, gearshift lever housing cover	1	
		FM-32866-S2	WO-52167	BOLT, hex-hd., S, 1/4-20NC-2 x 3/4	1	
		FM-GPW-1112158	WO-52142	SCREW, binding hd., S, No. 10 (0.190) x 5/8	1	
		FM-32924-S7	WO-A-2917	RING, floor seal, steering column	3	
		FM-GPW-1112117	WO-52809	SCREW, binding hd., S, cd-pltd., No. 10 (0.190) x 1/2	1	
		FM-20344-S2	WO-A-2918	RING, floor, transmission shift lever grommet	4	
		FM-32866-S2	WO-52167	BOLT, hex-hd., S, 1/4-20NC-2 x 3/4	1	
		FM-GPW-1111520-A	WO-52142	SCREW, binding hd., S, No. 10 (0.190) x 5/8	2	
		FM-GPW-111137-A	WO-A-3782	SEAL, floor, accelerator pedal rod	3	.179
		FM-GPW-1111299-A	WO-A-2932	SEAL, floor brake cylinder inspection cover	1	.0202
		FM-GPW-1111286-A	WO-A-3116	SEAL, floor, fuel line hole	1	.043
			WO-A-3783	SEAL, floor gearshift lever housing cover (rubber)	1	.285
			WO-A-12054	SEAL, floor, headlight foot switch (Willys only)	1	



## GROUP 18—BODY (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>1804—SEATS (Cont'd)</b>		
		FM-GPW-1162180	WO-A-2911	PANEL, front seat body side crash pad, right, assembly	1	
		FM-355900-S2	WO-654934	NUT, tee, S, 1/4-20NF-2 (on crash pads)	8	
		FM-36868-S2	WO-51539	SCREW, mach., rd-hd., 1/4-20NC-2 x 3/4 (pads to side panels)	8	
	H001-1518007	FM-34805-S2	WO-52706	WASHER, lock, reg., S, 1/4 in.	8	
		FM-GPW-1162410	WO-A-2945	RETAINER, rear seat pivot tube	2	
		FM-20308-S2	WO-52170	BOLT, hex-hd., S, 1/4-20NC-2 x 1/2	2	
		FM-33799-S2	WO-52217	NUT, hex, S, 1/4-20NC-2	2	
		FM-34805-S2	WO-52706	WASHER, reg., S, 1/4 in.	2	
	H001-1518007	FM-GPW-17055	WO-A-4518	RETAINER, tire pump handle (after Willys serial 19340)	1	
		FM-GPW-17079	WO-A-4516	RETAINER, tire pump foot (after Willys serial 193040)	1	
		FM-GPW-1161302	WO-A-2830	SPRING, retaining, rear seat frame	2	.127
		FM-20308-S2	WO-52170	BOLT, hex-hd., S, 1/4-20NC-2 x 1/2 (spring to wheel house panel)	4	
		FM-33795-S2	WO-52217	NUT, hex, S, 1/4-20NC-2	4	
		FM-34805-S2	WO-52031	WASHER, lock, reg., S, 1/4 in.	4	
	H001-1518007	FM-GPW-1131414	WO-A-2883	STRAP, safety, assembly	2	1.102
			WO-A-3029	SUPPORT, rear seat frame to wheel house (Willys only)	2	
				<b>1804A—CUSHIONS</b>		
			WO-A-11729	BACK, front seat, assembly	2	
			WO-A-11931	BACK, rear seat, assembly	1	
			WO-A-2986	CUSHION, front seat, assembly (driver and passenger) (superseded by CUSHION, assembly, WO-A-11730)	2	
			WO-A-11730	CUSHION, front seat, assembly (supersedes CUSHION, assembly, FM-GPW-1162900-B, WO-A-2986)	2	
		FM-355836-S7	WO-52651	NUT, mach-screw, hex, S, cd-pltd., No. 10 (0.190)-24NC-2	10	
			WO-50814	SCREW, mach., fl-hd., S, No. 10 (0.190)-24NC-2 x 1/2	10	
		FM-34803-S2	WO-52221	WASHER, lock, reg., S, No. 10 (0.190)	10	
			WO-A-11732	CUSHION, rear seat, assembly	1	
	H001-1518005		WO-52990	SCREW, ck., ov-hd., S, No. 10 (0.190) x 1/2	32	
			WO-52968	WASHER, ck., S, No. 10 (0.190)	34	
			WO-A-2788	FRAME, rear seat cushion, assembly	1	
		FM-GPW-1160780	WO-A-3114	PAD, crash, front seat body side, left, assembly	1	
		FM-GPW-1166401	WO-A-3114	PAD, crash, front seat body side, right, assembly	1	
		FM-GPW-1166400	WO-A-3115	SEAT, trimmed, front, assembly	1	
		FM-GPW-1160016B	WO-A-3107	SEAT, trimmed, rear, assembly	1	
		FM-GPW-1160026	WO-A-3108			

18-1

	WO-A-3980	SPRING, front seat back assembly	2
	WO-A-3984	SPRING, front seat body side crash pad, left, assembly	1
	WO-A-3985	SPRING, front seat body side crash pad, right, assembly	1
	WO-A-3981	SPRING, front seat cushion, assembly (driver and passenger)	2
	WO-A-3982	SPRING, rear seat back, assembly	1
	WO-A-3983	SPRING, rear seat cushion, assembly	1
<b>1809—INSTRUMENT PANEL AND MOUNTING PARTS</b>			
	WO-A-3155	BRACE, instrument panel, circuit breaker, w/BRACKET, assembly	1
	WO-5247	RIVET, rd-hd., S., $\frac{1}{4} \times \frac{3}{8}$	2
	WO-A-1765	PAD, dash panel	1
	WO-A-3005	PANEL, dash, assembly	1
	WO-A-3578	PANEL, instrument, assembly	1
<b>1809A—COMPARTMENT AND PARTS</b>			
	WO-A-3536	BOLT, glove compartment lock (after 20,700 Willys trucks up to 37,914 Willys trucks)	1
	WO-A-3531	CASE, glove compartment lock, assembly (after 20,700 Willys trucks up to 37,914 Willys trucks)	1
	WO-A-3652	CUP, retaining, glove compartment door lock (after 20,700 Willys trucks up to 37,914 Willys Trucks)	1
	WO-53020	SCREW, mach., fil-hd., S., cd-pltd., No. 6 (0.138)-32NC-2 x $\frac{5}{16}$ cup to lock) (after 37,914 Willys trucks)	2
	WO-52614	WASHER, lock, reg., S., cd-pltd., No. 6 (0.138)	2
	WO-A-3532	CYLINDER, glove compartment lock, assembly (after 20,700 Willys trucks up to 37,914 Willys trucks)	1
	WO-A-3434	DOOR, glove compartment, w/HINGE, assembly (after Willys serial 120698, up to serial Willys 137909)	1
	WO-A-3835	DOOR, glove compartment, w/HINGE, assembly (after Willys serial 137909)	1
	WO-A-3436	HINGE, glove compartment door, assembly (after Willys serial 120698)	1
	WO-6352	NUT, mach-screw, S., cd-pltd., No. 10 (0.190)-24NC-2	3
	WO-5182	SCREW, mach., rd-hd., S., No. 10 (0.190)-24NC-2 x $\frac{3}{8}$ (hinge to panel)	3
	WO-52221	WASHER, lock, reg., S., No. 10 (0.190)	3
	WO-A-3823	LOCK, glove compartment door, assembly (after 37,914 Willys trucks)	1
	WO-A-3537	NUT, glove compartment door lock (hex., S., cd-pltd., thin, $\frac{3}{4}$ -28NF) (after 20,700 Willys trucks up to 37,914 Willys trucks)	1
	WO-A-3538	PLATE, tapping, glove compartment hinge (after Willys serial 120697)	1
	WO-A-3818	STRIKER, glove compartment door lock (after Willys serial 137909)	1
	WO-5182	SCREW, mach., rd-hd., S., No. 10 (0.190)-24NC-2 x $\frac{3}{8}$	1
	WO-52221	WASHER, lock, reg., S., No. 10 (0.190)	1
	WO-52220	WASHER, plain, S., No. 10 (0.190)	1
<b>1811—WINDSHIELD ASSEMBLY</b>			
	WO-A-2235	ARM, adjusting, windshield	2
	WO-A-2485	BOLT, windshield clamp bracket (hex-hd., S., $\frac{1}{4}$ -20NC-2 x $1\frac{1}{16}$ ) (AN-X-1754)	4

## GROUP 18—BODY (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>1811—WINDSHIELD ASSEMBLY (Cont'd)</b>		
		FM-GP-1103310	WO-A-4300	BRACKET, windshield adjusting arm, w/BUSHING, assembly	2	.16
		FM-GPW-1103050	WO-A-2798	BRACKET, windshield mounting clamp catch	2	.0098
		FM-36046-S2	WO-52963	SCREW, fl-hd., S, 1/4-20NC-2 x 3/4	4	
		FM-GPW-1103162	WO-A-2213	BRACKET, windshield pivot, assembly	2	.161
		FM-355449-S2	WO-51485	BOLT, hex-hd., S, 5/16-18NC-2 x 5/8 (to cowl)	4	.125
		FM-33797-S2	WO-6167	NUT, hex., S, 5/16-18NC-2	4	
		FM-34807-S2	WO-51840	WASHER, lock, reg., S, 5/16 in.	4	
	H001-1518008	FM-GPW-1103304	WO-A-2232	BRACKET, windshield swing arm, w/STUD (5/16-18NC-2)	2	.168
			WO-A-2989	CATCH, hold-down, windshield, assembly (before Willys serial 103545) (Willys only)	2	
		FM-GPW-1103027	WO-A-3197	CATCH, hold-down, windshield, assembly (after Willys serial 103545)	2	.128
		FM-20324-S2	WO-52168	BOLT, hex-hd., S, 1/4-20NC-2 x 5/8 (catch to hood top panel)	4	
		FM-33795-S2	WO-52217	NUT, hex., S, 1/4-20NC-2	4	
		FM-34805-S2	WO-52706	WASHER, lock, reg., S, 1/4 in.	4	
		FM-34745-S2	WO-52702	WASHER, plain, S, 1/4 in.	4	
		FM-GPW-1103488	WO-A-2791	CATCH, windshield clamp (to instrument board)	2	.0446
		FM-GPW-1151289	WO-A-2501	CHAIN, windshield thumb screw	2	.0116
		FM-GP-1103482-A	WO-A-2227	CLAMP, windshield, assembly	2	.798
		FM-352692-S15	WO-A-4120	FASTENER, windshield curtain (top to windshield) (CNC-519)	10	
			WO-A-12759	FRAME, windshield, w/GLASS, assembly (Note 1)	1	
		FM-GP-1103014	WO-A-2226	FRAME, windshield, w/GLASS, assembly	1	
		FM-34176-S2	WO-A-2481	NUT, mach. screw, hex, br., No. 10 (0.190)-32NPF-2 (std. acorn) (AN-X-1751)	3	
		FM-38192-S2	WO-A-2482	SCREW, mach. rd-hd., I, No. 8 (0.164)-32NC-2 x 1/16 (AN-X-598)	4	
		FM-38259-S2	WO-A-2480	SCREW, mach. special, rd-hd., S, No. 10 (0.190)-32NPF-2 x 1/8 (AN-X-1750)	3	
		FM-34802-S2	WO-52705	WASHER, lock, reg., S, No. 8 (0.164)	4	
			WO-A-2478	GLASS, windshield	2	
		FM-GP-1103100	WO-A-4303	HANDLE, windshield frame	1	.0833
		FM-GP-1103350	WO-A-2238	KNOB, windshield adjusting arm (5/16-18NC-2)	2	.0559
		FM-B-45482-C	WO-A-2234	LOOP, hold-down, windshield	2	
		FM-GP-1103334	WO-A-2481	NUT, windshield frame screw (hex, br., No. 10 (0.190)-32NPF-2 std. acorn) (AN-X-1751)	3	
		FM-34176-S2	WO-A-2481	PANEL, windshield, outer (before Willys serial 103544)	1	
			WO-A-2301	PANEL, windshield, outer (after Willys serial 103544)	1	
			WO-A-3190	PIECE, windshield frame upper cross, assembly (Note 1)	1	
			WO-A-12756	PLATE, tapping, windshield clamp catch	2	
		FM-GPW-1103446-A	WO-A-2939	RETAINER, windshield hold-down catch (BA-B-194) (after Willys serial 103545)	2	
		FM-GPW-1103028	WO-A-3203	RETAINER, windshield hold-down catch (before Willys serial 103545)	2	
		FM-GPW-16892	WO-A-2386	BOLT, hex-hd., S, cd-pltd., 1/4-20NC-2 x 5/8 (retainer to hood)	4	
		FM-20308-S7	WO-51514			

18-1

H001-1518007	FM-33795-S	WO-5790	NUT, hex., S, 1/4-20NC-2	4	
	FM-34745-S2	WO-52702	WASHER, plain, S, 1/4 in.	4	
	FM-34805-S2	WO-52706	WASHER, lock, reg, S, 1/4 in.	4	
	FM-GPW-1151297	WO-A-3189	RING, windshield thumb screw chain	4	
	FM-81W-811189		SCREW, pivot, windshield adjusting arm (rd-hd., S, 1/4-28NF-2 x 0.47) (superseded by SCREW, FM-C8T-8103074-B, WO-A-2239)	2	
3320-81W-811189	FM-C8T-8103074-B	WO-A-2239	SCREW, pivot, windshield adjusting arm (AN-X-1747) (supersedes SCREW, FM-81W-811189)	2	
	FM-33249-S2	WO-A-2487	SCREW, windshield bracket (ov-ck-hd., S, No. 10 (0.190) x 1/2, type "Z") (AN-X-1755)	2	
	FM-38259-S2	WO-A-2480	SCREW, windshield frame (special, rd-hd., S, No. 10 (0.190)-32NF-2 x 1/8) (AN-X-1750)	4	
	FM-38192-S2	WO-A-2482	SCREW, windshield frame, corner (rd-hd., I., No. 8 (0.164)-32NC x 1/16) (AN-X-598)	4	
	FM-355449-S2	WO-A-2214	SCREW, windshield pivot, thumb (mall. I., 3/8-24)	2	.125
	FM-99W-8103311	WO-A-2483	SPACER, windshield adjusting arm (S, 2 1/8 O.D. x 2 3/4 I.D.) (AN-S-384)	2	
	FM-356361-S	WO-A-4260	WASHER, spring, windshield adjusting arm (S, 0.56 O.D. x 0.34 I.D.) (AN-S-1044)	4	
	FM-356286-S	WO-A-2490	WASHER, windshield adjusting arm (0.688 O.D. x 0.349 I.D. x 0.067 thk.) (AN-X-1637)	6	.0167
	FM-34805-S2	WO-52706	WASHER, windshield clamp bracket screw (lock, reg, S, 1/4 in.) (AN-X-1700)	4	
	FM-356373-S2	WO-A-2220	WASHER, windshield pivot spring (S, 1 in. O.D. x 2 1/8 I.D. x 0.015 thk., 3/8 crown)	4	
3320-GP-1103010	FM-GP-1103010	WO-A-3210	WINDSHIELD, assembly (before Willys serial 103545) (includes: ARMS, BRACKETS, CLAMPS, GLASS and ATTACHING PARTS)	1	
			WINDSHIELD, assembly (after Willys serial 103545) (includes: ARMS, BRACKETS, CLAMPS, GLASS and ATTACHING PARTS)	1	
3320-GP-1103106	FM-GPW-1103030	WO-A-12761	FRAME, windshield, assembly (Note 1)	1	
	FM-GP-1103020	WO-A-2246	FRAME, windshield, lower, assembly	1	
		WO-A-2255	FRAME, windshield, upper, assembly	1	
	FM-GPW-1103268	WO-A-2776	FRAME, windshield, tubular (before Willys serial 103545) (Willys only)	1	
		WO-A-3204	FRAME, windshield, tubular (after Willys serial 103545)	1	
	FM-GP-1103106	WO-A-12760	FRAME, windshield, tubular, assembly (Note 1)	1	
	FM-GP-1103110	WO-A-2479	PADDING, windshield glass (Everseal, 1 1/8 in. x 73 in.)	2	.239
	FM-GPW-1103080-A	WO-A-2250	WEATHERSTRIP, windshield	1	.287
	FM-33184-S2	WO-A-2476	WEATHERSTRIP, windshield frame to cowl	1	.702
		WO-A-2489	SCREW, windshield to cowl weatherstrip (S, binding hd., sheet metal type "Z" No. 10 (0.190) x 1/2)	15	
G503-7002982	FM-GP-17535	WO-A-12865	ARM, adjustable, windshield wiper, assembly (Note 1)	2	
		WO-663369	NUT, windshield wiper arm to shaft (Note 1)	2	
		WO-A-2512	ARM, windshield wiper, w/BLADE, assembly (includes RIVET)	2	
	FM-GP-17528	WO-A-11519	ARM, windshield wiper, w/CLIP, assembly	2	
G503-7002981		WO-A-4687	BLADE, windshield wiper	2	.244
		WO-A-12864	BLADE, windshield wiper (B-209586-B) (Note 1)	2	
	FM-GPW-13434-A	WO-345961	GROMMET, rubber, windshield wiper tube through cowl	2	
	FM-GP-17531	WO-A-2513	HANDLE, windshield wiper, inner, w/KNOB, assembly	1	.0212
				2	

Note 1—For vehicles equipped with vacuum windshield wiper.



## GROUP 18—BODY (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
18-1	G503-7036573	FM-GPW-17526 FM-34054-S2 FM-34824-S2 FM-351303-S2 FM-63848-S FM-GP-17500 FM-GPW-17500	WO-A-11432 WO-A-2588 WO-A-2587 WO-A-2584 WO-53243 WO-A-2586 WO-A-11433	1811D—WINDSHIELD WIPER ARMS AND BLADES (Cont'd)		
				HANDLE, windshield wiper, w/tie ROD, assembly (TRI-80540)	2	
				NUT, hex, S, No. 12 (0.216)-24NF-2	2	
				WASHER, lock, S, No. 12 (0.216) (266 I.D. x 1/2 thk.) (TRI-2328)	2	
				WASHER, windshield wiper handle to frame (S, 1 1/2 O.D. x 3/8 I.D. x 0.032 thk.)	2	.0508
				RIVET, S, tubular, ov-hd., type "A" (blade to arm)	2	
				WIPER, windshield, assembly	2	
				WIPER SET, windshield (tandem) (includes: ARM w/BLADE, assembly, HANDLE w/ROD, assembly, NUT, and WASHERS)	1	1.26
				1811D-1—VACUUM WINDSHIELD WIPER		
				BUSHING, reducing, 1/4 to 1/8, 1/8 pipe thd. (in intake manifold)	1	
				CLIP, 1/4 in., wiper tubing to windshield frame	6	
				SCREW, sheet metal, rd-hd., S, No. 10 (.190) x 1/2	6	
				DRIVER, windshield wiper arm, knurled	2	
				HOSE, windshield wiper tubing to tee (3 in. lgh.)	2	
				HOSE, windshield wiper tubing to tee (5 1/4 in. lgh.)	2	
	8800-728-2 G503-7002980	WO-663365 WO-663366 WO-52213 WO-52221 WO-384568 WO-A-12751 WO-A-12750 WO-A-12755 WO-640527 WO-387891		HOSE, windshield wiper tubing to engine (15 1/2 in. lgh.)	1	
				MOTOR, vacuum, windshield wiper	2	
				SCREW, rd-hd., mach., S, No. 10 (.190)-32NF-2 x 1/2 (motor to frame)	4	
				WASHER, lock, S, No. 10 (.190)	4	
				NUT, 1/4 inverted flared tube, windshield wiper tube to manifold	1	
				TEE, windshield wiper motor connecting	1	
				TUBING, windshield wiper, upper	1	
				TUBING, windshield wiper	1	
				TUBING, windshield wiper, intake manifold, assembly	1	
				UNION, 1/4 in. inverted flared tube connector, 1/8 pipe thread	1	
				1817—TOOL BOX		
				BRACKET, tool compartment lock, assembly	1	
				FRAME, tool compartment, left	1	
				FRAME, tool compartment, right	1	
				HINGE, tool compartment lid, assembly (before Willys serial 118599)	4	
				HINGE, tool compartment lid, assembly (after Willys serial 118599)	4	
				LID, tool compartment, w/HINGE, assembly (before Willys serial 118599)	2	1.21

				LID, tool compartment, w/HINGE, assembly (after Willys serial 118599).....	2
				NUT, mach-screw, hex, S, cd-pltd., No. 10 (0.190)-24NC-2.....	6
				SCREW, mach., rd-hd., S, No. 10 (0.190)-24NC-2 x $\frac{3}{8}$ .....	6
				WASHER, lock, reg., S, No. 10 (0.190).....	6
				LOCK, tool compartment lid, assembly (TA-OP-528).....	2
				NUT, mach-screw, hex, S, cd-pltd., No. 10 (0.190)-24NC-2.....	4
				SCREW, mach., rd-hd., S, No. 10 (0.190)-24NC-2 x $\frac{3}{8}$ .....	4
				WASHER, lock, reg., S, No. 10 (0.190).....	4
				SEAL, tool compartment lid (short).....	2
				SEAL, tool compartment lid (long).....	2
				STRIKER, tool compartment lid lock.....	2
				<b>1817A—SPARE GASOLINE CARRIER</b>	
				BRACKET, spare gas line can, assembly.....	1
				BOLT, hex-hd., S, $\frac{3}{8}$ -16NC-2 x $\frac{3}{4}$ (brkt. to rear panel) (GM-122122).....	4
				NUT, hex, S, $\frac{3}{8}$ -16NC-2 (GM-123228).....	4
				WASHER, lock, reg., S, $\frac{3}{8}$ in.....	4
				STRAP, spare gasoline can, w/BUCKLE, assembly.....	1
				RIVET, tubular, $\frac{3}{4}$ x $1\frac{1}{2}$ .....	8
				WASHER, plain, S, $\frac{1}{16}$ O.D. x $\frac{5}{8}$ I.D.....	8
				STRAP, spare gasoline can, w/TIP, assembly.....	1
				<b>1820—GUN HOLDERS</b>	
				BRACKET, support, rifle holder to windshield, left, assembly.....	1
				BRACKET, support, rifle holder to windshield, right, assembly.....	1
				BUMPER, rifle holder retainer clamp, assembly (BUE-505285).....	1
				CAM, rifle holder retainer handle (Ford only).....	1
				RIVET, ov-hd., tubular, $\frac{1}{4}$ x $1\frac{3}{8}$ (Ford only).....	1
				CASE, rifle, w/HOLDER, assembly.....	1
				HANDLE, rifle holder retainer, w/CAM, assembly (BUE-505284).....	1
				HOLDER, rifle, assembly (BUE-505275).....	1
				BOLT, step, S, $\frac{5}{16}$ -18NC-2 x $\frac{3}{4}$ (holder to windshield).....	2
				NUT, reg., hex, S, $\frac{5}{16}$ -18NC-2 (holder to windshield bolt).....	2
				WASHER, flat, S, $\frac{3}{8}$ in. (holder to windshield bolt) (Willys only).....	2
				WASHER, flat, S, $\frac{5}{16}$ in. (holder to windshield bolt) (Ford only).....	2
				WASHER, lock, reg., S, $\frac{5}{16}$ in. (holder to windshield bolt).....	2
				PLATE, rifle holder retainer clamp handle (BUE-505288).....	1
				SCREW, mach., rd-hd., No. 12 (0.216)-24NC-2 x $\frac{3}{8}$ (Ford only).....	4
				WASHER, lock, reg., S, No. 12 (0.216) (Ford only).....	4
				SPRING, retaining, rifle holder, assembly (BUE-505282).....	1
				SPRING, rifle holder retainer handle cam (BUE-505287).....	1
				<b>1817A—SPARE GASOLINE CARRIER</b>	
				BRACKET, spare gas line can, assembly.....	1
				BOLT, hex-hd., S, $\frac{3}{8}$ -16NC-2 x $\frac{3}{4}$ (brkt. to rear panel) (GM-122122).....	4
				NUT, hex, S, $\frac{3}{8}$ -16NC-2 (GM-123228).....	4
				WASHER, lock, reg., S, $\frac{3}{8}$ in.....	4
				STRAP, spare gasoline can, w/BUCKLE, assembly.....	1
				RIVET, tubular, $\frac{3}{4}$ x $1\frac{1}{2}$ .....	8
				WASHER, plain, S, $\frac{1}{16}$ O.D. x $\frac{5}{8}$ I.D.....	8
				STRAP, spare gasoline can, w/TIP, assembly.....	1
				<b>1820—GUN HOLDERS</b>	
				BRACKET, support, rifle holder to windshield, left, assembly.....	1
				BRACKET, support, rifle holder to windshield, right, assembly.....	1
				BUMPER, rifle holder retainer clamp, assembly (BUE-505285).....	1
				CAM, rifle holder retainer handle (Ford only).....	1
				RIVET, ov-hd., tubular, $\frac{1}{4}$ x $1\frac{3}{8}$ (Ford only).....	1
				CASE, rifle, w/HOLDER, assembly.....	1
				HANDLE, rifle holder retainer, w/CAM, assembly (BUE-505284).....	1
				HOLDER, rifle, assembly (BUE-505275).....	1
				BOLT, step, S, $\frac{5}{16}$ -18NC-2 x $\frac{3}{4}$ (holder to windshield).....	2
				NUT, reg., hex, S, $\frac{5}{16}$ -18NC-2 (holder to windshield bolt).....	2
				WASHER, flat, S, $\frac{3}{8}$ in. (holder to windshield bolt) (Willys only).....	2
				WASHER, flat, S, $\frac{5}{16}$ in. (holder to windshield bolt) (Ford only).....	2
				WASHER, lock, reg., S, $\frac{5}{16}$ in. (holder to windshield bolt).....	2
				PLATE, rifle holder retainer clamp handle (BUE-505288).....	1
				SCREW, mach., rd-hd., No. 12 (0.216)-24NC-2 x $\frac{3}{8}$ (Ford only).....	4
				WASHER, lock, reg., S, No. 12 (0.216) (Ford only).....	4
				SPRING, retaining, rifle holder, assembly (BUE-505282).....	1
				SPRING, rifle holder retainer handle cam (BUE-505287).....	1

Key	Part Name	Willlys Part No.	Group Number
A	WINCH, assembly.....	WO-A-9215.....	2000
B	ROD.....	WO-A-9196.....	2003
C	SPACER.....	WO-A-10285.....	1601B
D	CLIP.....	WO-A-8578.....	1602
E	SPRING, assembly.....	WO-A-8463.....	1601
F	BRACKET.....	WO-A-10282.....	2001
G	SCREW.....	WO-A-10397.....	2001

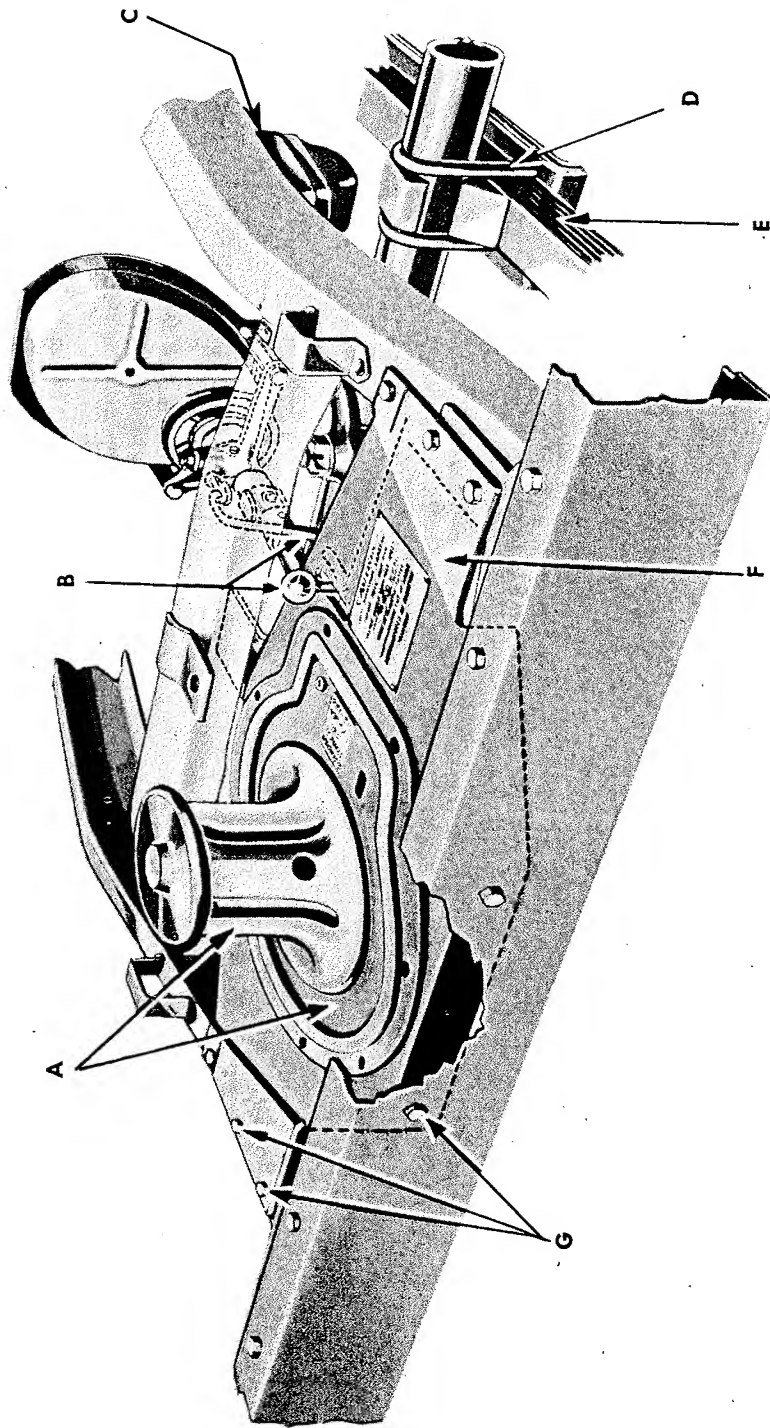


FIGURE 20-1—CAPSTAN WINCH—INSTALLED VIEW

## GROUP 20—CAPSTAN WINCH

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>GROUP 20—CAPSTAN WINCH</b> <b>2000—WINCH ASSEMBLY</b>		
				KIT, field, capstan winch. ....	1	
				(Consists of:		
			WO-A-9232	1 BAG, winch spare parts		
			WO-A-5113	4 BOLT, axle bumper spacer (hex-hd., $\frac{5}{16}$ -24NF-2 x $1\frac{3}{4}$ )		
			WO-50922	3 BOLT, mounting, winch support bracket (hex-hd., $\frac{3}{8}$ -24NF-2 x $\frac{7}{8}$ )		
			WO-53038	8 BOLT, mounting, winch plate (hex-hd., S., $\frac{3}{8}$ -24NF-2 x $1\frac{3}{8}$ )		
			WO-A-10397	1 BRACKET, mounting, winch, assembly		
			WO-A-10282	1 BRACKET, support, winch drive, assembly		
			WO-A-10284	3 CLIP, front spring (see Group 1601)		
			WO-A-8578	1 CLIP, front spring (see Group 1601)		
			WO-A-8289	1 CRANK, bell, drag link, front (see group 1401)		
			WO-A-5691	1 CRATE, shipping, capstan winch field kit		
			WO-A-9233	1 HANDLE, winch shift rod		
			WO-A-971	1 HUB, winch drive shaft, assembly		
			WO-A-9211	1 INSTRUCTION, installation, capstan winch field kit		
			WO-A-10394	1 KEY, Woodruff, No. 7		
			WO-53356	1 qt. LUBRICANT, winch drive		
			WO-A-10312	1 NUT, engine crankshaft pulley		
			WO-638513	8 NUT, winch plate mounting bolt (hex. $\frac{3}{8}$ -24NF-2)		
			WO-52542	8 NUT, winch, bracket mounting screw (hex. $\frac{1}{4}$ -20NC-2)		
			WO-52217	2 PIN, cotter, $\frac{3}{32}$ x $\frac{7}{8}$		
			WO-5152	1 PIN, cotter, $\frac{1}{8}$ x $1\frac{1}{2}$ (drag link bell crank)		
			WO-52527	4 PIN, cotter, $\frac{1}{8}$ x $1\frac{1}{2}$ (spare drive shaft shear pins)		
			WO-5397	1 PIN, cotter, $\frac{3}{32}$ x $\frac{3}{4}$ (winch shift rod)		
			WO-50968	1 PIN, shaft, assembly to winch, assembly		
	9680-A-9201		WO-A-9201	1 PULLEY, drive, fan		
	9680-A-9205		WO-A-9205	1 ROD, shift, winch		
	9680-A-9196		WO-A-9196	100 ft. ROPE, $\frac{3}{4}$ in.		
			WO-A-102866	1 SCREW, set, hex., socket type		
			WO-53355	8 SCREW, mounting, winch mounting bracket (fl-hd., $\frac{1}{4}$ -20NC-2 x $\frac{7}{8}$ )		
			WO-51986	1 SHAFT, drive, winch, assembly		
			WO-A-9202	1 SHAFT, winch spline		
			WO-A-9214	2 SPACER, axle bumper		
	9680-A-9214		WO-A-10285	2 SPACER, front bumper gusset		
			WO-A-1120			

## GROUP 20—CAPSTAN WINCH (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
<b>2000—WINCH ASSEMBLY (Cont'd)</b>						
20-1	9680-A-9194		WO-A-10370	KIT, field capstan winch (Cont'd)		
	3320-GPW-5311-B	FM-GPW-5311-B	WO-A-9194	6 SPACER, mounting plate to frame (use with Ford installation)		
	3320-GPW-5310-B	FM-GPW-5310-B	WO-A-8463	3 SPACER, winch drive		
			WO-A-8464	1 SPRING, front left, assembly (see Group 1601)		
			WO-A-10339	1 SPRING, front right, assembly (see Group 1601)		
			WO-53084	1 TAG, caution, winch lubrication		
			WO-52046	8 WASHER, winch mounting bracket mounting screw ( $\frac{1}{4}$ in.)		
			WO-53032	11 WASHER, winch plate to frame screw ( $\frac{3}{8}$ in.)		
			WO-A-9215	2 WASHER, plain $\frac{3}{8}$ in. (use with Ford installation)		
			WO-A-10287	1 WINCH, capstan, assembly (as furnished by U.S. ORDNANCE)		
	9680-A-9215		WO-A-9215	1 WINCH, capstan, w/drive SHAFT, assembly		
			WO-A-10287	WINCH, capstan, assembly (as furnished by U.S. ORDNANCE and re-worked by Willys)	1	
20-1, 2 20-1			WO-A-10287	WINCH, capstan, w/drive SHAFT, assembly (includes worm GEAR and thrust WASHERS)	1	
			WO-52217	NUTS, hex., S., $\frac{1}{4}$ -20NC-2 (winch to bracket screw)	8	
			WO-51986	SCREW, fl-hd., mach., S., $\frac{1}{4}$ -20NC-2 x $\frac{1}{2}$ (winch to bracket)	8	
			WO-53084	WASHER, lock, S., $\frac{1}{4}$ in. (winch to bracket screw)	8	
				<b>2001—WINCH PARTS AND WINCH DRIVE SHAFTS</b>		
			WO-635838	BALL, poppet, winch drive support bracket	1	
			WO-A-10282	BRACKET, mounting, capstan winch, assembly	1	
			WO-A-10397	BOLT (hex-hd., S., $\frac{3}{8}$ -24NF-2 x 1 $\frac{3}{4}$ )	8	
			WO-52542	NUT, hex., S., $\frac{3}{8}$ -24NF-2	8	
			WO-52046	WASHER, lock, S., $\frac{3}{8}$ in.	8	
			WO-A-10284	BRACKET, support winch drive, w/BUSHING, assembly (includes: poppet BALL, Alemite FITTINGS, shift FORK, shift RAIL and poppet SPRING)	1	
			WO-9210	BRACKET, support winch drive, w/BUSHING, assembly	1	
20-2	9680-A-9210		WO-53038	BOLT, hex-hd., S., $\frac{3}{8}$ -24NF-2 x $\frac{1}{2}$	3	
	H001-5421245		WO-52046	WASHER, lock, S., $\frac{3}{8}$ in.	3	
			WO-A-9208	BUSHING, winch shaft	2	
	9680-A-9208		WO-638792	FITTING, Alemite, winch drive support bracket	1	
			WO-640038	FITTING, Alemite, winch drive support bracket	1	
			WO-A-9211	HUB, winch drive shaft, w/hub PIN, assembly	1	
	9680-A-9211		WO-A-10315	GASKET, housing, winch drive	1	
	9680-A-10315					

**SNL G-503**


## GROUP 20—CAPSTAN WINCH (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
20-2, 3 20-2	9680-A-9203 9680-A-10308			<b>2001—WINCH PARTS AND WINCH DRIVE SHAFTS (Cont'd)</b>		
				SHAFT, spline, capstan winch.....	1	
				SPACER, capstan winch drive.....	1	
				SPACER, mounting plate to frame (use for Ford installation).....	6	
				SPRING, poppet, capstan winch.....	1	
				WASHER, thrust, capstan winch (bronze).....	1	
				WASHER, thrust, capstan winch, w/PIN, assembly (S.).....	1	
				WASHER, plain, S., $\frac{3}{8}$ in. (use for Ford installation).....	2	
				<b>2002—CABLES AND ROPES</b>		
				ROPE, $\frac{3}{4}$ in. x 100 ft.....	1	
				<b>2003—WINCH CONTROL PARTS</b>		
				FORK, shift, capstan winch.....	1	
				HANDLE, winch shift rod.....	1	
				RAIL, shift, capstan winch.....	1	
				NUT, hex., S., $\frac{5}{16}$ -24NF-2.....	1	
				WASHER, lock, S., $\frac{5}{16}$ in. (GM-138485).....	1	
				ROD, shift, capstan winch.....	1	
20-1, 2	9680-A-9206 H001-7017651			<b>GROUP 21—BUMPERS AND GUARDS</b>		
				<b>2101—BUMPERS</b>		
				BAR, bumper, front.....	1	
				BOLT, hex-hd., S., $\frac{5}{16}$ -24NF-2 x $4\frac{1}{2}$ (bar to frame).....	4	.0217
				NUT, hex., S., $\frac{5}{16}$ -24NF-2.....	4	
				WASHER, lock, reg., S., $\frac{5}{16}$ in.....	4	
				BUMPERETTE, rear.....	2	
				BOLT, hex-hd., S., $\frac{3}{8}$ -24NF-2 x $\frac{3}{4}$ (bumperette to frame).....	8	
				NUT, hex., S., $\frac{3}{8}$ -24NF-2.....	8	
				WASHER, lock, reg., S., $\frac{3}{8}$ in.....	8	
				FILLER, front bumper bar, wood.....	1	
				SPACER, front bumper gusset (Note 1).....	2	
				FM-GPW-17750		
				FM-355456-S		
				FM-33798-S2		
				FM-34806-S2		
				FM-GPW-17775		
				FM-24349-S2		
				FM-33800-S		
				FM-34807-S		
				FM-GPW-17751		
				WO-A-1117		
				WO-51823		
				WO-5910		
				WO-51833		
				WO-A-1157		
				WO-50163		
				WO-5901		
				WO-5010		
				WO-A-1147		
				WO-A-1120		

2103—RADIATOR GUARDS

					1
				FRAME, radiator guard, assembly (before Willys serial 125809 only)	1
				BOLT, hex-hd., S., $\frac{3}{16}$ -16NC-2 x $\frac{7}{8}$ (frame to chassis) (Willys only)	3
				NUT, hex., S., $\frac{3}{16}$ -16NC-2 (Willys only)	3
				WASHER, lock, reg., S., $\frac{3}{8}$ in. (Willys only)	3
				WASHER, plain, S., $\frac{3}{8}$ in. (Willys only)	3
				GUARD, radiator, assembly (after Willys serial 125809)	1
				BOLT, hex-hd., S., $\frac{3}{16}$ -18NC-2 x $\frac{5}{8}$ (guard to fender)	6
				NUT, hex., S., $\frac{3}{16}$ -18NC-2 (before Willys serial 125809)	6
				NUT, sp., S., $\frac{3}{16}$ -18NC-2 (after Willys serial 125809)	6

Note 1—Only for vehicles modified by MWO ORD G503-W8. (See page 3)

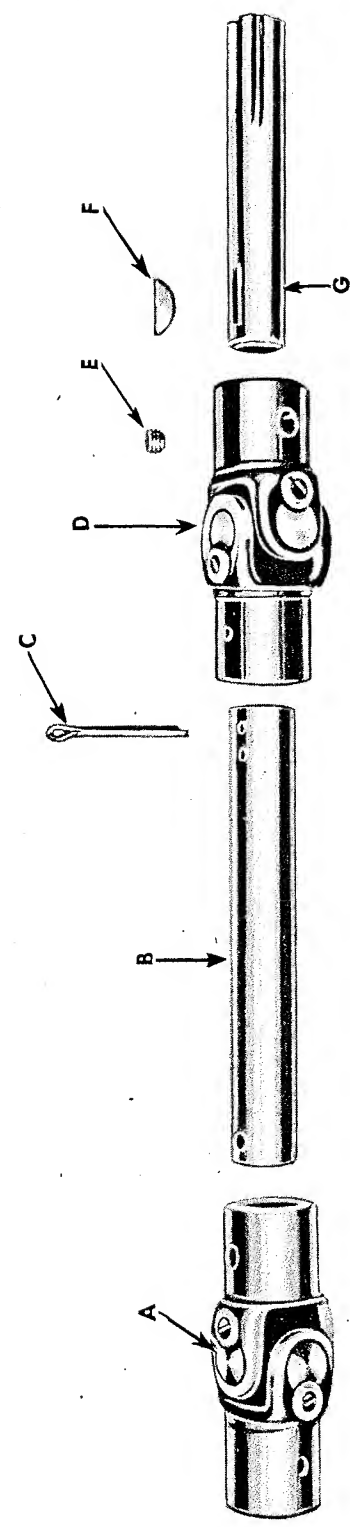

Key	Part Name	Willys Part No.	Group No.
A	JOINT	WO-A-9157	2001
B	SHAFT (Available only as part of SHAFT, assembly, WO-A-9202)	WO-A-9180	N.L.
C	PIN	WO-5134	2001
D	JOINT	WO-A-9158	2001
E	SCREW	WO-53355	2001
F	KEY	WO-53356	2001
G	SHAFT	WO-A-9214	2001

RA PD 342240

FIGURE 20-3—CAPSTAN WINCH DRIVE SHAFT ASSEMBLY



## GROUP 21—BUMPERS AND GUARDS (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>2103—RADIATOR GUARDS (Cont'd)</b>		
				GUARD, radiator, assembly (Cont'd)		
			WO-5437	WASHER, plain, S, cd-pltd., $\frac{3}{8}$ in.	6	
			WO-51833	WASHER, lock, reg., S, $\frac{3}{8}$ in.	6	
			WO-A-3094	LINER, radiator guard hood, center.	1	
			WO-A-3095	LINER, radiator guard hood, side.	2	
			WO-51182	RIVET, split, $\frac{3}{4}$ x $\frac{5}{8}$ (5 used center, 6 used sides—Willys) (4 used center, 7 used sides—Ford).	11	
			WO-A-3549	RETAINER, radiator guard to fender nut (after Willys serial 125809) (Willys only)	6	
				<b>2103A—LAMP GUARDS</b>		
				GUARD, blackout driving lamp, w/SUPPORT, assembly (after Willys serial 163750)	1	
			WO-A-4118	BOLT, hex-hd., S, cd-pltd., $\frac{3}{8}$ -24NF-2 x 1 (GM-112657) (after Willys serial 163750)	1	
			WO-53050	BOLT, hex-hd., S, cd-pltd., $\frac{5}{16}$ -24NF-2 x $\frac{3}{4}$ (GM-118772)	2	
			WO-53048	NUT, hex., S, cd-pltd., $\frac{5}{16}$ -24NF-2 (GM-115729)	3	
			WO-50802	WASHER, lock, S, cd-pltd., $\frac{3}{8}$ in.	1	
			WO-53047	WASHER, lock, S, cd-pltd., shakeproof, $\frac{3}{8}$ in.	4	
			WO-53025	WASHER, plain S, cd-pltd., $1\frac{3}{8}$ O.D. x $1\frac{1}{8}$ I.D. (Willys only)	1	
			WO-A-4116			
				<b>GROUP 22—MISCELLANEOUS BODY, CHASSIS AND ACCESSORIES</b>		
				<b>2201—TARPAULINS</b>		
				COVER, headlight.	2	
			WO-A-3070	COVER, windshield, assembly (before Willys serial 103545)	1	
			WO-A-3073	COVER, windshield, assembly (after Willys serial 103545)	1	
			WO-A-3211	PAULIN, deck top, assembly (before Willys serial 103545) (Willys only)	1	
			WO-A-2909	PAULIN, deck top, assembly (after Willys serial 103545)	1	
			WO-A-3216			
				<b>2201A—BOWS</b>		
				BOW, top, assembly (includes bow, top front, assembly)	1	
			WO-A-2897	RIVET, rd-hd., $\frac{3}{8}$ x 1 (bow to pivot)	2	
			WO-5216			

H001-1518008	FM-GPW-1151272	WO-A-2898	BOW, top front, assembly.....	1	
	FM-GPW-1129069	WO-A-2744	BRACKET, left hand rail, front, assembly.....	1	.184
	FM-GPW-1129068	WO-A-2745	BRACKET, right hand rail, front, assembly.....	1	.184
	FM-24310-S	WO-51391	BOLT, hex-hd., S., $\frac{5}{16}$ -18NC-2 x $\frac{1}{2}$ (bracket to body).....	2	
	FM-33797-S2	WO-52350	NUT, hex., S., $\frac{5}{16}$ -18NC-2.....	2	
	FM-34806-S2	WO-51833	WASHER, lock, reg., S., $\frac{5}{16}$ in.....	2	
	FM-GPW-1153030	WO-A-2754	BRACKET, top bow pivot.....	2	.136
	FM-20326-S2	WO-51495	BOLT, hex-hd., S., $\frac{5}{16}$ -18NC-2 x $\frac{5}{8}$ (bracket to body).....	2	
	FM-33797-S2	WO-52350	NUT, hex., S., $\frac{5}{16}$ -18NC-2.....	6	
	FM-24650-S2	WO-52987	SCREW, fl-hd., S., $\frac{5}{16}$ -18NC-2 x $\frac{5}{8}$ .....	4	
H001-1518008	FM-34806-S2	WO-51833	WASHER, lock, reg., S., $\frac{5}{16}$ in.....	6	
	FM-348148-S	WO-A-3113	EYELET, curtain fastener (CNC-O).....	16	
	FM-95633-S	WO-A-3112	FASTENER, single post type, curtain (rivet, tubular) (CNC-12).....	11	
	FM-GPW-1154810	WO-A-2168	LOOP, footman.....	10	.028
	FM-355836-S7	WO-6352	NUT, mach. screw, hex., S., cd-pltd., No. 10 (0.190)-24NC-2.....	20	
	FM-355162-S2	WO-6290	SCREW, mach., fl-hd., S., No. 10 (0.190)-24NC-2 x $\frac{1}{2}$ (loop to body).....	20	
	FM-34803-S7	WO-52221	WASHER, lock, reg., S., cd-pltd., No. 10 (0.190).....	20	
	FM-GPW-1151270	WO-A-2901	PIVOT, top bow, assembly.....	2	.354
	FM-20328-S2	WO-52189	BOLT, hex-hd., S., $\frac{3}{8}$ -16NC-2 x $\frac{5}{8}$ (pivot to bracket).....	2	
	FM-34807-S2	WO-51304	WASHER, lock, reg., S., $\frac{3}{8}$ in.....	2	
H001-1518009	FM-34747-S	WO-5455	WASHER, plain, S., $\frac{3}{8}$ in.....	2	
	FM-GPW-1153142	WO-A-2900	PIVOT, top bow front.....	2	
	FM-353104-S	WO-A-3111	PLATE, back, clincher (CNC-58).....	11	
	FM-GPW-1150498	WO-A-2214	SCREW, thumb, top bow, assembly ( $\frac{3}{8}$ -24NF).....	2	
	FM-95705-S	WO-A-3051	SOCKET, curtain fastener (CNC-515).....	14	
	FM-GPW-1152730	WO-A-3109	STRAP, hold-down, top, rear, assembly.....	6	
	FM-GPW-1152720	WO-A-3110	STRAP, top lock, assembly.....	2	
	FM-GPW-1152950	WO-A-3141	STRAP, top roll, assembly.....	2	
	FM-356522-S2	WO-A-2639	WASHER, anti-rattle, top bow pivot.....	2	.0258
	FM-95627-S	WO-A-3054	WASHER, curtain eyelet fastener (CNC-98).....	32	
3320-GP-17723-A 3320-21CS-17682-B	FM-351370-S2	WO-A-2902	WASHER, top bow, front pivot (S., 1 in. O.D. x $\frac{21}{64}$ I.D.).....	2	.0012
	2201F—SIDE CURTAINS				
	FM-GPW-1120041	WO-A-2998	CURTAIN, left, side, assembly.....	1	
	FM-GPW-1120040	WO-A-2999	CURTAIN, right, side, assembly.....	1	
	FM-95626-S	WO-A-3052	FASTENER, side curtain (male, flush type) (CNC-50).....	14	
	FM-95628-S	WO-A-3053	WASHER, side curtain fastener (CNC-60).....	14	
	2202—REAR VIEW MIRRORS				
	FM-GP-17723-A		MIRROR, rear view, assembly (superseded by MIRROR assembly, FM-21CS-17718)	1	.342
	FM-21CS-17682-B	WO-A-2934	MIRROR, rear view, assembly (includes bracket).....	1	
	FM-34054-S2	WO-6989	NUT, mach. screw, hex., S., No. 12 (0.216)-24NC-2.....	6	
	FM-36845-S2	WO-6988	SCREW, machine, rd-hd., S., No. 12 (0.216)-24NC-2 x $\frac{5}{8}$ .....	6	
	FM-34804-S2	WO-51969	WASHER, lock, reg., S., No. 12 (0.216).....	6	

## GROUP 22—MISCELLANEOUS BODY, CHASSIS AND ACCESSORIES (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
18-1	3320-21CS-17718-A	FM-21CS-17718-A	WO-A-11850	2202—REAR VIEW MIRRORS (Cont'd)	1	
			WO-A-11862			
			WO-A-11861			
18-1		FM-GPW-1101621-A FM-GPW-1101629-A FM-GPW-1101627-A FM-357016-S19	WO-A-1330 WO-A-11757 WO-A-17344 WO-A-1331 WO-53013 WO-53014	2203—IDENTIFICATION AND CAUTION PLATES	1 1 1 1 12 12 12	
18-1	H017-0506101 H001-1518007	FM-GPW-13380-A FM-33796-S FM-36825-S FM-34805-S	WO-A-1306 WO-5914 WO-52834 WO-52706	2203A—REFLECTORS	4 8 8 8	.277
18-1	H001-1518005 G503-0384600 G121-0389650	FM-GPW-13434-A2 FM-GPW-14561 FM-355836-S7 FM-355130-S7 FM-34803-S2 FM-GPW-17262	WO-A-8242 WO-A-8126 WO-345961 WO-A-5449 WO-6352 WO-5064 WO-52221 WO-A-1344 WO-A-5734	2204—SPEEDOMETER AND PARTS	1 1 1 2 2 2 2 1 1	.0212 .0041 .326



## GROUP 22—MISCELLANEOUS BODY, CHASSIS AND ACCESSORIES (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
	G503-7032689			2208—AIR COMPRESSOR (TIRE PUMP). (Cont'd) (Only for vehicles modified by MWO-ORD G503-W9)	1	
				PISTON, air compressor assembly (WBK-185944).....		
				(Consists of:		
				2 CUP, packing (WBK-520610)		
				2 FOLLOWER, piston (WBK-185906)		
				1 PISTON (WBK-185903)		
	9680-A-6414		WO-A-6414	PULLEY, crankshaft (ORD 7044165).....	1	
	G503-7032697			PULLEY, air compressor flywheel, assembly (WBK-185921).....	1	
				(Consists of:		
				2 BEARING, face (WBK-186019)		
				1 LATCH (WBK-185924)		
				1 PIN, clutch (WBK-185919)		
				1 PIN, clutch stop (WBK-185962)		
				1 PIN, latch pivot (WBK-185928)		
				1 PLUG, clutch pin (WBK-185920)		
				1 PULLEY, flywheel (WBK-186058)		
				1 SPRING, clutch pin (WBK-185923)		
				1 SPRING, latch (WBK-185927)		
	G503-7032694			RING, retaining, air compressor piston pin (WBK-185912).....	1	
	G503-7032692			ROD, connecting, air compressor (WBK-185907).....	1	
				SEAL, air compressor crankshaft bearing sleeve (WBK-522645).....	1	
	G503-7032696			SLEEVE, bearing, air compressor crankshaft (WBK-185914).....	1	
	G503-7032687			SPRING, air compressor charge valve (WBK-503628).....	2	
	G503-7032698			SPRING, air compressor latch (WBK-185927) (also part of PULLEY, assembly, WBK-185921).....	1	
	G503-7032700			STRAINER, air intake, air compressor, assembly (WBK-185934).....	1	
				STUD, air compressor cylinder, w/NUT, assembly (3/8 x 5 1/8) (WBK-186007).....	2	
				STUD, air compressor cylinder head (C7044153).....	2	
				NUT, air compressor cylinder head stud (A7044072).....	2	
				TEE, air compressor (1/4 in.) (WBK-186033)		
	G503-7032686			VALVE, discharge, air compressor (WBK-92235).....	2	
	G503-7032699			WHEEL, air compressor clutch (WBK-185929).....	1	
				KEY, Woodruff, No. 6 (WBK-136157).....	1	
				NUT, 3/4-16NF (WBK-521671).....	1	

**GROUP 23—GENERAL USE STANDARDIZED****PARTS****2306—TIRES AND TUBES**

8-F-2305	FM-GPW-18322	WO-A-7681	CAP SET, pneumatic tube valve.....	1
8-T-8978	FM-GPW-18320	WO-A-7682	CORE SET, pneumatic tube valve.....	1
8-T-9050			FLAP, tire, 7.50 x 16 ( <i>Note 1</i> ).....	1
8-T-14215			TIRE, pneumatic, 6-ply, mud and snow tread, 6.00 x 16.....	5
8-T-15280			TIRE, pneumatic, 6-ply, mud and snow tread, 7.50 x 16 ( <i>Note 1</i> ).....	5
			TUBE, pneumatic, regular, 6.00 x 16.....	5
			TUBE, pneumatic, heavy duty, 7.50 x 16 ( <i>Note 1</i> ).....	5

**GROUP 26—RADIO****2603—RADIO SUPPRESSION SYSTEM PARTS**

3320-GPW-18937	FM-GPW-18937	WO-A-8884	FILTER, 0.01 MFD. (mounted to ignition switch).....	1
3320-G8T-18938-B	FM-G8T-18938-B	WO-A-8010	FILTER, 0.05 MFD. (voltage regulator) (mounted to generator regulator).....	1
3320-GPW-18935-B	FM-GPW-18935-B	WO-A-7848	FILTER, 0.1 MFD. (mounted on ignition coil stud).....	1
G121-0342160		WO-A-7600	FILTER, 0.5 MFD. radio terminal box (DT-CHC-201) (SPR-JX-131) (MLL-A-205244) (SOL-EV-128) (superseded by FILTER, FM-GPA-18841, WO-A-7849).....	1
3320-GPA-18841	FM-GPA-18841	WO-A-7849	FILTER, 0.5 MFD. (mounted on cranking motor) (supersedes FILTER, WO-A-7600).....	1
3320-GPW-18960	FM-GPW-18960	WO-A-5980	FILTER-GROUP, w/COVER, assembly (SOL type EV-103) (DTC-1107DE) (SPR type JX-17) (MLL-134739).....	1
3320-GPW-18937-F	FM-GPW-18937-B	WO-A-8883	FILTER-UNIT, 0.01 MFD. generator regulator field (mounted to generator regulator).....	1
3320-GPW-18936-A	FM-GPW-18936-A	WO-A-1287	FILTER-UNIT, generator regulator (mounts on regulator).....	1
3320-GPW-18935-A	FM-GPW-18935-A	WO-A-5337	FILTER-UNIT, generator ground to armature circuit.....	1
3320-GPW-18876	FM-GPW-18876-B	WO-A-11766	STRAP, bond No. 1 and No. 2 (hood to cowl).....	2
3320-GPW-18858	FM-GPW-18876	WO-A-5038	STRAP, bond No. 1 and No. 2 (cowl to hood, right, and cowl to hood, left).....	2
	FM-GPW-18858	WO-A-5033	STRAP, bond No. 3 (cylinder head to dash) (superseded by STRAP, FM-GPW-18840, WO-A-7826).....	1
	FM-GPW-18840	WO-A-7826	STRAP, bond No. 3 (cylinder head to dash) (supersedes STRAP, FM-GPW-18858, WO-A-5033).....	1
3320-GPW-18849	FM-GPW-18849	WO-A-5035	STRAP, bond No. 4 (hand brake cable, speedometer cable, heat indicator cable to dash).....	1
3320-GPW-18853	FM-33798-S7	WO-A-1532	NUT, reg. hex., S, cd-pltd., 5/16-24NPF-2.....	1
3320-GPW-18850	FM-GPW-18853	WO-A-5039	STRAP, bond No. 5 (gas line to dash).....	1
	FM-GPW-18850	WO-A-5040	STRAP, bond No. 6 (choke and throttle controls and oil gage to dash).....	1
	FM-33798-S7	WO-A-1532	NUT, reg. hex., S, cd-pltd., 5/16-24NPF-2.....	1
3320-GPW-18857	FM-GPW-18857	WO-A-5037	STRAP, bond No. 7 (generator mounting bolt to starter motor bracket).....	1
3320-GPW-18846	FM-GPW-18846	WO-A-5041	STRAP, bond No. 8 (generator regulator ground).....	1
3320-GPW-18873	FM-GPW-18873	WO-A-5034	STRAP, bond No. 9 (ignition coil to cylinder block).....	1
	FM-GPW-14303	WO-A-1098	STRAP, bond No. 10 (engine front plate to frame right. This is regular engine ground strap).....	1

06-12

## GROUP 26—RADIO (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				<b>2603—RADIO SUPPRESSION SYSTEM PARTS (Cont'd)</b>		
	3320-GPW-18874	FM-GPW-18874	WO-A-5036	STRAP, bond No. 11 (engine front plate to frame left)	1	.0961
	3320-GPW-18854	FM-GPW-18854	WO-A-5027	STRAP, bond No. 12 (exhaust pipe ground connection to frame)	1	.228
	3320-GPW-18853	FM-GPW-18859	WO-A-5032	STRAP, bond No. 13 and No. 14 (radiator stud, right, to frame, and radiator stud, left, to frame)	2	
		FM-33798-87	WO-A-1532	NUT, reg., hex., S., cd-pltd., $\frac{5}{16}$ -24NF-2	2	
	3320-GPW-18872	FM-GPW-18872	WO-A-5031	STRAP, bond No. 15 (rear engine support to frame cross member stud)	1	.0815
		FM-33798-S7	WO-A-1632	NUT, reg., hex., S., cd-pltd., $\frac{5}{16}$ -24NF-2	2	
	3320-GPW-18871	FM-GPW-18871	WO-A-5030	STRAP, bond No. 16 (transfer case to body floor stud)	1	.101
		FM-33798-S7	WO-A-1532	NUT, reg., hex., S., cd-pltd., $\frac{5}{16}$ -24NF-2	2	
	3320-GPW-18852	FM-GPW-18852	WO-A-1699	STRAP, bond No. 21 and No. 22 (hood to brush guard right, and hood to brush guard, left)	2	.0505
			WO-A-1285	SUPPRESSOR, ignition (superseded by SUPPRESSOR, FM-GPW-18825, WO-A-6320)	4	
	3320-GPW-18825-B	FM-GPW-18825-B	WO-A-6320	SUPPRESSOR, ignition (supersedes SUPPRESSOR, WO-A-1285)	4	

# INDEXES

## TABLE OF CONTENTS

	<i>Page</i>
FIGURE INDEX . . . . .	224
ALPHABETICAL INDEX . . . . .	225
ORDNANCE PART NUMBER INDEX . . . . .	238
MANUFACTURERS' PART NUMBER INDEX . . . . .	239
OFFICIAL STOCK NUMBER INDEX . . . . .	275



# FIGURE INDEX

FIGURE	TITLE	PAGE	FIGURE	TITLE	PAGE
A	Truck, 1/4-Ton, 4 x 4 Command Reconnaissance— 3/4 Right Front View.....	8	06-6	Distributor Assembly (Dustproof Type)—Ex- ploded View.....	105
B	Truck, 1/4-Ton, 4 x 4 Command Reconnaissance— 3/4 Left Front View.....	9	06-7	Lighting Switch (Rotary Type).....	110
C	Truck, 1/4-Ton, 4 x 4 Command Reconnaissance— Right Side View.....	10	06-8	Headlight Assembly.....	114
D	Truck, 1/4-Ton, 4 x 4 Command Reconnaissance— 3/4 Right Rear View.....	11	06-9	Blackout Driving Light Assembly.....	118
E	Truck, 1/4-Ton, 4 x 4 Command Reconnaissance— Front View.....	12	06-10	Marker Light Assembly.....	119
01-1	Engine Assembly—Left Side View.....	13	06-11	Tail and Stop Light Assembly.....	120
01-2	Engine Assembly—Right Side View.....	14	06-12	Wiring Installation.....	122
01-3	Engine Assembly—Transverse Sectional View ..	15	07-1	Transmission Assembly—Sectional View.....	125
01-4	Engine Assembly—Longitudinal Sectional View	16	07-2	Transmission Assembly—Exploded View.....	126
01-5	Timing Chain Cover, Cylinder Block and Fly- wheel Housing—Exploded View.....	19	08-1	Transfer Case Assembly—Sectional View.....	133
01-6	Crankshaft and Bearings.....	21	08-2	Transfer Case Assembly—Exploded View.....	134
01-7	Piston and Connecting Rod—Exploded View ....	27	09-1	Propeller Shafts and Universal Joints.....	140
01-8	Camshaft, Timing Chain and Valve Mechanism— Exploded View.....	30	09-2	Rear Propeller Shaft and Universal Joint.....	141
01-9	Valve Cover and Ventilator Parts—Exploded View.....	31	10-1	Front Axle Assembly and Steering Linkage.....	143
01-10	Oil Pump Assembly—Exploded View.....	35	10-2	Differential Assembly—Sectional View.....	145
01-11	Manifold Assembly—Exploded View.....	38	10-3	Front Axle Housing, Shaft and Related Parts...	147
01-12	Oil Filter Assembly—Exploded View.....	39	10-4	Front Axle Steering Knuckle, Universal Joint and Related Parts—Sectional View.....	151
02-1	Clutch Assembly—Sectional View.....	43	10-5	Front Axle Steering Knuckle and Related Parts— Exploded View.....	152
02-2	Clutch Pressure Plate and Disk—Exploded View	44	10-6	Front Axle Universal Joints.....	155
02-3	Clutch Linkage and Controls.....	46	11-1	Rear Axle Assembly—Exploded View.....	158
03-1	Fuel Tank Assembly and Related Parts.....	49	12-1	Brake Assembly—Exploded View.....	164
03-2	Carburetor Assembly—Exploded View.....	52	12-2	Hand Brake (External Contracting Type)— Exploded View.....	165
03-3	Air Cleaner Assembly—Exploded View.....	59	12-3	Hand Brake (Internal Expanding Type).....	168
03-4	Fuel Pump Assembly—Exploded View.....	61	12-4	Brake Master Cylinder Assembly—Exploded View.....	172
03-5	Fuel Strainer Assembly—Exploded View.....	67	12-5	Brake Wheel Cylinder Assembly—Exploded View.....	175
04-1	Exhaust System.....	69	12-6	Brake System.....	176
05-1	Water Pump Assembly—Exploded View.....	73	14-1	Steering Connecting Rod—Exploded View.....	181
06-1	Generator Assembly (Bearing Type)—Exploded View.....	76	14-2	Steering Gear Assembly—Exploded View.....	184
06-2	Generator Assembly (Bushing Type)—Exploded View.....	82	15-1	Pintle Hook.....	189
06-3	Generator Regulator Assembly.....	89	16-1	Front Spring Assembly (with Torque Reaction Spring).....	191
06-4	Cranking Motor Assembly—Exploded View....	94	18-1	Front Compartment and Instrument Panel ....	198
06-5	Distributor Assembly (Open Type)—Exploded View.....	102	20-1	Capstan Winch—Installed View.....	210
			20-2	Capstan Winch Mounting Bracket and Drive Shaft.....	213
			20-3	Capstan Winch Drive Shaft Assembly.....	215

# ALPHABETICAL INDEX

Attaching parts are not included in this index. They are listed in alphabetical order below the parts which they attach.

Item	Group	Item	Group
<b>A</b>			
ABSORBER, shock, assembly	1603	BEARING, cranking motor	0602
ADAPTER, instrument light	0605C	BEARING, cranking motor, commutator end	0602
ADAPTER, speedometer	0810	BEARING, cranking motor, intermediate, assembly	0602
AMMETER, assembly	0605	BEARING, distributor, absorbent bronze	0603
ANTISQUEAK, apron to frame	1702	BEARING, engine clutch release	0203
ANTISQUEAK, front fender to cowl side panel	1701	BEARING, engine connecting rod	0104A
ANTISQUEAK, fuel tank	0300	BEARING, engine crankshaft	0102A
ANTISQUEAK, fuel tank hold down strap	0300	BEARING, engine heat control valve shaft	0108C
APRON, splash, front fender, assembly	1702	BEARING, generator commutator end	0601-1
ARM, adjustable, windshield wiper, assembly	1811D	BEARING, roller, transmission main drive gear pilot	0703
ARM, adjusting, windshield	1811	BEARING, steering bell crank	1401
ARM, advance control, distributor, assembly	0603	BEARING, steering column, wheel end, assembly	1403A
ARM, breaker, distributor, assembly	0603	BEARING, transfer case intermediate shaft gear	0804
ARM, carburetor pump, assembly	0301	BEARING, transmission main drive gear	0703
ARM, carburetor throttle shaft, assembly	0301	BEARING, universal joint, assembly	0902
ARM, generator brush	0601	BEARING, water pump, assembly	0503
ARM, rocker, fuel pump, assembly	0302	BEARING SET, engine connecting rod	0104A
ARM, steering gear	1403A	BEARING SET, engine crankshaft	0102A
ARM, steering knuckle	1006	BELLOWS, water pump seal	0503
ARM, windshield wiper, assembly	1811D	BELT, drive, air compressor	2208
ARMATURE, cranking motor, assembly	0602	BELT, drive, fan and generator	0503B
ARMATURE, generator, assembly	0601	BLADE, windshield wiper	1811D
ARMATURE, generator current regulator, assembly	0601B	BLOCK, adjusting, accelerator throttle rod	0303
ARMATURE, generator cut-out relay	0601B	BLOCK, cylinder, assembly	0101
ARMATURE, generator voltage regulator, assembly	0601B	BLOCK, junction	0606E
AXLE, front, assembly	1000	BODY, air cleaner, assembly	0301C
AXLE, rear, assembly	1100	BODY, assembly	1800
<b>B</b>			
BACK, front seat, assembly	1804A	BODY, engine crankcase ventilator, assembly	0107N
BACK, rear seat, assembly	1804	BODY, engine oil pump	0107
BAFFLE, engine crankcase ventilator	0107N	BODY, fuel pump, assembly	0302
BAIL, fuel pump strainer, assembly	0302	BODY, water pump	0503
BALL, fulcrum, transmission gearshift lever	0706A	BOLT, adjusting, hand brake	1201
BALL, poppet, transfer case shift rod	0805	BOLT, anchor, safety strap	1804
BALL, poppet, transmission gearshift rail	0706B	BOLT, brake master cylinder outlet fitting	1205
BALL, poppet, winch drive support bracket	2001	BOLT, crankshaft bearing cap	0102A
BALL, steering gear worm	1403A	BOLT, differential case bearing cap	1003 1104
BALL, transfer case shift lever handle	0805B	BOLT, engine connecting rod bearing cap	0104
BALL, transmission gearshift lever	0706A	BOLT, eye, brake master cylinder to pedal	1205
BALL, universal joint	1007	BOLT, eye, safety chain	0606F 1502
BAND, cover, generator	0601-2	BOLT, eye, safety strap	1802A
BAND, cranking motor head, assembly	0602	BOLT, fitting, front wheel brake hose, cylinder end	1209B
BAND, generator, head	0601	BOLT, front spring, center, assembly	1601
BAND, hand brake, assembly	1201	BOLT, generator brace to bracket	0601A-1
BAR, bumper, front	2101	BOLT, generator terminal	0601-2
BAR, tie, brake master cylinder	1205	BOLT, glove compartment lock	1809A
BASE, air cleaner, assembly	0301C	BOLT, hand brake band anchor clip	1201
BASE, distributor, assembly	0603	BOLT, hold-down, headlight support, assembly	0607
BASE, dustproof distributor, assembly	0603-1	BOLT, lock, engine piston pin	0103B
BATTERY, dry charged	0610	BOLT, mounting, generator	0601A-1
BATTERY, moist uncharged	0610	BOLT, mounting, headlight	0607
BEARING, ball, air compressor flywheel pulley	2208	BOLT, pivot, generator brace	0601A
BEARING, ball, generator	0601	BOLT, pivot, spring shackle	1601C 1602
BEARING, ball, generator commutator end	0601-2	BOLT, rear spring, center, assembly	1601A
BEARING, ball, generator drive end	0601-2	BOLT, socket to body	0606F
BEARING, ball, transfer case output clutch shaft	0803	BOLT, steering knuckle stop	1006
BEARING, ball, transmission main drive gear	0703	BOLT, support, transfer case	0809
BEARING, ball, transmission main shaft, rear end	0704	BOLT, terminal clamp, assembly	0610B

# ALPHABETICAL INDEX (Cont'd)

Item	Group	Item	Group
BOLT, through, generator .....	0601-2	BRACKET, stationary, generator cut-out relay, assembly .....	0601B
BOLT, torque reaction spring shackle .....	1601C	BRACKET, support, air cleaner, assembly .....	0301C
BOLT, welding battery holder to fender .....	1701	BRACKET, support, body .....	1500
BOLT, wheel divided rim .....	1301	BRACKET, support, engine oil filler tube .....	0107G
BOLT, wheel hub .....	1302A	BRACKET, support, exhaust pipe extension .....	0401-1
BOLT, windshield clamp bracket .....	1811	BRACKET, support, muffler front clamp .....	0401-1
BOLT, wing, air cleaner cover .....	0301C	BRACKET, support, muffler rear clamp .....	0401-1
BOW, top, assembly .....	2201A	BRACKET, support, radiator .....	1500
BOWL, fuel pump .....	0302	BRACKET, support, radiator grille guard .....	1500
BOWL, fuel strainer, assembly .....	0306B	BRACKET, support, radiator guard .....	1500
BOOT, brake master cylinder .....	1205	BRACKET, support, rifle holder to windshield, assembly .....	1820
BOOT, wheel cylinder .....	1207	BRACKET, support, spare tire, assembly .....	1505
BRACE, air cleaner support bracket .....	0301C	BRACKET, support, spare wheel, assembly .....	1505
BRACE, front fender .....	1701	BRACKET, support, winch drive, assembly .....	2001
BRACE, generator, assembly .....	0601A	BRACKET, tool compartment lock, assembly .....	1817
BRACE, instrument panel, circuit breaker, assembly .....	1809	BRACKET, top bow pivot .....	2201A
BRACE, machine gun mounting plate .....	1500	BRACKET, windshield adjusting arm, assembly .....	1811
BRACE, mounting, voltage regulator .....	1702	BRACKET, windshield mounting clamp catch .....	1811
BRACKET, accelerator cross shaft .....	0303	BRACKET, windshield pivot, assembly .....	1811
BRACKET, adjusting generator current and voltage regulator coil, assembly .....	0601B	BRACKET, windshield swing arm .....	1811
BRACKET, air compressor .....	2208	BRAKE, assembly .....	1200
BRACKET, battery hold-down .....	0610A	BRAKE, hand, assembly .....	1201
BRACKET, brake axle tee .....	1209D	BRAKE, hand, internal expanding type, assembly .....	1201-1
BRACKET, brake pedal retracting spring .....	1500	BREAKER, circuit .....	0606D
BRACKET, engine clutch control lever .....	0204	BREATHER, transfer case, assembly .....	0801
BRACKET, engine crank retaining clamp, assembly .....	1812A	BRUSH, cranking motor .....	0602-1
BRACKET, engine support .....	1500	BRUSH, generator .....	0601
BRACKET, front and rear spring pivot .....	1500	BRUSH, grounded, cranking motor .....	0602
BRACKET, front and rear spring shackle, assembly .....	1500	BRUSH, horn wire contact .....	0609B
BRACKET, front brake hose .....	1209D	BRUSH, insulated, cranking motor .....	0602
BRACKET, front cross member .....	1500	BRUSH SET, cranking motor .....	0602
BRACKET, front seat .....	1804	BRUSH SET, generator .....	0601
BRACKET, front seat pivot .....	1804	BUMPER, front and rear axle .....	1601B
BRACKET, fuel tank hold-down .....	0300	BUMPER, hood top windshield assembly .....	1704
BRACKET, generator brace .....	0601A-1	BUMPER, rifle holder retainer clamp, assembly .....	1820
BRACKET, hand brake adjusting screw .....	1201-1	BUMPERETTE, rear .....	2101
BRACKET, hand brake handle tube, assembly .....	1201	BUSHING, air cleaner tube to carburetor .....	0301C
BRACKET, hand brake ratchet tube, assembly .....	1201-1	BUSHING, dustproof distributor terminal post .....	0603-1
BRACKET, hood catch .....	1704	BUSHING, engine camshaft .....	0106A
BRACKET, horn, assembly .....	0609	BUSHING, front axle shaft .....	1007
BRACKET, ignition coil .....	0604	BUSHING, front spring eye .....	1601
BRACKET, master cylinder, assembly .....	1500	BUSHING, front wheel spindle .....	1006
BRACKET, mounting, ammeter .....	0605	BUSHING, fuel strainer inlet and outlet .....	0304
BRACKET, mounting, brake hose .....	1500	BUSHING, generator armature terminal insulator .....	0601-2
BRACKET, mounting, capstan winch, assembly .....	2001	BUSHING, generator field terminal insulator .....	0601-2
BRACKET, mounting, engine .....	0110	BUSHING, hand brake operating lever .....	1201-1
BRACKET, mounting, engine oil filter, assembly .....	0107E	BUSHING, insulating, cranking motor terminal post .....	0602
BRACKET, mounting, fuel gage .....	0605	BUSHING, insulating, generator field terminal .....	0601
BRACKET, mounting, generator regulator resistance .....	0601B	BUSHING, intake manifold .....	1811D-1
BRACKET, mounting, oil pressure gage and heat indicator .....	0605	BUSHING, locking, generator brace .....	0601A
BRACKET, mounting, speedometer .....	2204	BUSHING, pilot, clutch shaft .....	0205
BRACKET, pivot, rear seat frame .....	1804	BUSHING, rear spring eye .....	1601A
BRACKET, radiator .....	1500	BUSHING, shock absorber mounting pin, rubber .....	1603
BRACKET, rail, assembly .....	2201A	BUSHING, spark plug cable support .....	0604A
BRACKET, reinforcement, engine front support .....	0110	BUSHING, speedometer drive gear, transfer case .....	0810
BRACKET, retaining, engine crank .....	1802A	BUSHING, spring shackle, assembly .....	1602
BRACKET, retaining, rear seat back frame .....	1804	BUSHING, steering column support .....	1405
BRACKET, shock absorber, assembly .....	1500	BUSHING, steering gear housing .....	1403A
BRACKET, spare gas line can, assembly .....	1817A	BUSHING, torque reaction spring leaf .....	1601C
		BUSHING, transfer case output clutch shaft pilot .....	0803
		BUSHING, transmission countershaft gear .....	0704C

# ALPHABETICAL INDEX (Cont'd)

Item	Group	Item	Group
BUSHING, transmission main shaft second speed gear.....	0704	CHAIN, safety, air compressor, assembly.....	2208
BUSHING, transmission reverse idler gear.....	0704C	CHAIN, timing engine camshaft.....	0106C
BUSHING, winch shaft.....	2001	CHAIN, windshield thumb screw.....	1811
BUTTON, horn.....	0609B	CHECK, carburetor fuel intake, assembly.....	0301
<b>C</b>		CHECK, carburetor pump discharge, assembly.....	0301
CABLE, battery ground.....	0610B-1	CLAMP, axle brake tube.....	1209C
CABLE, battery to cranking motor switch.....	0610B	CLAMP, carburetor air horn.....	0301C
CABLE, battery to starting switch, positive.....	0610B	CLAMP, carburetor and air cleaner horn.....	0301C
CABLE, blackout driving light, assembly.....	0607D	CLAMP, carburetor tube.....	0301
CABLE, blackout driving light connector to switch.....	0606B	CLAMP, engine crankcase ventilator hose to oil filler tube.....	0107G
CABLE, blackout taillight to connector.....	0608	CLAMP, engine oil filter, assembly.....	0107E
CABLE, coil.....	0604A	CLAMP, exhaust pipe extension.....	0401
CABLE, engine clutch control.....	0203	CLAMP, exhaust pipe extension support strap.....	0401-1
CABLE, filter, battery to starting switch.....	0606B	CLAMP, exhaust pipe to exhaust pipe extension.....	0401-1
CABLE, filter, coil primary to function block.....	0606B	CLAMP, exhaust pipe to muffler.....	0401
CABLE, filter, regulator to junction block.....	0606B	CLAMP, fuel pump valve.....	0302
CABLE, fuel gage to circuit breaker.....	0606B	CLAMP, fuel tank hold-down, assembly.....	0300
CABLE, generator regulator to generator.....	0606B	CLAMP, hand brake cable tube.....	1201
CABLE, generator regulator to junction box.....	0606B	CLAMP, hand brake conduit.....	1201-1
CABLE, ground headlight.....	0607	CLAMP, hose.....	0301C
CABLE, hand brake handle, assembly.....	1201		0505
CABLE, horn, assembly.....	0609	CLAMP, muffler.....	0401-1
CABLE, horn to junction block.....	0609B	CLAMP, muffler tail pipe.....	0401
CABLE, ignition switch to ammeter to blackout switch.....	0606B	CLAMP, radiator surge tank connecting hose.....	0501C
CABLE, instrument panel fuel gage to fuel tank unit.....	0606B	CLAMP, steering column, assembly.....	1405
CABLE, spark plug.....	0604A	CLAMP, steering column support.....	1405
CABLE, starting switch to cranking motor.....	0610B	CLAMP, steering knuckle tie rod socket.....	1402
CABLE, trailer, coupling socket to body ground.....	0606F	CLAMP, support, oval type muffler.....	0401
CAGE, front axle universal joint.....	1007	CLAMP, support, round type muffler.....	0401
CAM, brake shoe anchor pin.....	1203	CLAMP, windshield, assembly.....	1811
CAM, operating, hand brake.....	1201	CLEANER, air, assembly.....	0301C
CAM, rifle holder retainer handle.....	1820	CLEVIS, adjustable, hand brake.....	1201-1
CAMSHAFT, engine.....	0106	CLIP, brake tube.....	1209C
CAP, distributor, assembly.....	0603	CLIP, distributor breaker arm spring.....	0603
CAP, dust, propeller shaft sleeve yoke.....	0902	CLIP, front rest to floor pan bolt.....	0606B
CAP, dustproof distributor, assembly.....	0603-1	CLIP, front left spring to axle housing.....	1602
CAP, filler, brake master cylinder, assembly.....	1205	CLIP, front spring leaf.....	1601
CAP, filler, radiator, assembly.....	0501	CLIP, hand brake cable conduit to flywheel housing.....	1201-1
CAP, fuel tank.....	0300	CLIP, lock, spring, brake hose to frame bracket.....	1209C
CAP, fuel tank well drain.....	0300	CLIP, mounting, speedometer cable.....	2204
CAP, generator commutator end plate.....	0601-2	CLIP, rear spring leaf.....	1601A
CAP, king pin bearing, assembly.....	1006	CLIP, rear spring to axle housing.....	1602
CAP, spark plug insulator.....	0604B	CLIP, support, hand brake cable tube.....	1201
CAP, transfer case output shaft bearing, assembly.....	0801	CLIP, throttle rod retracting spring.....	0303
CAP, transmission gearshift lever housing.....	0706A	CLIP, torque reaction spring.....	1601C
CAP, wheel hub.....	1302	CLIP, tube to floor pan cross sill, tube to fender splashers, tube to dash.....	0304
CAP SET, pneumatic tube valve.....	2306	CLIP, tube to front engine plate.....	0304
CARBURETOR, assembly.....	0301	CLIP, wiper tubing to windshield frame.....	1811D-1
CARRIER, engine clutch release bearing.....	0203	COCK, drain, engine cylinder water jacket.....	0101
CASE, differential.....	1003	COCK, drain, radiator.....	0501
	1004	COIL, cranking motor field.....	0602
CASE, engine oil filter, assembly.....	0107E	COIL, field, assembly.....	0601-2
CASE, glove compartment lock, assembly.....	1809A	COIL, field, cranking motor, assembly.....	0602-1
CASE, rifle, assembly.....	1820	COIL, field, generator, assembly.....	0601
CASE, transfer.....	0801	COIL, generator current regulator, assembly.....	0601B
CASE, transfer, assembly.....	0800		0601B-1
CASE, transmission, assembly.....	0701	COIL, generator cut-out relay, assembly.....	0601B
CATCH, hold-down, windshield, assembly.....	1811		0601B-1
CATCH, hood, assembly.....	1704	COIL, generator voltage regulator, assembly.....	0601B
CATCH, windshield clamp.....	1811		0601B-1
		COIL, ignition, assembly.....	0604
		COLLAR, distributor drive shaft.....	0603

# ALPHABETICAL INDEX (Cont'd)

Item	Group
COLUMN, steering, assembly.....	1403A
COMPRESSOR, air, assembly.....	2208
CONDENSER, cranking motor switch and regu- lator terminal.....	0606
CONDENSER, distributor.....	0603
CONE and ROLLERS, differential case bearing.....	1003 1104
CONE and ROLLERS, differential drive pinion bearing.....	1104
CONE and ROLLERS, differential drive pinion inner bearing.....	1003
CONE and ROLLERS, king pin bearing.....	1006
CONE and ROLLERS, transfer case output shaft bearing.....	0803
CONE and ROLLERS, wheel bearing.....	1301A
CONNECTION, accelerator pedal.....	0303
CONNECTION, flexible, fuel line.....	0304
CONNECTOR, battery, series.....	0610B-1
CONNECTOR, cranking motor field coil.....	0602
CONNECTOR, dustproof distributor terminal post, assembly.....	0603-1
CONNECTOR, fuel strainer.....	0304
CONNECTOR, generator regulator series coil.....	0601B
CONNECTOR, tube to oil filter.....	0107J
CONTACT, breaker, distributor, assembly.....	0603
CONTROL, carburetor choke or throttle, assembly.....	0303A
CONTROL, lockout, lighting switch, assembly.....	0606
CORE, radiator, assembly.....	0501
CORE SET, pneumatic tube valve.....	2306
COUNTERSHAFT, transmission.....	0704C
COVER, assembly.....	0606F
COVER, axle housing.....	1001 1101
COVER, carburetor bowl, assembly.....	0301
COVER, distributor terminal slot.....	0603
COVER, dust, steering knuckle tie rod socket.....	1402
COVER, engine clutch.....	0202
COVER, engine oil filter, assembly.....	0107E
COVER, engine oil pump, assembly.....	0107
COVER, engine timing chain, assembly.....	0106D
COVER, engine valve spring.....	0105C
COVER, floor, transmission.....	1803
COVER, fuel pump, assembly.....	0302
COVER, generator commutator end, assembly.....	0601-1
COVER, generator commutator end cap.....	0601
COVER, generator regulator.....	0601B
COVER, headlight.....	2201
COVER, inspection, floor, brake cylinder.....	1803
COVER, mounting, fuel strainer.....	0306B
COVER, rear floor pan shock absorber, assembly.....	1803
COVER, steering column oil hole.....	1403A
COVER, steering gear housing, assembly.....	1403A
COVER, terminal.....	0606F
COVER, trailer electric plug housing.....	1803
COVER, transfer case.....	0801
COVER, transmission gearshift lever housing.....	0706A
COVER, wick, generator commutator end.....	0601-1
COVER, windshield, assembly.....	2201
CRANK, bell, steering drag link.....	1401
CRANK, hand brake cable, assembly.....	1201
CRANKSHAFT, air compressor.....	2208
CRANKSHAFT, engine, assembly.....	0102
CUP, brake master cylinder.....	1205
CUP, brake master cylinder check valve.....	1205

Item	Group
CUP, brake wheel cylinder.....	1207
CUP, differential case bearing.....	1003 1104
CUP, differential drive pinion bearing.....	1003 1104
CUP, engine clutch pressure spring.....	0202
CUP, horn button spring.....	0609B
CUP, king pin bearing.....	1006
CUP, oil, air cleaner.....	0301C
CUP, oil retaining, transmission second and high speed gearshift rail.....	0706B
CUP, packing, air compressor piston.....	2208
CUP, retaining, glove compartment door lock.....	1809A
CUP, retaining, transfer case insulator.....	1500
CUP, retaining, transfer case support insulator.....	0809
CUP, steering gear worm ball.....	1403A
CUP, transfer case output shaft bearing.....	0803
CUP, wheel bearing.....	1301A
CURTAIN, side, assembly.....	2201F
CUSHION, front seat, assembly.....	1804A
CUSHION, rear seat, assembly.....	1804A
CYLINDER, glove compartment lock, assembly.....	1809A
CYLINDER, master, brake, assembly.....	1205
CYLINDER, wheel, assembly.....	1207

## D

DECK TOP.....	1800B
DIAPHRAGM, fuel pump, assembly.....	0302
DIFFERENTIAL, assembly.....	1003 1104
DISK, carburetor metering rod.....	0301
DISK, engine oil pump rotor.....	0107
DISTRIBUTOR, assembly.....	0603
DISTRIBUTOR, dustproof, assembly.....	0603-1
DOOR, blackout driving light, assembly.....	0607D
DOOR, blackout tail and service tail and stop light, assembly.....	0608
DOOR, blackout tail and blackout stop light.....	0608
DOOR, glove compartment, assembly.....	1809A
DOOR, headlight, assembly.....	0607
DOOR, marker light, assembly.....	0607D
DRIVE, Bendix, cranking motor, assembly.....	0602
DRIVER, windshield wiper arm, knurled.....	1811D-1
DRUM, hand brake.....	1201

## E

ECCENTRIC, brake shoe.....	1203
ELBOW, air compressor.....	2208
ELBOW, engine crankcase ventilator to tube.....	0107N
ELBOW, engine crankcase ventilator tube to valve.....	0107N
ELBOW, engine cylinder head water outlet.....	0505
ELBOW, flexible connection to engine and tube to cylinder block.....	0107J
ELBOW, flexible connection to fuel pump.....	0304
ELBOW, fuel pump inlet and outlet.....	0304
ELECTROLYTE, battery.....	0610
ELEMENT, air cleaner, assembly.....	0301C
ELEMENT, engine oil filter, assembly.....	0107E
END, steering knuckle tie rod, assembly.....	1402
ENGINE, assembly.....	0100
EXTENSION, exhaust pipe.....	0401-1
EXTENSION, fuel tank filler neck.....	0300
EXTENSION, hand brake ratchet tube, assembly.....	1201-1
EYELET, curtain fastener.....	2201A

# ALPHABETICAL INDEX (Cont'd)

Item	Group	Item	Group
<b>F</b>			
FACING, engine clutch	0201A	GASKET, brake master cylinder filler cap	1205
FACING SET, engine clutch disk	0201A	GASKET, brake master cylinder outlet fitting	1205
FAN, assembly	0503A	GASKET, brake master cylinder outlet fitting bolt	1205
FASTENER, side curtain	2201F	GASKET, carburetor body flange to main body	0301
FASTENER, single post type, curtain	2201A	GASKET, carburetor bowl cover	0301
FASTENER, windshield curtain	1811	GASKET, carburetor metering rod jet and plug	0301
FENDER, front, assembly	1701	GASKET, carburetor needle seat and plug	0301
FERRULE, insulating, horn button	0609B	GASKET, carburetor nozzle	0301
FILLER, front bumper bar, wood	2101	GASKET, carburetor strainer plug	0301
FILLER, front fender brace, wood	1701	GASKET, carburetor to intake manifold	0301A
FILLER, rear floor pan cross sill	1802A	GASKET, cover, generator commutator end	0601-1
FILTER, oil, engine, assembly	0107E	GASKET, differential drive pinion shaft oil seal	1103
FILTER, voltage regulator	2603	GASKET, differential drive pinion shaft oil seal	1104
FILTER-GROUP, assembly	2603	GASKET, engine crankcase ventilator to valve	
FILTER-UNIT, generator ground to armature		spring cover	0107N
circuit	2603	GASKET, engine crankshaft oil slinger	0102
FILTER-UNIT, generator regulator	2603	GASKET, engine cylinder block to timing chain	
FILTER-UNIT, generator regulator field	2603	cover plate	0106D
FITTING, alemite, winch drive support bracket	2001	GASKET, engine cylinder head	0101A
FITTING, grease, transfer case shift lever pivot		GASKET, engine cylinder head water outlet	
pin	0805B	elbow	0505
FITTING, lubricating, brake pedal shaft	1204	GASKET, engine intake and exhaust manifold	0108
FITTING, lubricating, hydraulic type, ball seal	1602	GASKET, engine intake to exhaust manifold	0108
FITTING, outlet, brake master cylinder	1205	GASKET, engine oil filler cap	0107H
FLANGE, carburetor body, assembly	0301	GASKET, engine oil filter cover	0107E
FLANGE, companion, transfer case output shaft	0803	GASKET, engine oil filter cover bolt	0107E
FLANGE, drive, front axle shaft	1007	GASKET, engine oil pan	0107A
FLANGE, exhaust pipe	0401	GASKET, engine oil pan drain plug	0107A
FLAP, tire	2306	GASKET, engine oil pump cover	0107
FLOAT, carburetor, assembly	0301	GASKET, engine oil pump cover to body screw	0107
FLOAT, oil strainer, engine assembly	0107A-1	GASKET, engine oil pump oil relief spring	
FLYWHEEL, engine, assembly	0109	retainer	0107
FOLLOWER, air compressor piston	2208	GASKET, engine oil pump shaft	0107
FORK, shift, capstan winch	2003	GASKET, engine oil pump to cylinder block	0107
FORK, shift, transmission low speed and reverse		GASKET, engine oil strainer float support	0107A-1
gear	0706C	GASKET, engine timing chain cover	0106D
FORK, shift, transmission second and high speed		GASKET, engine valve spring cover	0105C
gear	0706C	GASKET, engine valve spring cover bolt	0105C
FORK, transfer case shift rod	0805A	GASKET, exhaust pipe flange	0401
FRAME, assembly	1500	GASKET, fuel pump bowl	0302
FRAME, front seat, assembly	1804	GASKET, fuel pump to block	0302A
FRAME, hold-down, battery	0610A	GASKET, fuel pump valve	0302
FRAME, radiator guard, assembly	2103	GASKET, fuel strainer bowl	0306B
FRAME, rear seat, assembly	1804	GASKET, fuel strainer cover cap screw	0306B
FRAME, rear seat back, assembly	1804	GASKET, fuel strainer unit	0306B
FRAME, rear seat cushion, assembly	1804A	GASKET, fuel tank cap	0300
FRAME, tool compartment	1817	GASKET, fuel tank gage	0300A
FRAME, windshield, assembly	1811	GASKET, generator commutator end bearing cap	0601-2
	1811B	GASKET, generator commutator end cap cover	0601
FRAME, windshield, tubular, assembly	1811B	GASKET, generator commutator end cover oil	
FULCRUM, engine clutch release lever	0203	guard	0601-1
<b>G</b>		GASKET, generator commutator end plate cap	0601-2
GAGE, fuel, assembly	0605	GASKET, generator regulator cover	0601B
GAGE, fuel, tank unit, assembly	0300A	GASKET, generator regulator terminal	0601B
GAGE, oil pressure, assembly	0605	GASKET, hand brake backing plate to rear	
GASKET, air cleaner body	0301C	bearing cap	1201-1
GASKET, air cleaner oil cup	0301C	GASKET, housing, winch drive	2001
GASKET, axle housing cover	1001	GASKET, insulator, carburetor and intake	
	1101	manifold diffuser, assembly	0301A
GASKET, blackout light door	0607D	GASKET, marker light door	0607D
GASKET, brake hose fitting	1209B	GASKET, propeller shaft universal joint trunnion	0902
GASKET, brake hose fitting bolt	1209B	GASKET, radiator filler cap	0501
		GASKET, rear axle shaft	1102
		GASKET, spark plug	0604B

# ALPHABETICAL INDEX (Cont'd)

Item	Group
GASKET, steering gear housing side cover	1403A
GASKET, steering knuckle oil seal	1006
GASKET, transfer case cover	0801
GASKET, transfer case output shaft front and rear bearing cap	0803
GASKET, transfer case output shaft front bearing cap	0801
GASKET, transfer case to transmission	0801
GASKET, transmission case to flywheel housing	0701
GASKET, transmission gearshift lever housing	0706A
GASKET, water pump to cylinder block	0503
GASKET SET, carburetor	0301
GASKET SET, engine manifold	0108
GASKET SET, engine oil pan	0107A
GASKET SET, engine overhaul	0101
GASKET SET, engine, valve, regrind	0101
GASKET SET, front axle	1000
GASKET SET, fuel strainer	0306B
GASKET SET, rear axle	1100
GASKET SET, service engine oil pump	0107
GASKET SET, transfer case overhaul	0800
GASKET SET, transmission	0701
GEAR, cluster, transmission countershaft, assembly	0704C
GEAR, clutch, transfer case output shaft	0803
GEAR, differential	1003
GEAR, differential, side	1104
GEAR, drive, differential	1003
GEAR, drive, speedometer, transfer case	0810
GEAR, drive, transfer case	0802
GEAR, driven, engine oil pump	0107
GEAR, driven, speedometer, transfer case	0810
GEAR, main drive, transmission, assembly	0703
GEAR, ring, engine flywheel	0109B
GEAR, sliding, transfer case output shaft	0803
GEAR, steering, assembly	1403A
GEAR, transfer case intermediate shaft	0804
GEAR, transfer case output shaft	0803
GEAR, transmission main shaft, assembly	0704
GEAR, transmission reverse idler, assembly	0704C
GEAR, worm, capstan winch	2001
GEAR SET, speedometer drive, transfer case	0810
GENERATOR, assembly	0601
GLASS, windshield	1811
GROMMET, engine oil filter bracket	0107E
GROMMET, floor, transfer shift lever	1803
GROMMET, heat indicator tube through dash	0605
GROMMET, rubber, windshield wiper tube through cowl	1811D
GROMMET, trailer coupling socket cable through floor pan	0606B
GROMMET, transfer case shift levers	0805B
GROMMET, wiring harness through dash	0606B
GUARD, blackout driving lamp, assembly	2103A
GUARD, exhaust pipe	1500
GUARD, front wheel brake hose, assembly	1209B
GUARD, oil, generator	0601
GUARD, oil, generator commutator end cover	0601-1
GUARD, radiator, assembly	2103
GUIDE, adjusting generator brace	0601A
GUIDE, engine exhaust valve stem	0105
GUIDE, engine intake valve stem	0105
GUIDE, rear axle shaft	1102

Item	Group
GUSSET, front bumper	1500
GUSSET, front floor toe board to frame, assembly	1802A
<b>H</b>	
HANDLE, body	1800A
HANDLE, hand brake	1201
HANDLE, hand brake, assembly	1201-1
HANDLE, ignition switch	0604C
HANDLE, lighting and blackout driving rotary switch	0606
HANDLE, operating, hand brake	1201-1
HANDLE, rifle holder retainer, assembly	1820
HANDLE, winch shift rod	2003
HANDLE, windshield frame	1811
HANDLE, windshield wiper, assembly	1811D
HARNESS, wiring, body	0606B
HARNESS, wiring, chassis	0606B
HARNESS, wiring, generator to generator regulator	0606B
HARNESS, wiring, generator to voltage regulator	0606B
HARNESS, wiring, headlight	0606B
HEAD, cranking motor Bendix drive	0602
HEAD, cylinder, engine	0101A
HEAD, generator, commutator end, assembly	0601
HEAD, generator, drive end, assembly	0601
HINGE, accelerator pedal	0303
HINGE, glove compartment door, assembly	1809A
HINGE, headlight support	0607
HINGE, hood, assembly	1704
HINGE, tool compartment lid, assembly	1817
HOLDER, cranking motor brush	0602
HOLDER, generator brush, assembly	0601-2
HOLDER, rifle, assembly	1820
HOOD, assembly	1704
HOOK, pintle	1502
HORN, air, carburetor, assembly	0301
HORN, air cleaner	0301C
HORN, assembly	0609
HOSE, air cleaner tube to cleaner	0301C
HOSE, air cleaner tube to oil filler tube	0301C
HOSE, air compressor, assembly	2208
HOSE, connecting, radiator surge tank tube	0501C
HOSE, flexible, engine crankcase ventilator to oil filler tube	0107G
HOSE, front brake at axle tee, assembly	1209B
HOSE, front brake to axle, assembly	1209B
HOSE, radiator inlet	0505
HOSE, radiator inlet and outlet	0503
HOSE, radiator water outlet	0505
HOSE, rear brake at axle tee, assembly	1209B
HOSE, windshield wiper tubing to engine	1811D-1
HOSE, windshield wiper tubing to tee	1811D-1
HOUSING, blackout driving light, assembly	0607D
HOUSING, cranking motor Bendix drive pinion, assembly	0602
HOUSING, engine flywheel	0109C
HOUSING, front axle, assembly	1001
HOUSING, headlight, assembly	0607
HOUSING, marker light, assembly	0607D
HOUSING, rear axle, assembly	1101
HOUSING, steering gear, assembly	1403A
HOUSING, tail and stop light, assembly	0608
HOUSING, transmission gearshift lever, assembly	0706A
HUB, front and rear wheel, assembly	1302



# ALPHABETICAL INDEX (Cont'd)

Item	Group	Item	Group
HUB, transmission main shaft second and high speed clutch.....	0704	KIT, repair, generator cutout relay.....	0601B
HUB, winch drive shaft, assembly.....	2001	KIT, repair, generator field coil.....	0601
<b>I</b>		KIT, repair, generator voltage regulator.....	0601B
IMPELLER, water pump.....	0503	KIT, repair, horn button.....	0609B
INDICATOR, engine oil level, assembly.....	0107H	KIT, repair, ignition wiring.....	0604A
INDICATOR, heat, assembly.....	0605	KIT, repair, propeller shaft universal joint.....	0902
INSULATION, cranking motor field coil.....	0602-1	KIT, repair, shock absorber.....	1603
INSULATION, cranking motor field connection ..	0602	KIT, repair, steering connecting rod.....	1401
INSULATION, dustproof distributor terminal post	0603-1	KIT, repair, water pump.....	0503
INSULATION, generator regulator cut-out relay stationary bracket.....	0601B	KIT, repair, water pump seal.....	0503
INSULATION, generator regulator terminals.....	0601B	KIT, repair, wiring harness.....	0606B
INSULATOR, carburetor main body to body flange.....	0301	KNOB, blackout driving lamp switch, assembly.....	0606
INSULATOR, engine front support, assembly.....	0110	KNOB, carburetor choke or throttle, assembly.....	0303A
INSULATOR, engine rear support.....	0110	KNOB, instrument panel light switch, assembly.....	0606
INSULATOR, exhaust pipe extension.....	0401-1	KNOB, lighting switch, assembly.....	0606
INSULATOR, generator armature terminal post.....	0601	KNOB, windshield adjusting arm.....	1811
INSULATOR, generator brush holder.....	0601-2	KNUCKLE, steering.....	1006
INSULATOR, generator brush holder rivet.....	0601-2	<b>L</b>	
INSULATOR, generator field coil connecting wire.....	0601-2	LAMP, electric.....	0607B
INSULATOR, generator field connection.....	0601	LAMP-UNIT, blackout driving headlight, assembly.....	0607A
INSULATOR, generator field terminal post.....	0601	LAMP-UNIT, blackout stop, assembly.....	0607A
INSULATOR, generator support.....	0601A	LAMP-UNIT, blackout tail, assembly.....	0607A
INSULATOR, generator terminal screw.....	0601-2	LAMP-UNIT, headlight, assembly.....	0607A
INSULATOR, muffler support.....	0401	LAMP-UNIT, service tail and stop, assembly.....	0607A
INSULATOR, transfer case support.....	0809	LEAD, generator armature terminal, assembly.....	0601
INTERLOCK, transfer case shift rod.....	0805	LEAD, generator voltage regulator armature to base.....	0601B
<b>J</b>		LEAF, front spring.....	1601
JET, carburetor idle well.....	0301	LEAF, rear spring.....	1601A
JET, carburetor low speed, assembly.....	0301	LEAF, torque reaction spring.....	1601C
JET, carburetor metering rod, assembly.....	0301	LEVER, accelerator cross shaft, assembly.....	0303
JET, carburetor pump.....	0301	LEVER, cam, hand brake.....	1201-1
JOINT, universal, axle shaft, assembly.....	1007	LEVER, carburetor choke, assembly.....	0301
JOINT, universal, winch drive shaft, assembly.....	2001	LEVER, carburetor choke control, assembly.....	0301
JOURNAL, universal joint, assembly.....	0902	LEVER, counterweight engine heat control valve ..	0108C
<b>K</b>		LEVER, engine clutch control, assembly.....	0204A
KEY, engine heat control valve lever.....	0108C	LEVER, engine clutch pressure spring.....	0202
KEY, ignition switch.....	0604C	LEVER, engine clutch release.....	0203
KIT, field, capstan winch.....	2000	LEVER, operating, carburetor pump, assembly.....	0301
KIT, repair, axle shaft and universal joint.....	1007	LEVER, operating, hand brake, assembly.....	1201-1
KIT, repair, brake master cylinder.....	1205	LEVER, shift, transfer case.....	0805B
KIT, repair, brake wheel cylinder.....	1207	LEVER, transmission gearshift, assembly.....	0706A
KIT, repair, carburetor.....	0301	LID, tool compartment, assembly.....	1817
KIT, repair, cranking motor.....	0602	LIGHT, blackout tail and blackout stop, assembly.....	0608
KIT, repair, cranking motor Bendix drive.....	0602	LIGHT, blackout tail and service tail and stop, assembly.....	0608
KIT, repair, cranking motor field coil.....	0602	LIGHT, driving, blackout, assembly.....	0607D
KIT, repair, differential case gears.....	1003	LIGHT, head, service, assembly.....	0607
	1104	LIGHT, marker, assembly.....	0607D
KIT, repair, differential drive gear and pinion.....	1003	LINER, body sill.....	1800B
	1104	LINER, radiator guard hood.....	2103
KIT, repair, distributor.....	0603	LINING, brake shoe.....	1202
KIT, repair, dustproof distributor.....	0603-1	LINING, hand brake.....	1201
KIT, repair, engine clutch cover.....	0202		1201-1
KIT, repair, engine oil pump.....	0107	LINING SET, brake shoe.....	1202
KIT, repair, front axle universal joint.....	1007		1201
KIT, repair, fuel pump.....	0302	LINING SET, hand brake.....	1201-1
KIT, repair, fuel pump bowl.....	0302	LINK, carburetor choke.....	0301
KIT, repair, generator.....	0601	LINK, connecting, accelerator pedal.....	0303
KIT, repair, generator current regulator.....	0601B	LINK, connector, carburetor pump.....	0301
		LINK, fuel pump rocker arm.....	0302
		LINK, hand brake cable crank.....	1201



# ALPHABETICAL INDEX (Cont'd)

Item	Group
LINK, hand brake cam to transfer case.....	1201
LINK, hand brake operating lever.....	1201-1
LINK, hand brake retracting spring.....	1201-1
LOCK, engine valve spring retainer.....	0105
LOCK, glove compartment door, assembly.....	1809A
LOCK, spring shackle bolt, assembly.....	1602
LOCK, tool compartment lid, assembly.....	1817
LOOP, footman.....	1800A
LOOP, hold-down, windshield.....	2201A
	1811

## M

MANIFOLD, engine intake and exhaust, assembly.....	0108
MANIFOLD, exhaust, engine, assembly.....	0108
MANIFOLD, intake, engine, assembly.....	0108
MEMBER, cross, frame, assembly.....	1500
MIRROR, rear view, assembly.....	2202
MOTOR, cranking, assembly.....	0602
	0602-1
MOTOR, vacuum, windshield wiper.....	1811D-1
MUFFLER, assembly.....	0401
MUFFLER, deep mud, assembly.....	0401-1

## N

NECK, fuel tank well drain hole.....	0300
NIPPLE, rubber, marker lamp.....	0607D
NOZZLE, carburetor.....	0301
NUT, adjusting, hand brake band.....	1201
NUT, adjusting, horn.....	0609
NUT, air compressor cylinder head stud.....	2208
NUT, battery hold-down.....	0610A
NUT, brake tube.....	1209C
NUT, cap, air compressor cylinder.....	2208
NUT, carburetor tube clamp.....	0301
NUT, clinch, cowl side panel for front fender.....	1802A
NUT, clinch, dash to frame brace; fender brace to frame.....	1500
NUT, clinch, drain plug in floor.....	1802A
NUT, clinch, front floor rear cross sill, assembly.....	1802A
NUT, clinch, regulator to apron.....	1702
NUT, clinch, splashier apron to frame.....	1500
NUT, clinch, transmission cover.....	1802A
NUT, clinch, transmission cover and accelerator pedal.....	1802A
NUT, engine crankshaft, assembly.....	0102
NUT, engine valve tappet adjusting screw.....	0105A
NUT, generator regulator adjusting screw.....	0601B
NUT, glove compartment door lock.....	1809A
NUT, hand brake operating lever.....	1201-1
NUT, inverted flared tube, windshield wiper tube to manifold.....	1811D-1
NUT, lock, engine clutch lever adjusting screw.....	0202
NUT, lock, hand brake operating lever nut.....	1201-1
NUT, mounting, ignition switch.....	0604C
NUT, socket terminal.....	0606F
NUT, spare wheel to carrier stud.....	1505
NUT, starting switch terminal.....	0606
NUT, terminal clamp bolt.....	0610B
NUT, thumb, fuel pump strainer.....	0302
NUT, transmission mainshaft.....	0802
NUT, wheel bearing.....	1301A
NUT, wheel divided rim bolt.....	1301
NUT, wheel hub bolt.....	1302A
NUT, windshield frame screw.....	1811

Item	Group
NUT, wing, crank retaining bracket.....	1802A
NUT, wing, headlight mounting bracket bolt.....	0607
NUT, wing, on rear seat for tire pump.....	1804

## O

OIL SEAL, axle shaft.....	1007
	1102
OIL SEAL, differential drive pinion bearing.....	1003
	1104
OIL SEAL, felt, steering knuckle.....	1006
OIL SEAL generator commutator end.....	0601-2
OIL SEAL, generator drive end bearing.....	0601-2
OIL SEAL, steering gear lever shaft.....	1403A
OIL SEAL, steering knuckle, assembly.....	1006
OIL SEAL, transfer case output shaft front and rear bearing cap.....	0803
OIL SEAL, transfer case shift rod.....	0805
OIL SEAL, transmission main drive gear bearing retainer.....	0703
OIL SEAL, transmission main shaft.....	0704
OIL SEAL, wheel bearing.....	1301B
OIL SEAL SET, transfer case.....	0800
OILER, distributor shaft.....	0603
OILER, generator.....	0601
OUTRIGGER, body, rear.....	1500

## P

PACKING, engine crankshaft.....	0102A
PACKING, engine crankshaft rear bearing cap.....	0102A
PACKING, transmission gearshift lever housing.....	0706A
PAD, brake pedal, assembly.....	1204
PAD, crash, front seat body side, assembly.....	1804A
PAD, dash panel.....	1804A
PAD, engine clutch control tube.....	0204A
PAD, engine clutch pedal, assembly.....	0204
PAD, mounting, marker lamp.....	0607D
PADDING, windshield glass.....	1811B
PAN, front floor.....	1802A
PAN, oil, engine, assembly.....	0107A
PAN, rear floor.....	1802A
PANEL, body.....	1802A
PANEL, cowl.....	1802A
PANEL, dash, assembly.....	1802A
	1809
PANEL, front seat body side crash pad, assembly.....	1804
PANEL, instrument, assembly.....	1809
PANEL, rear wheel house.....	1802A
PANEL, windshield.....	1811
PAULIN, deck top, assembly.....	2201
PEDAL, accelerator, assembly.....	0303
PEDAL, brake, assembly.....	1204
PEDAL, engine clutch.....	0204
PIECE, pole, cranking motor.....	0602
PIECE, pole, generator.....	0601
PIECE, windshield frame upper cross, assembly.....	1811
PILLAR, cowl.....	1802
PILOT, front axle universal joint.....	1007
PIN, air compressor piston.....	2208
PIN, brake shoe anchor.....	1203
PIN, carburetor float lever.....	0301
PIN, carburetor intake needle.....	0301
PIN, carburetor metering rod.....	0301
PIN, clevis, hand brake cable crank to link and link to cam.....	1201

# ALPHABETICAL INDEX (Cont'd)

Item	Group	Item	Group
PIN, clevis, hand brake cam to link on transfer case	1201	PLATE, muffler support insulator	0401
PIN, clevis, hand brake ratchet tube	1201-1	PLATE, name	2203
PIN, clevis, headlight support bolt	0607	PLATE, pressure, engine clutch, assembly	0202
PIN, distributor cap spring hinge	0603	PLATE, reinforcement, frame	1500
PIN, dowel, cranking motor intermediate bearing	0602	PLATE, rifle holder retainer clamp handle	1820
PIN, dowel, crankshaft bearing	0102A	PLATE, shifting	2203
PIN, dowel, flywheel to crankshaft	0109	PLATE, shifting, transmission main shaft synchronizer	0704
PIN, dowel generator commutator end head	0601	PLATE, skid, exhaust pipe guard	1500
PIN, dowel, generator end plate	0601-2	PLATE, spring clip, assembly	1602
PIN, drive, winch drive shaft hub	2001	PLATE, stop, brake master cylinder piston	1205
PIN, engine piston	0103B	PLATE, tapping, ax clamp	1802A
PIN, front axle universal joint pilot	1007	PLATE, tapping, driver seat	1802A
PIN, fuel pump rocker arm	0302	PLATE, tapping, glove compartment hinge	1809A
PIN, fulcrum, transmission gearshift lever guide plate	0706A	PLATE, tapping, hood hinge	1802A
PIN, guide, transmission gearshift fork	0706C	PLATE, tapping, radiator surge tank	0501C
PIN, king	1006	PLATE, tapping, shovel clamp	1802A
PIN, lock, differential pinion shaft	1003	PLATE, tapping, windshield clamp catch	1811
	1104	PLUG, adjusting, steering connecting rod ball seat	1401
PIN, lock, king pin	1006	PLUG, body drain hole cover	1802A
PIN, pivot, engine clutch pressure spring lever	0202	PLUG, carburetor idle port rivet	0301
PIN, pivot, transfer case shift lever	0805B	PLUG, carburetor low speed jet and idle well passage, assembly	0301
PIN, steering bell crank shaft	1401	PLUG, carburetor nozzle retainer	0301
PIN, transmission countershaft washer	0704C	PLUG, carburetor pump jet and nozzle passage	0301
PIN, transmission gearshift lever fulcrum ball	0706A	PLUG, carburetor strainer passage assembly	0301
PIN, winch drive shaft thrust washer	2001	PLUG, drain and filler, transmission	0701
PINION, differential	1003	PLUG, drain, axle housing	1001
	1104		1101
PINION, engine oil pump	0107	PLUG, drain, engine oil filter	0107E
PIPE, drain, engine crankshaft rear bearing cap	0102A	PLUG, drain, engine oil pan	0107A
PIPE, exhaust, assembly	0401	PLUG, drain, fuel strainer	0306B
PISTON, air compressor, assembly	2208	PLUG, drain, transfer case	0801
PISTON, brake master cylinder, assembly	1205	PLUG, engine intake manifold	0108
PISTON, brake wheel cylinder, assembly	1207	PLUG, engine oil pump cover	0107
PISTON, engine, assembly	0102A	PLUG, expansion, cylinder block	0101
PISTON, wheel cylinder, assembly	1207	PLUG, expansion, engine camshaft rear bearing	0106A
PIVOT, top bow, assembly	2201A	PLUG, expansion, steering gear housing	1403A
PLATE, back, clincher	2201A	PLUG, feeler, steering arm knuckle	1006
PLATE, backing, front and rear brake, assembly	1203	PLUG, filler, axle housing	1001
PLATE, backing, hand brake, assembly	1201-1		1101
PLATE, brake shoe anchor pin	1203	PLUG, filler, steering gear housing	1403A
PLATE, breaker, distributor, assembly	0603	PLUG, filler, transfer case	0801
PLATE, breaker, dustproof distributor, assembly	0603-1	PLUG, generator commutator end cover	0601-1
PLATE, caution	2203	PLUG, pipe, cylinder block oil hole	0101
PLATE, cranking motor, commutator end assembly	0602	PLUG, pipe, drain, cylinder water jacket	0101
PLATE, disk, engine clutch, assembly	0201	PLUG, pipe, fuel tank drain plug	0300
PLATE, distributor cam and stop	0603	PLUG, rivet, carburetor	0301
PLATE, dustproof distributor cam and stop	0603-1	PLUG, spark, assembly	0604B
PLATE, engine cylinder block to flywheel housing	0109C	PLUG, steering connecting rod ball seat spring	1401
PLATE, engine cylinder block to timing chain cover	0106D	PLUG, transfer case shift rod poppet	0805
PLATE, escutcheon, rotary lighting switch	0606	PLUG, vent, axle housing	1001
PLATE, exhaust pipe extension	0401-1		1101
PLATE, floor seal, dimmer switch	1803	PLUNGER, carburetor pump, assembly	0301
PLATE, front spring clip, assembly	1602	PLUNGER, distributor contact spring	0603
PLATE, generator commutator end, assembly	0601-2	PLUNGER, engine oil pump relief	0107
PLATE, generator drive end, assembly	0601-2	PLUNGER, thrust, engine camshaft	0106
PLATE, guide, transmission gearshift lever	0706A	PLUNGER, transmission gearshift rail interlock	0706B
PLATE, instruction, combat wheels	1301	POINT SET, distributor	0603
PLATE, lock, transfer case intermediate shaft	0804	POST, generator armature terminal	0601
PLATE, lock, transmission countershaft and reverse idler shaft	0704C	POST, generator field, terminal	0601
PLATE, mounting, machine gun	1500	POST, terminal, cranking motor	0602
		POST, terminal, dustproof distributor base, assembly	0603-1

# ALPHABETICAL INDEX (Cont'd)

Item	Group	Item	Group
PROTECTOR, fuel gage, tank unit.....	0300A	RING, horn wire contact, assembly.....	0609B
PULLEY, air compressor flywheel, assembly.....	2208	RING, lock, wheel bead.....	1301
PULLEY, crankshaft.....	2208	RING, mounting, blackout driving light lamp-unit.....	0607D
PULLEY, drive, generator, assembly.....	0601	RING, retaining, air compressor piston pin.....	2208
PULLEY, engine crankshaft.....	0102	RING, retaining, distributor cam.....	0603
PULLEY, fan and water pump.....	0503A	RING, retaining, engine timing chain cover packing.....	0106D
PULLEY, generator, assembly.....	0601-2	RING, retaining, steering gear worm ball.....	1403A
PUMP, fuel, assembly.....	0302	RING, take-up, cranking motor, Bendix drive.....	0602
PUMP, oil, engine, assembly.....	0107	RING, windshield thumb screw chain.....	1811
PUMP, water, assembly.....	0503	RING SET, engine piston.....	0103A
<b>R</b>		RISER, front to rear floor pan, assembly.....	1802A
RACE, front axle universal joint.....	1007	RIVET, blade to arm.....	1811D
RAIL, shift, capstan winch.....	2003	RIVET, transmission gearshift lever housing.....	0706A
RAIL, shift, transmission low speed and reverse gear.....	0706B	ROD, brace, radiator core.....	0501
RAIL, shift, transmission second and high speed gear.....	0706B	ROD, connecting, air compressor.....	2208
REFLECTOR, reflex, assembly.....	2203A	ROD, connecting, carburetor throttle.....	0301
REGULATOR, generator, assembly.....	0601B-1	ROD, connecting, engine, assembly.....	0104
RESISTANCE, carbon, generator regulator.....	0601B	ROD, connecting, steering, assembly.....	1401
RESISTANCE, generator regulator, carbon.....	0601B-1	ROD, engine clutch release lever.....	0204A
RESISTOR, blackout driving light.....	0606E	ROD, metering, carburetor.....	0301
REST, foot, accelerator.....	0303	ROD, push, brake master cylinder.....	1205
REST, foot, rear floor, assembly.....	1802A	ROD, shift, capstan winch.....	2003
RETAINER, axle shaft, front axle universal joint.....	1007	ROD, shift, transfer case.....	0805
RETAINER, brake master cylinder check valve cup.....	1205	ROD, throttle, accelerator.....	0303
RETAINER, carburetor spring.....	0301	ROD, tie, steering knuckle, assembly.....	1402
RETAINER, dust shield.....	0606F	ROPE.....	2002
RETAINER, engine clutch control tube spring.....	0204A	ROTOR, distributor.....	0603
RETAINER, engine crank.....	1802A	<b>S</b>	
RETAINER, engine crankshaft front packing.....	0102A	SCREEN, filtering fuel pump, assembly.....	0302
RETAINER, engine oil pump oil relief spring.....	0107	SCREW, adjusting, engine clutch lever.....	0202
RETAINER, engine valve spring.....	0105	SCREW, adjusting, engine valve tappet.....	0105A
RETAINER, generator commutator end head felt washer.....	0601	SCREW, adjusting, generator regulator.....	0601B
RETAINER, generator commutator end oil seal.....	0601-2	SCREW, adjusting, hand brake.....	1201-1
RETAINER, generator drive end bearing.....	0601	SCREW, adjusting, steering gear lever shaft.....	1403A
RETAINER, generator drive end bearing grease.....	0601-2	SCREW, adjustment, carburetor idler.....	0301
RETAINER, generator drive end bearing oil seal.....	0601-2	SCREW, adjustment, carburetor throttle lever.....	0301
RETAINER, generator drive end head felt washer.....	0601	SCREW, attaching, carburetor air horn.....	0301
RETAINER, headlight mounting bolt.....	0607	SCREW, attaching, fuel strainer cover.....	0306B
RETAINER, pedal shaft, assembly.....	1204	SCREW, blackout driving light ground.....	0607D
RETAINER, propeller shaft universal joint trunnion gasket.....	0902	SCREW, bleeder, brake wheel cylinder.....	1207
RETAINER, radiator guard to fender nut.....	2103	SCREW, carburetor choke lever bracket.....	0301
RETAINER, rear seat pivot tube.....	1804	SCREW, carburetor choke valve.....	0301
RETAINER, spring shackle grease seal.....	1602	SCREW, carburetor tube clamp.....	0301
RETAINER, steering knuckle oil seal.....	1006	SCREW, carburetor wire clamp.....	0301
RETAINER, thermostat.....	0502	SCREW, cranking motor Bendix head spring.....	0602
RETAINER, tire pump foot.....	1804	SCREW, cranking motor Bendix shaft spring.....	0602
RETAINER, tire pump handle.....	1804	SCREW, differential drive gear.....	1003
RETAINER, transmission main drive gear bearing.....	0703	SCREW, differential driven gear.....	1104
RETAINER, windshield hold down catch.....	1811	SCREW, distributor breaker arm.....	0603
RIM, wheel, assembly.....	1301	SCREW, distributor breaker contact.....	0603
RING, blocking, transmission main shaft synchronizer.....	0704	SCREW, dustproof distributor terminal post connector.....	0603-1
RING, brake master cylinder secondary cup.....	1205	SCREW, footman loop hole plug cap.....	1802A
RING, engine piston.....	0103A	SCREW, generator drive end bearing retainer.....	0601
RING, floor, gearshift lever housing cover.....	1803	SCREW, generator field terminal.....	0601-2
RING, floor seal, steering column.....	1803	SCREW, generator ground.....	0601
RING, floor, transmission shift lever grommet.....	1803	SCREW, generator ground terminal.....	0601-2
		SCREW, generator pole piece.....	0601-2
		SCREW, generator regulator terminal.....	0601B
		SCREW, ignition switch terminal.....	0604C
		SCREW, lighting switch terminal.....	0606
		SCREW, lock, transmission gearshift fork.....	0706C
		SCREW, mach., case mounting and lead connecting.....	0601B

# ALPHABETICAL INDEX (Cont'd)

Item	Group	Item	Group
SCREW, mach., lead connection and ground connection.....	0601B	SHEATH, ax.....	1802A
SCREW, pivot, windshield adjusting arm.....	1811	SHIELD, air cleaner, assembly.....	0301C
SCREW, thumb, top bow, assembly.....	2201A	SHIELD, brake cylinder, assembly.....	1205
SCREW, windshield bracket.....	1811	SHIELD, dust, propeller shaft flange.....	0902
SCREW, windshield frame.....	1811	SHIELD, dust, steering bell crank bearing.....	1401
SCREW, windshield pivot.....	1811	SHIELD, dust, steering connecting rod dust cover..	1401
SEAL, air compressor crankshaft bearing sleeve...	2208	SHIELD, dust, transfer case companion flange and universal joint end yoke.....	0803
SEAL, carburetor air cleaner tube clamp.....	0301C	SHIELD, dust, universal joint end yoke, differential drive pinion shaft.....	1104
SEAL, carburetor and air cleaner horn.....	0301C	SHIELD, fan pulley.....	0503A
SEAL, dust, steering knuckle tie rod.....	1402	SHIELD, fuel tank, driver seat to rear floor.....	0300
SEAL, dustproof distributor breaker plate.....	0603-1	SHIELD, instrument lamp, assembly.....	0605C
SEAL, engine clutch control tube, dust.....	0204A	SHIELD, radiator surge tank, assembly.....	0501C
SEAL, floor, accelerator pedal rod.....	1803	SHIM, adjusting, differential bearing.....	1003
SEAL, floor, brake cylinder inspection cover.....	1803	SHIM, adjusting, differential case bearing.....	1104
SEAL, floor, fuel line hole.....	1803	SHIM, adjusting, differential drive pinion.....	1104
SEAL, floor, gearshift lever housing cover.....	1803	SHIM, adjusting, differential drive pinion bearing.....	1104
SEAL, floor, headlight foot switch.....	1803	SHIM, adjusting, front axle universal joint.....	1007
SEAL, floor, starter switch.....	1803	SHIM, adjusting, king pin bearing.....	1006
SEAL, floor, steering column.....	1803	SHIM, engine crankshaft.....	1219
SEAL, floor, transmission cover.....	1803	SHIM, engine front support insulator.....	0110
SEAL, fuel pump pull rod.....	0302	SHIM, engine oil pump oil relief spring.....	0107
SEAL, fuel pump strainer bowl.....	0302	SHIM, mounting, steering column.....	1405
SEAL, fuel tank stone guard.....	1803	SHIM, radiator core to support bracket.....	0501
SEAL, generator regulator lead and wire.....	0601B	SHIM, steering gear housing upper cover.....	1403A
SEAL, glove compartment door.....	1803	SHIM, steering gear mounting.....	1403A
SEAL, grease, spring shackle.....	1602	SHIM, transfer case output shaft rear bearing cap..	0801
SEAL, radiator side air deflector.....	1803	SHIM SET, adjusting, front axle universal joint....	1007
SEAL, radiator side air deflector to radiator.....	1803	SHIM SET, differential case bearing.....	1104
SEAL, radiator top air deflector.....	1803	SHIM SET, differential drive pinion bearing.....	1104
SEAL, radiator top air deflector to radiator.....	1803	SHIM SET, king pin bearing.....	1006
SEAL, steering bell crank shaft bearing.....	1401	SHIM SET, steering gear housing upper cover.....	1403A
SEAL, tool compartment lid.....	1817	SHIM SET, transfer case output shaft rear bearing cap.....	0801
SEAL, water pump, assembly.....	0503	SHOE, brake, assembly.....	1202
SEAL, weather, spark plug cables, distributor end..	0604A	SHOE, hand brake, assembly.....	1201-1
SEAT, ball, steering connecting rod.....	1401	SILL, cross, front floor pan, assembly.....	1802A
SEAT, brake master cylinder check valve.....	1205	SILL, cross, rear floor pan.....	1802A
SEAT, steering column upper bearing spring.....	1403A	SLEEVE, bearing, air compressor crankshaft.....	2208
SEAT, trimmed, assembly.....	1804C	SLEEVE, compression, cranking motor Bendix drive.....	0602
SHACKLE, torque reaction spring.....	1601C	SLEEVE, speedometer driven gear, transfer case..	0810
SHAFT, brake pedal, assembly.....	1204	SLEEVE, transmission main shaft second and high speed clutch.....	0704
SHAFT, carburetor throttle, assembly.....	0301	SLINGER, oil, differential drive pinion bearing.....	1104
SHAFT, cranking motor Bendix drive, assembly..	0602	SLINGER, oil, engine crankshaft.....	0102
SHAFT, cross, accelerator.....	0303	SNAP RING, front axle universal joint shaft retainer.....	1007
SHAFT, differential pinion.....	1104	SNAP RING, propeller shaft universal joint trunnion bearing.....	0902
SHAFT, drive, capstan winch, assembly.....	2001	SNAP RING, steering column.....	1403A
SHAFT, drive, distributor, assembly.....	0603	SNAP RING, transfer case output clutch shaft bearing.....	0803
SHAFT, drive, dustproof distributor, assembly....	0603-1	SNAP RING, transfer case output shaft.....	0803
SHAFT, engine heat control valve.....	0108C	SNAP RING, transmission main drive gear.....	0703
SHAFT, engine oil pump, assembly.....	0107		
SHAFT, flexible, speedometer drive, assembly.....	2204		
SHAFT, front axle.....	1007		
SHAFT, lever, steering gear, assembly.....	1403A		
SHAFT, main, transmission, assembly.....	0704		
SHAFT, output, transfer case, assembly.....	0803		
SHAFT, propeller, assembly.....	0901		
SHAFT, rear axle.....	1102		
SHAFT, spline, capstan winch.....	2001		
SHAFT, steering bell crank.....	1401		
SHAFT, transfer case, intermediate.....	0804		
SHAFT, transfer case output clutch.....	0803		
SHAFT, transmission reverse idler gear.....	0704C		
SHAFT and WORM, steering gear, assembly.....	1403A		

# ALPHABETICAL INDEX (Cont'd)

Item	Group	Item	Group
SNAP RING, transmission main drive gear bearing	0703	SPRING, front, assembly	1601
SNAP RING, transmission main drive gear pilot roller bearing	0703	SPRING, front seat back, assembly	1804A
SNAP RING, transmission main shaft second and high speed clutch hub	0704	SPRING, front seat body side crash pad, assembly	1804A
SNUBBER, transfer case support insulator	0809	SPRING, front seat cushion, assembly	1804A
SOCKET, accelerator pedal link	0303	SPRING, fuel pump diaphragm	0302
SOCKET, curtain fastener	2201A	SPRING, fuel pump rocker arm	0302
SOCKET, instrument lamp, assembly	1605C	SPRING, fuel strainer unit	0306B
SOCKET, trailer electric coupling, assembly	0606F	SPRING, generator brace	0601A
SPACER, axle bumper	1601B	SPRING, generator brush	0601
SPACER, capstan winch drive	2001	SPRING, generator current regulator and voltage regulator armature	0601B
SPACER, differential drive pinion bearing	1003	SPRING, generator regulator cut-out relay	0601B
	1104	SPRING, hand brake band anchor clip bolt	1201
SPACER, engine crankshaft sprocket	0106C	SPRING, hand brake handle ratchet	1201
SPACER, frame cross member, intermediate front bracket	1500	SPRING, hand brake operating lever spacer	1201-1
	1500	SPRING, hand brake ratchet tube	1201-1
SPACER, front bumper gusset	2101	SPRING, horn button	0609B
SPACER, generator brace	0601A-1	SPRING, poppet, capstan winch	2001
SPACER, generator end plate	0601-2	SPRING, pressure, engine clutch	0202
SPACER, generator shaft	0601	SPRING, rear, assembly	1601A
SPACER, hand brake conduit clamp	1201-1	SPRING, releasing, hand brake band	1201
SPACER, mounting, generator front end plate	0601A-1	SPRING, retaining, rear seat frame	1804
SPACER, mounting plate to frame	2001	SPRING, retaining, rifle holder, assembly	1820
SPACER, spare wheel support	1505	SPRING, retaining, water pump bearing	0503
SPACER, steering gear to frame bolt	1403A	SPRING, retracting, accelerator	0303
SPACER, thrust, cranking motor bearing	0602	SPRING, retracting, engine clutch pedal	0204
SPACER, transmission countershaft gear bushing	0704C	SPRING, retracting, hand brake cam	1201
SPACER, transmission main shaft bearing	0704	SPRING, return, brake master cylinder piston, assembly	1205
SPACER, windshield adjusting arm	1811	SPRING, return, brake shoe	1203
SPEEDOMETER, assembly	2204	SPRING, return, engine clutch pressure plate	0202
SPINDLE, front wheel, assembly	1006	SPRING, return, hand brake shoe	1201-1
SPRING, accelerator cross shaft	0303	SPRING, rifle holder retainer handle cam	1820
SPRING, accelerator pedal hinge	0303	SPRING, seat back, assembly	1804A
SPRING, air cleaner toggle	0301C	SPRING, seat cushion, assembly	1804A
SPRING, air compressor charge valve	2208	SPRING, steering column upper bearing	1403A
SPRING, air compressor latch	2208	SPRING, steering connecting rod ball seat	1401
SPRING, brake wheel cylinder cup	1207	SPRING, steering knuckle tie rod socket stud	1402
SPRING, carburetor choke pull back	0301	SPRING, support, transmission gearshift lever	0706A
SPRING, carburetor connector link	0301	SPRING, torque reaction, assembly	1601C
SPRING, carburetor connector rod	0301	SPRING, transfer case shift lever	0805B
SPRING, carburetor idle adjustment screw	0301	SPRING, transfer case shift rod poppet	0805
SPRING, carburetor intake needle	0301	SPRING, transmission gearshift lever guide plate	0706A
SPRING, carburetor metering rod	0301	SPRING, transmission gearshift rail poppet ball	0706B
SPRING, carburetor pin	0301	SPRING, transmission main shaft synchronizer	0704
SPRING, carburetor plunger	0301	SPRING, water pump seal	0503
SPRING, carburetor pump	0301	SPRING SET, distributor governor weight	0603
SPRING, carburetor pump arm	0301	SPRING SET, dustproof distributor governor weight	0603-1
SPRING, cranking motor Bendix drive	0602	SPROCKET, engine camshaft	0106C
SPRING, cranking motor brush	0602	SPROCKET, engine crankshaft	0106C
SPRING, distributor, antirattle	0603	STOP, engine heat control valve spring	0108C
SPRING, distributor breaker arm	0603	STOP, generator commutator end bearing	0601-2
SPRING, distributor cap	0603	STOP, throttle wire, assembly	0303A
SPRING, distributor contact	0603	STRAINER, air intake, air compressor, assembly	2208
SPRING, engine camshaft thrust plunger	0106	STRAINER, body side panel to wheel house	1802A
SPRING, engine clutch control tube	0204A	STRAINER, carburetor pump check	0301
SPRING, engine clutch release bearing carrier	0203	STRAINER, fuel, assembly	0306B
SPRING, engine heat control valve	0108C	STRAINER-UNIT, fuel, assembly	0306B
SPRING, engine oil filter cover bolt	0107E	STRAP, battery frame to front fender	0610A
SPRING, engine oil pump oil relief plunger	0107	STRAP, battery ground	0610B
SPRING, engine valve	0105	STRAP, choke and throttle controls and oil gage to dash	2603
SPRING, engine valve tappet clearance	0105	STRAP, cowl to hood	2603
SPRING, friction, distributor shaft	0603		

## ALPHABETICAL INDEX (Cont'd)

Item	Group	Item	Group
STRAP, cylinder head to dash.....	2603	TERMINAL, battery cable.....	0610B
STRAP, engine front plate to frame.....	2603	TERMINAL, battery, positive cable clamp.....	0610B
STRAP, exhaust pipe ground connection to frame..	2603	TERMINAL, battery to cranking motor switch....	0610B-1
STRAP, gas line to dash.....	2603	TERMINAL, coil cable.....	0604A
STRAP, generator mounting bolt to starter motor bracket.....	2603	TERMINAL, cranking motor field coil.....	0602
STRAP, generator regulator ground.....	2603	TERMINAL, generator armature lead.....	{0601 0601-1
STRAP, hand brake cable, speedometer cable, heat indicator cable to dash.....	2603	TERMINAL, generator field.....	0601
STRAP, hold-down, assembly.....	2201A	TERMINAL, negative, battery cable.....	0610B-1
STRAP, hold-down, fuel tank, assembly.....	0300	TERMINAL, positive, battery cable.....	0610B
STRAP, hood to brush guard.....	2603	TERMINAL, spark plug cable.....	0604A
STRAP, hood to cowl.....	2603	THERMOSTAT, assembly.....	0502
STRAP, ignition coil to cylinder block.....	2603	TIRE, pneumatic.....	2306
STRAP, lock, differential drive gear screw.....	{1003 1104	TRANSMISSION, assembly.....	0700
STRAP, mounting, radiator surge tank.....	0501C	TUBE, air cleaner, assembly.....	0301C
STRAP, muffler support.....	0401	TUBE, brake axle tee to brake hose, assembly...	1209C
STRAP, radiator stud to frame.....	2603	TUBE, brake axle tee to brake wheel cylinder...	1209C
STRAP, rear engine support to frame cross member stud.....	2603	TUBE, brake axle tee to wheel cylinder brake...	1209C
STRAP, safety, assembly.....	1804	TUBE, brake master cylinder to hose, assembly...	1209C
STRAP, spare gasoline can, assembly.....	1817A	TUBE, brake wheel cylinder to axle hose, assembly	1209C
STRAP, support, exhaust pipe extension clamp...	0401-1	TUBE, connecting, radiator water inlet.....	0505
STRAP, transfer case to body floor stud.....	2603	TUBE, cross, frame, front.....	1500
STRAP, top lock, assembly.....	2201A	TUBE, engine crankcase ventilator valve, assembly	0107N
STRAP, top roll, assembly.....	2201A	TUBE, engine oil filler, assembly.....	0107G
STRIKER, glove compartment door lock.....	1809A	TUBE, engine oil filter inlet, assembly.....	0107J
STRIKER, tool compartment lid lock.....	1817	TUBE, flexible connection to fuel pump, assembly	0304
STRIP, pressure, steering knuckle oil seal.....	1006	TUBE, flexible oil filter outlet and oil gage tube..	0107J
STUD, air compressor cylinder, assembly.....	2208	TUBE, fuel filter to flexible connection, assembly	0304
STUD, air compressor cylinder head.....	2208	TUBE, fuel pump to carburetor, assembly.....	0304
STUD, ball, engine clutch control.....	0204A	TUBE, fuel tank to filter, assembly.....	0304
STUD, carburetor to manifold.....	0301A	TUBE, fuel tank to flexible connection.....	0304
STUD, engine camshaft thrust plunger.....	0106	TUBE, oil gage, assembly.....	0107J
SUPPORT, battery, assembly.....	1500	TUBE, propeller shaft, assembly.....	0901
SUPPORT, cranking motor to block.....	0602	TUBE, radiator surge tank.....	0501C
SUPPORT, engine oil strainer float.....	0107A-1	TUBE, speedometer drive, assembly.....	2204
SUPPORT, generator, assembly.....	0601A	TUBE, steering knuckle tie rod.....	1402
SUPPORT, hand brake ratchet tube bracket.....	1201	TUBING, windshield wiper.....	1811D-1
SUPPORT, headlight, assembly.....	0607	TUBING, windshield wiper, intake manifold, assembly.....	1811D-1
SUPPORT, rear body to frame.....	1802A		
SUPPORT, rear seat frame to wheel house.....	1804	<b>U</b>	
SUPPORT, steering column.....	1405	U-BOLT, propeller shaft universal joint bearing...	0902
SUPPRESSOR, ignition.....	2603	U-BOLT, spring shackle.....	1602
SWITCH, blackout driving light, assembly.....	0606	UNION, flexible connection to tube assembly.....	0107J
SWITCH, dimmer, headlight, foot, assembly....	0606	UNION, inverted flared tube connector.....	1811D-1
SWITCH, ignition, assembly.....	0604C		
SWITCH, instrument panel light.....	0606	<b>V</b>	
SWITCH, lighting and blackout driving light....	0606	VALVE, carburetor choke, assembly.....	0301
SWITCH, lighting, assembly.....	0606	VALVE, carburetor needle, assembly.....	0301
SWITCH, starting.....	0606	VALVE, carburetor, throttle.....	0301
SWITCH, stop light.....	0606	VALVE, check, brake master cylinder, assembly..	1205
SYNCHRONIZER, transmission main shaft, assembly.....	0704	VALVE, discharge, air compressor.....	2208
		VALVE, engine crankcase ventilator, assembly...	0107N
<b>T</b>		VALVE, engine heat control.....	0108C
TANK, fuel, assembly.....	0300	VALVE, exhaust, engine.....	0105
TANK, supply, brake master cylinder.....	1205	VALVE, fuel pump, assembly.....	0302
TANK, surge, radiator, assembly.....	0501C	VALVE, intake, engine.....	0105
TAPPET, engine valve, assembly.....	0105A		
TEE, air compressor.....	2208	<b>W</b>	
TEE, brake tube axle.....	1209C	WASHER, adjusting, blackout driving light.....	0607D
TEE, windshield wiper motor connecting.....	1811D-1	WASHER, anti-rattle, top bow pivot.....	2201A
		WASHER, curtain eyelet fastener.....	2201A
		WASHER, distributor breaker arm screw.....	0603
		WASHER, dustproof distributor plate.....	0603-1

# ALPHABETICAL INDEX (Cont'd)

Item	Group	Item	Group
WASHER, engine clutch lever adjusting screw....	0202	WASHER, thrust, distributor advance arm.....	0603
WASHER, engine clutch pedal shaft.....	0204	WASHER, thrust, distributor drive shaft.....	0603
WASHER, engine heat control valve spring.....	0108C	WASHER, thrust, engine camshaft.....	{0102 0106
WASHER, fan pulley shield.....	0503A	WASHER, thrust, front axle shaft to housing....	1007
WASHER, fan pulley shield retaining bolt.....	0503A	WASHER, thrust, transfer case intermediate shaft gear.....	0804
WASHER, fuel pump diaphragm spring seat.....	0302	WASHER, thrust, transfer case output shaft.....	0803
WASHER, fuel pump rocker arm pin.....	0302	WASHER, thrust, transmission countershaft.....	0704C
WASHER, generator armature terminal.....	0601	WASHER, top bow, front pivot.....	2201A
WASHER, generator commutator end.....	0601	WASHER, transmission gearshift lever housing cap	0706A
WASHER, generator drive end head.....	0601	WASHER, transmission mainshaft nut.....	0802
WASHER, horn adjusting nut.....	0609	WASHER, water pump seal.....	0503
WASHER, horn button contact.....	0609B	WASHER, wheel bearing.....	1301A
WASHER, insulating, cranking motor terminal post	0602	WASHER, windshield clamp bracket screw.....	1811
WASHER, insulating, cutout relay stationary bracket.....	0601B	WASHER, windshield pivot spring.....	1811
WASHER, insulating, dustproof distributor.....	0603-1	WEATHERSTRIP, windshield.....	1811B
WASHER, insulating, generator armature terminal	0601	WEATHERSTRIP, windshield frame to cowl....	1811B
WASHER, insulating, generator field terminal....	0601	WEBBING, hood top windshield bumper.....	1704
WASHER, lock, base mounting and ground screw and lead connection.....	0601B	WEIGHT, distributor governor, assembly.....	0603
WASHER, lock, cranking motor Bendix drive spring screw.....	0602	WEIGHT, governor dustproof distributor, assembly	0603-1
WASHER, lock, distributor breaker contact screw ..	0603	WHEEL, air compressor clutch.....	2208
WASHER, lock, ignition switch terminal.....	0604C	WHEEL, assembly.....	1301
WASHER, lock, wheel bearing nut.....	1301A	WHEEL, steering, assembly.....	1403
WASHER, oil retaining, transmission main shaft..	0704	WICK, oil, generator commutator end.....	0601-1
WASHER, plain, base mounting and ground screw and lead connection.....	0601B	WICK, oiling, distributor cam.....	0603
WASHER, seal, propeller shaft sleeve yoke.....	0902	WINCH, capstan, assembly.....	2000
WASHER, shock absorber mounting pin.....	1603	WINDSHIELD, assembly.....	1811
WASHER, side curtain fastener.....	2201F	WIPER, windshield, assembly.....	1811D
WASHER, spacer, distributor cam spring.....	0603	WIPER SET, windshield.....	1811D
WASHER, spring, windshield adjusting arm.....	1811	WIRE, ground, blackout driving light, assembly..	0607D
WASHER, steering, bell crank shaft.....	1401	WIRE, headlight, assembly.....	0607
WASHER, steering gear—slotted hole.....	1403A	WIRE, lock, piston stop, brake master cylinder...	1205
WASHER, terminal to block screw.....	0606E	WIRE, lock, transfer case shift fork.....	0805
WASHER, thrust, capstan winch.....	2001		
WASHER, thrust, cranking motor armature, commutator.....	0602		
WASHER, thrust, differential pinion.....	{1003 1104		
WASHER, thrust, differential side gear.....	{1003 1104		

## Y

YOKE, adjustable, engine clutch control cable....	0203
YOKE, end, universal joint, differential drive pinion	1003
shaft, assembly.....	1104
YOKE, end, universal joint, transfer case.....	0803
YOKE, flange, propeller shaft.....	0902
YOKE, sleeve, propeller shaft, assembly.....	0902

# PART NUMBER INDEX—ORDNANCE

Number	Group	Number	Group	Number	Group
A7044072.....	0101A	C7044170.....	2208	504420.....	0607A
A7044164.....	0505	111618.....	0505	504423.....	0607A
A7044173.....	1505	116120.....	2208	7044051.....	2208
B7044154.....	1505	123208.....	2208	7044114.....	2208
B7044172.....	2208	131300.....	2208	7044168.....	2208
B7044232.....	0810	500903.....	0610	7044212.....	2208
C7044153.....	0101A	504406.....	0608	7044236.....	2208
C7044165.....	0102	504413.....	0608	7044237.....	2208
C7044167.....	1505	504417.....	0607A	7044238.....	2208



# **PART NUMBER INDEX—MANUFACTURERS'**

Manufacturers' and Vendors' part numbers in this index are arranged in numerical order without regard to Manufacturers' symbols, or letters and dashes within the part number. For example, WG-T-84J-29 is filed numerically as if it were 8429.

Number	Group	Number	Group	* Number	Group
CNC-O.....	2201A	AL-GAA-35.....	{ 0601B	AL-EB-108.....	0602
SP-LW-1.....	0805		{ 0601B-1	AL-VRA-109.....	0601B
SP-1-W.....	1201-1	AL-MU-37.....	0602	SP-112.....	{ 1003
AL-MZ-S2.....	0602	AL-GBY-38A.....	0601		{ 1104
AL-AN-7.....	0604A	AL-MZ-38A.....	0602	SP-113.....	{ 1003
AL-DH-7.....	0601	AL-DA-39.....	0601		{ 1104
AL-IAD-7.....	0603-1	AL-MU-39.....	0602	SP-S-114.....	{ 1003
AL-IAD-8.....	0603-1	AL-GAL-44.....	0601		{ 1103
AL-IGL-8.....	0603-1	AL-GEB-44.....	0601	AL-IGC-117.....	0603
AL-IGL-9.....	0603-1	AL-EBA-46.....	0602	AL-KIT-119.....	0601-1
AL-IAD-10.....	0603-1	AL-VRA-46.....	0601B	AL-KIT-121.....	0603-1
AL-KIT-10A.....	0601	AL-MAK-49.....	0601-1	SP-122-D.....	0801
AL-IAD-12.....	0603-1	AL-VRA-50.....	{ 0601B	AL-GCE-125.....	0601
AL-MZ-12.....	0602		{ 0601B-1	SP-12-B-5.....	1201
CNC-12.....	2201A	CNC-50.....	2201F	SOL-EV-128.....	2603
AL-KIT-13.....	0601B	AL-MZ-51.....	0602	SPR-JX-131.....	2603
AL-MU-14.....	0602	AL-VRA-51.....	0601B	AL-GAG-138.....	0601B
SP-14-W.....	1201-1	AL-TC-51A.....	0601B-1	WH-145-A.....	{ 0101
AL-VRA-15.....	{ 0601B	AL-TC-51L.....	0601B-1		{ 0501
	{ 0601B-1	AL-TC-51N.....	0601B	SP-14-B-6.....	1201
AL-KIT-16.....	0601B	AL-TC-51S.....	0601B-1	WO-A-146.....	0110
AL-MZ-16.....	0602	AL-TC-51U.....	0601B	WO-A-147.....	0809
AL-VRA-16.....	{ 0601B	AL-VRA-52.....	0601B	SP-153-SP.....	1201
	{ 0601B-1	AL-GCE-53.....	0601	AL-X-156.....	0601
AL-VRA-17.....	{ 0601B	AL-GCE-54.....	0601	TP-16MN8.....	1402
	{ 0601B-1	AL-MU-54.....	0602	WO-A-169.....	1603
SPR-JX-17.....	2603	AL-GEB-58.....	0601	WO-A-170.....	1603
AL-MZ-19.....	0602	CNC-58.....	2201A	SP-S-171.....	{ 1003
AL-MN-21.....	0601	SP-S-58.....	{ 1003		{ 1104
AL-DA-22.....	0601		{ 1104	AL-IGC-175.....	0603
AL-DK-23.....	0601	SP-58-J.....	1201-1	WO-A-176.....	0204A
AL-VRA-23.....	0601B-1	SP-S-59.....	{ 1003	WO-A-177.....	0204A
AL-GCE-24.....	0601		{ 1104	WO-A-178.....	0204A
AL-KIT-24.....	0602	AL-DA-60.....	0601	WO-A-180.....	0204
AL-GBJ-25.....	0601	CNC-60.....	2201F	WO-A-181.....	0204A
AL-GCT-25.....	0601	HLH-T-60-B.....	1502	WO-A-183.....	1205
AL-GCY-25.....	0601	AL-GBW-66.....	0601	WO-A-185.....	1500
AL-KIT-25.....	0602	AL-SPK-66.....	2204	BA-B-194.....	1811
AL-GC-26.....	0601	AL-BRA-67.....	0601B	AL-X-195.....	{ 0601B
AL-KIT-26.....	0602	AL-GBW-67.....	0601		{ 0601B-1
AL-VRH-26.....	0601B	AL-GBW-69.....	0601-1	AL-X-196.....	{ 0601B
AL-GEB-27.....	0601	AL-IGT-69.....	0603		{ 0603
AL-KIT-27.....	0601B-1	AL-GBW-72.....	0601-1	AL-IGB-199.....	0603
AL-IGH-28.....	0603	AL-GBW-73.....	0601-1	DT-CHC-201.....	2603
AL-KIT-28.....	0601B-1	SP-S-74.....	{ 1003	AL-IGB-202S.....	0603
AL-MU-28.....	0602		{ 1104	FB-203.....	0601
AL-GEB-29.....	0601	SP-S-75.....	{ 1003	MRC-206.....	0803
AL-KIT-29.....	0601B-1		{ 1104	AL-SW-213.....	0603
AL-MZ-29.....	0602	AL-VRA-76.....	0601B	AL-TSR-2-15.....	0610
AL-IGP-30.....	0603	AL-MG-77A.....	0602	TSE-215-B.....	0107A-1
AL-MZ-30A.....	0602	AL-GT-78.....	0601	SP-223-V.....	1201-1
AL-GAU-31.....	0601	AL-GBF-79.....	0601-1	WO-A-227.....	1603
AL-GEG-31.....	0601	AL-VRA-84.....	{ 0601B	SP-232-SP.....	1201
AL-GEW-31.....	0601		{ 0601B-1	SP-238-R.....	1201
AL-MAB-31.....	0602	AL-MAB-88.....	0602	WO-A-281.....	0301C
AL-MU-31.....	0602	AL-IG-90.....	0603	WG-AS2-T-84-J.....	0700
AL-GAA-32.....	0601	AL-IG-94.....	0604A	CAR-2-89.....	0301
AL-IGS-32.....	0603	AL-GAR-98A.....	0601-1	AL-X-295.....	0601
AL-MZ-32.....	0602	CNC-98.....	2201A	CB-CB-300.....	0607
AL-GBJ-32A.....	0601	AL-IGS-99.....	0603	WO-A-302.....	0609B
AL-GEG-33.....	0601-1	SOL-EV-103.....	2603	MRC-307.....	0704
AL-GBW-34.....	0601	AL-IGS-104.....	0603	CN-310-D.....	0102A



# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
AL-IGB-350-S.....	0603-1	TA-OP-528.....	1817	WO-A-745.....	1403A
SP-363-SP.....	0805B	WO-A-534.....	1500	WO-A-747.....	0609B
RMC-A-365.....	0105	AL-X-535.....	0601B	WO-A-750.....	0609B
RMC-A-366.....	0105	WO-A-535.....	1404	WO-A-751.....	0609B
SP-373-J.....	1201	SP-S535-V.....	1201-1	WO-A-752.....	0609B
SP-3-Q-74.....	1201	WO-A-538.....	0604B	WO-A-754.....	1203
SP-3-Q-76.....	1201	CAR-539S.....	0301	WO-A-760.....	1007
AN-S-384.....	1811	WO-A-542.....	0110		1102
DM-398.....	0606	WO-A-544.....	1500	WO-A-778.....	1000
WO-A-405.....	0204	WO-A-547.....	1500		1007
WO-A-410.....	0704	WO-A-548.....	1500	HP-779.....	1603
WO-A-415.....	1500	WO-A-549.....	1500		1000
WO-A-416.....	1500	WO-A-556.....	1205	WO-A-779.....	1007
SP-417-J.....	1201-1	WO-A-557.....	1205		1100
WO-A-418.....	1500	WO-A-561.....	1209B		1102
SP-418-J.....	1201-1	WO-A-562.....	1209B	SP-S-780.....	1001
WO-A-419.....	1500	WO-A-568.....	1602		1101
WO-A-420.....	1500	WO-A-571.....	1602	WO-A-780.....	1007
WO-A-421.....	1500	WO-A-572.....	1602	WO-A-781.....	1001
SP-4-B-26.....	1201	WO-A-574.....	1602		1101
SP-433-D.....	0805B	WO-A-575.....	1602		1000
WO-A-439.....	0109C	AL-IG-575-A.....	0603	WO-A-782.....	1001
WO-A-445.....	1100	WO-A-592.....	0505		1100
WO-A-447.....	0503A	WO-A-593.....	1502		1101
WO-A-450.....	1203	AN-X-598.....	1811	WO-A-784.....	1003
WO-A-463.....	0301C	LO-S-FC-602.....	1205		1104
WO-A-465.....	1301	LO-S-FC-603.....	1205	WO-A-785.....	1003
WO-A-472.....	1302	WO-A-612.....	1601		1104
WO-A-473.....	1302A	WO-A-613.....	1601	WO-A-786.....	1003
WO-A-474.....	1302A	WO-A-614.....	1601A		1104
WO-A-475.....	1302A	SP-6-B-14.....	1201-1	WO-A-787.....	1003
WO-A-476.....	1302A	WC-A-619.....	1401		1104
	1505	WO-A-621.....	1401	WO-A-788.....	1003
SP-477W.....	0801	WO-A-622.....	1401		1104
WO-A-481.....	1601B	WO-A-623.....	1401	WO-A-789.....	1003
AL-SP-484.....	0601	TP-6MN27.....	1402		1104
WO-A-484.....	1500	WO-A-630.....	1209C	WO-A-792.....	1003
AL-SP-484A.....	0601	WO-A-631.....	1209C		1104
WO-A-485.....	1500	WO-A-633.....	1404	WO-A-793.....	1003
AL-X-489.....	0601	WO-A-634.....	0609B		1102
AL-X-490.....	0603	SP-634-D.....	0801	WO-A-794.....	1003
WO-A-490.....	0902	WO-A-635.....	1405		1104
WO-A-493.....	1204	WO-A-637.....	1500	WO-A-795.....	1003
	1500	SP-S-638.....	1003		1104
WO-A-495.....	1204		1104	WO-A-796.....	1003
WO-A-498.....	0204	WO-A-642.....	0301C		1104
WO-A-499.....	0204A	WO-A-647.....	1205	WO-A-797.....	1003
WO-A-500.....	1500	WO-A-655.....	0401		1104
MDR-AM-504K.....	0604B	WO-A-657.....	0401	WO-A-798.....	1003
WO-A-508.....	1500		0401-1		1104
WO-A-513.....	1602	WO-A-658.....	0401	WO-A-799.....	1003
AL-IG-514.....	0603		0401-A		1104
WO-A-514.....	1602	WO-A-668.....	1500	WO-A-800.....	1003
AL-IG-515.....	0603	AL-IG-676.....	0603		1104
CNC-515.....	2201A	AL-IG-680.....	0603	WO-A-801.....	1003
WO-A-515.....	1602	WO-A-683.....	1209C		1104
SP-5-B-15.....	1201	SP-690-W.....	0804	WO-A-802.....	1003
SP-5-B-16.....	1201	AL-IG-694.....	0603		1104
WO-A-518.....	0704	SP-710-W.....	0803	WO-A-803.....	1003
CNC-519.....	1811	WO-A-719.....	0608		1104
WO-A-519.....	0704	WO-A-738.....	0704	WO-A-804.....	1003
WO-A-520.....	0802	WO-A-739.....	0704C		1104
SP-K5-21-X.....	0902	WO-A-740.....	1403A	WO-A-805.....	1003
WO-A-524.....	0704C	WO-A-742.....	1403A		1104

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
V O-A-805	1003	WO-A-876	1401	WO-A-982	0801
WO-A-809	1104	WO-A-877	1006	WO-A-983	0801
WO-A-810	1007	WO-A-878	0704C	WO-A-984	0801
WO-A-811	1007	WO-A-879	0704C	WO-A-985	0810
WO-A-812	1003	WO-A-880	0704C	WO-A-987	0803
WO-A-813	1006	WO-A-887	0204A	WO-A-988	0803
WO-A-814	1006	SP-887-D	1201	WO-A-989	0803
AL-IG-816C	0603	WO-A-888	1101	WO-A-990	0803
WO-818	1000	WO-901	1102	WO-A-991	0801
WO-A-818	1000	AL-X-902	0602	SP-991-D	1201-1
WO-A-819	1006	WO-A-902	1102	WO-A-992	0803
WO-A-820	1000	WO-A-903	1203	SP-992-D	1201-1
WO-A-821	1006	WO-A-904	1100	WO-A-997	1201
CA-D-822	1401	WO-A-912	1102	WO-A-998	0804
WO-A-824	1006	WO-A-916	0108	WO-A-999	0804
WO-A-825	1006	WO-A-923	0704	WO-A-1000	0804
WO-A-828	1006	WO-A-924	0801	WO-A-1001	0804
WO-A-830	1006	WO-A-934	0804	AL-VRA-1002	0601B
WO-A-831	1006	WO-A-935	0801	WO-A-1002	1201
WO-A-832	1006	WO-A-936	0902	WO-A-1003	1201
WO-A-833	1006	WO-A-940	0902	AL-IAD-1004	0603-1
WO-A-838	1402	WO-A-941	0902	WO-A-1004	1201
WG-T-84J-1A	0701	WO-A-942	0902	WO-A-1005	1201
WC-AC-84J-2A	0706A	WO-A-943	0902	AL-GEB-1005A	0601
WT-T-84GJ-3	0704C	WO-A-945	0902	WO-A-1006	1201
WO-A-844	1402	WO-A-950	0902	AL-MZ-1007	0602
WG-T-84J-6	C703	WG-T-9-50P	0902	WO-A-1007	0803
AL-X-847	0601	SP-S-953	0802	AL-GEB-1007A	0601
WO-A-847	1402	WO-A-953	1007	AL-MZ-1008	0602
WG-AT-84F-8	0704C	WO-A-954	0801	WO-A-1008	1201
WO-A-851	1006	WO-A-954	0800	AL-GEB-1008B	0601
WO-A-853	1006	WO-A-956	0801	AL-MZ-1009	0602
SP-854-D	0805	SP-S-957	1006	WO-A-1009	1201
WO-A-855	1401	WO-A-957	0800	AL-MZ-1010	0602
AL-8X-55	0601B	WO-A-957	0801	AL-GCE-1012	0601
WO-A-856	1401	WO-A-958	0800	AL-X-1012	0603
SP-856-D	1201	AL-X-959	0803	FM-GP-1012	1302A
WO-A-857	1401	WO-A-959	0601	FM-GP-1013	1505
WO-A-858	1000	WO-A-959	0805A	FM-GP-1014	1302A
WO-A-859	1401	WO-A-960	0805A	WO-A-1014	1201
WO-A-860	1401	SP-S-962	1006	FM-GP-1015	1301
WO-A-861	1401	WO-A-962	0805	FM-GPW-1015	1301
WO-A-862	1007	WO-A-963	0805A	WO-A-1015	1201
WO-A-863	1007	WO-A-964	0805	FM-GPW-1016	1301
WO-A-864	1000	WO-A-965	0805	WO-A-1016	1201
WO-A-865	1100	WO-A-966	0805	CAR-101-6	0301
WO-A-866	1301B	WO-A-967	0805	WO-A-1017	1201
WO-A-867	1301A	WO-A-970	0805B	WO-A-1018	1201
WO-A-868	1301A	WO-A-971	0805B	SP-10-B-18	1201
WO-A-869	1006	WO-A-971	0706A	WO-A-1019	1201
WO-A-870	1302	WO-A-971	0805B	WO-A-1020	1201
AL-SX-870	0603	WO-A-971	2000	WO-A-1021	1201
WO-A-870	1001	WO-A-971	2001	AL-MZ-1024	0602
WO-A-871	1101	WO-A-971	2003	FM-GPW-1024	1301
WO-A-871	1003	WO-A-972	0805B	FM-GPW-1025-C	1301
AL-8X-72B	1104	WO-A-973	0805B	FM-GPW-1027	1301
WO-A-873	2204	WO-A-974	0800	FM-GPW-1029	1301
	1006	AL-X-975	0805	AL-GEG-1030	0601-1
		WO-A-975	0601-1	FM-GPW-1030	1301
		WO-A-975	0803	WO-A-1031	0607
		WO-A-976	0803	WO-A-1032	0607
		WO-A-978	0803	WO-A-1033	0607A
		WO-A-979	0902	AL-MZ-1034	0602
		WO-A-980	0803	WO-A-1036	0607

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
WO-A-1037.....	0607			FB-1203FF.....	0601
AL-VRY-1043.....	0601B	WO-A-1120.....	{ 1500	WO-A-1204.....	1500
AN-S-1044.....	1811		{ 2000	WO-A-1205.....	1500
FM-GPW-1045.....	1301		{ 2101	FB-1207-GF.....	0703
WO-A-1045.....	0302	FM-GP-1124.....	1301A	FB-1207-MGF.....	0703
WO-A-1046.....	0302	WO-A-1124.....	0503A	TR-B-1210.....	1401
WO-A-1047.....	0302	AL-GCE-1125.....	0601	WO-A-1211.....	1401
WO-A-1051.....	0110	WO-A-1125.....	0503A	EAT-IE-1212.....	0501
SP-1056.....	1007	WO-A-1126.....	{ 0101	WO-A-1212.....	1000
SP-S-1056.....	1104		{ 0501	WO-A-1214.....	0501
CAR-105A-8.....	0301	WO-A-1127.....	1500	WO-A-1215.....	0501
AL-VRA-1060.....	0601B	WO-A-1128.....	1500	WO-A-1216.....	0501
AL-VRH-1061.....	0601B-1	WO-A-1129.....	1500	WO-A-1217.....	0501
AL-VRY-1061B.....	0601B	WO-A-1130.....	1500	FM-GP-1218.....	1301A
WO-A-1061.....	0107N	AL-GCE-1133-A.....	0601-1	WO-A-1220.....	0302
WO-A-1064.....	0608	WO-A-1134.....	{ 0800	WO-A-1221.....	0300
WO-A-1065.....	0608		{ 0803	WO-A-1223.....	0301
SP-S-1066.....	1003	AL-IGS-1134-L.....	0603	WO-A-1225.....	0303
WO-A-1070.....	0607D	AL-IGS-1134-LA.....	0603-1	WO-A-1226.....	1201
WO-A-1071.....	0607D		{ 1003	WO-A-1227.....	1201
WO-A-1072.....	0607D	SP-S-1135.....	{ 1007	WO-A-1228.....	1201
AL-VRH-1073.....	{ 0601B		{ 1104	WO-A-1230.....	0107E
	{ 0601B-1	WO-A-1135.....	0801	WO-A-1231.....	0107E
WO-A-1073.....	0608	CAR-11B-35.....	0301	WO-A-1232.....	0107E
WO-A-1074.....	0607A	WO-A-1136.....	0801	WO-A-1233.....	0107E
WO-A-1075.....	0607A	WO-A-1137.....	0801	WO-A-1234.....	0107E
WO-A-1076.....	0608	WO-A-1138.....	1500	WO-A-1235.....	0107E
WO-A-1077.....	0608	FM-GP-1139.....	1302	WO-A-1236.....	0107E
WO-A-1078.....	0607A	WO-A-1142.....	1500	WO-A-1237.....	0107E
AL-IGS-1080.....	0603	WO-A-1145.....	0700	WO-A-1239.....	1403A
AL-VRH-1080.....	0601B-1	WO-A-1146.....	0401	WO-A-1241.....	1201
AL-VRY-1080B.....	0601B	WO-A-1147.....	2101	WO-A-1242.....	1201
WO-A-1082.....	0607D	AL-IGC-1148.....	0603	WO-A-1243.....	0303
WO-A-1083.....	0303	WO-A-1148.....	0700	SP-1244.....	0803
FM-GP-1088.....	1006	AL-IGC-1149.....	0603	WO-A-1244.....	0603
FM-GP-1089.....	1006	WO-A-1150.....	1500	WO-A-1245.....	0602
WO-A-1089.....	0606E	WO-A-1151.....	1500	WO-A-1246.....	0601
FM-GP-1092.....	{ 1000	WO-A-1152.....	1500	WO-A-1247.....	0107E
	{ 1006	WO-A-1153.....	1500	WO-A-1251.....	0107E
WO-A-1096.....	0604B	WO-A-1155.....	0706B	WO-A-1252.....	1602
WO-A-1098.....	2603	WO-A-1156.....	0706B	WO-A-1253.....	1500
AL-SPS-1100R.....	2204	WO-A-1157.....	2101	WO-A-1254.....	0300
FM-GP-1102.....	1302	WO-A-1164.....	0610A	WO-A-1255.....	0306B
FM-GP-1103.....	1302	WO-A-1165.....	0108	WO-A-1256.....	0306B
WO-A-1104.....	0801	WO-A-1166.....	0108	WO-A-1257.....	0306B
WO-A-1105.....	0803	WO-A-1167.....	0107A	WO-A-1258.....	0306B
AL-SPS-1105-X.....	2204	WO-A-1173.....	0303	WO-A-1259.....	0306B
SP-S-1106.....	1401	WO-A-1174.....	0303	WO-A-1260.....	0306B
WO-A-1106.....	0803	WO-A-1175.....	0303	WO-A-1261.....	0306B
FM-GP-1107.....	1302A	FM-GP-1177.....	{ 1000	WO-A-1262.....	0306B
DTC-1107DE.....	2603		{ 1301B	WO-A-1263.....	0306B
WO-A-1079.....	0608	FM-GPW-1177.....	1100	WO-A-1264.....	0306B
AL-PS-1079A.....	0602	CAR-11B-79.....	0301	WIL-ST-1265.....	0105A
FM-GP-1108.....	1302A	WO-A-1190.....	0106D	WO-A-1265.....	{ 0304
CA-S-X-1109.....	1401	WO-A-1192.....	0505		{ 1811D-1
CA-S-X-1110.....	1401	WO-A-1195.....	0800	WO-A-1268.....	0605
FM-GP-1110.....	{ 1002	WO-A-1197.....	0107J	WO-A-1269.....	0605
	{ 1007	WO-A-1198.....	0107J	WO-A-1270.....	0605
BN-C-1110-Q.....	0703	WO-A-1199.....	1403A	WO-A-1271.....	0606
WO-A-1111.....	0803	FM-GP-1201.....	1301A	WO-A-1273.....	0303
WO-A-1116.....	1402	WO-A-1201.....	1500	WO-A-1275.....	0300
WO-A-1117.....	2101	FM-GP-1202.....	1301A	WO-A-1276.....	1405
		WO-A-1202.....	1500	WO-A-1277.....	1405
		ND-1203.....	0601	WO-A-1278.....	0301C
		WO-A-1203.....	1500		

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
WO-A-1279	0301C	WO-A-1381	0706A	WO-A-1481	0300
WO-A-1283	1500	WO-A-1382	0706A	WO-A-1483	0300
WO-A-1285	2603	WO-A-1385	0706B	WO-A-1484	1207
WO-A-1287	2603	WO-A-1386	1204	WO-A-1486	1209C
WO-A-1289	{0304	WO-A-1387	1000	WO-A-1487	1209C
	0606B	WO-A-1388	0100	WO-A-1488	1209C
WO-A-1290	0301C	WO-A-1389	0609	WO-A-1490	0606E
WO-A-1291	0610A	WO-A-1392	0601A	WO-A-1491	0601A
WO-A-1292	0300A	WO-A-1395	0601A	WO-A-1494	0302
WO-A-1293	0300A	WO-A-1396	{0601	WO-A-1495	0503B
WO-A-1296	0401		0601A	WO-A-1496	1200
BX-129-S-6	1202	WO-A-1397	0601A	WO-A-1497	1200
WO-A-1300	0401	WO-A-1399	0601A	LO-S-FC-1499	1207
WO-A-1301	0303A	WO-A-1400	0601A	WO-A-1501	1209C
WO-A-1304	0607	WO-A-1401	{0601	WO-A-1503	0801
WO-A-1305	0607		0601A	WO-A-1504	0805
WO-A-1306	2203A	CAR-1-407	0301	WO-A-1505	0805B
WO-A-1307	0303A	WO-A-1409	0601B	WO-A-1506	0805B
WO-A-1308	0303A	WO-A-1410	0802	WO-A-1507	0801
WO-A-1311	0301C	WO-A-1411	0605C	WO-A-1508	0801
WO-A-1312	0609	WO-A-1412	0604A	WO-A-1509	{0800
WO-A-1313	0301C	WO-A-1414	0604A		0801
WO-A-1315	0301C	WO-A-1416	0604A	WO-A-1510	0801
CAR-1319	0301	WO-A-1418	0604A	WO-A-1511	0810
WO-A-1320	0610B	WO-A-1420	0604A	WO-A-1512	0810
AL-IG-1324-D	{0603	TP-14-DS-20	1402	WO-A-1514	1500
	0603-1	WO-A-1422	1403A		{0301C
WO-A-1325	0304	WO-A-1424	0604	WO-A-1515	1100
WO-A-1326	0901	WO-1426	0902		1209C
WO-A-1327	0901	WO-A-1426	0902	WO-A-1526	0604
WO-A-1330	2203	WO-A-1428	0901		{0107
WO-A-1331	2203	WO-A-1429	0901		0110
WO-A-1332	0606	WO-A-1431	1500		0203
WO-A-1333	0606	FM-GPW-1433	1505		0204
WO-A-1334	0605C	WO-A-1433	0902		0300
WO-A-1341	1500	WO-A-1434	0902		0301C
WO-A-1343	2204	WO-A-1435	{0701	WO-A-1532	0401
WO-A-1344	2204		0800		0501
WO-A-1345	0606	WO-A-1436	0607D		0601A
WO-A-1347	0606	WO-A-1437	0607D		0607D
WO-A-1348	0606	WO-A-1439	0607D		1201
WO-A-1349	0606D	WO-A-1440	0607D		1205
WO-A-1350	{0604C	WO-A-1443	0109		1405
	0606	TP-14DM-43	1402		2603
WO-A-1351	0606	LO-FE-1444	1205		{0107E
WO-A-1352	0606	WO-A-1445	1104		0401
WO-A-1353	0606	AL-X-1448	0603	WO-A-1533	0601B
WO-A-1354	1205	WO-A-1450	0107J		1201-1
WO-A-1355	0204A	WO-A-1451	0301C		1201
WO-A-1359	1204	WO-A-1452	0610B	WO-A-1534	0101A
WO-A-1360	0204	WO-A-1454	0610B	WO-A-1536	0101
WO-A-1361	0607	WO-A-1456	0107J	WO-A-1537	0101
WO-A-1362	0607	WO-A-1457	1209B	WO-A-1538	0107A
WO-A-1363	0607	WO-A-1460	1209B	WO-A-1539	0503
WO-A-1366	0304	WO-A-1463	0106D	WO-A-1540	0302
WO-A-1367	0304	AL-X-1465	{0601B	WO-A-1541	0301
WO-A-1368	0304		0601B-1	WO-A-1542	0701
WO-A-1369	0304	WO-A-1468	0601A	WO-A-1543	0800
WO-A-1373	1209B	WO-A-1469	0601A	WO-A-1544	1000
WO-A-1376	1209C	WO-A-1470	0601A	WO-A-1546	0501
WO-A-1377	1209C	WO-A-1472	0300	WO-A-1547	0501
WO-A-1378	1209C	WO-A-1476	0300	WO-A-1548	0101A
WO-A-1379	0706A	WO-A-1477	0300	WO-A-1549	0101A
WO-A-1380	0706A	WO-A-1480	0300	WO-A-1551	0606B

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
WO-A-1552.....	0602	WO-A-1616.....	{ 0601	WO-A-1660.....	0603
WO-A-1553.....	0602	WO-A-1617.....	{ 0601B	WO-A-1661.....	0603
WO-A-1554.....	0602	WO-A-1618.....	0601	WO-A-1662.....	0603
WO-A-1555.....	0602	WO-A-1619.....	{ 0601	WO-A-1663.....	{ 0603
WO-A-1556.....	0602	WO-A-1620.....	{ 0602	WO-A-1664.....	{ 0603-1
WO-A-1557.....	0602	WO-A-1621.....	0601B	WO-A-1665.....	0603
WO-A-1558.....	0602	WO-A-1622.....	0601	WO-A-1666.....	0606B
WO-A-1559.....	0602	WO-A-1623.....	0601	WO-A-1667.....	{ 0601B
WO-A-1560.....	0602	WO-A-1624.....	0601	WO-A-1668.....	0603
WO-A-1561.....	0602	WO-A-1625.....	0601	WO-A-1669.....	{ 0603-1
WO-A-1562.....	0602	WO-A-1626.....	0601	WO-A-1670.....	0603
WO-A-1563.....	0602	WO-A-1627.....	0601	WO-A-1671.....	{ 0603-1
WO-A-1564.....	0603	WO-A-1628.....	{ 0601	WO-A-1672.....	{ 0603
WO-A-1565.....	{ 0602	WO-A-1629.....	{ 0601-1	WO-A-1673.....	{ 0603-1
WO-A-1566.....	0606	WO-A-1630.....	0601	WO-A-1674.....	0603
WO-A-1567.....	0602	WO-A-1631.....	0601	WO-A-1675.....	0603
WO-A-1568.....	0602	WO-A-1632.....	0603	WO-A-1676.....	0603
WO-A-1569.....	0602	WO-A-1633.....	{ 0601	WO-A-1677.....	0603
WO-A-1570.....	0603	WO-A-1634.....	{ 0603-1	WO-A-1678.....	0603
WO-A-1571.....	0602	WO-A-1635.....	0601	WO-A-1679.....	0603
WO-A-1572.....	0602	AD-1636.....	0805B	WO-A-1680.....	{ 0110
WO-A-1573.....	0602	WO-A-1636.....	{ 0601	WO-A-1681.....	{ 0610B
WO-A-1574.....	0602	WO-A-1637.....	{ 0603	WO-A-1682.....	0603
WO-A-1575.....	0602	AN-X-1637.....	1811	WO-A-1683.....	0603
WO-A-1576.....	0602	WO-A-1638.....	0601	WO-A-1684.....	0603
WO-A-1577.....	0602	WO-A-1639.....	0601	WO-A-1685.....	{ 0603
WO-A-1578.....	0602	WO-A-1640.....	0601	WO-A-1686.....	{ 0603-1
WO-A-1579.....	0602	AD-1641.....	{ 0204	WO-A-1687.....	0603
WO-A-1580.....	0602	WO-A-1641.....	{ 0902	WO-A-1688.....	0603
WO-A-1581.....	0602	WO-A-1642.....	0601	WO-A-1689.....	0603
WO-A-1582.....	0602	WO-A-1643.....	{ 0203	WO-A-1690.....	0603
WO-A-1583.....	0602	WO-A-1644.....	0601	WO-A-1691.....	0603
WO-A-1584.....	0602	WO-A-1645.....	1201	WO-A-1692.....	0603
WO-A-1585.....	0602	WO-A-1646.....	1402	WO-A-1693.....	0603
WO-A-1586.....	0602	WO-A-1647.....	0601	WO-A-1694.....	0603
WO-A-1587.....	0603	WO-A-1648.....	0601	WO-A-1695.....	0603
WO-A-1588.....	0602	WO-A-1649.....	0601	WO-A-1696.....	0603
WO-A-1589.....	{ 0601	WO-A-1650.....	0601	WO-A-1697.....	0603
WO-A-1590.....	0602	WO-A-1651.....	0601-1	WO-A-1698.....	0603
WO-A-1591.....	0601	WO-A-1652.....	0601	WO-A-1699.....	0603
WO-A-1592.....	0601	WO-A-1653.....	0601-1	WO-A-1700.....	0603
WO-A-1593.....	0601	WO-A-1654.....	0604A	WO-A-1701.....	{ 0108C
WO-A-1594.....	0601	WO-A-1655.....	0603	WO-A-1702.....	0303
WO-A-1595.....	0601	WO-A-1656.....	0603	WO-A-1703.....	0601
WO-A-1596.....	0601	WO-A-1657.....	0603	WO-A-1704.....	1001
WO-A-1597.....	0601	AL-IG-1657R.....	0603	WO-A-1705.....	1402
WO-A-1598.....	0601	WO-A-1658.....	0603	WO-A-1706.....	1402
WO-A-1599.....	0601	WO-A-1659.....	0603	WO-A-1707.....	1402
WO-A-1600.....	0601			WO-A-1708.....	1402
WO-A-1601.....	0601			WO-A-1709.....	1402
WO-A-1602.....	0601			WO-A-1710.....	1006
WO-A-1603.....	0601			WO-A-1711.....	1006
WO-A-1604.....	0601			WO-A-1712.....	{ 1006
WO-A-1605.....	0601			WO-A-1713.....	1007
WO-A-1606.....	0601			WO-A-1714.....	1006
WO-A-1607.....	0601			WO-A-1715.....	1007
WO-A-1608.....	0601			WO-A-1716.....	1007
WO-A-1609.....	0601			WO-A-1717.....	1007
WO-A-1610.....	0601			WO-A-1718.....	{ 1006
*WO-A-1611.....	0601			WO-A-1719.....	1007
WO-A-1612.....	0601				
WO-A-1613.....	0601				
WO-A-1614.....	0601				
WO-A-1615.....	0601				

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
WO-A-1720.....	1007	FM-GP-2019.....	1202	FM-GP-2180-A.....	1205
WO-A-1721.....	1007	FM-GP-2021.....	1202	FM-GP-2183.....	1205
WO-A-1722.....	1007	FM-GP-2022.....	1202	FM-GP-2188.....	1205
WO-A-1723.....	1007	CAR-20-22.....	0301	WO-A-2188.....	1704
WO-A-1724.....	1007	CAR-20-26.....	0301	WO-A-2190.....	1802A
WO-A-1725.....	1007	FM-GP-2028.....	1203	FM-GP-2192.....	1207
WO-A-1726.....	1007	FM-GP-2035.....	1203	FM-GP-2194.....	1207
WO-A-1727.....	1007	FM-GP-2038.....	1203	FM-GP-2196.....	1207
WO-A-1729.....	1007	AL-MAB-2040A.....	0602	FM-GPW-2196.....	1207
WO-A-1731.....	0607	FM-GPW-2061.....	1207	FM-GP-2201.....	1207
WO-A-1733.....	0606D	CAR-20-61.....	0301	FM-GPW-2201.....	1207
WO-A-1734.....	0606D	SP-20-B-62.....	1201	FM-GP-2204.....	1207
WO-A-1735.....	{ 1201	CAR-20-72.....	0301	FM-GP-2205.....	1207
	{ 1201-1	FM-GPW-2073.....	1500	FM-GPW-2206.....	1207
WO-A-1738.....	0300	SP-20-B-73.....	1201-1	FM-GP-2208.....	1207
WO-A-1739.....	0300	FM-GP-2074.....	1209C	FM-GPW-2210-B.....	1200
WO-A-1740.....	0300	FM-GP-2076.....	1205	FM-GPW-2211-B.....	1200
WO-A-1741.....	0300	FM-GP-2077.....	1205	WO-A-2213.....	1811
WO-A-1746.....	0602	FM-GP-2078.....	1209B	WO-A-2214.....	1811
AN-X-1747.....	1811	FM-GPW-2078.....	1209B	WO-A-2220.....	1811
WO-A-1748.....	0605C	FM-GPW-2079.....	1209B	FM-GPW-2223.....	1209C
AN-X-1750.....	1811	FM-GPW-2082.....	1209D	WO-A-2226.....	{ 1811
AN-X-1751.....	1811	FM-GPW-2084.....	1209D		{ 2201A
AN-X-1754.....	1811	FM-GP-2087.....	1209B	WO-A-2227.....	1811
AN-X-1755.....	1811	AL-MZ-2089.....	0602	AL-2229.....	0605
WO-A-1757.....	0610A	FM-GPW-2096.....	1209B	WO-A-2232.....	1811
WO-A-1760.....	1403A	AL-SPS-2099M.....	2204	WO-A-2234.....	1811
WO-A-1763.....	0300A	LO-S-FD-2108-F.....	1205	AL-2235.....	0605
WO-A-1764.....	0803	LO-S-FD-2109-B.....	1205	WO-A-2235.....	1811
WO-A-1765.....	{ 1000	AL-GCE-2118.....	0601	WO-A-2238.....	1811
	{ 1809	WB-SR-2-119.....	0610	WO-A-2239.....	1811
WO-A-1767.....	0610	AL-GEG-2120-F.....	0601	FM-GPW-2244.....	1209C
WO-A-1785.....	0601-1	SP-K2-1-28.....	0603	WO-A-2246.....	1811
WO-A-1786.....	0601-1	SP-K2-1-28X.....	0803	FM-GPW-2250.....	{ 0301C
WO-A-1787.....	{ 0601-1	FM-GP-2133.....	1209C		{ 1209C
	{ 0601-C	AL-GEG-2134-F.....	0601-1	WO-A-2250.....	1811B
WO-A-1788.....	0601-1	AL-IGS-2134L.....	0603	WO-A-2255.....	1811B
WO-A-1789.....	{ 0601-1	AL-IGS-2134-LA.....	0603-1	FM-GP-2261.....	1207
	{ 0601-C	AL-IGS-2135.....	0603	FM-GPW-2261.....	1207
WO-A-1793.....	0601	FM-GPW-2135.....	1207	FM-GPW-2263.....	1209C
WO-A-1795.....	1201	WG-X-2136.....	0706B	WO-A-2263.....	1802A
WO-A-1799.....	1301	FM-GPW-2138.....	1205	FM-GPW-2264.....	1209C
SP-18B-41.....	1201-1	WO-A-2138.....	1802	FM-GPW-2265.....	1209C
WG-1AT-84H-2.....	0704	FM-GP-2140.....	1205	FM-GPW-2266.....	1209C
SP-18-5-1.....	0804	FM-GP-2143-A.....	1205	FM-GPW-2267.....	1209C
SP-18-8-1.....	0803	FM-GP-2145.....	1205	FM-GPW-2268.....	1209C
SP-18-8-2.....	0803	AL-IGC-2148C.....	0603	FM-GPW-2270.....	1201-1
SP-18-8-7.....	0802	FM-GP-2155.....	1205	FM-GPW-2270-B.....	{ 1201
WO-A-1910.....	0303	AL-MZ-2156.....	0602		{ 1201-1
AD-1911.....	1602	FM-GP-2160.....	1205	FM-GPW-2272.....	{ 1201
AD-1980.....	{ 1401	FM-GP-2162.....	1205		{ 1201-1
	{ 1602	FM-GP-2167.....	1205	FM-GPW-2274.....	1209D
AL-IAD-2001.....	0603-1	WO-A-2168.....	{ 1800	KHW-2277.....	1301
AL-IAD-2004.....	0603-1		{ 2201A	WO-A-2278.....	1802
MSP-F-2005.....	1500	AL-IGC-2168-L.....	0603-1	FM-GPW-2279.....	1201
MSP-F-2007.....	1500	SP-K2-1-68X.....	0803	FM-GPW-2281.....	1209C
MSP-F-2009.....	1500	FM-GP-2169.....	1205	FM-GPW-2298.....	1209C
FM-GPW-2010.....	1200	FM-GP-2170.....	1205	WO-A-2301.....	1811
FM-GPW-2011.....	1200	FM-GP-2173.....	1205	WO-A-2311.....	1802
AL-GCE-2012S.....	0601	FM-GP-2174.....	1205	WO-A-2312.....	1802
AL-MZ-2012-S.....	0602	CAR-21-74S.....	0301	WO-A-2325.....	1802A
FM-GP-2013.....	1203	FM-GP-2175.....	1205	TRI-2328.....	1811D
AL-IAD-2015.....	0603-1	FM-GP-2176.....	1205	WO-A-2336.....	1802A
FM-GP-2018.....	1202	FM-GP-2180.....	1205	WO-A-2359.....	1505

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
WO-A-2375.....	{ 1702 1802A	FM-GPW-2635.....	1201	WO-A-2859.....	1405
WO-A-2386.....	1811	WO-A-2639.....	2201A	WO-A-2870.....	0607
WO-A-2389.....	1800	FM-GPW-2640.....	1201-1	WO-A-2871.....	0607
WO-A-2390.....	1800	FM-GPW-2642.....	1201-1	AVM-TP-28-71.....	0202
CAR-24-23.....	0301	FM-GP-2648.....	1201	WO-A-2873.....	0607
WG-X-2428-A.....	1201	FM-GPW-2648.....	1201-1	WO-A-2875.....	0607
FM-GPW-2452A.....	1204	FM-GPW-2653.....	1201-1	AL-X-2878.....	0603-1
FM-GPW-2452-B.....	1204	FM-GPW-2656.....	1201	WO-A-2878.....	0607
WO-A-2453.....	1804	FM-GPW-2659.....	1201	WO-A-2879.....	1802A
FM-GPW-2454.....	1204	FM-GPW-2660.....	1201-1	WO-A-2883.....	1804
FM-GPW-2454A.....	1204	WO-A-2662.....	1701	WO-A-2886.....	1804
AL-IG-2456.....	0603	SP-K2-7-29.....	0902	WO-A-2891.....	1701
FM-GPW-2462.....	1205	WO-A-2744.....	2201A	WO-A-2892.....	1201
	{ 0607 0610A	WO-A-2745.....	2201A	WO-A-2895.....	1817
WO-A-2466.....	1802A	WO-A-2754.....	2201A	WO-A-2896.....	1704
	1804	WO-A-2756.....	1802A	WO-A-2897.....	2201A
WO-A-2470.....	1802A	WO-A-2757.....	1802A	WO-A-2898.....	2201A
FM-GPW-2473.....	1204	WO-A-2758.....	1802A	WO-A-2900.....	2201A
WO-A-2476.....	1811B	WO-A-2759.....	1803	WO-A-2901.....	2201A
WO-A-2478.....	1811	WO-A-2760.....	1803	WO-A-2902.....	2201A
WO-A-2479.....	1811B	SP-27-B-62.....	1201-1	WO-A-2907.....	2003
WO-A-2480.....	1811	WO-A-2771.....	1802A	WO-A-2909.....	2201
WO-A-2481.....	1811	WO-A-2772.....	1802A	WO-A-2910.....	1804
WO-A-2482.....	1811	FM-GPW-2774.....	1201-1	WO-A-2911.....	1804
WO-A-2483.....	1811	WO-A-2774.....	1817	WO-A-2914.....	2001
WO-A-2485.....	1811	WO-A-2775.....	1817	LO-S-FC-2917.....	1205
WO-A-2487.....	1811	WO-A-2776.....	1811B	WO-A-2917.....	1803
SP-K2-4-88X.....	0803	FM-GPW-2780.....	1201	WO-A-2918.....	1803
WO-A-2489.....	1811B	FM-GPW-2782.....	{ 1201 1201-1	LO-S-FC-2918-A.....	1205
WO-A-2490.....	1811	WO-A-2782.....	1804	WO-A-2919.....	1803
WO-A-2501.....	1811	WO-A-2783.....	1804	LO-S-FC-2919-B.....	1205
WO-A-2512.....	1811D	FM-GPW-2784.....	1201-1	WO-A-2925.....	1804
WO-A-2513.....	1811D	WO-A-2787.....	1804	LO-S-FC-2926.....	1205
WO-A-2515.....	1804	WO-A-2788.....	1804A	LO-S-FC-2927.....	1205
WO-A-2517.....	0604C	WO-A-2791.....	1811	WO-A-2930.....	0300
WO-A-2518.....	0604C	FM-GPW-2793.....	1201	WO-A-2931.....	1803
WO-S2542.....	1402	WO-A-2796.....	1811	WO-A-2932.....	1803
WO-A-2584.....	1811D	WO-A-2798.....	1811	WO-A-2933.....	1802
WO-A-2586.....	1811D	FM-GPW-2805.....	1201-1	WO-A-2934.....	2202
WO-A-2587.....	1811D	FM-OIT-2805.....	1201	WO-A-2935.....	1802A
WO-A-2588.....	1811D	WO-A-2810.....	{ 1802 1817	WO-A-2939.....	{ 1802A 1811
FM-GPW-2591.....	1201-1	WO-A-2811.....	1817	B & B-2940.....	0201A
FM-GPW-2592.....	1201-1	WO-A-2815.....	1802	WO-A-2940.....	1802
CAR-25-93S.....	0301	AVM-TP-2818.....	0202	WO-A-2942.....	1701
FM-GPW-2598-B.....	{ 1201 1201-1	WO-A-2830.....	1804	WO-A-2943.....	1701
FM-GPW-2606.....	1201-1	WO-A-2832.....	1817	WO-A-2945.....	1804
WO-A-2507.....	1804	WO-A-2833.....	1804	WO-A-2948.....	1802A
FM-GP-2614.....	1201	WO-A-2836.....	1704	WO-A-2950.....	1802
FM-GPW-2614.....	1201-1	WO-A-2837.....	1802A	WO-A-2952.....	0300
FM-GPW-2615.....	1201-1	WO-A-2838.....	1802A	WO-A-2953.....	0300
FM-GPW-2616.....	1201	WO-A-2841.....	1702	WO-A-2954.....	0300
FM-GPW-2616-B.....	1201-1	WO-A-2842.....	1702	WO-A-2968.....	1802A
FM-GP-2620.....	1201	WO-A-2843.....	1701	WO-A-2970.....	0300
FM-GPW-2620-B.....	1201-1	WO-A-2844.....	1701	WO-A-2979.....	1803
FM-GPW-2621.....	1201-1	FM-GPW-2848.....	{ 1201 1201-1	WO-A-2982.....	1803
FM-GPW-2630.....	1201	AVM-TP-2851.....	0202	WO-A-2983.....	1804
FM-GPW-2632.....	1201	FM-GPW-2852.....	1201	WO-A-2986.....	1804A
FM-GPW-2632-B.....	1201-1	FM-GPW-2853.....	1201	WO-A-2989.....	1811
FM-GPW-2633.....	1201-1	WO-A-2853.....	1802	WO-A-2990.....	1803
FM-GPW-2634.....	1201-1	FM-GPW-2853-B.....	1201-1	WO-A-2992.....	1803
FM-OIT-2634.....	1201	WO-A-2858.....	2103	WO-A-2994.....	1803
				WO-A-2998.....	2201F
				WO-A-2999.....	2101F

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
FM-GPW-3001.....	1000	WO-A-3144.....	1802A	FM-GPW-3304.....	1401
WO-A-3005.....	1809	FM-GP-3148-A.....	1006	FM-GPW-3304-B.....	1401
AL-VRH-3008.....	0601B-1	FM-GP-3149-A.....	1006	FM-GPW-3305.....	1401
FM-GP-3016-A.....	1007	WO-A-3155.....	1809	FM-GPW-3305-B.....	1401
FM-GP-3017-A.....	1007	WO-A-3158.....	1701	FM-GPW-3320.....	1401
LO-S-FC-3023.....	1207	WO-A-3159.....	1702	FM-GPW-3323.....	1401
AL-IGP-3028.....	0603	FM-GP-3161.....	1006	FM-GPW-3325.....	1006
AL-IGP-3028FS.....	0603	FM-GP-3162.....	1006	FM-GPW-3326.....	1401
WO-A-3029.....	1804	FM-GPW-3165.....	1401	FM-GPW-3327.....	1401
FM-GP-3031-A.....	1000	FM-GPW-3166.....	1401	FM-GPW-3328.....	1401
	1007	FM-GPW-3167.....	1000	FM-GPW-3332-A.....	1401
	1000		1401	FM-GPW-3336.....	1401
FM-GP-3034.....	1007	FM-GPW-3168.....	1401	FM-GPW-3365.....	0901
	1100	FM-GPW-3169.....	1401	FM-GPW-3370.....	0901
	1102	FM-GPW-3170.....	1401	FM-GP-3374.....	1007
AL-VRH-3035.....	0601B	FM-GPW-3171.....	1401	SP-34-B-23.....	1201-1
	0601B-1	WO-A-3173.....	1803	SP-34-B-24.....	1201-1
CAR-30-A-39.....	0301	WO-A-3179.....	1701	SP-34-B-25.....	1201-1
WO-A-3051.....	2201A	WO-A-3182.....	1803	WO-A-3434.....	1809A
LO-FC-3052.....	1209C	WO-A-3189.....	1811	WO-A-3436.....	1809A
WO-A-3052.....	2201F	WO-A-3190.....	1811	CAR-3-465-S.....	0301
WO-A-3053.....	2201A	WO-A-3197.....	1811	LO-3473.....	1205
WO-A-3054.....	2201A	WO-A-3198.....	1817	FM-GPW-3504.....	1403A
WO-A-3055.....	0300	FM-GP-3200.....	1007	FM-GPW-3506.....	1405
WO-A-3056.....	0300	FM-GP-3200-A.....	1007	FM-GPW-3509.....	1403A
WO-A-3059.....	1704	WO-A-3203.....	1811	FM-GPW-3511.....	1405
WO-A-3070.....	2201	FM-GP-3204.....	1007	FM-GPW-3514.....	1403A
AL-VRH-3071.....	0601B-1	WO-A-3204.....	1811B	FM-GPW-3517.....	1403A
AL-VRH-3071B.....	0601B	WG-X-3204-ML.....	0703	FM-GPW-3518.....	1403A
WO-A-3073.....	2201	FM-GP-3205.....	1006	FM-GPW-3520.....	1403A
FM-GPW-3074.....	1001	FM-GP-3205-A.....	1006	FM-GPW-3521.....	1403A
WG-X-3089BH.....	0706A	ND-3206.....	0803	FM-GPW-3524.....	1403A
WO-A-3094.....	2103	WO-A-3206.....	1803	WEB-3529.....	0606F
WO-A-3095.....	2103	FM-GPW-3206-A.....	1007	WO-A-3531.....	1809A
WO-A-3096.....	1702	WO-A-3207.....	1803	WO-A-3532.....	1809A
FM-GP-3105.....	1006	FM-GPW-3207-A.....	1007	WO-A-3536.....	1809A
WO-A-3107.....	1804A	WO-A-3208.....	1803	WO-A-3537.....	1809A
WO-A-3108.....	1804A	FM-GP-3208-A.....	1007	WO-A-3538.....	1809A
WO-A-3109.....	2201A	FM-GP-3208-B.....	1007	FM-GPW-3545.....	1403A
WO-A-3110.....	2201A	WO-A-3209.....	1803	WO-A-3549.....	2103
WO-A-3111.....	2201A	WO-A-3210.....	1811	WO-A-3550.....	2103
FM-GPW-3112.....	1006	WO-A-3211.....	2201	FM-GPW-3552.....	1403A
WO-A-3112.....	2201A	FM-GP-3215-A.....	1007	FM-GPW-3553.....	1403A
FM-GPW-3113.....	1006	FM-GP-3216.....	1007		1405
WO-A-3113.....	2201A	WO-A-3216.....	1800B	FM-GPW-3568.....	1403A
WO-A-3114.....	1804A		2201	FM-GPW-3571.....	1403A
FM-GP-3115.....	1006	FM-GP-3217.....	1007	WO-A-3574.....	1803
WO-A-3115.....	1804A	FM-GP-3218.....	1007	FM-GPW-3575.....	1403A
WO-A-3116.....	1803	FM-GP-3219.....	1007	WO-A-3575.....	1803
FM-GP-3117-A.....	1006	FM-GP-3221.....	1007	FM-GPW-3576.....	1403A
FM-GP-3117-B.....	1006	WO-A-3222.....	1802A	FM-GPW-3577.....	1403A
FM-GP-3117-C.....	1006	WO-A-3225.....	1704	WO-A-3578.....	1809
FM-GP-3117-D.....	1006	FM-GPW-3226.....	1007	FM-GPW-3581.....	1403A
FM-GPW-3117-D.....	1006	WO-A-3226.....	1817	FM-GPW-3583.....	1403A
WO-A-3120.....	1802A	FM-GPW-3227.....	1007	FM-GPW-3587.....	1403A
FM-GP-3122.....	1006	WO-A-3227.....	1817	FM-GPW-3589.....	1403A
FM-GPW-3131.....	1401	FM-GPW-3279.....	1402	FM-GPW-3590.....	1403A
FM-GP-3135.....	1000	FM-GPW-3280.....	1402	FM-GPW-3591-A.....	1403A
	1006	FM-GPW-3281.....	1402	FM-GPW-3593.....	1403A
AL-IGW-3139.....	0603	FM-GPW-3282.....	1402	FM-GPW-3594.....	1403A
FM-GP-3139.....	1000	FM-GP-3289.....	1402	FM-GPW-3595.....	1403A
	1006	FM-GP-3290.....	1402	FM-GPW-3600-A.....	1404
FM-GP-3140.....	1006	FM-GP-3291.....	1402	SP-N360-2.....	1007
WO-A-3141.....	2201A	FM-GP-3292.....	1402	WEB-3604.....	0606F



# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
WO-A-3615.....	2103	WO-A-4120.....	1811	LO-S-FD-4564.....	1205
FM-GPW-3626.....	0609B	WO-A-4123.....	1817A	WO-A-4592.....	1803
FM-GPW-3627.....	0609B	CCS-W-41-25.....	0105A	FM-GP-4600-C.....	1003
FM-GPW-3631.....	0609B	WO-A-4127.....	1817A	FM-GPW-4602.....	0901
FM-GPW-3635.....	0609B	WO-A-4128.....	1817A	FM-GPW-4605.....	0901
FM-GPW-3635-B.....	0609B	LO-FC-4158.....	1207	AL-EBA-4611.....	0602
FM-GPW-3646.....	0609B	AL-VRY-4203A.....	0601B	FM-GP-4619.....	1003
FM-GPW-3652.....	0609B	FM-GP-4206.....	1003	FM-86H-4621.....	1104
WO-A-3652.....	1809A	FM-GP-4207.....	1104	FM-GP-4628.....	1003
FM-GPW-3655.....	1404	FM-GPW-4209.....	1003	FM-GP-4630.....	1104
FM-GPW-3658.....	1405	FM-GP-4211.....	1003	FM-GP-4659-A.....	1003
LO-S-FC-3678-A.....	1205	FM-GPW-4212.....	1104	FM-GP-4659-B.....	1003
FM-GPW-3682-A.....	1405	FM-GPW-4215.....	1003	FM-GP-4659-C.....	1104
FM-GPW-3685.....	0604C	FM-GP-4221.....	1003	FM-GP-4659-D.....	1003
FM-GPW-3685-B.....	0604C	FM-GP-4222.....	1104	FM-GP-4660-A.....	1104
FM-GPW-3686.....	0604C	FM-GP-4228.....	1003	FM-GP-4660-B.....	1104
FM-GPW-3686-B.....	0604C	FM-GP-4229-A.....	1104	FM-GP-4660-C.....	1003
WO-A-3782.....	1803	FM-GPW-4229-A.....	1104	FM-GP-4661.....	1104
WO-A-3783.....	0706A	FM-GP-4229-B.....	1003	FM-GP-4661.....	1000
WO-A-3783.....	1803	FM-GP-4229-C.....	1104	FM-GP-4661.....	1003
WO-A-3784.....	0805B	FM-GP-4229-D.....	1104	FM-GP-4661.....	1104
WO-A-3784.....	1803	FM-GP-4229-E.....	1003	FM-GP-4661.....	1104
WO-A-3818.....	1809A	FM-GP-4230.....	1104	FM-GP-4668.....	1003
WO-A-3823.....	1809A	FM-GPW-4234.....	1102	FM-GP-4676.....	1003
WO-A-3835.....	1809A	FM-GP-4235.....	1102	FM-GP-4676.....	1104
CAR-39-10.....	0301	FM-GP-4236.....	1104	FM-GP-4676-A.....	1003
CAR-39-11.....	0301	FM-GPW-4236.....	1003	FM-GP-4676-A.....	1100
SP-39-Q-20.....	0805B	FM-GP-4241.....	1003	FM-GP-4676-A.....	1104
WO-A-3933.....	1817	FM-GP-4252.....	1301A	WO-A-4679.....	1704
WO-A-3934.....	1817	FM-GPW-4259.....	1102	WO-A-4680.....	1704
WO-A-3943.....	1803	WO-A-4260.....	1811	WG-4682-K.....	0704
WO-A-3980.....	1804A	FM-GP-4281.....	1003	WO-A-4683.....	1704
WO-A-3981.....	1804A	WO-A-4300.....	1811	WG-4686.....	0704
WO-A-3982.....	1804A	WO-A-4303.....	1811	WO-A-4687.....	1811D
WO-A-3983.....	1804A	B & B-4324.....	0201A	AL-1GC-4705.....	0603
WO-A-3984.....	1804A	CAR-43-67.....	0301	SP-475-2.....	0810
WO-A-3985.....	1804A	WO-A-4413.....	0501	FM-GP-4841.....	0902
FM-GPW-4001.....	1100	WO-A-4414.....	1800B	FM-GP-4842.....	1003
SL-SPK-4003.....	2004	WO-A-4415.....	1800B	FM-GP-4842.....	1104
FM-GPW-4004.....	1101	WG-4418-M.....	0706C	FM-GP-4863.....	0803
AL-1AD-4008.....	0603-1	WG-4496-K.....	0706A	FM-GP-4863.....	0803
AL-SW-4015.....	0606	WG-4497.....	0706A	FM-GP-4866.....	0902
FM-GP-4015.....	1001	WG-4498-K.....	0706A	CAR-48-84.....	0301
FM-GP-4015.....	1101	WO-A-4516.....	1804	AL-GEG-5001.....	0601
FM-GP-4016.....	1001	WO-A-4518.....	1804	AL-GEG-5002D.....	0601
FM-GP-4016.....	1101	LM-GP-4533.....	0902	FM-GPW-5005.....	1500
FM-GP-4016-A.....	1001			FM-GPW-5005-B.....	1500
FM-GP-4016-A.....	1101				
FM-GP-4022.....	1001				
FM-GP-4022.....	1101				
FM-GP-4032.....	1100				
FM-GP-4032.....	1102				
FM-GP-4032.....	1000				
FM-GP-4035.....	1001				
FM-GP-4035.....	1100				
FM-GP-4035.....	1101				
CB-CB-4057.....	0607				
AL-1G-4070L.....	0604				
AL-VRA-4101C.....	0601B-1				
AL-MZ-4113.....	0602				
WO-A-4116.....	1701				
WO-A-4116.....	1802A				
WO-A-4116.....	2103A				
WO-A-4118.....	2103A				

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
	0102A	WO-5067	0607	WO-A-5168	0107H
	0110	CA-S-5069	1401	FM-GPW-5175	0610A
WO-5009	0607	CA-S-5070	1401	WO-A-5181	1500
	0809	WO-A-5070	0606B	FM-GPW-5182	1502
	1502	FM-GPW-5072	1500	WO-5182	1809A
	0103B	WO-A-5072	0606B		1817
	0106D	WO-A-5073	0606B	FM-GPW-5186	0606F
	0109C	WO-A-5074	0606B		1502
	0110	FM-GPW-5077	1500	WO-A-5197	0606
	0306B	WO-A-5078	0606B	WO-5215	1500
	0401	WO-A-5079	0606B	WO-5216	2201A
	0505	WO-A-5080	0606B	WO-A-5224	1209C
	0601A	WO-A-5081	0606B	WO-A-5225	1209C
	0602		0609B	WO-A-5226	1209C
	0607D	WO-A-5082	0606B	WO-A-5227	1209C
WO-5010	0700	WO-A-5083	0604A	FM-GPW-5230	0401
	0800	FM-GPW-5084	0809	FM-GPW-5230-A	0401
	0801		1500	FM-GPW-5230-B	0401
	0804	WO-5085	0101	FM-GPW-5230-C	0401-1
	1102		1403A	WO-A-5231	0605
	1106	FM-GPW-5095	1500	FM-GPW-5233	0401-1
	1107	FM-GPW-5097	1500	FM-GPW-5245-B	0401-1
	1201	CB-CB-5099	0607	FM-GPW-5246	0401
	1201-1	WO-A-5102	0203	FM-GPW-5246-B	0401
	1203	AL-GEG-5101	0601-1	WO-5247	1809
	1402	WO-A-5104	0301C	WO-5249	1500
	1802	WO-A-5105	0107G	FM-GPW-5251	0401
	2101	FM-GPW-5106	1500	FM-GPW-5251-B	0401-1
WO-5017	0602	WO-A-5106	0303A	FM-GPW-5253	0401-1
FM-GPW-5019-B	1500	FM-GPW-5113	1500	WO-A-5256	0601B
WO-5020	1201	WO-A-5113	2000	WO-A-5260	0601B
	1205	FM-GPW-5116	1403A		0603-1
WO-5021	1602	FM-GPW-5118	1205		0401
FM-GPW-5025	1500	WO-A-5120	0300	FM-GPW-5262	0401-1
WO-A-5027	2603		1802A		0601B
FM-GPW-5028	1500	WO-5121	1704		0603-1
WO-A-5030	2603	WO-A-5121	0109C	WO-A-5262	0603-1
WO-A-5031	2603	FM-GPW-5125	1500	FM-GPW-5264	0401
WO-A-5032	2603	WO-A-5125	0110	FM-GPW-5264-A	0401
WO-A-5033	2603	WO-A-5127	1500	FM-GPW-5264-B	0401
WO-A-5034	2603	KS-5131	2204		0401-1
FM-GPW-5035	1500		0107A-1	FM-GPW-5265	0401-1
WO-A-5035	2603		0802	GPW-5266	0401-1
WO-5036	0102	WO-5134	0803	WO-5267	1500
	0204		1006	FM-GPW-5269	0401
WO-A-5036	2603		1401	FM-GPW-5270	0401
WO-A-5037	2603		2201	WO-5272	0108C
WO-5038	1403A		0101		0606E
WO-A-5038	2603	WO-5138	0108	FM-GPW-5274	0401
WO-A-5039	2603		0306B		0401-1
WO-A-5040	2603		0701	FM-GPW-5276	0401-1
WO-A-5041	0606B	WO-5140	0801	FM-GPW-5283	0401
	2603		1006		0401-1
WO-5045	0301	CA-S-5143	1401	WO-A-5288	0601
	0601	CA-S-5144	1401		0601-1
WO-A-5048	0606B	CA-S-5145	1401		0601B
WO-5051	1403A	WO-5152	2000	FM-GPW-5291B	1500
FM-GPW-5057	1500	FM-GPW-5165	0610A	FM-GPW-5298	0401
WO-5059	0204A	WO-A-5165	0107G	FM-GPW-5310	1601
WO-A-5061	0606B	FM-GPW-5168	0610A	FM-GPW-5310-B	1601
	1209C		0601-1		2000
WO-5064	0606B	WO-5168	0601B	FM-GPW-5311	1601
	0606E		0603	FM-GPW-5311-B	2000
	2204		0603-1	FM-GPW-5313-A	1601

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
FM-GPW-5313-B	1601	WO-A-5488	1301	WO-5781	1201-'
FM-GPW-5315-A	1601	WO-A-5497	0100	FM-GPW-5781-A	1601
FM-GPW-5315-B	1601	WO-A-5498	1000		1601A
FM-GPW-5316-A	1601	WO-A-5499	1000	FM-GPW-5783-A	1601B
FM-GPW-5316-B	1601	WO-A-5500	1100	LO-FC-5784	1209B
WO-5326	1500	WO-A-5504	1006		0608
FM-GPW-5330-A	1601		1500	WO-5790	1201
FM-GPW-5330-B	1601		1505		1704
FM-GPW-5333-A	1601	WO-5544	1802		1811
FM-GPW-5333-B	1601A		1802A	LO-S-FC-5795	1209B
WO-A-5335	1201		2103	WO-A-5806	0607D
WO-5336	0204A	WO-A-5548	0301	SP-5815-X	1201
FM-GPW-5337	1500	WO-A-5549	1301	WO-5848	0605
WO-A-5337	2603	WO-A-5553	0703	SP-5900-X	1201
FM-GPW-5341	1500	WO-A-5554	0703		0610B
FM-GPW-5345-A	1601	WO-A-5556	0300A	WO-5901	1500
FM-GPW-5345-B	1601A	FM-GPW-5560	1601A		2101
WO-5354	0204A	FM-GPW-5560-B	1601A		0204
	1201-1	FM-GPW-5563	1601A		0401-1
LO-FC-5381	1207	FM-GPW-5565	1601A		1201-1
WO-A-5393	1201	FM-GPW-5566	1601A		1601
	1201-1	WO-5580	0606B	WO-5910	1601A
WO-5397	2000	WO-A-5586	0607		1601B
WO-A-5415	1500	FM-GPW-5587	1601C		1601C
WO-5433	0303	FM-GPW-5587-B	1601C		1602
	1201	FM-GPW-5588	1601C		2101
	0401	FM-GPW-5588-A	1601C		0301C
	0601B	FM-GPW-5590	1601C		0303
	0602	FM-GPW-5590-B	1601C	WO-5914	0604
	0607	WO-A-5598	0606B		0606
WO-5437	0609	WO-5599	0805		2203A
	1201	FM-GPW-5601	1602		0110
	1201-1	FM-GPW-5602	1601C	WO-5916	0607
	1804	FM-GPW-5604	1601C		0809
	2103	FM-GPW-5604-A	1601C		1203
	0606B	FM-GPW-5605	1601C		0106D
WO-A-5449	1209C	FM-GPW-5607	1601C	WO-5919	0306B
	2204	FM-GPW-5607-A	1601C		1500
WO-A-5450	0304	FM-GPW-5608	1601C	WO-5920	0609
	0606B	FM-GPW-5609	1601C	WO-5922	1804
FM-GPW-5453	1602	FM-GPW-5610	1601C	WO-5934	0110
FM-GPW-5453-B	1602	FM-GPW-5611	1601C		0401-1
FM-GPW-5455	1602	WO-A-5621	0301C	WO-5938	1602
	1802	WO-A-5629	0301C		1205
WO-5455	2201A	WO-A-5630	0301C	WO-5939	1403A
	2103	WO-A-5631	0301C		1502
FM-GPW-5455-B	1602	WO-A-5632	0301C	DM-5943	0606
FM-GPW-5456	1602	WO-A-5633	0301C	DM-5944	0606
FM-GPW-5458	1602	WO-A-5691	1401	SP-5951-X	0801
FM-GPW-5459	1602		2000	SP-5962-X	0803
FM-GPW-5460	1602	FM-GPW-5705	1602	DM-5969	0606
FM-GPW-5463	1602	FM-GPW-5705-B	1602	DM-5970	0606
FM-GPW-5463-B	1602	FM-GPW-5705-C	1602	WO-A-5980	2603
FM-GPW-5464	1602	FM-GPW-5724-A	1601A	WO-A-5981	0606B
FM-GPW-5464-B	1602	FM-GPW-5724-B	1601A	LO-FC-5992	1207
WO-A-5467	1301	LO-S-FC-5727-A	1205	WO-A-5992	0601
FM-GPW-5468	1602	WO-A-5734	2204	LO-S-FC-5993	1207
WO-A-5468	1301	WO-A-5753	0401	LO-FC-5994	1207
WO-A-5469	1301		0401-1	DM-5995	0606
WO-A-5470	1301	FM-GPW-5778	1602	LO-FC-5997	1207
WO-A-5471	1301	LO-S-FC-5778	1209C	LO-S-FC-5998	1207
WO-A-5472	1301	FM-GPW-5779	1602	DM-5999	0606
FM-GPW-5481	1602	WO-5780	0606D	LO-FC-6003	1207
FM-GPW-5482	1602	FM-GPW-5781	1601	FM-GPW-6004	0100

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
FM-GPW-6005.....	0100	WO-A-612-1.....	1601	DM-6244.....	0606
LO-S-FC-6007.....	1205	WO-A-612-2.....	1601	FM-GPW-6244.....	0106
FM-GPW-6009.....	0101	WO-A-612-3.....	1601	FM-GPW-6245.....	0106
LO-S-FC-6009.....	1205	WO-A-613-1.....	1601	FM-GPW-6250.....	0106
LO-S-FC-6010.....	1205	WO-A-613-2.....	1601	FM-GPW-6256.....	0106C
LO-S-FC-6011.....	1205	WO-A-613-3.....	{1207	FM-GPW-6260.....	0106C
CB-CB-6012.....	0607		{1601	FM-GPW-6262-A.....	0106A
LO-S-FC-6014.....	1205	FM-GPW-6135-D.....	0103B	FM-GPW-6269.....	0106C
FM-GPW-6016.....	0106C	WO-A-614-1.....	1601A		{0601
LO-S-FC-6018-E.....	1205	WO-A-614-2.....	{1601A	WO-6273.....	{0602
LO-S-FC-6019.....	1205		{0607D		{1209C
WO-A-6019.....	0606F	WO-A-6143.....	{1601A	DM-6282.....	0604C
FM-GPW-6020.....	{0101		{0607D	FM-GPW-6285.....	0106
	{0106D	WO-A-6144.....	0607D	FM-GPW-6286.....	0106D
FM-GPW-6029.....	1500	WO-A-6145.....	0607A	FM-GPW-6287.....	0102A
WO-A-6029.....	1000	WO-A-6146.....	0607D		{0101
FM-GPW-6030.....	1500	WO-A-6147.....	0607D	FM-GPW-6288.....	{0106D
WO-A-6030.....	1007	WO-A-6148.....	0607D		{1800
FM-GPW-6031.....	0106D	WO-A-6149.....	0606	WO-6290.....	{2201A
WO-A-6031.....	1007	FM-GPW-6149-E.....	0103A	WO-A-6297.....	0601
FM-GPW-6038.....	0110	FM-GPW-6149-G.....	0103A	WO-A-6298.....	0601
FM-GPW-6038-A.....	0110	FM-GPW-6149-H.....	0103A		{1505
FM-GPW-6040-A.....	0110	FM-GPW-6149-J.....	0103A	WO-6299.....	{2103
FM-GPW-6040-B.....	0110	FM-GPW-6150-A.....	0103A		{0601
FM-GPW-6043.....	0110	FM-GPW-6150-C.....	0103A	WO-A-6299.....	0601
FM-GPW-6044.....	0110	FM-GPW-6150-D.....	{0103A	WO-A-6300.....	0601
FM-GPW-6050.....	0101A		{2103A	WO-A-6301.....	0601
FM-GPW-6051.....	0101A	WO-A-6152.....	0606	FM-GPW-6303-A.....	0102
FM-GPW-6051-B.....	{0101	WO-A-6154.....	0606B	WO-A-6305.....	1402
	{0101A	FM-GPW-6155-A.....	0103A	FM-GPW-6306.....	0106C
FM-GPW-6054.....	0106D	FM-GPW-6155-G.....	0103A	SKF-6307-Z.....	0704
FM-GPW-6060.....	0101A	FM-GPW-6155-H.....	0103A	FM-GPW-6308.....	0102
FM-GPW-6065.....	0101A	WO-A-6156.....	0110	FM-GPW-6310.....	0102
FM-GPW-6066.....	0101A	FM-GPW-6156-A.....	0103A	FM-GPWS-6312.....	0102
WO-A-6066.....	1601C	FM-GPW-6156-F.....	0103A	CAR-6-312S.....	0301
FM-GPW-6067.....	0101A	FM-GPW-6156-H.....	0103A	WO-A-6313.....	0607D
WO-A-6067.....	1601C	FM-GPW-6156-J.....	0103A	WO-A-6317.....	0704
WO-A-6068.....	1601C		{0204	WO-A-6318.....	0704
FM-GPW-6069.....	0110	WO-6157.....	{0601A	FM-GPW-6319.....	0102
WO-A-6069.....	1601C		{1204	WO-A-6319.....	0704
FM-GPW-6071.....	0110	CAR-61-57.....	0301	WO-A-6320.....	2603
WO-A-6072.....	1601C	FM-GPW-6158-F.....	0103A	FM-GPW-6326.....	0102A
WO-A-6073.....	1601C	WO-6163.....	1502	WO-A-6326.....	1602
FM-GPW-6074.....	0601A-1		{1505	WO-6330.....	0301
WO-A-6074.....	1601C		{1701	FM-GPW-6331-A.....	0102A
WO-A-6075.....	1601C	WO-6167.....	{1802A	FM-GPW-6331-B.....	0102A
WO-A-6084.....	1201-1		{1804	FM-GPW-6331-C.....	0102A
FM-GPW-6098.....	0110		{1811	FM-GPW-6331-D.....	0102A
FM-GPW-6105-A.....	0103		{2103	WO-A-6333.....	0300
FM-GPW-6105-C.....	0103	WO-A-6168.....	1601C	FM-GPW-6333-A.....	0102A
FM-GPW-6105-D.....	0103	WO-6169.....	1804	FM-GPW-6333-B.....	0102A
FM-GPW-6105-F.....	0103	WO-A-6169.....	1601C	FM-GPW-6333-C.....	0102A
WO-A-6108.....	1200	WO-A-6181.....	0606	FM-GPW-6333-D.....	0102A
WO-A-6109.....	1200	WO-6188.....	1209C	FM-GPW-6337-A.....	0102A
WO-A-6110.....	1207	FM-GPW-6200.....	0104	FM-GPW-6337-B.....	0102A
FM-GPW-6110-A.....	0102A	FM-GPW-6201.....	0104	FM-GPW-6337-C.....	0102A
FM-GPW-6110-C.....	0103	DM-6203.....	0606	FM-GPW-6337-D.....	0102A
FM-GPW-6110-D.....	0103	SKF-6206.....	0803	FM-GPW-6338-A.....	0102A
WO-A-6111.....	1207	FM-GPW-6211-A.....	0104A	FM-GPW-6338-B.....	0102A
WO-A-6113.....	1207	FM-GPW-6211-B.....	0104A	FM-GPW-6338-C.....	{0102A
WO-A-6116.....	1207	FM-GPW-6211-C.....	0104A		{0102C
WO-A-6117.....	1207	FM-GPW-6211-D.....	0104A	FM-GPW-6338-D.....	0102A
WO-A-6118.....	0401	WO-6214.....	0606D	FM-GPW-6339-A.....	0102A
WO-A-6119.....	0401	FM-GPW-6243.....	0106	FM-GPW-6339-B.....	0102A
				FM-GPW-6339-C.....	0102A

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
FM-GPW-6339-D	0102A	WO-A-6471	1007	FM-GPW-6642	0101
FM-GPW-6341-A	0102A	WO-A-6472	1007	FM-GPW-6642	0107
FM-GPW-6341-B	0102A	WO-6486	0401	FM-GPW-6644	0107
FM-GPW-6341-C	0102A	FM-GPW-6500-A	0105A	FM-GPW-6648	0101
FM-GPW-6341-D	0102A	FM-GPW-6500-B	0105A	FM-GPW-6648	0107
FM-GPW-6342-A	0106C	FM-GPW-6505	0105	FM-GPW-6648	0107N
FM-GPW-6342-B	0102	FM-GPW-6507	1105	FM-GPW-6654	0107
WO-A-6343	1404	FM-GPW-6510	2105	FM-GPW-6659	0101
FM-GPW-6345	0102A	FM-GPW-6510-B	0105	FM-GPW-6659	0107
	0606B	FM-GPW-6511	0105	WO-6660	1505
	1209C	WO-A-6511	1602	FM-GPW-6663	0107
	1800	FM-GPW-6511-B	0105	FM-GPW-6664	0107
WO-6352	1809A	FM-GPW-6513	0105	FM-GPW-6673	0107
	1817	FM-GPW-6514	0105	FM-GPW-6675	0107A
	2201A	FM-GPW-6520	0105C	FM-GPW-6684	0107
	2204	FM-GPW-6521	0101	FM-GPW-6700	0102A
FM-GPW-6353	0101	FM-GPW-6521	0105C	FM-GPW-6700	0101
	0102	SP-6524-X	1201-1	FM-GPW-6701	0503A
WO-A-6355	0606B	WO-A-6525	0107H	FM-GPW-6701	0102A
WO-A-6356	0606F	SP-6525-X	1201-1	FM-GPW-6701	0101
WO-A-6357	0301	WO-6536	0605	FM-GPW-6702	0102A
	0301A	FM-GPW-6546	0105	FM-GPW-6702	0101
WO-A-6361	1007	FM-GPW-6549	0105A	FM-GPW-6710	0107A
WO-A-6362	1000	FM-GPW-6549-B	0105A	FM-GPW-6710	0101
	1006	FM-GPW-6550	0105	WO-A-6710	0303
CAR-63-65	0301	FM-GPW-6552-B	0105A	FM-GPW-6722	0107N
FM-GPW-6369	0102A	FM-GPW-6555	0105C	FM-GPW-6727	0107A
WO-A-6373	0505	FM-GPW-6555-A	0101	FM-GPW-6734	0107A
WO-A-6374	0505	FM-GPW-6555-A	0105C	FM-GPW-6734	0101
FM-GPW-6375	0109			WO-A-6740	1500
SP-S-638-1	1003	SP-6563-X	1201-1	WO-A-6740	0809
	1104	WO-A-6586	0606F	WO-A-6742	0609B
WO-A-6382	1007	WO-A-6587	0606F	WO-A-6743	1003
SP-S-638-2	1003	WO-A-6588	0606F	WO-A-6743	1104
	1104	WO-A-6589	0606F	WO-A-6744	1003
WO-A-6383	1007	WO-6599	0203	WO-A-6744	1104
	1209C	FM-GPW-6600	0107	WO-A-6745	1003
SP-S-638-3	1003	FM-GPW-6604	0107	WO-A-6745	1104
	1104			WO-A-6746	0102A
FM-GPW-6384	0109			WO-A-6747	0102A
WO-A-6384	1007	WO-6606	0601A	WO-A-6748	0102A
FM-GPW-6387	0109		0700	WO-A-6749	0107
FM-GPW-6390	0102	FM-GPW-6608	1201-1	WO-A-6750	0107
	0109		0107	WO-A-6751	0201A
FM-GPW-6392	0109C	WO-6609	0110	WO-A-6752	0202
WO-A-6393	0606F		0601	WO-A-6753	0801
	1502		0601B	WO-A-6754	0302
	0106D	FM-GPW-6610	0107	WO-A-6755	0601
WO-6412	0110	FM-GPW-6614	0107	FM-GPW-6756	0107N
	0801	FM-GPW-6615	0107A-1	FM-GPW-6756	0602
WO-A-6414	2208	FM-GPW-6617	0107A-1	WO-A-6757	0604A
WO-A-6424	0300	WO-A-6618	0300	FM-GPW-6758	0107N
	0302A	FM-GPW-6619	0101	WO-A-6758	0606B
	0503		0107	FM-GPW-6758-A	0107N
WO-6428	0703	FM-GPW-6625	0101	FM-GPW-6758-B	0107N
	0706A		0107	WO-A-6759	1201
	1209C		0101	WO-A-6760	1403A
WO-6436	1601C	FM-GPW-6627	0107	FM-GPW-6762	0107N
	1602		0107A	FM-GPW-6763-A	0107E
WO-A-6439	1102		0107A-1	FM-GPW-6763-B	0107G
WO-A-6442	1000	WO-6627	1704	FM-GPW-6763-C	0107G
SP-6452-X	0801	FM-GPW-6628	0107	FM-GPW-6766-B	0107G
CAR-64-62-S	0301	FM-GPW-6630	0101	FM-GPW-6766-C	0107G
WO-A-6470	1000		0107	FM-GPW-6769	0107N

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
FM-GPW-6770.....	0107E	FM-GPW-7051-B.....	{0700	FM-BB-7220.....	0706A
FM-GPW-6771.....	{0301C		{0701	FM-GPW-7221.....	0706A
	{0107E	FM-GPW-7052.....	{0701	FM-GPW-7223.....	{0701
FM-GPW-6772.....	{0107E		{0703		{0706A
	{0301C	FM-GPW-7056.....	0706B	WO-A-7225.....	0606
WO-A-6783.....	0607D	FM-GPW-7059.....	0704	FM-GPW-7227.....	0706A
FM-GPW-6789.....	0107G	FM-GPW-7060.....	0704	FM-BB-7228.....	0706A
WO-A-6791.....	1401	FM-GPW-7061.....	0704	FM-GPW-7230.....	0706C
WO-A-6792.....	1000	FM-GPW-7062.....	0704	FM-GPW-7231.....	0706C
WO-A-6793.....	0101	FM-GPW-7062-B.....	0704	FM-GPW-7233.....	0706B
WO-A-6794.....	0103A	FM-GPW-7063.....	0703	WO-A-7233.....	0104A
WO-A-6796.....	0103A	FM-GPW-7064.....	0703	FM-GPW-7234.....	0706B
WO-A-6797.....	0103A	FM-GP-7065.....	0704	WO-A-7234.....	0104A
WO-A-6798.....	0102A	FM-B-7070.....	0703	WO-A-7235.....	0104A
WO-A-6811.....	0604C	WG-B-7070.....	0703	WO-A-7236.....	0104A
WO-A-6813.....	0604C	FM-GPW-7074.....	0902	WO-A-7238.....	0107A
WO-A-6814.....	0604C	FM-GP-7077.....	0902	FM-GPW-7240.....	0706B
WO-A-6816.....	{1003	FM-GPW-7080.....	0704	FM-GPW-7241.....	0706B
	{1104	FM-GPW-7082.....	0704	FM-GPW-7245.....	0706C
WO-A-6818.....	0107E	FM-GPW-7084.....	0902	WO-A-7260.....	0706A
WO-A-6836.....	1205	FM-GP-7092.....	0902	WO-A-7261.....	0706A
WO-A-6837.....	0301	FM-GP-7097.....	0902	WO-A-7280.....	0107H
WO-A-6838.....	0302	FM-GPW-7100.....	0704	FM-GPW-7291.....	1201-1
WO-A-6839.....	0503	FM-GPW-7102.....	0704	LO-FD-7379.....	1207
WO-A-6840.....	0301	FM-GPW-7104.....	0704	WO-A-7443.....	0800
WO-A-6851.....	0303	FM-GPW-7104-A.....	0704	WO-A-7445.....	0800
WO-A-6853.....	0303	FM-GPW-7105.....	0704	SP-7450.....	0805A
WO-A-6858.....	1404	FM-GPW-7106.....	0704	WO-A-7498.....	0110
WO-A-6861.....	1601C	FM-GPW-7107.....	0704	FM-GPW-7503.....	0204A
WO-A-6881.....	1007	FM-GPW-7109.....	0704	FM-GPW-7508.....	0203
WO-A-6882.....	1006	FM-GPW-7111.....	0704C	FM-GPW-7512.....	0204A
WO-A-6883.....	0306B	WO-A-7111.....	1007	FM-GPW-7514.....	0204A
WO-A-6885.....	0107N	FM-GPW-7113.....	0704C	FM-GPW-7515.....	0203
WO-A-6895.....	0107N	FM-GPW-7115.....	0704C	FM-GPW-7516.....	0203
WO-A-6897.....	0300	FM-GPW-7116.....	0704	FM-GPW-7517.....	0204A
WO-A-6902.....	1603	CAR-7-116S.....	0301	WO-A-7517.....	0303A
WO-A-6903.....	1603	FM-GPW-7119.....	0704C	WO-A-7518.....	0303A
WO-A-6911.....	0301C	FM-GPW-7120.....	0703	FM-GPW-7520.....	0204
WO-A-6915.....	0107G	FM-GPW-7121.....	0704C	FM-GPW-7520-A.....	0204
WO-A-6918.....	{0107G	FM-GPW-7124.....	0704	FM-GPW-7521.....	0204A
	{0301C	FM-GPW-7126.....	0704C	FM-GPW-7523.....	0204
WO-A-6919.....	0107N	FM-GPW-7129.....	0704C	FM-GPW-7525.....	0204
WO-A-6922.....	0107N	FM-GPW-7129-A.....	0704C	FM-GPW-7525-A.....	0204
WO-6923.....	1502	FM-K-7129-B.....	0501	FM-GPW-7530.....	0203
WO-A-6933.....	0501C	FM-GPW-7140.....	0704C	FM-GPW-7532.....	0203
WO-A-6941.....	0501	FM-GPW-7141.....	0704C	FM-GPW-7539.....	0204A
WO-A-6942.....	{0501	FM-GPW-7143.....	0704C	FM-GPW-7545.....	0204A
	{0501C	FM-GPW-7143-A.....	0704C	FM-GPW-7549.....	0201A
WO-A-6945.....	0501C	FM-GPW-7155.....	0704C	FM-GPW-7550.....	0201
WO-A-6946.....	0501C	WO-A-7191.....	0301C	FM-GPW-7561.....	0203
WO-A-6947.....	0501C	FM-GPW-7204.....	0706A	FM-GPW-7562.....	0203
WO-A-6949.....	0501C	FM-GPW-7206.....	0607C	FM-GPW-7563.....	0202
WO-6988.....	2202	FM-GPW-7207.....	{0701	FM-GPW-7565.....	0202
WO-6989.....	2202		{0706A	FM-GPW-7566.....	0202
FM-GPW-7000.....	0700	FM-GPW-7208.....	0706A	FM-GPW-7567.....	0202
FM-GPW-7005.....	0701	FM-GP-7209.....	0800	WO-A-7568.....	0102
FM-GPW-7005-A.....	0701	FM-GPW-7210.....	0706A	LO-FD-7568-A.....	1207
FM-GPW-7007.....	0109C	FM-GPW-7210-A.....	0706A	FM-GPW-7570.....	0202
FM-GPW-7015.....	0703	FM-GPW-7211-B.....	0706A	FM-GPW-7572.....	0202
FM-GPW-7017.....	0703	FM-GP-7213.....	0805B	FM-GPW-7577.....	0201A
FM-GPW-7025.....	0703	FM-GPW-7213.....	0706A	FM-GPW-7580.....	0203
FM-GPW-7025-A.....	0703	FM-GPW-7214.....	0706A	FM-GPW-7590.....	0202
BX-70-S-25.....	1201-1	FM-GPW-7216.....	0706A	FM-GPW-7591.....	0202
FM-GPW-7050.....	0703	FM-GPW-7217.....	0706A	WO-A-7596.....	0700

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
FM-GPW-7600.....	0205	FM-GP-7787.....	0805	WO-A-8127.....	2204
WO-A-7600.....	2603	FM-GP-7788.....	0805	WO-A-8129.....	{0605
ND-7607.....	0704	FM-GP-7789.....	0805		2204
LO-FC-7626.....	1209B	WO-A-7792.....	0604	WO-A-8130.....	0605
FM-GP-7676-A.....	1000	FM-GPW-7793.....	0805B	WO-A-8131.....	0605
WO-A-7681.....	2306	WO-A-7794.....	0601B	WO-A-8132.....	0605
WO-A-7682.....	2306	WO-A-7795.....	0601B	FM-GPW-8133.....	0501
FM-GPW-7700.....	0800	FM-GP-7796.....	0805B	AL-8X-133A.....	0601B
FM-GPW-7703.....	0800	WO-A-7796.....	0601B	AL-8X-137.....	0601B
FM-GPW-7704B.....	0800	WO-A-7797.....	0601B	FM-GPW-8155.....	1803
FM-GPW-7705.....	0801	FM-GP-7798.....	{0800	AL-8X-163.....	0601B
FM-GPW-7706.....	0801		0805	FM-GPW-8166.....	1803
FM-GPW-7707.....	{0800	WO-A-7798.....	0601B	AL-8170.....	0605
	0801	FM-GP-7798-A.....	{0800	AL-8X-173.....	0601B
FM-GP-7708.....	0801		0805	AL-8X-177.....	0607
FM-GPW-7709.....	{0800	FM-GP-7799.....	0805B	WO-A-8180.....	2204
	0801	WO-A-7799.....	0601B	WO-A-8184.....	0605
FM-GPW-7710.....	0805B	WO-A-7800.....	0601B	WO-A-8186.....	0605
FM-GPW-7711.....	0805A	WO-A-7801.....	0601B	WO-A-8188.....	0605
FM-GP-7712.....	0805A	WO-A-7802.....	0601B	WO-A-8190.....	0605
FM-GP-7718-A.....	0804	WO-A-7803.....	{0601B	WG-C8-2½.....	0706A
FM-GP-7719.....	0803		0601-1	FM-GPW-8222.....	1803
FM-GP-7722.....	0802	WO-A-7804.....	0601B	FM-GPW-8240.....	0503A
FM-GP-7723.....	0803	WO-A-7805.....	0601B	WO-A-8242.....	2204
FM-GPW-7726.....	0803	WO-A-7806.....	0601B	WO-A-8249.....	1401
FM-GP-7729.....	0803	WO-A-7807.....	0601B	FM-GPW-8250.....	0505
FM-GP-7733.....	0902	WO-A-7808.....	0601B	WO-A-8250.....	1401
FM-GPW-7736.....	0803	WO-A-7809.....	0601B	WO-A-8252.....	1401
FM-GP-7742.....	0804	WO-A-7810.....	0601B	WO-A-8253.....	1204
FM-GP-7743.....	0804	AL-EB-7819S.....	0602	FM-GPW-8255.....	{0101
FM-GP-7744.....	0804	WO-A-7820.....	0601-2		0505
FM-GP-7746.....	{0800	WO-A-7824.....	0606B	WO-A-8255.....	1602
	0803	WO-A-7825.....	0606B	WO-A-8256.....	1602
FM-GP-7747.....	0803	WO-A-7826.....	2603	FM-IGT-8260.....	0505
FM-GPW-7754.....	0801	WO-A-7830.....	1000	FM-GPW-8269.....	0505
FM-GPW-7756.....	{0701	WO-A-7831.....	1100	FM-GPW-8284.....	0505
	0800	WO-A-7832.....	0701	FM-GPW-8285.....	0505
	0801	WO-A-7833.....	0202	WO-A-8289.....	{1602
FM-GP-7761.....	0803	WO-A-7834.....	0302		2000
FM-GP-7762.....	0803	WO-A-7835.....	0108	FM-GPW-8290.....	0505
FM-GP-7763.....	0803	WO-7836.....	0602	WO-A-8291.....	1602
FM-GP-7765.....	0803	WO-A-7837.....	0810	FM-GPW-8307.....	2101
FM-GP-7766.....	0803	WO-A-7838.....	1205	AL-8X-309.....	0601B
FM-GP-7767.....	0804	WO-A-7839.....	0601	AL-8X-311.....	0601
FM-GPW-7768.....	0801	WO-A-7840.....	0601	AL-8X-321.....	0601B
FM-GPW-7768-B.....	0801	WO-A-7841.....	0602	WO-A-8322.....	0601B
FM-GPW-7769.....	0801	WO-A-7842.....	0602	WO-A-8323.....	0302
FM-GP-7770-A.....	{0800	WO-A-7843.....	0603	FM-GPW-8348.....	2103
	0803	WO-A-7844.....	0604A	FM-GPW-8349.....	2103
FM-GP-7771.....	0803	WO-A-7845.....	0606B	AL-8X-350.....	{0601B
FM-GPW-7773.....	{0800	WO-A-7848.....	2603		0601B-1
	0801	WO-A-7849.....	2603	AL-8X-353.....	0603
FM-GPW-7774.....	0801	FM-GPW-8005.....	0501	PR-S-8361.....	1602
FM-GP-7776.....	0803	FM-GPW-8005-A.....	0501	AL-8X-361.....	{0601
FM-GP-7777.....	0803	CB-CB-8010.....	0607		0601B
FM-GP-7777-A.....	0803	WO-A-8010.....	2603	AL-8X-378.....	0601B-1
FM-GPW-7781-A.....	0809	FO-HA-8031.....	0304	AL-8X-388.....	0601B-1
FM-GP-7782-A.....	0801	WO-A-8087.....	0606F	WG-AT-84F-10A.....	0704C
FM-GP-7782-B.....	0801	WO-A-8088.....	0606F	WG-T-84F-11A.....	0704
FM-GP-7782-C.....	0801	FM-GPW-8100-A.....	0501	WG-T-84F-12.....	0704
CB-CB-7783.....	0607D	WO-A-8101.....	0401	WG-C-84B-12A.....	0706A
FM-GP-7783.....	0803	WO-A-8125.....	2204	WG-T-84F-12A.....	0704
FM-GP-7784.....	0803	FM-GPW-8125-A.....	0501	WG-T-84F-13.....	0704
FM-GPW-7786.....	0805	WO-A-8126.....	2204	WG-T-84D-14C.....	0701

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
WG-T-84F-15.....	0704	WO-A-8578.....	{ 1602 2000	FM-GPW-9051.....	{ 0300 0601B
WG-T-84J-16A.....	0703	FM-GPW-8600.....	0503	WO-A-9052.....	0601B
WG-AT-84J-16A.....	0703	WO-A-8619.....	2208	WO-A-9053.....	0601B
WG-T-84-17.....	0703	FM-GPW-8620.....	0503B	WO-A-9054.....	0601B
LO-FC-8418.....	1207	FM-GPW-8620-A.....	0503B	WO-A-9055.....	0601
WG-T-84C-19.....	0704	FM-GPWS-8620-AS.....	0503B	FM-GPW-9057.....	0300
WG-T-84J-20A.....	0706B	AL-EB-8734.....	0602	FM-GPW-9062.....	0300
WG-T-84J-21.....	0706A	WO-A-8774.....	0503	FM-GPW-9063.....	0300
WG-T-84-22.....	0706B	LO-FC-8778.....	1207	FM-GPW-9065.....	0300
WG-T-84C-23A.....	0706C	LO-FC-8779.....	1207	FM-GPW-9066.....	0300
WG-T-84C-24A.....	0706C	LO-FC-8782.....	1207	FM-GPW-9069.....	0300
WG-T-84G-25.....	0703	WO-A-8809.....	1603	FM-GPW-9071.....	{ 0300 1803
WG-AT-84I-25.....	0706A	WO-A-8810.....	1603	FM-GPW-9074.....	0300
WG-T-84G-26.....	0703	WO-A-8834.....	0303A	FM-GPW-9075.....	{ 0300 0603-1
WG-T-84J-28.....	{ 0704 0704C	WO-A-8835.....	0803	WO-A-9077.....	0801
WG-T-84-29.....	0704C	WO-A-8836.....	1007	FM-GPW-9078.....	0300
WG-T-84J-29.....	0704C	WO-A-8837.....	1007	FM-GPW-9079.....	0300
WG-T-84-30.....	0706A	WO-A-8838.....	1403A	FM-GPW-9082-A.....	1803
WG-T-84B-30A.....	0704C	WO-A-8841.....	0803	FM-GPW-9083-A.....	1803
WG-T-84-31.....	0706A	WO-A-8842.....	0601	WO-A-9084.....	0401-1
WG-T-84J-31.....	0704C	WO-A-8847.....	1201-1	FM-GPW-9085-A.....	1803
WG-T-84B-32.....	0706A	WO-A-8848.....	1201-1	WO-A-9086.....	0401-1
WG-T-84GJ-35.....	0704C	WO-A-8858.....	1500	WO-A-9090.....	0401-1
WO-A-8440.....	0204	WO-A-8859.....	0800	WO-A-9093.....	0610B
WG-T-84-42.....	0706B	WO-A-8860.....	1201-1	WO-A-9094.....	0610B
WG-T-84G-48.....	0704C	AL-8X-870.....	0601	FM-GPW-9095.....	0300
WG-T-84J-54.....	0703	AL-8X-878.....	{ 0601B 0601B-1	FM-GPW-9140.....	0306B
WO-A-8463.....	{ 1601 2000	WO-A-8883.....	2603	FM-GPW-9140-A.....	0306B
WO-A-8464.....	{ 1601 2000	WO-A-8884.....	2603	WO-A-9142.....	0401-1
WO-A-8477.....	1204	AL-8X-884.....	0603	WO-A-9144.....	0606B
WG-T-84-85A.....	0704C	AL-8X-888.....	{ 0601-1 0601B	FM-GPW-9149.....	0306B
WG-84J-86A.....	0706B	WO-A-8894.....	1200	WO-A-9150.....	0401-1
CB-CB-8494.....	0607A	WO-A-8895.....	1200	FM-GPW-9154.....	0304
WO-A-8498.....	0601B	WO-A-8896.....	1200	FM-GPW-9155.....	0306B
FM-GPW-8501.....	0503	WO-A-8897.....	1200	FM-GPW-9155-A.....	0306B
LO-FC-8502.....	1209B	WO-A-8898.....	1203	WO-A-9157.....	2001
AL-EB-8503.....	0602	WO-A-8914.....	0601B	WO-A-9158.....	2001
AL-EB-8505.....	0602	WO-A-8977.....	0704C	FM-GPW-9160.....	0306B
FM-GPW-8505.....	0503	WO-A-8993.....	0601B	FM-GPW-9162.....	0306B
AL-EB-8506.....	0602	SP-8996-SF.....	0901	FM-GPW-9182.....	0306B
AL-EB-8507.....	0602	WO-A-8997.....	0601B	FM-GPW-9183.....	0306B
FM-GPW-8509.....	0503A	SP-8997-SF.....	0901	FM-GPW-9184.....	0306B
FM-GPW-8509-A.....	0503A	FM-GPW-9001.....	0300	FM-GPW-9185.....	0306B
FM-GPW-8512.....	0503	FM-GPW-9002-A.....	0300	FM-GPW-9186.....	0306B
CB-CB-8523.....	0607	FM-GPW-9002-B.....	0300	WO-A-9194.....	{ 2000 2001
FM-GPW-8524.....	0503	FM-GPW-9002-C.....	0300	WO-A-9196.....	{ 2000 2003
FM-GPW-8524-A.....	0503	FM-GPW-9030.....	0300	WO-A-9201.....	2000
FM-GPW-8530.....	0503	FM-GPW-9030-A.....	0300	WO-A-9202.....	{ 2000 2001
FM-GPW-8530-A.....	0503	FM-GPW-9030-B.....	0300	WO-A-9203.....	2001
FM-GPW-8543.....	{ 0101 0503	FM-GPW-9034-A.....	0300	CB-CB-9204.....	0607D
FM-GPW-8548.....	0503	FM-GPW-9035-B.....	0300	WO-A-9205.....	{ 0102 2000
LO-FC-8553.....	1209B	WO-A-9040.....	0601B	WO-A-9206.....	2003
FM-GPW-8557.....	0503	WO-A-9041.....	0601B	WO-A-9208.....	2001
FM-GPW-8557-A.....	0503	WO-A-9042.....	0601B	WO-9210.....	2001
WO-A-8558.....	{ 0101 0101A	WO-A-9043.....	0601B	FM-GPW-9211.....	{ 0300A 2000 2001
FM-GPW-8572-B.....	0503	WO-A-9044.....	0601B		
FM-GPW-8575.....	0502	WO-A-9046.....	0601B		
FM-GPW-8576.....	0503	WO-A-9047.....	0601B		
FM-GPW-8578.....	0502	WO-A-9048.....	0601B		
		WO-A-9049.....	0601B		
		WO-A-9050.....	0601B		



# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
CB-CB-9212.....	{ 0608 2001	FM-GPW-9363.....	0302	FM-GPW-9538.....	0301
WO-A-9214.....	2000	FM-GPW-9364.....	0302	FM-GPW-9541.....	0301
WO-A-9215.....	2000	FM-GPW-9365.....	0302	FM-GPW-9543.....	0301
CB-CB-9218.....	0607A	FM-GPW-9369.....	0304	FM-GPW-9544.....	0301
WO-A-9220.....	0606B	FM-GPW-9373.....	0302	FM-GPW-9545.....	0301
CB-CB-9225.....	0607A	FM-GPW-9377.....	0302	FM-GPW-9546.....	0301
CB-CB-9231.....	0608	FM-GPW-9378.....	0302	FM-GPW-9549.....	0301
CB-CB-9232.....	{ 0608 2000	FM-GPW-9380.....	0302	FM-GPW-9550.....	0301
CB-CB-9233.....	{ 0608 2000	FM-INC-9381.....	0302	FM-GPW-9554.....	0301
CB-CB-9234.....	0607A	FM-GPW-9386.....	0302	FM-GPW-9562.....	0301
FM-GPW-9237.....	0304	FM-GPW-9387.....	0302	FM-GPW-9566.....	0301
FM-GPW-9237-B.....	0304	FM-GPW-9388.....	0302	FM-GPW-9567.....	0301
FM-GPW-9267.....	0304	FM-GPW-9396.....	0302	FM-GPW-9569.....	0301
FM-GPW-9267-A.....	0304	FM-GPW-9396-B.....	0302	FM-GPW-9570.....	0301
FM-GPW-9268.....	{ 0107N 0304	FM-GPW-9398.....	0302	FM-GPW-9574.....	0301
FM-GPW-9269.....	0304	FM-GPW-9398-B.....	0302	FM-GPW-9575.....	0301
FM-GPW-9273.....	0605	FM-GPW-9399.....	0302	FM-GPW-9576.....	0301
FM-GPW-9275.....	0300A	WO-A-9402.....	0601	FM-GPW-9578.....	0301
FM-GPW-9275-A.....	0300A	FM-GPW-9410-B.....	0108	FM-GPW-9579.....	0301
FM-GPW-9276.....	{ 0300A 0607D	FM-IGA-9417.....	{ 0101 0302 0302A	FM-GPW-9581.....	0301
FM-GPA-9280.....	0605	FM-GPW-9424.....	0108	FM-GPW-9583.....	0301
CB-CB-9281.....	0607D	FM-GPW-9424-B.....	0108	FM-GPW-9585.....	0301
FM-GPW-9282.....	0304	FM-GPW-9426.....	0108	FM-GPW-9586.....	0301
FM-GPW-9288.....	0304	SPW-B-9427.....	0609	FM-GPW-9587.....	0301
AL-9288-A.....	0605	FM-GPW-9428.....	0108	FM-GPW-9588.....	0301
FM-GPW-9289.....	0304	FM-GPW-9435.....	{ 0101 0108	FM-GPW-9594.....	0301
WO-A-9293.....	0302	FM-GPW-9443.....	0108	FM-GPW-9595.....	0301
FM-GPW-9295.....	{ 0304 0606B	FM-GPW-9445.....	0301A	FM-GPW-9598.....	
WO-A-9307.....	0603-1	FM-GPW-9447.....	0301A	FM-GPW-9599.....	0301
WO-A-9308.....	0603-1	FM-GPW-9448.....	{ 0101 0108 0101	FM-GPW-9608.....	0301
WO-A-9309.....	0603-1	FM-GPW-9450.....	{ 0108 0401	FM-GPW-9609.....	0301C
WO-A-9310.....	0603-1	FM-GPW-9456.....	0108C	FM-GPW-9610.....	0301
WO-A-9311.....	0603-1	FM-GPW-9458.....	0108C	FM-GPW-9612.....	0301C
WO-A-9312.....	0603-1	FM-GPW-9460.....	0108C	FM-GPW-9614.....	0301
WO-A-9313.....	0603-1	FM-GPW-9462.....	0108C	FM-GPW-9615.....	0301
WO-A-9314.....	0603-1	FM-GPW-9463.....	0108C	FM-GPW-9617.....	0301C
WO-A-9315.....	0603 1	FM-GPW-9465.....	0108C	FM-GPW-9618.....	0301C
FM-GPW-9316.....	{ 0107J 0603-1	FM-GPW-9467.....	0108C	FM-GPW-9621.....	0301C
WO-A-9317.....	0603-1	FM-GPW-9467-A.....	0108C	FM-GPW-9623.....	0301C
WO-A-9318.....	0603-1	FM-GPW-9468.....	0302	FM-GPW-9624.....	0301
FM-GPW-9319-A.....	0605	FM-GPW-9469.....	0302	FM-GPW-9625.....	0301C
FM-GPW-9323.....	0107J	FM-GPW-9484.....	0108C	FM-GPW-9628.....	0301C
WO-A-9330.....	0801	WO-A-9490.....	0503B	FM-GPW-9631.....	0301
WO-A-9331.....	0801	FM-GPW-9510.....	0301	FM-GPW-9632.....	0301C
WO-A-9332.....	1201-1	FM-GPW-9515.....	0301	FM-GPW-9633.....	0301C
WO-A-9333.....	1201-1	FM-GPW-9516.....	0301	FM-GPW-9636.....	0301
WO-A-9334.....	0801	FM-GPW-9518.....	0301	FM-GPW-9637.....	0301C
WO-A-9336.....	0801	FM-GPW-9519.....	0301	FM-GPW-9637-A.....	0301C
WO-A-9337.....	0801	FM-GPW-9520.....	0301	FM-GPW-9637-B.....	0301C
WO-A-9338.....	1201-1	FM-GPW-9522.....	0301	FM-GPW-9647.....	0301C
WO-A-9339.....	1201-1	FM-GPW-9523.....	0301	FM-GPW-9650.....	0301
FM-GPW-9350-A.....	0302	FM-GPW-9525.....	0301	FM-GPW-9652.....	0301C
FM-GPW-9350-B.....	0302	FM-GPW-9526.....	0301	FM-GPW-9652-B.....	0301C
AB-A-935-1.....	0203	FM-GPW-9527.....	0301	FM-GPW-9653.....	0301C
FM-11A-9352.....	0302	FM-GPW-9528.....	0301	CL-9654.....	0606
FM-GPW-9354.....	0302	FM-GPW-9529.....	0301	FM-GPW-9656.....	0301C
FM-GPW-9355.....	0302	FM-GPW-9531.....	0301	FM-GPW-9657.....	0301C
		FM-GPW-9533.....	0301	FM-GPW-9658.....	0301C
				FM-GPW-9686.....	0301C
				FM-GPW-9686A.....	0301C
				FM-GPW-9686-B.....	0301C
				FM-GPW-9696.....	0301
				FM-GPW-9700.....	0303
				FM-GPW-9711.....	0303

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
SP-97-Q-13	0805B	FM-GPW-10088	0601	FM-GPW-10214	{0601
FM-GPW-9716	0303	FM-B-10094	{0601		{0601-2
FM-GPW-9719	0303		{0601-2	FM-GPW-10216	{0601
FM-GPW-9726	0303	FM-GPW-10098	0601		{0601-1
FM-GPW-9727	0303	FM-GPW-10100	0601	FM-GPW-10218	0601
FM-GPW-9728	0303	FM-GPW-10104	0601	WO-A-10231	{1001
FM-GPW-9731-B	0303	FM-GPW-10105	0601		{1101
FM-GPW-9735-A	0303	CAR-101-10	0301	WO-A-10269	0204
FM-GPW-9735-B	0303	FM-GPW-10112	0601-1	WO-A-10276	0603-1
FM-GPW-9737	0303	FM-GPW-10116	0601	WO-A-10277	0603-1
FM-GPW-9739	0303	FM-GPW-10118	0601	WO-A-10278	0603-1
FM-GPW-9742	0303	FM-GPW-10119	0601	WO-A-10279	0603-1
FM-GPW-9745	0303	FM-GPW-10119-B	0601	WO-A-10280	0603-1
FM-GPW-9751	0303	FM-GPW-10120	0601	WO-A-10282	{2000
FM-GPW-9752	0303	FM-GAS-10120-A	0601-2		{2001
FM-GPW-9775	0303	FM-GPW-10121	0601	WO-A-10284	{2000
FM-GPW-9775-B	0303	FM-GPW-10122	{0601		{2001
FM-GPW-9778	0303A		{0601-1	WO-A-10285	{1601B
FM-GPW-9795	0303	FM-GPW-10124	0601		{2000
FM-GPW-9799	0303	FM-GPW-10128	0601	WO-A-10286	2002
AL-9799-A	0605	FM-GPW-10129-B	0601-1	WO-A-10287	2000
FM-GPW-9896	0301	FM-GPW-10130	{0601	WO-A-10290	0601-1
FM-GPW-9905	0301		{0601-2	WO-A-10291	0601-1
FM-GPW-9906	0301	FM-GPW-10134	0601	WO-A-10292	0601-1
FM-GPW-9907	0301	FM-GPW-10138	0601	WO-A-10293	0601-1
FM-GPW-9914	{0301	FM-GPA-10139	{0601	WO-A-10294	0601-1
	{0314		{0601-2	WO-A-10300	2001
FM-GPW-9922	0301	FM-B-10141	{0601	WO-A-10301	2001
FM-GPW-9926	0301		{0603	WO-A-10302	2001
FM-GPW-9928	0301	FM-GPA-10142	0601-2	WO-A-10308	2001
FM-GPW-9930	0301	FM-GPW-10142	0601	AL-10310-A	0605
FM-GPW-9935	0301	FM-GPW-10143	0601A	AL-10311-A	0605
FM-GPW-9940	0301	FM-GPA-10145	0601A-1	AL-10312	0605
FM-GPW-9945	0301	FM-GPWS-10146-B	0601A-1	WO-A-10312	2000
AL-9979-A	0300A	FM-GPW-10147	0601-1	AL-10313-A	0605
TIM-02820	{1003	FM-GPW-10149	{0601-2	WO-A-10315	2001
	{1104		{0601A-1	WO-A-10320	1201-1
TIM-02872	{1003	FM-GPW-10153-A	0601A	WO-A-10324	1201-1
	{1104	FM-GPW-10155	0601A	WO-A-10329	1201-1
FM-GPWS-10000	0601-2	FM-GPW-10162	0601A	WO-A-10330	1201-1
FM-GPW-10000-A	0601	FM-GPA-10166	0601A-1	WO-A-10331	1201-1
FM-GPW-10005	0601	FM-GPW-10166	0601A	WO-A-10332	1201-1
FM-GPW-10005-B	0601	AL-1017-1	0605	WO-A-10333	1201-1
AL-10014-A	0605	FM-GPA-10175	0601-2	WO-A-10334	1201-1
FM-GPW-10027	0601A-1	FM-GPW-10175	0601	WO-A-10335	1201-1
FM-GPW-10035	0601	FM-GPW-10176	0601A	WO-A-10336	1201-1
FM-GPW-10041	0601	FM-GPW-10177	0601A	WO-A-10337	1201-1
WO-A-10047	0603-1	FM-GPW-10178-A	{0601A	WO-10338	1201-1
WO-A-10048	0601-1		{0601A-1	WO-A-10339	2000
FM-GPW-10050	{0601	FM-GPW-10191	0601	WO-A-10369	0601-1
	{0601-2	FM-GPW-10192	0601	WO-A-10370	{2000
WO-A-10052	1201-1	FM-01A-10193	0601		{2001
FM-GPW-10057	{0601	WO-A-10199	0401	WO-A-10394	2000
	{0601-1	FM-GPW-10202-A	0601	WO-A-10397	{2000
FM-GPW-10061	0601	FM-GPW-10202-B	0601		{2001
AL-10063	0605	FM-GPW-10202-C	0601	CB-CB-10436	0607
FM-GPW-10069	0601	FM-GPW-10206-A	0601	FM-GPW-10455	0601B
AL-10075-A	0605	FM-GPW-10206-B	0601	CB-CB-10461	0607D
FM-GPW-10082	{0601	FM-GPW-10208-A	0601	CB-CB-10462	0607D
	{0601-1	FM-GPW-10208-B	0601	FM-GPA-10505	0601B-1
FM-GPW-10086	{0601	FM-GPW-10211-A	0601	FM-GPW-10505	0601B
	{0601-1	FM-GPW-10211-B	0601	CAR-105-13	0301
FM-GPW-10087	{0601	FM-GPW-10212	{0601	FM-GPW-10523	0601B
	{0601-1		{0601-1	FM-GPW-10528	0601B

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
FM-GPW-10532.....	0601B	CAR-11B-125S.....	0301	WO-A-11868.....	0606
FM-GPW-10536.....	0601B	CAR-11B-127S.....	0301	WO-A-11869.....	0606
FM-GPW-10540.....	0601B	CAR-11B-129S.....	0301	WO-A-11870.....	0606
FM-GPW-10544.....	0601B	FM-GPW-11130.....	0602	WO-A-11871.....	0606
FM-GPW-10551.....	0601B		0602-1	WO-A-11931.....	1804A
FM-GPW-10554.....	0601B	FM-GPW-11131.....	0602	WEB-11935-B.....	0606F
WO-10558.....	1402	FM-GPW-11134.....	0601B-1	WO-A-11940.....	1820
FM-GPW-10577.....	0601B	FM-GPW-11135.....	0602	WO-A-11942.....	1820
FM-GPW-10584.....	0601B	FM-GPW-11140.....	0602	WO-A-11944.....	1820
FM-GPW-10594.....	0601B	WO-A-11176.....	0501C	WO-A-11945.....	1820
FM-GPW-10623.....	0601B	CB-CB-11193.....	0607D	WO-A-11946.....	1820
FM-GPW-10636.....	0601B	CB-CB-11199.....	0607D	FM-GPA-12000.....	0604
FM-11AS-10658.....	0610	CB-CB-11200.....	0607D	FM-GPW-12000.....	0604
BX-1067-S-3.....	1202	CB-CB-11263.....	0607D	FM-GPW-12000-B.....	0604
BX-1067-S-4.....	1202	CB-CB-11267.....	0607A	WO-A-12003.....	1802A
FM-GPW-10692.....	0610A	WO-A-11319.....	1820	FM-GPW-12006.....	0604A
FM-GPW-10693.....	0610A	FM-GPW-11350.....	0602	FM-GPW-12010.....	0603
FM-GPW-10850.....	0605	FM-GPW-11354.....	0602	WO-A-12010.....	1802A
FM-GPW-10850-B.....	0605	FM-11357-A.....	0602	FM-GPW-12010-B.....	0603-1
FM-GPW-10883.....	0605	FM-B-11357-A.....	0602	FM-GPW-12011.....	0603
FM-GPA-11001.....	0602-1	FM-B-11371.....	0602	WO-A-12011.....	1802A
FM-GPW-11001.....	0602	FM-GPW-11375.....	0602	FM-GPW-12012.....	0603
FM-GPW-11001-A.....	0602	FM-GPW-11376.....	0602	WO-A-12017.....	1802A
AL-IAD-1100-LB-1.....	0603-1	FM-GPW-11377.....	0602	WO-A-12023.....	1802A
FM-GPW-11002.....	0602	FM-B-11379.....	0602	WO-A-12024.....	1802A
FM-GPW-11005.....	0601B-1	FM-B-11381.....	0602	WO-A-12025.....	1802A
FM-GPW-11036-B.....	0602	FM-GPW-11382.....	0602	FM-GPW-12030.....	0604
	0602-1	FM-GPW-11394.....	0601B-1	WO-A-12054.....	1803
FM-GPW-11049.....	0602	FM-GPW-11395.....	0602	WO-12055.....	1803
FM-GPW-11053.....	0602	BX-1141-S-1.....	1202	WO-A-12056.....	0606
	0602-1	BX-1141-S-2.....	1202	FM-GPW-12064.....	0604
FM-GPW-11055.....	0602	CAR-114-21S.....	0301	FM-GPW-12082.....	0603
	0602-1	WO-A-11432.....	1811D		0603-1
FM-GPW-11056.....	0602	WO-A-11433.....	1811D	FM-GPW-12083.....	0603
	0602-1	FM-GPW-11450.....	0606	FM-GPW-12084.....	0603
FM-B-11059.....	0602	CB-11495.....	0607D	FM-GPW-12084-B.....	0603-1
	0602-1	CB-CB-11500.....	0607D	FM-GPW-12091-A.....	0604A
FM-GPW-11061.....	0602	CB-CB-11503.....	0607D	FM-GPW-12094.....	0603-1
	0601B-1	FM-GPW-11514-A.....	1803	FM-GPW-12095.....	0603-1
FM-GPW-11077.....	0602	WO-A-11519.....	1811D	FM-GPW-12100.....	0603
FM-GPW-11082.....	0602	TIM-11520.....	1006	FM-GPW-12100-B.....	0603-1
FM-GPW-11083.....	0602	FM-GPW-11535.....	0602	WO-A-12105.....	1802A
	0602-1	WO-11567.....	0302	FM-GPW-12106.....	0603
FM-GPA-11084.....	0602-1	WO-A-11581.....	1820	FM-GPW-12106-B.....	0603-1
FM-GPW-11084.....	0602	WO-A-11584.....	1820	FM-GPW-12120.....	0603
FM-GPA-11085.....	0602-1	TIM-11590.....	1006		0603-1
FM-GPW-11085.....	0602	FM-GPW-11649.....	0606	FM-GPW-12133.....	0603
FM-GPA-11089.....	0602-1	WO-116551.....	1202		0603-1
FM-GPW-11089.....	0602	WO-116552.....	1202	FM-GPW-12139.....	0603
FM-GPW-11090.....	0602	WO-A-11701.....	1505		0603-1
	0602-1	WO-A-11729.....	1804A	FM-GPW-12144.....	0603
FM-GPW-11094.....	0602	WO-A-11730.....	1804A	FM-GPW-12145.....	0603
	0602-1	WO-A-11732.....	1804A	FM-GPW-12151.....	0603
FM-GPW-11095.....	0602	WO-A-11757.....	2203	FM-GPW-12155.....	0603
	0602-1	CAR-117-58.....	0301	CAR-121-56.....	0301
FM-GPW-11102.....	0602	WO-A-11760.....	0610	FM-GPW-12157.....	0603-1
	0602-1	WO-A-11766.....	2603	FM-GPW-12162.....	0603
FM-GPW-11103.....	0602	WO-A-11768.....	0607D	FM-GPW-12163.....	0603-1
	0602-1	WO-A-11770.....	0607D	FM-GPW-12165.....	0603-1
CAR-11B-105.....	0301	WO-A-11850.....	2202	FM-GPW-12166.....	0603-1
FM-GPW-11107.....	0602	WO-A-11861.....	2202	FM-GPW-12167.....	0603-1
	0602-1	WO-A-11862.....	2202	FM-GPW-12169.....	0603
FM-GPW-11120.....	0602	WO-A-11866.....	0606	CAR-121-73.....	0301
WO-A-11121.....	0501C	WO-A-11867.....	0606	FM-GPW-12174.....	0603
B & B-11123.....	0201				

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
FM-GPW-12175.....	0603	FM-GPW-13020.....	0607	BT-BT-14131.....	0803
FM-GPW-12175-B.....	0603-1	FM-GPW-13022.....	0607	TIM-14131.....	0803
FM-GPW-12176.....	0603	FM-GPW-13032.....	0607	FM-GPW-14171.....	0609B
FM-GPW-12176-B.....	0603-1	FM-GPW-13043.....	0607	SP-14223.....	1103
FM-GPW-12177.....	0603	FM-GPW-13070.....	0607		1104
	0603-1	FM-GPW-13071.....	0607	CAR-14-246S.....	0301
FM-GPW-12178.....	0603	FM-GPW-13075.....	0607	BT-BT-14276.....	0803
FM-GPW-12178-B.....	0603-1	FM-GPW-13076.....	0607	TIM-14276.....	0803
FM-GPW-12182.....	0603	RG-T-13086.....	1403A	FM-GPW-14300.....	0610B
	0603-1	SP-G-13-124.....	1007	FM-GPW-14300-B.....	0610B-1
FM-GPW-12188.....	0603	FM-GPW-13150.....	0607D	FM-GPWS-14301.....	0610B-1
FM-GPW-12188-B.....	0603-1	FM-GPW-13150-C.....	0607D	FM-GPW-14301-B.....	0610B
FM-GPW-12191.....	0603	FM-GPW-13152.....	0607A	FM-GPW-14303.....	2603
FM-GPW-12193.....	0603	FM-GPW-13162.....	0607D	FM-GPW-14305.....	0606B
	0603-1	FM-GPW-13166.....	0607D	FM-GPW-14305-C.....	0606B
AL-12X-193.....	0601	FM-GPW-13170.....	0607D	FM-GPW-14305-D.....	0606B
AL-12X-194.....	0601	FM-GPW-13174.....	0607D	FM-GPW-14321.....	0604A
FM-GPW-12195.....	0603	FM-GPW-13175.....	0607D	FM-GPW-14401-A.....	0606B
AL-12X-196.....	2204	FM-GPW-13176.....	2103A	FM-GPW-14401-B.....	0606B
AL-12X-199.....	0601B	FM-GPW-13180.....	0607D	FM-GPW-14401-C.....	0606B
FM-GPW-12200.....	0603	FM-GPW-13181.....	0606B	FM-GPW-14401-D.....	0606B
FM-GPW-12217.....	0603	FM-GPA-13189.....	0606E	FM-GPW-14401-F.....	0606B
	0603-1	FM-GPW-13200.....	0607D	FM-GPW-14402.....	0606B
FM-GPW-12218.....	0603	FM-GPW-13201.....	0607D	FM-GPW-14402-A.....	0606B
WO-A-12237.....	1800	FM-GPW-13209-B.....	0607D	FM-GPW-14402-B.....	0606B
CAR-122-47S.....	0301	FM-GPW-13210-B.....	0607D	FM-GPW-14406.....	0606B
FM-GPW-12250-A.....	0606D	FM-GPW-13216.....	0607D	FM-GPWS-14407.....	0606B
FM-GPW-12250-B.....	0606D	FM-GPW-13217.....	0607D	FM-GPW-14409.....	0606B
FM-GPW-12250-C.....	0606D	FM-GPW-13380-A.....	2203A		0609B
FM-GPW-12250-E.....	0606D	FM-GP-13404-B.....	0608	FM-GPW-14416.....	0606B
CAR-12-255.....	0301	FM-GP-13405-B.....	0608	FM-GPW-14425.....	0606B
CAR-122-64S.....	0301	FM-GPW-13408-B.....	0608	FM-GPW-14425-B.....	0606B
FM-GPW-12267.....	0603	FM-GPW-13410.....	0608	FM-GPW-14431.....	0610B
FM-GPW-12283.....	0604A			FM-GPW-14432.....	0606B
FM-GPW-12284.....	0604A	FM-GPW-13434-A.....	0606B	FM-GPW-14436.....	0607
FM-GPW-12286.....	0604A		1811D	FM-GPW-14446.....	0606B
FM-GPW-12287.....	0604A	SP-13439.....	1402	FM-GPWS-14447.....	0610B-1
FM-GPW-12298-B.....	0604A	FM-GP-13448-B.....	0608	FM-GPW-14448.....	0606E
FM-GPW-12300.....	0603	SP-13449.....	1003	FM-GPW-14448-B.....	0606E
FM-GPW-12405.....	0604B		1104	FM-GPW-14448-C.....	0606E
FM-GPW-B-12410.....	0107A	FM-GP-13449-A.....	0608	FM-GPW-14448-D.....	0606E
AL-12X-544.....	0601	FM-GPA-13462.....	0607B	FM-GPA-14450-C.....	0610B-1
WO-A-12721.....	1820	FM-B-13466.....	0607B	FM-GPA-14451-C.....	0610B-1
WO-A-12750.....	1811D-1	FM-GPA-13466.....	0607B	FM-GPW-14456.....	0606B
WO-A-12751.....	1811D-1	FM-GPA-13485.....	0607A	FM-GPW-14457.....	0606B
WO-A-12752.....	1811D-1	FM-GP-13485-A.....	0607A	FM-GPW-14458.....	0606B
WO-A-12753.....	1811D-1	FM-GPA-13491.....	0607A	FM-GPW-14459.....	0606B
WO-A-12755.....	1811D-1	FM-GP-13491-A.....	0607A	FM-B-14463.....	0604A
WO-A-12756.....	1811	FM-GPA-13494.....	0607A	FM-GPW-14465.....	0606B
WO-A-12759.....	1811	FM-GP-13494-A.....	0607A	FM-B-14466.....	0604A
WO-A-12760.....	1811B	FM-GPW-13532.....	0606	FM-GPW-14487-A.....	0606B
WO-A-12761.....	1811	SP-13575.....	1003	FM-GPW-14487-B.....	0606B
WO-A-12863.....	1811D-1		1104	FM-GPW-14555.....	0610B-1
WO-A-12864.....	1811D	SP-A-1358-1.....	1003	FM-GPW-14560.....	0606B
WO-A-12865.....	1811D		1104	FM-GPW-14561.....	0606B
CAR-129-15.....	0301	FM-GPW-13704.....	0605C		2204
FM-GPW-13005.....	0607	FM-GPW-13710.....	0605C	FM-GPW-14566.....	0606B
FM-GPW-13005-A.....	0607	FM-GPW-13713.....	0605C	FM-GPW-14585.....	0304
FM-GPW-13006.....	0607	FM-GTB-13739.....	0606	FM-GPW-14589.....	0605B
FM-GPW-13006-A.....	0607	FM-GPW-13740.....	0606	CAR-146-95S.....	0301
FM-GPA-13007.....	0607A	FM-GPA-13802.....	0609	TP-14SV89-A-7.....	1402
FM-GPW-13007.....	0607A	FM-GPW-13802.....	0609	TP-14SV99-A-7.....	1402
FM-GPW-13012.....	0607	FM-GPW-13831.....	0609	CAR-150-A-10.....	0301
FM-GPW-13015.....	0607	FM-GPW-13836.....	0609B	CAR-150-97.....	0301

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
WO-A-15098.....	0603-1	SP-16991.....	1006	SP-17377.....	1102
CAR-150-98.....	0301	WP-17003.....	1006	WO-A-17401.....	0101
SP-15099.....	{1003	SP-17004.....	{1301A	WO-17402.....	0101
	1104		1301B	FM-GP-17500.....	1811D
WO-A-15137.....	1201-1	SP-17015.....	1301A	FM-GPW-17500.....	1811D
WO-A-15149.....	1201-1	SP-17016.....	1301A	FM-GPW-17526.....	1811D
WO-A-15150.....	1201-1	SP-17019.....	1006	FM-GP-17528.....	1811D
WO-A-15283.....	0103A	SP-17036.....	{1007	FM-GP-17531.....	1811D
WO-A-15304.....	0607D		1102	FM-GP-17535.....	1811D
WO-A-15339.....	0601-2	SP-17041.....	1006	FM-GP-17723-A.....	2202
SP-15367.....	{1003	SP-17047-X.....	1402	FM-GPW-17750.....	2101
	1104	SP-17048-X.....	1006	FM-GPW-17751.....	2101
WO-A-15427.....	0704	FM-GPW-17055.....	1804	FM-GPW-17752.....	1500
WO-A-15428.....	0704	SP-17071.....	1302	FM-GPW-17753.....	1500
WO-A-15485.....	0601-1	FM-GPW-17079.....	1804	FM-GPW-17754.....	1500
WO-A-15498.....	0401-1	SP-17121-X.....	1007	FM-GPW-17755.....	1500
WO-A-15507.....	0300	SP-17133-X.....	1006	FM-GPW-17759.....	1500
WO-A-15553.....	0602	SP-17135-X.....	1006	FM-GPW-17775.....	2101
WO-A-15596.....	0304	WO-A-17143.....	0606	AL-IC-17980D.....	0604
WO-A-15598.....	0304	SP-17146.....	1102	FM-GPW-18040.....	1500
WO-A-15728.....	1601A	SP-17153.....	1007	FM-GPW-18045.....	1603
WO-A-15801.....	1209B	SP-17202-X.....	1006	FM-GPW-18060.....	1603
WO-A-15802.....	1209B	SP-17205.....	1401	FM-GPW-18060-A.....	1603
WO-A-15803.....	1209B	SP-17211.....	1401	FM-GPW-18075.....	1500
WO-A-15804.....	0606D	SP-17212.....	1401	FM-GPW-18080.....	1603
SP-15926.....	{1003	SP-17213.....	1401	SP-18-12-1.....	0805
	1104	SP-17214.....	1401	SP-18-15-9.....	0801
FM-GPW-16005.....	1701	SP-17215.....	1401	SP-18-16-3.....	0801
FM-GPW-16006.....	1701	SP-17216.....	1007	SP-18-19-8.....	0801
SP-16067.....	1402	SP-17217.....	1007	SP-18-24-1.....	0803
SP-16075.....	{1003	SP-17218.....	1007	SP-18-24-4.....	1201-1
	1104	SP-17221.....	1006	FM-GPW-18274.....	{0601
FM-GPW-16082.....	1702	SP-17222.....	1006		0601-1
FM-GPW-16083.....	1702	SP-17224.....	1007	FM-GPW-18276.....	0610
FM-GPW-16094.....	1701	SP-17226-X.....	1101	FM-GPW-18288.....	0102
FM-GPW-16095.....	1701	SP-17229.....	1007	FM-GPW-18289.....	0109
FM-GPW-16105.....	1701	SP-17230.....	1007	FM-GPW-18298.....	0601B
FM-GPW-16128.....	1702	SP-17231.....	1007	FM-GPW-18299.....	0601B
FM-GPW-16132.....	1701	SP-17233.....	1007	FM-GPW-18311.....	0601B
FM-GPW-16133.....	1702	WO-A-17253.....	1201-1	FM-GPW-18314.....	0810
FM-GPW-16159.....	1701	WO-A-17254.....	1201-1	FM-GPW-18317.....	0800
SP-16383.....	{1003	FM-GPW-17255.....	2204	FM-GPA-18319.....	0602-1
	1104	FM-GPW-17255-A.....	2204	FM-GPW-18319.....	0602-1
SP-16385.....	{1003	FM-GPW-17260.....	2204	CAR-183-19.....	0301
	1104	FM-GPW-17261.....	2204	FM-GPW-18320.....	2306
SP-16409.....	{1001	FM-GPW-17261-A.....	2204	FM-GPW-18322.....	2306
	1101	FM-GPW-17262.....	2204	FM-GPW-18323.....	0108
SP-16412-X.....	{1003	FM-GPW-17271.....	0810	FM-GPW-18329.....	0602
	1104	FM-GP-17277.....	0810	FM-GPW-18330-A.....	0104A
FM-GPW-16610.....	1704	FM-GP-17285.....	0810	FM-GPW-18330-B.....	0104A
FM-GPW-16684.....	1704	SP-17301-X.....	1006	FM-GPW-18330-C.....	0104A
FM-GPW-16802.....	1704	SP-17302-X.....	1006	FM-GPW-18330-D.....	0104A
FM-GTB-16847.....	1704	SP-17307.....	1401	FM-GPW-18336.....	1007
FM-GTB-16848-A.....	1704	SP-17308-X.....	1402	FM-GPW-18337.....	0306B
SP-16866.....	1003	SP-17309-X.....	1402	FM-GPW-18338.....	1006
FM-GPW-16892.....	{1704	SP-17310-X.....	1001	FM-GPA-18342.....	0601-2
	1811	WO-A-17317.....	0301C	FM-GPW-18342.....	0601
SP-16968-X.....	{1003	WO-A-17318.....	0301C	FM-GPW-18342-B.....	0601
	1104	FM-GPW-17333.....	0810	FM-GPW-18343.....	0603
SP-16976.....	{1001	WO-A-17344.....	2203	FM-GPW-18343-B.....	0603-1
	1101	SP-17347.....	1402	FM-GPW-18347.....	0102A
SP-16979.....	{1001	SP-17356-X.....	1007	FM-GPW-18348.....	0102A
	1101	SP-17359.....	1007	FM-GPW-18349.....	0102A
SP-16983.....	1003	SP-17361.....	1007	FM-GPW-18350.....	0102A

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
FM-GPW-18352.....	0301	FM-GPW-18515-B.....	0503	FM-20366-S.....	0302A
FM-GPW-18354.....	0603	FM-GPW-18515-C.....	0503		0503
FM-GPW-18355.....	0800	BOW-BT-18520.....	1301A		0703
FM-GPW-18355-B.....	0800	TIM-18520.....	1301A		0706A
FM-GPW-18356.....	0701	FM-GPA-18535.....	0602-1	FM-20389-S.....	1500
FM-GPW-18356-B.....	0701	FM-GPW-18535.....	0602	FM-20406-S.....	1505
FM-GPW-18357.....	0301	BOW-BT-18590.....	1301A	SP-2058-1.....	1000
FM-GPW-18357-B.....	0301	TIM-18590.....	1301A	VC-2066C-C1.....	0604B
FM-GPW-18358.....	0201A	FM-GPW-18644-A.....	0107E	SP-K2-14-69.....	0902
FM-GPW-18359.....	0202	FM-GPW-18660.....	0107E	AL-21608.....	0605
FM-GPW-18359-B.....	0202	FM-GPW-18660-A.....	0107E	SP-K2-16-53.....	0902
FM-GPW-18360.....	0801	SP-18-66-1.....	0805A	FM-GPW-2206-A2.....	1207
FM-GPW-18361.....	0606B	FM-GPW-18662-A.....	0107E	FM-GP-2206-H2.....	1207
FM-GPW-18361-B.....	0606B	FM-GPW-18662-B.....	0107E	SP-K2-2-329.....	0902
FM-GPW-18361-D.....	0606B	FM-GPW-18663.....	0107A-1	SP-22-72-5.....	0805
FM-GPW-18363.....	0601	FM-GPW-18666.....	0107G	SP-K2-3-198X.....	0902
FM-GPW-18363-B.....	0601	FM-GPW-18667.....	0107J	FM-23395-S.....	1500
	0601-2	SP-18-66-7.....	0805A	SP-K2-4-108-X.....	1003
FM-GPW-18363-C.....	0601	SP-18-67-2.....	0805		1104
FM-GPW-18363-D.....	0601-1	FM-GPW-18675.....	0107E	FM-24308-S.....	0603
FM-GPW-18364.....	0604A	SP-18-67-5.....	0805	FM-24310-S.....	2201A
FM-GPW-18364-B.....	0604A	FM-GPW-18675-A.....	0107E	FM-24325-S.....	0202
FM-GPW-18365.....	1000	FM-GN-18679.....	0107G	FM-24327-S.....	0602-1
FM-GPW-18365-B.....	1000	FM-GPW-18685.....	0107E	FM-24328-S.....	0804
FM-GPW-18366.....	1100	FM-GPW-18685-A.....	0107E		0106D
FM-GPW-18366-B.....	1100	FM-9N-18686.....	0107J	FM-24348-S.....	0110
FM-GPW-18367.....	1202	FM-GPW-18687.....	0107E		0801
FM-GPW-18368.....	1207	FM-GPW-18687-A.....	0107E	FM-24369-S.....	0610B
FM-GPW-18370.....	1205	FM-GPW-18688.....	0107A-1	FM-24407-S.....	1804
FM-GPW-18370-B.....	1205	FM-GPW-18688-A.....	0107E	FM-24408-S.....	0505
FM-GPW-18371.....	1207	FM-GPW-18691.....	0107E		0800
FM-GPW-18372.....	1207	FM-GPW-18691-A.....	0107E	FM-24411-S.....	1502
FM-GPW-18373.....	0302	FM-GPW-18825-B.....	2603	FM-24426.....	0204
FM-GPW-18373-B.....	0302	FM-GPW-18840.....	2603		1204
FM-GPW-18373-C.....	0302	FM-GPW-18841.....	2603	FM-24428-S.....	0602
FM-GPW-18373-D.....	0302	FM-GPW-18846.....	0606B		0602-1
FM-GPW-18374.....	1403A		2603	FM-24489-S.....	0109C
FM-GPW-18375.....	0302	FM-GPW-18849.....	2603		0700
FM-GPA-18376.....	0602-1	FM-GPW-18850.....	2603	FM-24555-S.....	1403A
FM-GPW-18376.....	0602	FM-GPW-18852.....	2603	KHW-24562.....	1301
FM-GPW-18376-B.....	0602	FM-GPW-18853.....	2603		1302
FM-GPW-18377.....	1201	FM-GPW-18854.....	2603	KHW-24566.....	1302A
FM-GPW-18377-B.....	1201-1	FM-GPW-18857.....	2603		1302A
FM-GPW-18379.....	0107	FM-GPW-18858.....	2603	KHW-24568.....	1302A
FM-GPW-18380.....	0107	FM-GPW-18859.....	2603	KHW-24575.....	1302A
FM-GPW-18382.....	0609B	FM-GPW-18871.....	2603	KHW-24576.....	1302A
FM-GPW-18383.....	1401	FM-GPW-18872.....	2603	FM-24622-S.....	1007
FM-GPW-18384.....	1003	FM-GPW-18873.....	2603	KHW-24659.....	1302
	1104	FM-GPW-18874.....	2603	TIM-24721.....	1003
FM-GPW-18386.....	1003	FM-GPW-18876.....	2603		1104
	1104	FM-GPW-18876-B.....	2603	TIM-24780.....	1003
FM-GPW-18387.....	0101	FM-GPWS-18935.....	0606		1104
FM-GPW-18387-B.....	0101	FM-GPW-18935-A.....	2603	KHW-25646.....	1302
FM-GPW-18388.....	1003	FM-GPW-18935-B.....	2603	KHW-25647.....	1302
	1104	FM-GPW-18936-A.....	2603	KHW-25692.....	1301
FM-GPW-18389.....	1003	FM-GPW-18937.....	2603	KHW-25693.....	1301
	1104	FM-GPW-18937-B.....	2603	KHW-25695.....	1301
FM-GPW-18390.....	0101	FM-GPW-18938-B.....	2603	KHW-25696.....	1301
FM-GPW-18390-B.....	0101	FM-GPW-18960.....	2603	PU-25755.....	0107E
FM-GPW-18391.....	1007	FM-20046-S.....	1205	PU-25756.....	0107E
SP-18-39-2.....	0801	WEB-20098.....	0606F	PU-25757.....	0107E
FM-GPW-18397.....	0902	WEB-20099.....	0606F	PU-25791.....	0107E
FM-GPW-18512.....	0107A	FM-20326-S.....	2101	PU-25802.....	0107E
FM-GPW-18515.....	0503	FM-20344.....	1704	KHW-25917.....	1301
				KHW-25930.....	1301

# PART NUMBER INDEX—MANUFACTURERS (Cont'd)

Number	Group	Number	Group	Number	Group
FM-26496-S	0606D		0102A		0106D
PU-26687	0107E		0110	WO-50163	1702
FM-27068-S	1802A	FM-34809-S	0607		1802
PU-27078	0107E		0809		2101
FM-27161-S	0601-2		1502	SP-50-39-2	1006
SP-K2-76-17	0902	FM-34811-S	1403A	SP-50-39-4	1001
TRU-SA-2844-1	0203	FM-34842-S	0601B		1101
DM-29392	0605C	FM-34886-S	1804A	WO-50769	1500
SP-K2-94-29	0902		0603	WO-A-50769	1500
AL-VRY-30700	0601B	FM-34902-S	0607D	SP-50-80-1	0805
FM-31079-S	0107		0609B	WO-50802	2003
TIM-31520	1003	FM-34906-S	0108		2103A
	1104	FM-34921-S	1403A	WO-50814	1804A
TIM-31593	1003		0606	WO-50878	0401
	1104	FM-34922-S	1003	WO-50917	0106C
FM-31583-S	0603		1104		1702
FM-31596-S	0602	FM-35676-S	0503A	WO-50921	1802
	0602-1	FM-35798-S	1601		1802A
FM-31662-S	0301		1601B	WO-50922	2000
FM-31866-S	0606B	FM-GPW-3600-A3	1404		0401
FM-32852-S	0607	FM-36800-S	0601	WO-50929	0401-1
FM-GB-33415-A	0601-2	FM-36825-S	2203A		1201
FM-33786-S2	1201	FM-37206-S	0607		1201-1
FM-33795-S	1811	FM-38095-S	0607	WO-50937	0501C
FM-33796-S	2203A	NP-38373	1007	WO-50968	2000
	1802A	NP-38491	1007	WO-50992	0204
FM-33797-S	1804	NP-38492	1007	WO-51091	0101
	2103	NP-38493	1007		1403A
FM-33798-S	1602	SP-K3-86-89	0902	DM-51104	0604C
FM-33799-S	1802	BX-39953	1203		0606
	1802A	BX-39956	1203	WO-51182	2103
	0401-1	KS-40333	2204	WO-51248	0601
FM-33800-S	0610B	KS-40350	2204		1701
	2101	KS-40355	2204	WO-51304	1804
FM-33802-S	1502	LK-S-40936	0106C		2103
FM-33909-S	0303	BX-41545	1203		2201A
FM-33929-S	0102	BX-41665	1203	WO-51308	1405
	0109	BX-41876	1203		1602
FM-33979-S	1201-1	BX-41887	1207	WO-51371	1403A
FM-34039-S	0601-2	BX-44517	1202	AL-5X-1376	0602
FM-34129	0300	FM-B-45482-C	1811	WO-51391	2201A
FM-34141-S	0601-2	BX-45771	1203		0107E
	0602-1	BX-45908	1207		0609
SP-SKA-34172	1000	BX-46491	1207		1201
FM-34711-S	0301	BX-46667	1201-1	WO-51396	1201-1
FM-34745-S	0300	BX-47047	1200		1405
	1804	BX-47048	1200		1601B
FM-34747-S	1802	BX-47050	1104		1702
	2201A	BX-47051	1104		0602
FM-34753-S	0606F	BX-47054	1203	WO-51405	0800
FM-34802-S	0601-1	BX-47656	1201-1		1802A
FM-34803-S	0601-1	BX-47660	1201-1		0602
	0602-1	BX-47661	1201-1	WO-51406	1802A
FM-34805-S	2203A	BX-47668	1201-1		0106A
FM-34806-S	0601-2	BX-47669	1201-1		0607
	0602-1	BX-47670	1201-1		0801
	0801	BX-47674	1201-1		1505
FM-34807-S	1201	BX-47675	1201-1	WO-51485	1800
	1201-1	BX-47676	1201-1		1802A
	2101	BX-47677	1201-1		1811
FM-34808-S	1502	BX-47678	1201-1		2103
		WO-50151	0610B	WO-51486	0108
			1500		1403A
				WO-51492	0606

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
WO-51495.....	2201A		1802A		0603
WO-51514.....	1704	WO-51840.....	1804		0606B
	1811	(Cont'd)	1811		0606E
	0401	WO-51858.....	0503		0607
	1001	WO-51875.....	0101		1209C
	1101		0105C		1704
WO-51523.....	1205	WO-51904.....	1201	WO-52221.....	1800
	1701		1201-1	(Cont'd)	1804A
	1802A	WO-51954.....	1802A		1809A
	1804	WO-51969.....	0107		1811D-1
	0601		2202		1817
WO-51532.....	0601-1	WO-51977.....	0300		2201A
	0601B	WO-51986.....	2000		2204
WO-51537.....	0303		0501C	WO-52226.....	0505
WO-51539.....	1804	WO-52031.....	0606	WO-52236.....	1802A
WO-51545.....	1802A		1704		1817
WO-51546.....	0302		1804		0401-1
WO-51561.....	1804		1817A	WO-52274.....	1205
WO-51575.....	0803	WO-52046.....	2000		1802A
WO-51612.....	1403A		2001	WO-52290.....	0301
	1602	WO-52076.....	1704		0102
WO-51658.....	0401	WO-52101.....	1500	WO-52330.....	0109
WO-51732.....	0301C		1505	WO-52332.....	0606
	0606		0303A	WO-52349.....	1502
WO-51738.....	1207		0601		0607
	0603	WO-52131.....	0604C	WO-52350.....	1800
WO-51763.....	1201		0606		2201A
	1201-1		0609B	WO-52372.....	0401
WO-51798.....	1205		0204	WO-52379.....	0109C
WO-51804.....	0607B		0301C		0700
WO-51819.....	0107	WO-52132.....	0401-1	WO-52428.....	0108
WO-51823.....	2101		0602	WO-52468.....	0501C
	0107		1006	WO-52483.....	1207
	0107A-1	WO-52142.....	1803	WO-52525.....	0107
	0107E	WO-52161.....	0501C	WO-52527.....	2000
	0110	WO-52165.....	0300		0106D
	0204	WO-52167.....	1704		0108
	0300		1803		0109
	0301C		0300		0109C
	0302A		0501C		0110
	0401	WO-52168.....	0503A		0301A
	0401-1		1201	WO-52542.....	0306B
	0501		1704		0401
	0503		1811		0601A
WO-51833.....	0601		0300		0700
	0601A	WO-52170.....	1803		1203
	0601B		1804		2000
	0609	WO-52182.....	0609		2001
	0610A		0110	WO-52600.....	1701
	0706A	WO-52189.....	0804	WO-52614.....	1809A
	0801		2201A	WO-52615.....	0301
	0904	WO-52207.....	1201		0601
	1201	WO-52213.....	1811D-1	WO-52651.....	1804A
	1201-1		0300		0300
	1205		0501C		0303
	1405		1209C		0601
	1601B	WO-52217.....	1704		0601B
	2101		1804	WO-52702.....	0603
	2103		1811		0604
	2201A		2000		1704
	0607	WO-52220.....	1809A		1804
WO-51840.....	1505		0302		1811
	1702	WO-52221.....	0601		
	1800		0602		



# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
	0601		0505	WO-53061	0606F
WO-52705	0606D	WO-52911	0800	WO-53069	0606F
	0609	WO-52921	0606F	WO-53071	0607D
	1811	WO-52925	1201	WO-53084	2000
	0300		1403A	DM-53097-A	0606D
	0301C	WO-52940	1006	WO-53103	1704
	0303	WO-52941	1006	WO-53108	0107G
	0503A	WO-52942	1301A		0301C
	0601	WO-52943	1301A	WO-53131	0401
	0603	WO-52944	0204		0109
	0606	WO-52945	1500	WO-53135	1702
WO-52706	0608	WO-52946	1603		1802
	0609	DM-52947	0606		1802A
	1201	WO-52954	0303	CAR-53A-168S	0301
	1201-1		0609	DM-53170A	0604C
	1209C	WO-52960	0601	WO-53194	0606F
	1803		0602		2204
	1804	WO-52963	1811	WO-53195	0501C
	1811	WO-52968	1804A	WO-53204	1704
	2203A	WO-52983	0401	WO-53243	1811D
	0603	WO-52987	2201A	CAR-53A-251S	0301
WO-52754	0607D	WO-52990	1804A	WO-53266	1820
	0609B	WO-52993	0607	WO-53285	0401-1
	0303	WO-53013	2203	WO-53289	0401
WO-52768	0606B	WO-53014	2203	WO-53313	0606F
	0610A	WO-53020	1809A		2000
WO-52781	0601B	WO-53024	0604	WO-53355	2001
WO-52804	0102		0606F		2000
	0109		0601A	WO-53356	2001
WO-52809	1803		0602	WO-53379	1201-1
	1811D-1	WO-53025	1701	WO-53384	0301C
	0306B		1802A	DM-53414	0606
WO-52819	0601A		2103A	WO-53474	0607B
	1701		0602	DM-53875-A	0606
WO-52825	0104	WO-53026	1702	DM-53879	0606
WO-52832	1500		1802	DM-53895	0606
WO-52835	1205		1802A	FM-GPW-5588-A2	1601C
WO-52836	1205	WO-53027	0501	SP-5-74-11	0902
WO-52837	0607B		0607D	FM-60093-S	1500
WO-52839	1209C		0703	CB-60142	0608
WO-52840	1209C		1001	CB-60242	0608
WO-52845	1802A		1006	FM-GPW-6031-A3	0106D
WO-52847	0606F	WO-53029	1101	FM-60375-S	1804
WO-52857	1802A		1602	FM-60416-S	1500
WO-52863	1802		1701	FM-60446-S	1500
WO-52874	1403A		2003	FM-60470-S	2201A
	1003	WO-53031	1817A	CAR-61-119	0301
WO-52876	1104		1820	CAR-61-128	0301
	1003	WO-53032	2000	CAR-61-143	0301
WO-52877	1104		2001	CAR-61-169	0301
	1003	WO-53033	0607D	CAR-61-171	0301
WO-52878	1104		1817A	CAR-61-190	0301
	1003		0401	CAR-61-207	0301
WO-52879	1104	WO-53037	0601A	CAR-61-272	0301
	1003		1820	SZE-61400	0609
WO-52880	1102	WO-53038	2000	CAR-62-134	0301
	1003		2001	CAR-62-135-S	0301
WO-52881	1104	WO-53047	1820	BX-62-S-176	1207
	0803		2103A	FM-62216-S	0706A
WO-52883	0606B	WO-53048	2103A	FM-62218-S	0300
WO-52889	0300	WO-53050	2103A	WO-63059	2101
WO-52891	1802A	WO-53056	1817A	FM-63071-S	1201
WO-52893	1500	WO-53057	1817A	WO-63511	0704C
WO-52906	0110	WO-53058	0501C	FM-63848-S	1811D
WO-52909					

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
FM-64647-S.....	1201	FM-95626-S.....	2201F	GM-106279.....	{ 0602
SP-6-74-11.....	{ 1201-1	FM-95627-S.....	2201A	GM-106280.....	{ 0301C
WO-71633.....	{ 1203	FM-95628-S.....	2201F	GM-106285.....	1201-1
FM-72004-S.....	{ 1702	FM-95633-S.....	2201A	GM-106285.....	0610B
FM-72008-S.....	{ 1804	FM-95705-S.....	2201A	WO-106313.....	0601
FM-72016-S.....	{ 0204A	FM-97012-S.....	1201-1	GM-106324.....	0607
FM-72017-S.....	{ 1201-1	FM-9N-8115.....	{ 0101	GM-106325.....	{ 0302A
FM-72034-S.....	{ 0303	FM-01Y-1202.....	{ 0501	GM-106333.....	{ 0703
FM-72035-S.....	{ 1201	FM-01T-2616.....	0803	GM-106496.....	{ 0706A
FM-72037-S.....	1205	FM-01T-2640.....	1201	GM-106972.....	0401
FM-72063-S.....	1201	FM-01T-2642.....	1201	WO-106740.....	0606D
FM-72089-S.....	{ 0203	FM-01Y-4529.....	0902	WO-107128.....	0603
FM-73869-S.....	0601	FM-01T-7078-A.....	0902	WO-108411.....	1601
FM-73880-S.....	{ 1201	FM-01Y-7083.....	0902	WO-108515.....	0601
FM-74121-S.....	{ 1402	FM-01Y-7096.....	0902	WO-A-109173.....	0601
FM-74127-S.....	{ 1601C	RG-020122.....	1403A	WO-109427.....	0602
FM-74144-S.....	{ 1602	RG-021116.....	1403A	WO-109428.....	0602
FM-74175-S.....	1603	RG-026088.....	1404	WO-109431.....	0602
FM-74178-S.....	0204	RG-028093.....	1403A	WO-109433.....	0602
FM-74182-S.....	{ 0107A-1	RG-029046.....	0609B	WO-109436.....	0602
CAR-75-547.....	0802	RG-029049.....	0609B	WO-109437.....	0602
SP-7658-2.....	0803	RG-032075.....	1403A	WO-109442.....	0602
ND-77503.....	{ 1007	RG-032087.....	0609B	WO-109445.....	0602
FM-GP-7798-A1.....	{ 1401	RG-033046.....	1403A	WO-109446.....	0602
WO-78316.....	1201-1	RG-033047.....	1403A	WO-109452.....	0602
WO-78932.....	0203	RG-033048.....	1403A	WO-109455.....	0602
TRI-80540.....	{ 0101	RG-051035.....	0609B	WEB-110110.....	0606F
AL-8X-1055.....	{ 1403A	RG-063011.....	1403A	WEB-110242.....	0606F
AL-8X-1368.....	0106A	RG-063012.....	1403A	GM-110347.....	0902
AL-8X-1420.....	0601	RG-063991.....	0609B	WEB-110477.....	0606F
WG-T-84-115.....	0602	RG-063996.....	1403A	GM-110633.....	0606B
WG-T-84J-167.....	{ 0102	RG-092021.....	1403A	GM-112657.....	2103A
WG-T-84J-21/2.....	{ 0204	FM-GPW-10000-A3.....	0601	WO-113439.....	0302
WO-A-8463-1.....	0106C	GM-100013.....	{ 0609	WO-113440.....	0302
WO-A-8463-2.....	0301	FM-100014.....	{ 1201-1	WO-113460.....	0302
WO-A-8463-3.....	1000	GM-100133.....	0110	WO-113461.....	0302
WO-A-8464-1.....	0601	GM-100135.....	0602	GM-114493.....	{ 0303
WO-A-8464-2.....	0606B	CAR-101-121.....	0301	GM-115273.....	{ 0609
WO-A-8464-3.....	1811D	CAR-101-122.....	0301	WO-115498.....	0607B
FM-88022-S.....	0601B	CAR-101-150S.....	0301	WO-115641.....	0105A
FM-88042-S.....	0601	FM-GPW-102088.....	0601	WO-115643.....	0302
FM-88082-S.....	0601	GM-102635.....	1500	WO-115644.....	0302
FM-88141-S.....	0704C	WO-A-102866.....	2000	WO-115650.....	0302
HO-88541.....	0704C	WO-A-10295-1.....	0601-1	WO-115651.....	0302
HI-88632.....	0704	GM-103024.....	{ 0301C	WO-115652.....	0302
FM-GPW-9030-B2.....	1601	GM-103025.....	{ 0303	WO-115653.....	0302
FM-92047-S.....	1601	GM-103319.....	{ 0606	WO-115654.....	0302
WBK-92235.....	1601	GM-103320.....	{ 0204	WO-115656.....	0302
HY-94322.....	1601	GM-103321.....	{ 0300	WO-115675.....	0302
	1601	GM-103374.....	{ 0501	FM-GPW-115720.....	2201A
	0106D	GM-103395.....	{ 1201-1	GM-115729.....	2103A
	0108	GM-106262.....	0606	WO-115869.....	0302
	0108	GM-106274.....	{ 0601-1	WO-115870.....	0302
	0107		{ 0610A	WO-115880.....	0302
	0503		{ 0601A	WO-115905.....	0301C
	0503A		{ 0610B	WO-115961.....	1205
	0300		0601	WO-115962.....	1207
	{ 1201		0601	WO-115963.....	1207
	{ 1201-1		{ 0602	WO-116003.....	0103B
	2208		{ 0609	WO-116019.....	0103
	0804		0609	WO-116020.....	0103

# PART NUMBER INDEX—MANUFACTURERS (Cont'd)

Number	Group	Number	Group	Number	Group
WO-116021	0103	WO-116460	1601	CAR-117-106	0301
WO-116022	0103	WO-116502	0103A	GM-118613	0300
WO-116023	0103A	WO-116503	0103A	GM-118614	0401
WO-116024	0103A	WO-116523	0102A	GM-118614	0601A
WO-116116	0103A	WO-116524	0102A	GM-118643	0300
WO-116117	0103A	WO-116525	0102A	GM-118772	2103A
WO-116154	0301	WO-116526	0102A	GM-119034	0401
WO-116159	0301	WO-116527	0102A	FM-11A-9352	0302
WO-116160	0301	WO-116528	0102A	FM-11A-9361	0302
WO-116161	0301	WO-116529	0102A	GM-119860	0300
WO-116162	0301	WO-116530	0102A	AC-119922	0304
WO-116163	0301	WO-116531	0102A	CAR-120-151S	0301
WO-116164	0301	WO-116532	0102A	GM-120214	0601A
WO-116165	0301	WO-116533	0102A	GM-120217	0601-2
WO-116166	0301	WO-116534	0104A	GM-120364	0606B
WO-116168	0301	WO-116535	0104A	GM-120367	0606F
WO-116169	0301	WO-116536	0104A	GM-120388	0601A
WO-116170	0301	WO-116537	0301	GM-120614	0606F
WO-116171	0301	WO-116538	0301	AL-12X-1014	0601B
WO-116172	0301	WO-116539	0301	GM-121668	1201
WO-116173	0301	WO-116540	0301	GM-121668	6300
WO-116174	0301	WO-116541	0301	GM-122122	1817A
WO-116175	0301	WO-116542	0301	GM-123228	0607D
WO-116176	0301	WO-116544	0301	GM-123450	0606F
WO-116177	0301	WO-116545	0301	GM-123499	0401
WO-116178	0301	WO-116549	1202	GM-124542	0106C
WO-116179	0301	WO-116550	1202	GM-124549	0102
WO-116180	0301	WO-116551	1202	GM-125760	0607D
WO-116181	0301	WO-116552	0102A	RG-T-126000	1403A
WO-116183	0301	WO-116552	1202	AC-127951	0306B
WO-116184	0301	WO-116584	0301	RG-T-129001	1403A
WO-116185	0301	WO-116585	0301	GM-131282	0607B
WO-116186	0301	WO-116586	0301	FM-GPW-13434-A2	2204
WO-116187	0301	WO-116587	0301	SP-13-463-1	0805
WO-116188	0301	WO-116588	0301	MLL-134739	2603
WO-116189	0301	WO-116589	1601A	WBK-136157	2208
WO-116191	0301	WO-116600	1202	GM-138485	2003
WO-116194	0301	WO-116609	1601	GM-138534	0606F
WO-116195	0301	WO-116610	1601A	GM-139091	2001
WO-116197	0301	WO-116616	0103A	GM-142303	0607B
WO-116198	0301	WO-116624	1603	GM-142450	0607B
WO-116199	0301	WO-116625	1603	GM-147510	0300
WO-116202	0301	WO-116626	1603	WO-A-15728-1	1601A
WO-116203	0301	WO-116627	1603	WO-A-15728-2	1601A
WO-116204	0301	WO-116628	1603	WO-A-15728-3	1601A
WO-116205	0301	WO-116629	1603	AC-159235	0306B
WO-116206	0301	WO-116630	1603	SP-16323-2	1003
WO-116207	0301	WO-116631	1603	SP-16323-2	1104
WO-116208	0301	WO-116632	1603	SP-16992-1	1006
WO-116209	0301	WO-116633	1603	SP-16992-2	1003
WO-116210	0301	WO-116634	1603	SP-16992-2	1006
WO-116211	0301	WO-116635	1603	SP-16992-3	1006
WO-116213	0301	WO-116636	1603	SP-16992-4	1006
WO-116214	0301	WO-116637	1603	SP-17122-3	1007
WO-116215	0301	WO-116638	1603	SP-17122-4	1007
WO-116216	0301	WO-116644	1603	SP-17128-2X	1007
WO-116217	0301	WO-116694	0302	SP-17128-3X	1007
WO-116219	0301	WO-116701	0102A	SP-17144-3	1102
WO-116295	0102	WO-116711	0103	SP-17144-4	1102
WO-116295	0109	WO-116712	1601	SP-17155-1	1007
WO-116384	0301	WO-116714	1201-1	SP-17155-2	1007
WO-116385	0301	WO-116716	0803	SP-17295-1	1402
WO-116458	1601	WO-116995	1601A	SP-17295-2	1402
WO-116459	1601A		0302		

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
SP-17360-1	1007	FM-20325-S7	0609	FM-24409-S7	0109C
GM-174916	0606F		0607		0601A
GM-178378	0602	FM-20326-S2	1800A		0700
GM-178532	0601A		1802A	FM-24426-S2	0601A
GM-178551	0602		2201A		0601
	1802A	FM-20326-S7	0801		0601B
FM-GPW-180205-B	0301C		1505	FM-24427-S7	0602
SP-18-155-2	0801	FM-20328-S2	2201A		0106
SP-18-187-1	0804	FM-20344-S2	1803		1201-1
SP-18-19-28	0801	FM-20346-S2	1802A	FM-24449-S2	0401
SP-18-223-2	0801		1804		1701
SP-18-223-6	1201-1	FM-20347-S2	1702	FM-24505-S7	0204
SP-18-228-7	0801	FM-20348-S2	1817A		0300
SP-18-228-8	0801		0106D	FM-24622-S2	1007
SP-18-228-9	0801	FM-20349-S2	1702	FM-24650-S2	2201A
SP-18-267-4	0801		1802	FM-24916-S2	1402
SP-18-324-2	0801	FM-20364-S7	0606F	SP-25-Q-1055	0805B
SP-18-352-5	0801	FM-20367-S2	1201-1	SP-25-Q-1056	0805B
SP-18-362-3	0803	FM-20384-S2	1209C	GM-263549	0609B
SP-18-381-2	0803	FM-20386-S7	0108	FM-26451-S7	0603-1
WG-T-184H-137	0704		1403A	FM-26456-S7	0606
WG-1AT-84J-2 1/2	0704	FM-20387-S7	2103A		0601
SP-18-452-2	0810	FM-20407-S7	0401	FM-26456-S7	0601-1
SP-18-453-3	0810	FM-20467-S2	0401		0604C
SP-18-466-1	0803	FM-20514-S2	1802A		0609B
WBK-185902	2208	MLL-A-205244	2603	FM-26466-S7	0302
WBK-185903	2208	FM-2GAS-10005-A	0601-2	FM-26483-S7	0606
WBK-185906	2208	FM-2GAS-10117	0601-2	FM-27145-S2	1209C
WBK-185907	2208	FM-2GAS-10206	0601-2	FM-27161-S7	0601
WBK-185911	2208	MRC-D2-13567	0503		0601-1
WBK-185912	2208	FM-21492-S2	1405	FM-27177-S7	0602-1
WBK-185913	2208		1602	FM-28378-S2	0607D
WBK-185914	2208	CB-215142	0607	WO-300143	0108
WBK-185919	2208	FM-23392-S2	0401	WO-300329	0610A
WBK-185920	2208	FM-23454-S8	0601-2	WO-301232	0301
WBK-185921	2208	FM-23498-S2	0401	WO-301435	0604A
WBK-185923	2208	FM-23908-S2	1820	WO-302347	0601
WBK-185927	2208		0300	WO-303922	1500
WBK-185928	2208	FM-24308-S2	1201-1	WO-307556	0604A
WBK-185929	2208		1803	FM-31026-S7	0603-1
WBK-185934	2208		0110	FM-31027-S7	0603-1
WBK-185944	2208	FM-24327-S7	0203	FM-31027-S8	0603
WBK-185962	2208		0301C	FM-31032-S7	0301
WBK-185966	2208		0401-1	FM-31037-S7	0301
WBK-185993	2208	FM-24328-S2	0110		0601B
WBK-186007	2208		0107E	FM-31045-S2	0607D
WBK-186019	2208		0401	FM-31045-S7	0606
WBK-186033	2208	FM-24347-S2	0609	FM-31053-S7	0601B
WBK-186058	2208		1201	FM-31061-S7	0601-1
	0401		1405	FM-31061-S8	0301
FM-20046-S2	1101		1601B	WO-311003	1201-1
	1701	FM-24347-S7	2103A	SP-31-246-2	0804
FM-20300-S7	1207	FM-24349-S2	2101	WO-314338	0101
FM-20308-S2	1201		0401-1		0107A
	1804	FM-24367-S2	1201	WO-314369	0604A
FM-20308-S7	1704		1201	FM-31578-S8	0601-2
	1811	FM-24367-S7	1201		0301
FM-20309-S7	0301C	FM-24387-S7	0110	FM-31588-S7	0601
	0606		0401-1		0603
	0300	FM-24388-S7	0602	WO-315932	0106C
	0503A		0800	FM-31628-S7	0302
FM-20324-S2	1201	FM-24389-S2	0106D	FM-32475-S2	1704
	1704		0306B	WO-327257	0604A
	1811				

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
FM-32866-S2	{ 0606B		{ 0100	FM-34703-S7	{ 0601
	{ 1803		{ 0106D		{ 0603-1
FM-32924-S7	1803		0108	FM-34703-S8	0601-2
FM-32989-S2	1804A		0109	FM-34705-S2	{ 0601
WO-330964	0107	FM-33800-S7	{ 0301A		{ 1704
FM-33184-S2	1811B		{ 0306B		{ 0401
FM-33249-S2	1811		0700	FM-34706-S2	0601B
WO-332515	0401		1203		0602
WO-334103	{ 0101		{ 1402		{ 1201B
	{ 0102	FM-33801-S2	0204A		0602
WO-335912	0610B	FM-33802-S2	{ 1205	FM-34706-S7	0609
WO-336155	0107		{ 1403A		{ 2103
WO-337112	0102A	FM-33845-S2	1502	FM-34706-S8	0601-2
WO-337304	0303		{ 0110	FM-34707-S2	{ 1701
FM-33784-S2	0902	FM-33846-S2	0607		{ 1820
	{ 1006		{ 1203	FM-34707-S7	0306B
FM-33786-S2	{ 1201-1		{ 0607		{ 0601A
	{ 1203	FM-33896-S2	0610A	FM-34708-S7	0501
FM-33792-S2	1820		1802A	FM-34711-S7	0301
	0300		1804		0202
	1209C	FM-33897-S2	0610A		0301C
FM-33795-S2	{ 1704	WO-339043	0203		0303
	{ 1804	FM-33909-S7	0609	FM-34745-S2	0603
	{ 1811	FM-33911-S2	1006		0604
	{ 0606F	FM-33921-S7	0202		{ 1704
FM-33795-S7	0608	FM-33923-S8	0601-2		{ 1811
	{ 1201	FM-33927-S7	{ 1201	FM-34746-S2	{ 1205
	{ 0301C		{ 1403A		{ 1802A
FM-33796-S2	0303	FM-33929-S2	0109		0107E
	{ 0606	WO-339372	1602		0401
	{ 0401	FM-34032-S7	0601	FM-34746-S7	0601B
	{ 0601A	FM-34051-S7	{ 0301		{ 1201
FM-33797-S2	0607		0601		{ 1201-1
	1800A	FM-34052-S2	0606D	FM-34747-S2	1500
	1811		0609		0110
	2201A	FM-34054-S2	1811D	FM-34747-S7	0610B
FM-33797-S7	1500		2202		1500
	0204	FM-34079-S7	0603-1		0601
	1201-1		0606-F	FM-34801-S7	0603
FM-33798-S2	1205	FM-34079-S8	0601-2		0603-1
	1601A	FM-34084-S7	0501		1809A
	2101	FM-34130-S2	1701		0301
	0107		2103		0601
	0110	FM-34141-S2	0601	FM-34802-S2	0606D
	0203		0601B-1		0609
	0204		0602		1811
	0300		1209C	FM-34802-S7	0601
	0301C	FM-34141-S7	0601		0601-1
	0401		0601-1		0601
	0501	FM-34176-S2	1811		1804A
FM-33798-S7	0601	WO-343306	0107	FM-34803-S2	1809A
	0601A	WO-344732	0108		1817
	0602-1		0107E		2204
	0607D	WO-345961	0606B		0302
	1201		1811D		0601
	1405		2204		0601-2
	2103A	FM-34701-S7	0603		0602
	2603		0603-1	FM-34803-S7	0602-1
	0607D		0603		0603
FM-33799-S2	1802A	FM-34702-S2	0603-1		0603-1
	1804		1201		0606B
	1817A		1804		0606E
FM-33800-S2	1500	FM-34702-S7	0601B		0607
					1209C

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
	1704		1205	FM-352103-S	1500
FM-34803-S7	1800A		1405	FM-352104-S	1500
(Cont'd)	2201A	FM-34806-S7	1702	FM-GPW-352126-S	1500
FM-34803-S8	0601-2	(Cont'd)	2103A	FM-352127-S	1500
FM-34804-S2	0107	FM-34806-S8	0601-2	FM-353051-S	1001
	2202		0103B		1101
	0300		0106D	FM-353053-S	0801
	0301		0109C		0101
	0301C		0110	FM-353055-S	0108
	0303		0306A		0306B
	0503A		0401		0701
	0601		0505	FM-353064-S	0801
	0603		0601A		1006
	0606		0601A-1	FM-353075-S	0805
	0608		0601B	FM-353081-S	0706B
FM-34805-S2	0609		0602	FM-353104-S	2201A
	1201		0607D	FM-353202-S	1802A
	1201-1		0700	FM-355131-S	0606B
	1209C	FM-34807-S2	0800		0606E
	1704		0804	FM-355157-S	0601-2
	1803		1006	FM-355160-S	0606E
	1804		1007	FM-355164-S	0602
	1811		1102		0602-1
FM-34805-S8	0606F		1203	FM-355253-S	0301C
	0204		1402	FM-355262-S	0107
	0601		1500	FM-355378-S	0805B
	0601-2		1701	FM-355396-S	0107A-1
	0601B		1802	FM-355426-S	1403A
	0607		1802A	FM-355444-S	1205
	0610A		1804	FM-355451-S	0105C
	1505		1817A	FM-355452-S	0105C
FM-34806-S2	1601B		2201A	FM-355456-S	2101
	1800A	FM-34808-S2	0204A	FM-355476-S	0202
	1802A		1820	FM-355496-S	0601A-1
	1804	FM-348148-S	2201A	FM-355497-S	0103B
	1811	FM-34824-S2	1811D		0109
	1820	FM-34836-S7	1403	FM-355499-S	0106C
	2101		1403A	FM-355511-S	1003
	2103	FM-34842-S7	0601B		1104
	2201A	FM-34848-S2	1602	FM-355526-S	1006
	0107	FM-34903-S2	0606F	FM-355533-S	0801
	0107A-1	FM-34905-S2	1207	FM-355550-S	0805A
	0107E	FM-34907-S7	0109	FM-355551-S	1201
	0110		1802A	FM-355552-S	1006
	0204	FM-34909-S2	0102	FM-355554-S	0801
	0300		0109	FM-355571-S	0105A
	0301C	WO-349368	0101A	FM-355578-S	1203
	0302A		0607D	FM-355597-S	0700
	0401		0703	FM-355698-S	0805
	0401-1	FM-34941-S7	1001	FM-355699-S	1003
	0501		1006		1104
FM-34806-S7	0503		1101	FM-355741-S	0809
	0601		1602	FM-355858-S	0301
	0601-1	WO-349712	0108	FM-355872-S	1201-1
	0601A	FM-350280-S	0801	FM-355883-S	0601
	0602	FM-350281-S	0801	FM-355982-S	0401-1
	0602-1	FM-350282-S	0801	FM-356016-S	1802A
	0609	FM-350311-S	1201-1	FM-356021-S	0104
	0610A	FM-351015-S	1802A	FM-356028-S	0104
	0706A	LK-S-35116-1	0106C	FM-356124-S	1401
	0801	FM-351915-S	1201-1	FM-356125-S	0803
	0902		1202		1003
	1201	FM-351926-S	0201A	FM-356126-S	1007
	1201-1	FM-352101-S	1500		1104

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
FM-356205-S	0801	WO-375927	{0101	FM-62627-S3	2103
FM-356286-S	1811		{0107	WO-630068	0203
FM-356299-S	0606E	WO-375981	0107	WO-630101	{0109C
FM-356303-S	1403A	WO-375994	0105		{0700
	{0303	FM-37621-S7	1809A	WO-630112	0203
FM-356305-S	0606B	FM-37622-S7	0606	WO-630117	0203
	{0610A	WO-380197	0107	WO-630129	0202
FM-356361-S	1811	WO-381519	0102A	WO-630262	0102
FM-356403-S	1201-1	FM-38192-S2	1811	WO-630294	0102A
FM-356436-S	{0601	FM-38259-S2	1811	WO-630298	0107JW
	{0601A	WO-384228	1602		{0101
FM-356439-S	1403A	WO-384549	{0107N	WO-630299	{0107
FM-356504	{0803		{0304		{0107N
	1003	WO-384568	1811D-1	WO-630303	0105C
FM-356504-S	{1007	WO-384569	0107J	WO-630305	{0101
	1104	WO-384710	1209C		{0105C
FM-356519-S	0802	WO-384958	0106D	WO-630359	0106D
FM-356524-S	0809	WO-387249	0304	WO-630364	0106
FM-356561-S	0204	WO-387633	0102	WO-630365	{0101
FM-357008-S	1500	WO-387891	{0107J		{0106D
FM-357074-S	1500		{1811D-1	WO-630384	0107
FM-357076-S	1500	FM-38846-S2	0809	WO-630387	0107
FM-367100-S	1500	WO-390510	1403A	WO-630389	0107
FM-357202-S	{1003	WO-392328	0706A	WO-630390	0107
	1104	WO-392468	1201	WO-630392	{0101
FM-357417-S	0704C	WO-393594	0604A		{0107
FM-357418-S	0706A	RG-400025	1403A	WO-630394	{0101
FM-357420-S	0102A	RG-401090	1403A		{0107
FM-357703-S	1006	RG-401100	1403A	WO-630396	0107A-1
FM-358019-S	1802A	RG-401107	0609B	WO-630397	0107A-1
FM-358040-S	0107E	FM-40631-S7	0607D		{0101
FM-358048-S	{1001	CB-415342	0607D	WO-630398	{0107
	1101	CB-415442	0607D		{0107A
FM-358064-S	{0101	RG-450054	0609B		{0107A-1
	1403A	WO-452702	0301C	WO-630512	0505
FM-358074-S	1007	USL-461389	0301C	WO-630518	0107
WO-359039	{1601	RG-502282	1405	WO-630526	0401
	1601A	RG-502540	1403A	WO-630593	0204
FM-36009-S7	0601	RG-503284	1403A	WO-630727	0106C
FM-36046-S2	1811	RG-503308	1403A	WO-630753	1401
FM-36787-S7	0603	WBK-503628	2208	WO-630754	1401
FM-36800-S7	0601-1	BUE-505275	1820	WO-630755	1401
FM-36801-S2	1820	BUE-505282	1820	WO-630756	1401
FM-36845-S2	2202	BUE-505284	1820	WO-630757	1401
FM-36868-S2	1804	BUE-505285	1820	WO-631105	0604
FM-36931-S2	0608	BUE-505287	1820	WO-632156	0109
FM-36954-S7	{0601B-1	BUE-505288	1820	WO-632157	{0103B
	0602	FM-51-3287	1402		{0109
WO-371400	0610B	WBK-520610	2208	WO-632158	0105C
WO-371567	0201A	WBK-521671	2208		{0108
WO-372438	0303A	WBK-522645	2208	WO-632159	{0301A
WO-372658	0610B	FM-B55836-S7	2204	WO-632174	0303
WO-374586	1202	FM-60332-S2	1809	WO-632177	0203
	{0201	FM-60-8287	0505	WO-633011	0303
WO-374681	{0201A	OKS-613300	0301C	WO-633013	0303
WO-375811	0105	OKS-613306	0301C	WO-633949	0601A
WO-375877	0102	OKS-613313	0301C	FM-63397-S8	0601-2
WO-375900	0106	OKS-613314	0301C	FM-63407-S7	0601-2
WO-375907	0106	OKS-613380	0301C	WO-634432	1602
WO-375908	0106	OKS-613387	0301C	WO-634758	0809
WO-375910	0105A	OKS-613455	0301C	WO-634759	0809
WO-375917	0106D	FM-62323-S2	1820	WO-634762	0809
WO-375920	0102A	SP-62-463-2	0803	WO-634796	0102

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
WO-634811.....	0101	WO-636566.....	1003	WO-637541.....	1207
	0108		1104	WO-637544.....	1207
WO-634813.....	0101	WO-636568.....	1003	WO-637545.....	1207
	0107		1104	WO-637546.....	1207
	0101		1003	WO-637577.....	1207
WO-634814.....	0108	WO-636569.....	1007	WO-637579.....	1207
	0401		1104	WO-637580.....	1207
WO-634850.....	0106C		0803	WO-637582.....	1205
WO-635097.....	0301C	WO-636570.....	1003	WO-637583.....	1205
WO-635377.....	0102A		1007	WO-637584.....	1205
WO-635394.....	0109B		1104	WO-637585.....	1205
WO-635529.....	0203	WO-636571.....	1003	WO-637586.....	1205
WO-635532.....	1602		1104	WO-637587.....	1205
WO-635681.....	1201		1201	WO-637590.....	1205
	1201-1		1201-1	WO-637591.....	1205
WO-635804.....	0704C	WO-636575.....	1203	WO-637595.....	1205
WO-635812.....	0704C		1003	WO-637596.....	1205
WO-635820.....	0704		1006	WO-637597.....	1205
WO-635836.....	0706C	WO-636577.....	1001	WO-637598.....	1205
WO-635837.....	0706B		1101	WO-637599.....	1205
WO-635838.....	0706B	WO-636599.....	0107	WO-637602.....	1205
	2001	WO-636600.....	0107	WO-637604.....	1205
WO-635839.....	0706A	WO-636755.....	0201	WO-637605.....	1205
WO-635840.....	0706A	WO-636778.....	0201A	WO-637606.....	1205
WO-635844.....	0703	WO-636796.....	0107A-1	WO-637608.....	1205
WO-635846.....	0703	WO-636879.....	0704	WO-637612.....	1205
WO-635857.....	0706A	WO-636882.....	0704C	WO-637615.....	0603
WO-635859.....	0706A	WO-636885.....	0703	WO-637636.....	0107
WO-635860.....	0706A	WO-636954.....	0103	WO-637646.....	0502
WO-635861.....	0701	WO-636961.....	0103B	WO-637704.....	0105
	0706A	WO-636962.....	0104	WO-637724.....	0102A
WO-635862.....	0701	WO-637007.....	0102A	WO-637725.....	0102A
	0706A	WO-637008.....	0102A	WO-637789.....	1207
WO-635863.....	0706A	WO-637020.....	0104	WO-637790.....	0102A
WO-635883.....	0610B	WO-637041.....	0102A	WO-637803.....	1603
WO-635886.....	0604		0103	WO-637804.....	1603
WO-635895.....	0606B	WO-637042.....	0103A	WO-637810.....	1603
WO-635981.....	0606B	WO-637044.....	0105	WO-637831.....	0704
WO-636004.....	0401	WO-637045.....	0105	WO-637832.....	0704
	0401-1	WO-637047.....	0105A	WO-637833.....	0704
WO-636109.....	0505	WO-637048.....	0105A	WO-637834.....	0704
WO-636196.....	0706C	WO-637052.....	0503	WO-637835.....	0704
WO-636197.....	0706C	WO-637053.....	0101	WO-637863.....	0101
WO-636200.....	0706C		0503		0604B
WO-636297.....	0503	WO-637065.....	0106	WO-637899.....	1203
WO-636298.....	0503	WO-637098.....	0102A	WO-637900.....	1203
WO-636299.....	0503A	WO-637182.....	0105	WO-637901.....	1203
		WO-637183.....	0105	WO-637905.....	1203
WO-636360.....	1003	WO-637206.....	0108C	WO-637923.....	1203
	1104	WO-637208.....	0108C	WO-637936.....	1603
WO-636396.....	0810	WO-637209.....	0108C	WO-638058.....	0401
WO-636438.....	0108C	WO-637210.....	0108C		0401-1
WO-636439.....	0108C	WO-637211.....	0108C	WO-638113.....	0102
WO-636527.....	1003	WO-637237.....	0101	WO-638121.....	0102
	1102		0102A	WO-638151.....	0202
	0606	WO-637424.....	1209B	WO-638152.....	0202
WO-636528.....	1003	WO-637425.....	0107	WO-638153.....	0202
	1102	WO-637426.....	1209B	WO-638154.....	0202
WO-636538.....	1001	WO-637427.....	1209C	WO-638155.....	0202
	1101	WO-637432.....	1209C	WO-638157.....	0202
	1000	WO-637439.....	1209C	WO-638158.....	0202
WO-636565.....	1003	WO-637495.....	0701	WO-638159.....	0202
	1100	WO-637503.....	0706B	WO-638224.....	0805B
	1104	WO-637540.....	1207	WO-638305.....	0202



# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
WO-638343	1603	WO-639244	{1201	SP-6-73-122	1201-1
WO-638381	1403A		{1201-1	SP-6-73-124	1102
WO-638457	0106C		{1000	SP-6-73-218	1201
WO-638458	0106C	WO-639265	{1003	SP-6-73-326	1402
WO-638459	0106C		{1100	SP-6-73-414	{1003
WO-638500	1602		{1104		{1104
WO-638513	{0102	WO-639422	0703	SP-6-75-101	1006
	{2000	WO-639423	0703	FM-72003-S7	0607
WO-638539	0101A	WO-639555	0107G	FM-72798-S7	0602
WO-638635	0101A	WO-639578	0205	FM-72867-S7	{0603
WO-638636	0105	WO-639599	0606E		{0603-1
WO-638640	{0101	WO-639607	0303	FM-73889-S7	1201
	{0108	WO-639610	0303	FM-73904-S7	1201
WO-638646	0602	WO-639650	{0101	FM-73928-S7	1201
WO-638678	0101A		{0505	FM-74175-S7	0601-2
WO-638730	0102A	WO-639651	0502	FM-74-6038	0809
WO-638731	0102A	WO-639654	0203	FM-74-6038-A	0809
WO-638732	0102A	WO-639663	0503	FM-74-7580-B	0203
WO-638733	0102A	WO-639718	1403A	FM-78-2814-A	1209C
	{0302	WO-639734	0602	FM-78-3332-A	1402
WO-638737	{0302A	WO-639743	0108C	FM-78-3336	1402
	{0101	WO-639858	0104	AL-8X-01546	0603
WO-638780	1201	WO-639859	0104	FM-G8T-11649	0606
	{0204	WO-639862	0104A	FM-G8T-11654	0606
WO-638792	{0902	WO-639864	0103A	FM-G8T-11661	0606
	{2001	WO-639870	{0101	FM-G8T-11670	0606
WO-638798	0704		{0107	RG-8287-32	0609B
WO-638809	1500	WO-639979	0107A	AC-838263	0302A
WO-638884	0609B	WO-639980	{0101	WG-T-84J-50-1/2A	0802
WO-638885	{0609		{0107A	AC-846709	0501
	{0609B	WO-639992	0503	AC-846732	0501
WO-638918	{1403A	WO-639993	0503	AC-850042	0300
	{1405	WO-639999	0104	AC-853558	0306B
WO-638948	0704C	WO-640000	0104	AC-853562	0306B
WO-638949	0704	WO-640006	0704	AC-853572	0306B
WO-638952	0704C	WO-640017	0703	AC-853634	0306B
WO-638979	0606	WO-640018	{0703	AC-854005	0302
WO-638992	0202		{0701	AC-855493	0302
WO-638993	0202	WO-640019	0105A	AC-855763	0302
WO-639010	{1201	WO-640020	0105A	FM-86H-4616	{1003
	{1201-1	WO-640030	0107A		{1104
WO-639051	0106A	WO-640031	0503	FM-86H-4621	1003
WO-639052	0105C	WO-640032	0503	FM-88032-S7	0401
WO-639090	1403A	WO-640033	0503	FM-88057-S7	{0108
WO-639091	1403A	WO-640034	0503		{0301A
WO-639095	1403A		{1204	FM-88350-S7	0303
WO-639102	1403A	WO-640038	{1401	ND-885141	0503
WO-639103	1403A		{1602	FM-9N-11450-A	0606
WO-639104	1403A		{2001	FM-91A-2027	1203
WO-639107	1403A	WO-640070	0104	FM-91A-2030	1203
WO-639108	1403A	WO-640071	0104	FM-9N-12113-A	0604A
WO-639109	1403A	WO-640072	0104	FM-91A-2151	1205
WO-639110	1403A	WO-640102	1201-1	FM-91A-2152	1205
WO-639115	1403A	WO-640527	1811D-1	FM-91A-2201	1207
WO-639116	1403A	WO-650482	0303	FM-99A-5090	1500
WO-639119	1403A	WO-650483	0303	FM-01A-10193	0601
WO-639121	1403A	WO-651298	0303	FM-01A-12410	{0101
WO-639190	1403A	WO-654934	1804		{0604B
WO-639191	1403A	WO-662010	1802A	LK-S-035117-1	0106C
WO-639192	1403A	WO-662276	0606B	FM-09B-14362	0606F
WO-639237	0102A	WO-662420	0605	FM-GPW-1000000	1800
WO-639238	0102A	WO-663365	1811D-1	GM-1032026	0610B
WO-639239	0102A	WO-663366	1811D-1	FM-GPW-1100001	1800
WO-639240	0102A	WO-663369	1811D	FM-GPW-1101610	1809

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
FM-GPW-1101621-A . . . . .	2203	FM-GPW-1111286-A . . . . .	1803	FM-GPW-1154810 . . . . .	2201A
FM-GPW-1101627-A . . . . .	2203	FM-GPW-1111299-A . . . . .	1803A	FM-GPW-1154810-A . . . . .	1800A
FM-GPW-1101629-A . . . . .	2203	FM-GPW-1111322 . . . . .	0300	FM-GPW-1160016-B . . . . .	1804A
FM-GPW-1101670 . . . . .	1809	FM-GPW-1111323 . . . . .	0300	FM-GPW-1160026 . . . . .	1804A
FM-GPW-1101698-A . . . . .	1803	FM-GPW-1111330 . . . . .	1803	FM-GPW-1160314 . . . . .	1804
FM-GPW-1101735-A . . . . .	0805B 1803	FM-GPW-1111331 . . . . .	1803	FM-GPW-1160326 . . . . .	1804
FM-GPW-1102105 . . . . .	1802A	FM-GPW-1111520-A . . . . .	1803	FM-GPW-1160327-B . . . . .	1804
FM-GPW-1102038 . . . . .	1802A	FM-GPW-1112110 . . . . .	1803	FM-GPW-1160780 . . . . .	1804A
FM-GPW-1102039 . . . . .	1802A	FM-GPW-1112115 . . . . .	1803	FM-GPW-1161300 . . . . .	1804
FM-GPW-1102130 . . . . .	1802A	FM-GPW-1112116-A . . . . .	1803	FM-GPW-1161302 . . . . .	1804
FM-GPW-1102330-A . . . . .	1803	FM-GPW-1112117 . . . . .	1803	FM-GPW-1161326 . . . . .	1804
FM-GPW-1102396 . . . . .	1802A	FM-GPW-1112119 . . . . .	1803	FM-GPW-1162180 . . . . .	1804
FM-GPW-1102510 . . . . .	1802	FM-GPW-1112158 . . . . .	1803	FM-GPW-1162181 . . . . .	1804
FM-GPW-1102511 . . . . .	1802	FM-11A-12425 . . . . .	0604B	FM-GPW-1162402 . . . . .	1804
FM-GPW-1102980 . . . . .	2201	FM-11A-13480 . . . . .	0606	FM-GPW-1162410 . . . . .	1804
FM-GP-1103010 . . . . .	1811	FM-11A-14452 . . . . .	0610B	FM-GPW-1162414 . . . . .	1804
FM-GP-1103014 . . . . .	1811	FM-GPW-1120040 . . . . .	2201F	FM-GPW-1162552 . . . . .	1804
FM-GP-1103020 . . . . .	1811B	FM-GPW-1120041 . . . . .	2201F	FM-GPW-1162606 . . . . .	1802A
FM-GPW-1103027 . . . . .	1811	FM-GPW-1127846 . . . . .	1802A	FM-GPW-1162900-B . . . . .	1804A
FM-GPW-1103028 . . . . .	1811	FM-GPW-1127847 . . . . .	1802A	FM-GPW-1163206 . . . . .	1804A
FM-GPW-1103030 . . . . .	1811B	FM-GPW-1127848 . . . . .	1802A	FM-GPW-1163846-B . . . . .	1804A
FM-GPW-1103050 . . . . .	1811	FM-GPW-1127849 . . . . .	1802A	WO-1165328 . . . . .	0102A
FM-GPW-1103080-A . . . . .	1811B	FM-GPW-1127850 . . . . .	1802A	FM-GPW-1166400 . . . . .	1804A
FM-GP-1103100 . . . . .	1811	FM-GPW-1127851 . . . . .	1802A	FM-GPW-1166401 . . . . .	1804A
FM-GP-1103106 . . . . .	1811B	FM-GPW-1128242 . . . . .	1802A	FM-GPW-1166800-B . . . . .	1804A
FM-GP-1103110 . . . . .	1811B	FM-GPW-1128244 . . . . .	1802A	AC-1504118 . . . . .	0306B
FM-GPW-1103162 . . . . .	1811	FM-GPW-1128286 . . . . .	1802A	AC-1521578 . . . . .	0302
FM-GPW-1103214 . . . . .	2201	FM-GPW-1129068 . . . . .	2201A	AC-1521708 . . . . .	0302
FM-GPW-1103268 . . . . .	1811B	FM-GPW-1129069 . . . . .	2201A	AC-1521880 . . . . .	0302
FM-GP-1103302 . . . . .	1809A	FM-GPW-1129670 . . . . .	1800A	AC-1521953 . . . . .	0302
FM-GPW-1103304 . . . . .	1811	FM-GPW-1129672 . . . . .	1800A	AC-1521956 . . . . .	0302
FM-GP-1103310 . . . . .	1811	FM-GPW-1131414 . . . . .	1804	AC-1521960 . . . . .	0302
FM-GP-1103334 . . . . .	1811	FM-GPW-1140324 . . . . .	1802A	AC-1521985 . . . . .	0302
FM-GP-1103350 . . . . .	1811	FM-GPW-1140330 . . . . .	1817A	AC-1522046 . . . . .	0302
FM-GPW-1103446-A . . . . .	1802A 1811	FM-GPW-1140441 . . . . .	1802A	AC-1522199 . . . . .	0302
FM-GP-1103482-A . . . . .	1811	FM-GPW-1140447 . . . . .	1802A	AC-1523068 . . . . .	0302
FM-GPW-1103488 . . . . .	1811	FM-GPW-1140449 . . . . .	1802	AC-1523096 . . . . .	0302
FM-GPW-1104320 . . . . .	1809	FM-GPW-1140474 . . . . .	0300	AC-1523099 . . . . .	0302
FM-GPW-1104364 . . . . .	1809	FM-GPW-1143501 . . . . .	1817	AC-1523106 . . . . .	0302
FM-GPW-1106024-B . . . . .	1809A	FM-GPW-1144606 . . . . .	1802A	AC-1523231 . . . . .	0302
FM-GPW-1106050 . . . . .	1809A	FM-GPW-1144620 . . . . .	1802A	AC-1537065 . . . . .	0302
FM-GPW-1106064 . . . . .	1809A	FM-GPW-1146100 . . . . .	1817	AC-1537904 . . . . .	0302
FM-GPW-1106068 . . . . .	1809A	FM-GPW-1146126 . . . . .	1817	AC-1538114 . . . . .	0302
FM-GPW-1106084-B . . . . .	1809A	FM-GPW-1146132 . . . . .	1817	AC-1538115 . . . . .	0302
FM-GPW-1106085 . . . . .	1809A	FM-GPW-1146152 . . . . .	1817	AC-1538205 . . . . .	0302
FM-GPW-1106087-A . . . . .	1809A	FM-GPW-1150498 . . . . .	2201A	AC-1538312 . . . . .	0302
FM-11A-10211-B . . . . .	0601-2	FM-GPW-1151266 . . . . .	2201A	AC-1538360 . . . . .	0302
FM-GPW-1110610 . . . . .	1802A	FM-GPW-1151270 . . . . .	2201A	AC-1542508 . . . . .	0301C
FM-GPW-1110625 . . . . .	1802A	FM-GPW-1151272 . . . . .	2201A	AC-1542510 . . . . .	0301C
FM-GPW-1110750 . . . . .	1802A	FM-GPW-1151289 . . . . .	1811	AC-1595823 . . . . .	0306B
FM-GPW-1110895 . . . . .	1802A	FM-GPW-1151297 . . . . .	1811	FM-18-10088 . . . . .	0601-2
FM-11YS-18142-B . . . . .	0606F	FM-GPW-1152700 . . . . .	1800B 2201	FM-19B-10048 . . . . .	0601-2
FM-11YS-18149-B . . . . .	0606F	FM-GPW-1152730 . . . . .	2201A	FM-19B-10051-A . . . . .	0601-2
FM-11YS-18151-B . . . . .	0606F	FM-GPW-1152950 . . . . .	2201A	FM-19B-10052-A . . . . .	0601-2
FM-11YS-18193-B . . . . .	0606F	FM-GPW-1153030 . . . . .	2201A	FM-19B-10070-B . . . . .	0601-2
FM-11YS-18198-B . . . . .	0606F	FM-GPW-1153100 . . . . .	1820	FM-19B-10098 . . . . .	0601-2
FM-GPW-1111137-A . . . . .	1803	FM-GPW-1153104 . . . . .	1820	FM-19B-10116 . . . . .	0601-2
FM-GPW-1111140 . . . . .	1802A	FM-GPW-1153106 . . . . .	1820	FM-19B-10118 . . . . .	0601-2
FM-GPW-1111155 . . . . .	1802A	FM-GPW-1153107 . . . . .	1820	FM-19B-10119 . . . . .	0601-2
FM-GPW-1111162 . . . . .	1803	FM-GPW-1153110 . . . . .	1820	FM-19B-10122 . . . . .	0601-2
FM-GPW-1111218 . . . . .	1802A	FM-GPW-1153123 . . . . .	1820	FM-19B-10202 . . . . .	0601-2
FM-GPW-1111238 . . . . .	1802A	FM-GPW-1153124 . . . . .	1820	FM-19B-10212 . . . . .	0601-2
		FM-GPW-1153142 . . . . .	2201A	FM-19B-10214 . . . . .	0601-2
				FM-19B-14451 . . . . .	0601B

# **PART NUMBER INDEX—MANUFACTURERS (Cont'd)**

Number	Group	Number	Group	Number	Group
FM-21CS-17682-B.....	2202	FM-355162-S2.....	{ 0303		{ 0601A
FM-21CS-17718-A.....	2202		{ 2201A		{ 0602
FM-21C-18397-B.....	0902	FM-GPW-355162-S2.....	1800A	FM-356309-S7.....	{ 1701
SP-22-381-19.....	0803	FM-355200-S7.....	0301		{ 1802A
FM-24454-S2.....	1809A	FM-355260-S7.....	0601		{ 2103A
FM-26H-11055.....	0602-1	FM-355352-S7.....	1201	FM-356314-S7.....	0501
HR-3108628.....	0502	FM-355398-S2.....	1205	FM-356371-S7.....	{ 0601
CB-3121441.....	2203A	FM-355403-S2.....	0107A		{ 0601A
FM-33797-S16.....	0610B-1	FM-355427-S7.....	0601B	FM-356373-S2.....	1811
FM-33798-87.....	2603	FM-355433-S2.....	{ 1403A	FM-356394-S2.....	1205
FM-34033-S18.....	{ 1601C		{ 1602	FM-356522-S2.....	2201A
	{ 1602	FM-355442-S2.....	0503	FM-357419-S2.....	0607
FM-34056-S16.....	0610B	FM-355449-S2.....	1811	FM-357689-S7.....	0604
FM-34805-S7-8.....	0601	FM-355455-S7.....	0601A		{ 1204
FM-350110-S7.....	0603-1	FM-355485-S7.....	{ 0602	FM-358006-S8.....	{ 1401
FM-350329-S2.....	0601A-1		{ 0602-1		{ 1602
FM-350340-S2.....	0601A-1	FM-355486-S7.....	0601	FM-48-15021.....	0607B
FM-350341-S2.....	0601A-1	FM-355496-S7.....	0601A	SP-6-73-1117.....	1006
FM-350853-S7.....	0601	FM-355569-S2.....	1804	RG-7698-4%.....	1403A
FM-350976-S2.....	{ 1702	FM-355752-S7.....	1201	FM-78-10212-A.....	0601
	{ 1802A	FM-355762-S7.....	0501	FM-81A-10208.....	0601-2
FM-351025-S7.....	0101A	FM-355836-S2.....	1209C	FM-81A-10211.....	0601-2
FM-351059-S7.....	1402		{ 0108C	BX-901835-K6.....	1201-1
FM-351274-S7.....	{ 0604		{ 0303	FM-99B-10041.....	0601-2
	{ 0606F	FM-355836-S7.....	0606B	FM-99B-10044.....	0601-2
FM-351303-S2.....	1811D		1804A	FM-99B-10055.....	0601-2
FM-351355-S7.....	{ 0602		2201A	FM-99B-10057.....	0601-2
	{ 0602-1		1800A	FM-99B-10094.....	0601-2
	{ 1702	FM-GPW-355836-S7.....	1809A	FM-99B-10121.....	0601-2
FM-351370-S2.....	{ 1804		{ 1817	FM-99B-10122.....	0601-2
	{ 2201A	FM-355883-S7.....	0601	FM-99B-10175.....	0601-2
FM-351373-S2.....	0601A-1	FM-355900-S2.....	1804	FM-99B-10193.....	0601-2
FM-351505-S7.....	1603	FM-355909-S2.....	1802A	FM-GPW-1111286-A3.....	0706A
FM-352690-S7.....	1201-1	FM-355944-S5.....	{ 0602	FM-350343-S16.....	0610B
FM-353023-S7.....	1602		{ 0602-1	FM-351466-S24.....	1203
FM-353035-S8.....	0805B	FM-355965-S2.....	1804	FM-352692-S15.....	1811
FM-353043-S7.....	0902	FM-356036-S8.....	0606	FM-355944-55.....	0606
FM-353043-A-S7.....	0204	FM-356077-S8.....	1403A	FM-356134-S18.....	0802
FM-353052-S7.....	0107	FM-356123-S7.....	1809A	FM-357016-S19.....	2203
FM-353055-S7.....	0300		{ 0602	FM-357553-S18.....	1201
FM-355067-S7.....	0301	FM-356200-S7.....	1702	FM-687-13532.....	0606
FM-355095-S7.....	0300A		{ 1802A	FM-81W-811189.....	1811
FM-355130-S7.....	2204	FM-356208-S7.....	0601	FM-C8T-8103074-B.....	1811
FM-355131-S7.....	1209C	FM-356229-S7.....	{ 0604C	FM-99W-8103311.....	1811
FM-355132-S7.....	0301		{ 0606	SP-18-362-4-5866-X.....	0803
FM-GPW-355158-S2.....	1809A	FM-356263-S7.....	0601	SP-K2-62-210-212-1718	0901
FM-355160-S2.....	0108C	FM-356264-S7.....	0601	SP-K2-62-210-212-1907	0901

# OFFICIAL STOCK NUMBER INDEX

Official Stock No.	Group	Official Stock No.	Group	Official Stock No.	Group
A044-0200545	1301	G085-1414736	0302	G104-1781765	0306B
D017-0309544	0606F	G085-1543023	1403A	G104-1781822	0601
D028-0204281	0606F	G085-2102215	0606	G104-1783105	0603
F005-0102840	0602	G085-2102323	0503A	G104-1789657	0601
F065-0101500	1403A	G085-2212144	0110	G104-1789691	0601-2
F226-0242470	0606F	G085-2212230	0601B	G104-1842710	0602
F227-0105011	0602	G085-2212230	0902	G104-1842779	0601B
F227-0113360	0601-1	G085-2219065	1209C	G104-1842846	0902
F227-0200895	0602	G085-2221780	1207	G104-1882251	0902
G054-1714512	0601B	G085-2307348	1209C	G104-1882330	0902
G057-0124276	1205	G085-2307352	1704	G104-2194015	0902
G067-0600800	1205	G085-2307354	1601A	G104-3067005	0608
G067-0600810	1205	G085-2307354	0401	G116-0400021	0605
G067-0900250	0602	G085-2307356	0110	G116-0400060	0603
G067-0900690	0602	G085-2307356	0607	G116-0400320	0601
G067-0900810	0602	G085-2307356	0809	G116-0400590	0603
G067-0901889	0603	G085-2307356	1203	G116-0400771	0605
G067-0902830	0601B	G085-2307376	0101A	G116-1593934	0107E
G067-0902840	0601B	G085-2307384	1205	G116-1782002	0601
G067-0903250	0602	G085-2317342	1601C	G116-1782009	0603
G067-0903390	0601B-1	G085-2317342	1602	G116-1793792	0606
G067-0903450	0601B	G085-2319320	1203	G116-1843059	0603
G067-0903630	0601B	G085-2320185	1203	G116-1843100	0603
G067-0903910	0601B-1	G085-2371520	0204A	G116-1845184	0603
G067-0903990	0603	G085-2371582	1402	G121-0110400	0601
G067-0904036	0603	G085-2712158	0110	G121-0110500	0601
G067-0904329	0603	G085-3000180	0302	G121-0115950	0601
G067-0904430	0602	G085-3000880	0302	G121-0126320	0602
G067-0904520	0601B-1	G085-3002220	0302	G121-0127843	0601
G067-0904540	0601B-1	G085-3002240	0302A	G121-0137958	0603
G067-0904550	0601B-1	G085-3002280	0306B	G121-0139650	0601
G067-0904560	0601B-1	G085-3002300	0306B	G121-0139660	0601
G067-0904830	0601B	G085-3002320	0306B	G121-0139665	0601
G067-0904930	0601B-1	G085-3003100	0302	G121-0155535	0607
G067-0905310	0601B	G085-3003640	0302	G121-0193758	0601
G067-0905310	0602	G085-3004580	0302	G121-0194050	0605
G067-0905419	0603	G085-3004880	0302	G121-0205450	0601
G067-0905420	0601B	G085-3004960	0301	G121-0217900	0608
G067-0905420	0601B-1	G085-3005780	0306B	G121-0232700	0601
G067-0905570	0602	G085-3005920	0301	G121-0232730	0601
G067-0905580	0602	G085-3005980	0306B	G121-0232740	0601
G067-0905600	0601B	G102-0305579	0801	G121-0232750	0601
G067-0905600	0601B-1	G102-0306647	0805	G121-0273850	0601
G067-0905860	0606	G102-0306828	0801	G121-0340277	0603
G067-0906045	0604A	G102-0307508	0805	G121-0340306	0603
G067-0906490	0601B	G102-0400526	0606F	G121-0340614	0603
G067-0906490	0601B-1	G103-1593621	0501	G121-0342160	0601
G067-0906491	0603	G103-1594029	0301	G121-0342160	2603
G067-0906720	0602	G103-1676405	0301	G121-0342310	0601
G067-0906730	0602	G103-1740563	0301	G121-0342320	0601
G067-0906840	0602	G103-1767693	0301	G121-0367250	0601B
G067-0906960	0603	G103-1789631	0301	G121-0370109	0603
G067-1501511	0302	G104-0102538	0301	G121-0382113	1817A
G067-1510511	0302	G104-1518120	0603	G121-0382171	0601
G067-23-00040	0810	G104-1526008	0606D	G121-0382182	0601
G067-3138899	0601B-1	G104-1526219	0601-2	G121-0389650	2204
G067-3140085	0603	G104-1531588	0902	G121-0389890	0603
G067-3442601	0603	G104-1540059	0601B	G121-0389891	0603
G074-1443015	0606F	G104-1648701	0902	G121-0398703	0601
G085-0100660	0302	G104-1738660	0301	G121-0442942	0601
G085-0305020	0301	G104-1742400	0603-1	G121-0442945	0601
G085-1100877	0601-1	G104-1767649	0902	G121-0442946	0601
G085-1100878	0601-1	G104-1769782	0902	G121-0447500	0603
G085-1305451	0601-1	G104-1769814	0703	G122-0381730	0301

# OFFICIAL STOCK NUMBER INDEX (Cont'd)

Official Stock No.	Group	Official Stock No.	Group	Official Stock No.	Group
G125-0869940	0301	G503-0131675	0800	G503-0407837	0107G
G125-0882589	0301	G503-0132455	0107H	G503-0529696	0301
G133-0193816	0306B	G503-0139784	0603-1	G503-7002601	0706C
G134-0110476	0601-2	G503-0139920	0304	G503-7002980	1811D
G134-0131291	0300	G503-0145853	1205	G503-7002981	1811D
G134-0138795	0603-1	G503-0145854	1207	G503-7002982	1811D
G134-0193870	1205	G503-0145855	1207	G503-7032686	2208
G134-0314564	0204A	G503-0152015	0603	G503-7032687	2208
G134-0338435	0602	G503-0169093	0301C	G503-7032688	2208
G134-0381800	1201	G503-0169094	0301C	G503-7032689	2208
G134-0389790	1201	G503-0183053	0306B	G503-7032690	2208
G134-0389795	1201	G503-0194016	0503	G503-7032691	2208
G136-0367413	0601B-1	G503-0194018	0101A	G503-7032692	2208
G148-0140138	0107E	G503-0194020	0107A	G503-7032693	2208
G148-0340604	0107E	G503-0194021	0108	G503-7032694	2208
G148-0389795	0107E	G503-0194022	0105C	G503-7032695	2208
G154-0139853	0603	G503-0194025	0300A	G503-7032696	2208
G154-0140096	0601B	G503-0194027	0108	G503-7032697	2208
G154-0382036	0601	G503-0194028	0306B	G503-7032698	2208
G154-0392749	0601B	G503-0194030	0505	G503-7032699	2208
	0601B-1	G503-0194032	0105C	G503-7032700	2208
G154-0398792	0601	G503-0194033	0107E	G503-7036544	0803
G156-0232827	0601	G503-0194034	0301	G503-7036567	1401
G160-0126260	0609B	G503-0194062	0605	G503-7036571	0106C
G160-0389772	0805B	G503-0194063	0300A	G503-7036572	0106C
	0110	G503-0196299	0601	G503-7036573	1811D
	0203	G503-0211410	0607	G503-7036574	0106C
G166-0314832	0401	G503-0211411	0607	G503-7036575	0301C
	1205	G503-0217815	0107J	G503-7036577	0503A
	1405	G503-0217816	0107J	G503-7036578	0107A-1
G166-0398794	0604A	G503-0217819	1209B	G503-7036579	0105
G167-0903749	0603	G503-0217820	1209B	G503-7036580	0105
G179-0579810	0301	G503-0217821	1209B	G503-7036582	0606
G179-7010485	0301C	G503-0217822	0505	G503-7036583	0901
G179-7010624	0607D	G503-0232469	0605	G503-7036584	1401
G502-0110522	0601B	G503-0295823	0602-1	G503-7036585	1401
G502-0110523	0601B	G503-0295835	0602	G503-7036586	1401
G502-0116038	0609B	G503-0295838	0602	G503-7036587	1401
G502-0125856	0601B	G503-0314838	1302A	G503-7036588	1401
G502-0125960	0601B-1	G503-0314839	1302A	G503-7036865	0606
G502-0139775	0601B	G503-0314840	1301	G503-7036866	0606
G502-0139777	0601B	G503-0325902	0606D	G503-7044051	2208
G502-0139953	0601B-1	G503-0340661	0107A	G503-7044168	2208
G502-0139954	0601B-1	G503-0340680	0604B	G503-7044237	2208
G502-0196319	0601	G503-0345876	0302	G503-7088715	1603
	0604A	G503-0345896	0503	G503-7088755	0606
G502-0196321	0601	G503-0373269	1402	G505-0152523	0602
G502-0232822	0601B	G503-0373270	1402	G505-0156045	0602
G502-0367546	0601B-1	G503-0373279	1401	G505-0179571	0602
G502-0367841	0601	G503-0373638	0603	G505-0365732	0602
G502-0435653	0601B-1	G503-0384600	2204	G505-0579385	0602
G502-7001048	0601B-1	G503-0384601	1102	G505-0666927	0602
G503-0124253	1301	G503-0384602	1102	G507-0367615	0106B
G503-0125800	1202	G503-0389782	1203	G518-7000186	0604C
G503-0125801	1202	G503-0389783	0204		0606
G503-0125900	0606D	G503-0389784	1601A		0108
G503-0125901	0606D	G503-0389792	1601		0109C
G503-0127853	0607A	G503-0389793	1601		0110
G503-0131476	0105C	G503-0393785	0606		0301A
	0106	G503-0393787	0606	G518-7001420	0306B
	0603	G503-0393789	0606		0401
G503-0131548	0603-1	G503-0393790	0606		0601-A
G503-0131549	0501	G503-0400093	0502		0700
G503-0131592	0301	G503-0407836	0304		1203

# OFFICIAL STOCK NUMBER INDEX (Cont'd)

Official Stock No.	Group	Official Stock No.	Group	Official Stock No.	Group
G671-5636599.....	0604C		0606	H001-1519010.....	0108
G855-613314.....	0301C		0608	H001-1522003.....	0301
G855-613455.....	0301C		0609	H001-1530007.....	0603-1
H001-0116190.....	1405		0801	H001-1530009.....	1500
H001-0116196.....	1405		1201	H001-1531002.....	0601B
H001-0121668.....	0503A	H001-1518007.....	1201-1		0602
	1201	(Cont'd)	1209C	H001-1531003.....	0602
H001-0518002.....	0102		1704		0609
H001-0518011.....	0601		1803	H001-4057595.....	0110
H001-0518016.....	0602		1804	H001-4135621.....	0606D
H001-0716530.....	0301		1809A		0601
	0601		1811	H001-4135681.....	0601B
H001-0716540.....	0606B		2203A		0606F
H001-0726010.....	0300		0601-2		0601B
H001-0726020.....	0104		0607	H001-4167501.....	0608
H001-0811025.....	0607		0610A		1201
H001-08-11026.....	0303		1201-1		0301C
	1201		1505	H001-4167520.....	0303
	0601	H001-1518008.....	1601B		0606
H001-0811040.....	1201		1800A	H001-4167521.....	0606F
	1402		1802A	H001-4167545.....	0601A
H001-0811050.....	1201		1804		0300
H001-0811052.....	1601C		2101	H001-4167560.....	0501
	1602		2103		1201-1
	0107A-1		2201A	H001-4167580.....	1500
	0802		0103B	H001-4167600.....	0610B
H001-0811055.....	0803		0106D	H001-4167601.....	1201-1
	1007		0109C	H001-4171545.....	2208
	1401		0110	H001-4171585.....	0607D
H001-0811066.....	0303		0306B		1817A
H001-0811075.....	1603		0505	H001-4171601.....	1006
H001-0811304.....	1003		0601A		1203
	1104		0602		1003
H001-0918009.....	1500		0602-1	H001-4217800.....	1007
H001-0924006.....	0300		0607D		1104
H001-0924108.....	0300		0610B	H001-5125801.....	0603
	0302A		0700	H001-5125821.....	0601-1
H001-1013018.....	0503		0800		0601B
	0703	H001-1518009.....	0804	H001-5125851.....	0301
	0706A		1006	H001-5125861.....	0601B
	0401		1007		0601B-1
H001-1013461.....	1001		1102		0301
	1101		1201	H001-5127331.....	0601
H001-1026463.....	0602		1201-1		0603
H001-1030594.....	0601		1203		0303A
	0301		1402	H001-5147511.....	0601
	0601		1500		0606
	0601B		1505		0609B
H001-1518004.....	0601B-1		1802	H001-5147531.....	0601B
	0606D		1804	H001-5148821.....	0601B
	0609		1817A	H001-5148831.....	0601B
	1811		2101	H001-5417560.....	1201-1
	0601B		2201A	H001-5418300.....	0609
H001-1518005.....	1804A	H001-1518010.....	1502	H001-5418341.....	0606F
	1817		1602	H001-5419100.....	0607
	2204		0102A	H001-5419140.....	0107A-1
H001-1518006.....	0107		0110		0301C
	1820	H001-1518011.....	0607	H001-5419780.....	0602
	0300		0809		0609
	0301		1502	H001-5419820.....	1201-1
H001-1518007.....	0301C	H001-1518013.....	1403A		2103A
	0303		0603	H001-5419840.....	1201-1
	0601	H001-1519006.....	0607D	H001-5419860.....	0401-1
	0603		0609B	H001-5420520.....	0110

# OFFICIAL STOCK NUMBER INDEX (Cont'd)

Official Stock No.	Group	Official Stock No.	Group	Official Stock No.	Group
H001-5420600	0602	H001-7124741	0602	H013-0500128	1301A
H001-5421240	0610B	H002-0100130	1403A		1301B
H001-5421245	2001	H002-0100140	0805	H015-0500903	0609B
H001-5421280	1201	H002-0504203	0902	H017-0501451	1800B
H001-6811640	0203	H002-0504207	1602	H017-0506101	2203A
H001-7017651	2003	H002-0504208	1602	H017-0507291	0503B
H001-7017655	0601A	H004-0355720	0606F	H017-0509226	0503B
H001-7021685	0606F	H004-0501303	0605C	H017-0540242	1202
H001-7023681	0601B	H004-0504406	0608	H017-0540462	0107E
H001-7025561	0601	H004-0504413	0608	H017-0540501	0107E
	0302	H004-0504417	0607A	H101-0103180	0107
	0601	H004-0504420	0607A	H101-0103190	0108
	0601-2	H004-0504423	0607A	H101-0112657	2103A
	0602	H004-0504430	0608		0303
	0603	H004-0504432	0608	H101-0114493	0609
H001-7025621	0603-1	H004-0504780	0605C	H101-0115729	2103A
	0606B	H004-0506605	0606	H101-0119860	0300
	0606E	H006-0117243	0300	H101-0121668	0300
	0607	H006-0282480	0101		0501C
	1209C	H006-0283180	0107	H101-0124552	0106C
	2204	H006-0283195	0306B	H101-0173252	0303
H001-7025681	0606F	H006-0283800	0101	H101-7131300	2208
H001-7025685	0501C	H006-0283805	0101	H104-0193059	0607B
	0107	H012-0708218	0804	H106-0103647	0101
	0107A-1	H012-0709455	1401		0501
	0110	H012-0710203	0203	M001-0104161	0602
	0204	H012-0900105	0503	M001-0104162	0602
	0300	H012-1300017	0601	M001-0107347	0607A
	0301C	H012-1303017	0601-2	M001-0213230	0607B
	0302A	H012-1303030	0803	M003-0109723	0601
	0401	H012-1304020	0601-2	8-F-2305	2306
	0401-1	H012-1314035	0704	8-T-8978	2306
	0501	H012-1323017	0601	8-T-9050	2306
	0503	H012-1340035	0703	8-T-14215	2306
	0601	H012-1900060	0601-1	8-T-15280	2306
H001-7025711	0601A	H012-6122200	1003	51-A1562-400	0610
	0601B		1104	0040-119922	0304
	0602	H012-6133330	1006	0040-1521880	0302
	0602-1	H012-6136260	0803	0040-1521960	0302
	0609	H012-6141280	1301A	0040-1521985	0302
	0610A	H012-6146900	1003	0040-1538115	0302
	0706A		1104	0040-1538312	0302
	0801	H012-6160380	1003	0040-1538360	0302
	0902		1104	0040-1542508	0301C
	1201	H012-6200730	1403A	0340-14257	1602
	1201-1	H012-6209750	1003	0340-14312	1602
	1205		1104	0340-14313	1602
	1405	H012-6216140	1006	0340-14314	1602
H001-7043561	0603	H012-6217320	0803	0340-14315	1602
	0601-1	H012-6219420	1301A	0340-14375	1601
H001-7043591	0601B	H012-6220960	1003	0340-14376	1601
	0601B-1		1104	0340-14384	1601
H001-7043681	0601	H012-6224700	1003	0340-14408	1602
	0601B		1104	0340-14409	1602
H001-7043711	0107E	H013-0500007	0800	0523-TP-2851	0202
	0601B		0805	0820-41876	1203
H001-7043741	0110	H013-0500017	1403A	0820-45771	1203
H001-7043801	0601		1007	0820-47047	1200
H001-7045491	0601-2	H013-0500030	1102	0820-47048	1200
H001-7045561	0602-1		1007	0820-47050	1200
H001-7045591	0306B	H013-0500034	0803	0820-47051	1200
H001-7124621	0602	H013-0500068	1003	0820-47054	1203
H001-7124701	0603-1	H013-0500071	1104	1500-147	0301
	0606F			1500-1A-55	0301A

# OFFICIAL STOCK NUMBER INDEX (Cont'd)

Official Stock No.	Group	Official Stock No.	Group	Official Stock No.	Group
1500-2-89.....	0301	2980-GCE-1125.....	0601	3320-GPW-5274.....	{ 0401
1500-101-6.....	0301	2980-IGS-1134L.....	0603	3320-GPW-5276.....	{ 0401-1
1500-11B-35.....	0301	2980-IAD-2004.....	0603-1	3320-GPW-5283.....	{ 0401
1500-11B-79.....	0301	2980-GCE-2012S.....	0601	3320-GPW-5283.....	{ 0401-1
1500-1319.....	0301	2980-MZ-2089.....	0602	3320-GPW-5298.....	0401
1500-20-26.....	0301	2980-GCE-2118.....	0601	3320-GPW-5310-B.....	2000
1500-20-61.....	0301	2980-IGS-2134L.....	0603	3320-GPW-5311-B.....	2000
1500-20-72.....	0301	2980-IGS-2135.....	0603	3320-GPW-5313-A.....	1601
1500-21-74S.....	0301	2980-MZ-2156.....	0602	3320-GPW-5315-A.....	1601
1500-25-93S.....	0301	2980-IAD-4008.....	0603-1	3320-GPW-5316-A.....	1601
1500-3-465S.....	0301	2980-SW-4015.....	0606	3320-GPW-5316-B.....	1601
1500-43-67.....	0301	2980-EBA-4611.....	0602	3320-GPW-5453.....	1602
1500-48-84.....	0301	2980-EB-8505.....	0602	3320-GPW-5456.....	1602
1500-6-312S.....	0301	2980-EB-8506.....	0602	3320-GPW-5463.....	1602
1500-64-62S.....	0301	2980-EB-8507.....	0602	3320-GPW-5464-B.....	1602
1500-7-116S.....	0301	2980-10-311A.....	0605	3320-GPW-5468.....	1602
1500-105-13.....	0301	3320-GPW-1027.....	1301	3320-GPW-5565.....	1601A
1500-11B-105.....	0301	3320-GPW-2250.....	0301C	3320-GPW-5566.....	1601A
1500-11B-125S.....	0301	3320-GPW-2263.....	1209C	3320-GPW-5587.....	1601C
1500-11B-127S.....	0301	3320-GPW-2264.....	1209C	3320-GPW-5587-B.....	1601C
1500-114-21S.....	0301	3320-GPW-2265.....	1209C	3320-GPW-5590.....	1601C
1500-122-47S.....	0301	3320-GPW-2266.....	1209C	3320-GPW-5590-B.....	1601C
1500-12-255.....	0301	3320-GPW-2267.....	1209C	3320-GPW-5602.....	1601C
1500-122-64S.....	0301	3320-GPW-2268.....	1209C	3320-GPW-5604.....	1601C
1500-129-15.....	0301	3320-GPW-2298.....	1209C	3320-GPW-5604-A.....	1601C
1500-14-246S.....	0301	3320-GPW-2635.....	1201	3320-GPW-5605.....	1601C
1500-146-95S.....	0301	3320-GPW-2659.....	1201	3320-GPW-5607.....	1601C
1500-150-97.....	0301	3320-GPW-2780.....	1201	3320-GPW-5607-A.....	1601C
1500-150-98.....	0301	3320-GPW-2793.....	1201	3320-GPW-5608.....	1601C
1500-53A-168S.....	0301	3320-GPW-2848.....	1201	3320-GPW-5609.....	1601C
1500-53A-251S.....	0301	3320-GPW-2853.....	1201	3320-GPW-5610.....	1601C
1500-61-119.....	0301	3320-GPW-3001.....	1000	3320-GPW-5705.....	1602
1500-61-169.....	0301	3320-GPW-3131.....	1401	3320-GPW-5705-B.....	1602
1500-61-171.....	0301	3320-GPW-3226.....	1007	3320-GPW-5781-A.....	1601A
1500-61-190.....	0301	3320-GPW-3227.....	1007	3320-GPW-6004.....	0100
1500-61-207.....	0301	3320-GPW-3304B.....	1401	3320-GPW-6005.....	0100
1500-61-272.....	0301	3320-GPW-3323.....	1401	3320-GPW-6016.....	0106D
1500-75-547.....	0301	3320-78-3332-A.....	1402	3320-GPW-6020.....	0106D
1500-101-150S.....	0301	3320-GPW-3509.....	1403A	3320-GPW-6038.....	0110
1500-117-106.....	0301	3320-GPW-3521.....	1403A	3320-GPW-6038-A.....	0110
1500-120-151S.....	0301	3320-GPW-3563.....	1403A	3320-GPW-6040-A.....	0110
2300-11503.....	0607D	3320-GPW-3590.....	1403A	3320-GPW-6040-B.....	0110
2300-415342.....	0607D	3320-GPW-3600A.....	1404	3320-GPW-6043.....	0110
2300-415442.....	0607D	3320-GPW-4605.....	0901	3320-GPW-6044.....	0110
2760-5941.....	0604C	3320-GPW-4863.....	0803	3320-GPW-6050.....	0101A
2980-IAD-12.....	0603-1	3320-GPW-5084.....	0809	3320-GPW-6051-B.....	0101A
2980-KIT-24.....	0602	3320-GPW-5165.....	0610A	3320-GPW-6054.....	0106D
2980-KIT-25.....	0602	3320-GPW-5230-A.....	0401	3320-GPW-6065.....	0101A
2980-KIT-26.....	0602	3320-GPW-5230-B.....	0401	3320-GPW-6066.....	0101A
2980-EBA-46.....	0602	3320-GPW-5230-C.....	0401-1	3320-GPW-6067.....	0101A
2980-VRH-50.....	0601B-1	3320-GPW-5233.....	0401-1	3320-GPW-6074.....	0601A-1
2980-IGT-69.....	0603	3320-GPW-5246.....	0401	3320-GPW-6105-A.....	0103
2980-KIT-119.....	0601-1	3320-GPW-5246-B.....	0401	3320-GPW-6105-C.....	0103
2980-KIT-121.....	0603-1	3320-GPW-5251.....	0401	3320-GPW-6105-D.....	0103
2980-GCE-125.....	0601	3320-GPW-5251-B.....	0401-1	3320-GPW-6105-F.....	0103
2980-X-156.....	0601	3320-GPW-5262.....	{ 0401	3320-GPW-6110-A.....	0103
2980-IGB-202S.....	0603	3320-GPW-5262.....	{ 0401-1	3320-GPW-6110-C.....	0103
2980-M2-51.....	0602	3320-GPW-5264-A.....	0401	3320-GPW-6110-D.....	0103
2980-SP-484.....	0601	3320-GPW-5264-B.....	{ 0401-1	3320-GPW-6135-A.....	0103B
2980-SP-484A.....	0601	3320-GPW-5264-B.....	{ 0401	3320-GPW-6135-D.....	0103B
2980-MZ-1009.....	0602	3320-GPW-5265.....	0401-1	3320-GPW-6149-E.....	0103A
2980-PS-1079A.....	0602	3320-GPW-5266.....	0401-1	3320-GPW-6149-G.....	0103A
2980-IGS-1080.....	0603	3320-GPW-5269.....	0401	3320-GPW-6149-H.....	0103A
2980-SPS-1100R.....	2204	3320-GPW-5270.....	0401		



# **OFFICIAL STOCK NUMBER INDEX (Cont'd)**

Official Stock No.	Group	Official Stock No.	Group	Official Stock No.	Group
3320-GPW-6149-J	0103A	3320-GPW-6644	0107	3320-GPW-9237-B	0304
3320-GPW-6200	0104	3320-GPW-6648	0107N	3320-GPW-9267-A	0304
3320-GPW-6201	0104	3320-GPW-6654	0107	3320-GPW-9268	0304
3320-GPW-6211-A	0104	3320-GPW-6659	0107	3320-GPW-9282	0304
3320-GPW-6211-B	0104	3320-GPW-6663	0107	3320-GPW-9316	0107J
3320-GPW-6211-C	0104A	3320-GPW-6664	0107	3320-GPW-9323	0107J
3320-GPW-6243	0106	3320-GPW-6673	0107	3320-GPW-9369	0304
3320-GPW-6244	0106	3320-GPW-6675	0107A	3320-GPW-9424	0108
3320-GPW-6245	0106	3320-GPW-6684	0107	3320-GPW-9424-B	0108
3320-GPW-6262A	0106A	3320-GPW-6700	0102A	3320-GPW-9426	0108
3320-GPW-6269	0106C	3320-GPW-6701	0102A	3320-GPW-9428	0108
3320-GPW-6287	0102A	3320-GPW-6702	0102A	3320-GPW-9435	0108
3320-GPW-6288	0106D	3320-GPW-6710	0107A	3320-GPW-9443	0108
3320-GPW-6303-A	0102	3320-GPW-6734	0107A	3320-GPW-9447	0301A
3320-GPW-6308	0102	3320-GPW-6756	0107N	3320-GPW-9450	0401
3320-GPW-6310	0102	3320-GPW-6758	0107N	3320-GPW-9456	0108C
3320-GPW-6312	0102	3320-GPW-6758-B	0107N	3320-GPW-9458	0108C
3320-GPW-6319	0102	3320-GPW-6762	0107N	3320-GPW-9460	0108C
3320-GPW-6326	0102A	3320-GPW-6763-A	0107G	3320-GPW-9462	0108
3320-GPW-6331-A	0102A	3320-GPW-6763-C	0107G	3320-GPW-9463	0108C
3320-GPW-6331-B	0102A	3320-GPW-6766-C	0107H	3320-GPW-9465	0108C
3320-GPW-6333-A	0102A	3320-GPW-6769	0107N	3320-GPW-9467	0108C
3320-GPW-6333-B	0102A	3320-GPW-6771	0301C	3320-GPW-9467-A	0108C
3320-GPW-6337-A	0102A	3320-GPW-6772	0301C	3320-GPW-9484	0108C
3320-GPW-6337-B	0102A	3320-GPW-6789	0107H	3320-GPW-9628	0301C
3320-GPW-6338-A	0102A	3320-GPW-7015	0703	3320-GPW-9632	0301C
3320-GPW-6338-B	0102A	3320-GPW-7062	0704	3320-GPW-9633	0301C
3320-GPW-6339-A	0102A	3320-GP-7092	0902	3320-GPW-9637	0301C
3320-GPW-6339-B	0102A	3320-GPW-7216	0706A	3320-GPW-9637-A	0301A
3320-GPW-6341-A	0102A	3320-GPW-7503	0204A	3320-GPW-9637-B	0301C
3320-GPW-6341-B	0102A	3320-GPW-7512	0204A	3320-GPW-9652	0301C
3320-GPW-6342-A	0106C	3320-GPW-7514	0204A	3320-GPW-9652-B	0301C
3320-GPW-6342-B	0102	3320-GPW-7515	0203	3320-GPW-9686	0301C
3320-GPW-6345	0102A	3320-GPW-7516	0203	3320-GPW-9686-A	0301C
3320-GPW-6353	0102	3320-GPW-7517	0204A	3320-GPW-9686-B	0301C
3320-GPW-6369	0102A	3320-GPW-7530	0203	3320-GPW-9700	0303A
3320-GPW-6375	0109	3320-GPW-7532	0203	3320-GPW-9719	0303
3320-GPW-6384	0109B	3320-GPW-7539	0204A	3320-GPW-9726	0303
3320-GPW-6387	0109	3320-GPW-7545	0204A	3320-GPW-9727	0303
3320-GPW-6390	0109	3320-GPW-7561	0203	3320-GPW-9731-B	0303
3320-GPW-6392	0109C	3320-GPW-7562	0203	3320-GPW-9735-A	0303
3320-GPW-6500-A	0105A	3320-GPW-7563	0202	3320-GPW-9735-B	0303
3320-GPW-6510	0105	3320-GPW-7600	0205	3320-GPW-9737	0303
3320-GPW-6510-B	0105	3320-GPW-7704-D	0800	3320-GPW-9739	0303
3320-GPW-6511	0105	3320-GPW-7726	0803	3320-GPW-9742	0303
3320-GPW-6511-B	0105	3320-GP-7747	0803	3320-GPW-9752	0303
3320-GPW-6513	0105	3320-GPW-7768	0801	3320-GPW-9775	0303A
3320-GPW-6514	0105	3320-GPW-7781-A	0809	3320-GPW-9775-B	0303A
3320-GPW-6546	0105	3320-GPW-8005	0501	3320-GPW-9778	0303A
3320-GPW-6549	0105A	3320-GPW-8250	0505	3320-GPW-9795	0303
3320-GPW-6549-B	0105A	3320-GPW-8269	0505	3320-GPW-9799	0303
3320-GPW-6550	0105	3320-GPW-8284	0505	3320-GPWS-10000	0601-2
3320-GPW-6552-B	0105A	3320-GPW-8290	0505	3320-GPW-10027	0601A-1
3320-GPW-6600	0107	3320-GPW-8505	0503	3320-GPA-10050	0601-2
3320-GPW-6608	0107	3320-GPWS-8509	0503A	3320-GAS-10120-A	0601-2
3320-GPW-6610	0107	3320-GPW-8509-A	0503A	3320-GPWS-10130	0601-2
3320-GPW-6614	0107	3320-GPW-8512	0503	3320-GPA-10142	0601-2
3320-GPW-6617	0107A-1	3320-GPW-8524	0503	3320-GPWS-10149	0601-2
3320-GPW-6619	0107	3320-GPW-8557-A	0503	3320-GPW-11474	0303A
3320-GPW-6625	0107	3320-GPW-8576	0503	3320-GPW-11495	0303A
3320-GPW-6627	0107A-1	3320-GPW-8578	0502	3320-GPW-12283	0604A
3320-GPW-6628	0107	3320-GPW-9002-C	0300	3320-GPW-12284	0604A
3320-GPW-6630	0107	3320-GPW-9030-B	0300	3320-GPW-12286	0604A
3320-GPW-6642	0107	3320-GPW-9237	0304	3320-GPW-12287	0604A

# OFFICIAL STOCK NUMBER INDEX (Cont'd)

Official Stock No.	Group	Official Stock No.	Group	Official Stock No.	Group
3320-GPW-12298-B	0604A	3320-GPA-18342	0601-2	3320-34039-S	0601-2
3320-GPA-13007	0607A	3320-GPW-18347	0102A	3320-74127-S	0106A
3320-GPW-13075	0607	3320-GPW-18348	0102A	3320-33897-S2	0610A
3320-GPW-13076	0607	3320-GPW-18349	0102A	3320-355253-S	0301C
3320-GPW-13150	0607D	3320-GPW-18350	0102A	3320-355497-S	0103B
3320-GPW-13150-C	0607D	3320-GPW-18355B	0800	3320-355741-S	0809
3320-GPW-13175-C	0607D	3320-GPW-18356	0701	3320-356021-S	0104
3320-GPA-13189	0606E	3320-GPW-18356B	0701	3320-356299-S	0606E
3320-GP-13209-B	0607D	3320-GPW-18357-B	0301	3320-357420-S	0102A
3320-GP-13210-B	0607D	3320-GPW-18359	0202	3320-60-8287	0505
3320-GPW-13410	0608	3320-GPW-18359-B	0202	3320-74-6038	0809
3320-GPA-13485	0607A	3320-GPW-18360	0801	3320-74-6038A	0809
3320-GPA-13491	0607A	3320-GPW-18361	0606B	3320-9N-12-113-A	0604A
3320-GPA-13494	0607A	3320-GPW-18361-B	0606B	3320-9N-18679	0107J
3320-GPW-13710	0605C	3320-GPW-18361-D	0606B	3320-9N-18686	0107J
3320-GPW-14300	0610B	3320-GPA-18363-B	0601-2	3320-GPW-1101735A	0805B
3320-GPW-14300-B	0610B-1	3320-GPW-18363-C	0601	3320-GP-1103010	1811
3320-GPWS-14301	0610B-1	3320-GPW-18364B	0604A	3320-GP-1103014	1811
3320-GPW-14301-B	0610B	3320-GPW-18365	1000	3320-GPW-1103027	1811
3320-GPW-14305	0606B	3320-GPW-18365-B	1000	3320-GP-1103100	1811
3320-GPW-14305-C	0606B	3320-GPW-18366	1100	3320-GP-1103106	1811B
3320-GPW-14305-D	0606B	3320-GPW-18370-B	1205	3320-11A-10211-B	0601-2
3320-GPW-14321	0603-1	3320-GPW-18374	1403A	3320-GPW-18366-13	1100
3320-GPW-14401-A	0606B	3320-GPW-18377	1201	3320-21CS-17682-B	2202
3320-GPW-14401-B	0606B	3320-GPW-18379	0107	3320-26H-11055	0602-1
3320-GPW-14401-C	0606B	3320-GPW-18380	0107	3320-350329-S2	0601A-1
3320-GPW-14401-D	0606B	3320-GPW-18382	0609B	3320-350340-S2	0601A-1
3320-GPW-14401-F	0606B	3320-GPW-18383	1401	3320-350341-S2	0601A-1
3320-GPW-14402	0606B	3320-GPW-18384	1003	3320-351373-S2	0601A-1
3320-GPW-14402-B	0606B		1104	3320-81W-811189	1811
3320-GPW-14425	0606B	3320-GPW-18386	1003	3320-99W-8103311	1811
3320-GPW-14425-B	0606B		1104	5200-24562	1301
3320-GPW-14431	0610B	3320-GPW-18387	0101	5200-24568	1302
3320-GPW-14446	0606B	3320-GPW-18388	1003	5200-24569	1302A
3320-GPWS-14447	0610B-1		1104	5200-25646	1302
3320-GPW-14448-B	0606E	3320-GPW-18389	1003	5200-25647	1302
3320-GPW-14448-C	0606E		1104	5200-25693	1301
3320-GPW-14448-D	0606E	3320-GPW-18390	0101	5200-25917	1301
3320-GPA-14450-C	0610B-1	3320-GPW-18391	1007	5960-C-5509	0201A
3320-19B-14451	0610B	3320-GPW-18515-B	0503	5960-CS-5509-A	0201A
3320-GPA-14451-C	0610B-1	3320-GPW-18825-B	2603	5960-C-5510	0201A
3320-11A-14452	0610B	3320-GPA-18841	2603	6855-613300	0301C
3320-GPW-14465	0606B	3320-GPW-18846	2603	6855-613306	0301C
3320-GPW-14487-A	0606B	3320-GPW-18849	2603	6855-613380	0301C
3320-GPW-14487-B	0606B	3320-GPW-18850	2603	7640-T-13086	1403A
3320-GPW-14555	0610B-1	3320-GPW-18852	2603	7640-020122	1403A
3320-GPW-16892	1704	3320-GPW-18853	2603	7640-021116	1403A
3320-GPW-17255	2204	3320-GPW-18854	2603	7640-025060	1403A
3320-GPW-17260	2204	3320-GPW-18857	2603	7640-026988	1404
3320-21CS-17718-A	2202	3320-GPW-18858	2603	7640-028093	1403A
3320-GP-17723-A	2202	3320-GPW-18859	2603	7640-029046	0609B
3320-GPW-18060	1603	3320-GPW-18871	2603	7640-029049	0609B
3320-GPW-18060-A	1603	3320-GPW-18872	2603	7640-033046	1403A
3320-GPW-18080	1603	3320-GPW-18873	2603	7640-033047	1403A
3320-GPW-18288	0102	3320-GPW-18874	2603	7640-033048	1403A
3320-GPW-18289	0109	3320-GPW-18876	2603	7640-051033	0609B
3320-GPW-18314	0810	3320-GPWS-18935	0606	7640-051035	0609B
3320-GPW-18317	0800	3320-GPW-18935-A	2603	7640-063011	1403A
3320-GPA-18319	0602-1	3320-GPW-18935-B	2603	7640-063012	1403A
3320-GPW-18330-A	0104A	3320-GPW-18936-A	2603	7640-063991	0609B
3320-GPW-18330-B	0104A	3320-GPW-18937	2603	7640-063996	1403A <sup>2</sup>
3320-GPW-18330-C	0104A	3320-GPW-18937-B	2603	7640-T-126000	1403A
3320-GPW-18330-D	0104A	3320-GPW-18938-B	2603	7640-T-129001	1403A
3320-GPW-18338	1006	3320-GPW-18960	2603	7640-401090	1403A

# **OFFICIAL STOCK NUMBER INDEX (Cont'd)**

Official Stock No.	Group	Official Stock No.	Group	Official Stock No.	Group
7640-401100	1403A	8080-13439	1402	8080-18-67-2	0805
7640-401107	0609B	8080-13449	1003	8080-18-67-5	0805
7640-450054	0609B		1104	8080-2051-1	1100
7640-502282	1405	8080-13575	1003	8080-K2-4-108	1104
7640-502540	1403A		1104	8080-K2-4-108-X	1003
7640-503284	1403A	8080-15099	1003	8080-39020	0706A
7640-503308	1403A	8080-15367	1003	8080-16322-2	1003
7640-7321-32	0609B		1104		1104
8080-S58	1003	8080-15926	1003	8080-16323-2	1003
	1104		1104		1104
8080-S59	1003	8080-16075	1003	8080-16992-1	1006
	1104		1104	8080-16992-2	1006
8080-S74	1003	8080-16383	1104	8080-16992-3	1006
	1104	8080-16385	1003	8080-16992-4	1006
8080-S75	1003	8080-16386	1003	8080-17122-3	1007
	1104	8080-16409	1001	8080-17122-4	1007
8080-S-112	1003		1101	8080-17128-3X	1007
	1104	8080-16412-X	1003	8080-17128-4X	1007
8080-S-113	1003		1104	8080-17155-1	1007
	1104	8080-16968-X	1003	8080-17155-2	1007
8080-S-114	1003		1104	8080-17295-1	1402
	1104	8080-16969X	1003	8080-17295-2	1402
8080-BM117	0800	8080-16976	1001	8080-18-155-2	0801
8080-S-171	1003		1101	8080-18-187-1	0804
8080-3Q74	1201	8080-16979	1001	8080-18-223-2	0801
8080-4B26	1201		1101	8080-18-223-3	0803
8080-5B15	1201	8080-16983	1006	8080-18-2287	0801
8080-5B16	1201	8080-16991	1006	8080-18-228-8	0801
8080-363SP	0805B	8080-17003	1006	8080-18-228-9	0801
8080-433-D	0805B	8080-17015	1301A	8080-18-324-2	0801
8080-SP634-D	0801	8080-17016	1301A	8080-18-352-5	0801
8080-S-638	1003	8080-17041	1006	8080-18-36-23	0803
	1104	8080-17046X	1402	8080-18-381-2	0803
8080-690W	0804	8080-17047X	1402	8080-18-452-2	0810
8080-710W	0803	8080-17048X	1006	8080-18-453-3	0810
8080-854-D	0805	8080-17071	1302	8080-18-454-2	0810
8080-887-D	1201	8080-17121X	1007	8080-18-466-1	0803
8080-S953	1007	8080-17133X	1006	8080-25-Q-1055	0805B
8080-S-957	1006	8080-17135-X	1006	8080-25-Q-1056	0805B
8080-10B-18	1201	8080-17146	1102	8080-31246-2	0804
8080-1056	1007	8080-17202-X	1006	8080-6-13-124	1007
8080-1244	0803	8080-17205	1401	8080-6-73-124	1102
8080-18-5-1	0804	8080-17210	1401	8080-6-73-414	1003
8080-18-8-1	0803	8080-17211	1401		1104
8080-18-8-2	0803	8080-17213	1401	8080-22-381-19	0803
8080-18-8-7	0802	8080-17214	1401	8080-6-73-1117	1006
8080-20B62	1201	8080-17215	1401	8081-18-19-18	0801
8080-K2-1-28	0803	8080-17216	1007	8800-728-2	1811D
8080-K2-1-28X	0803	8080-17218	1007	9150-2066C-C1	0604B
8080-K2-4-88X	0803	8080-17221	1006	9240-FC-1511	1209B
8080-39Q20	0805B	8080-17222	1006	9240-FC-2917	1205
8080-5866X	0803	8080-17224	1007	9240-FC-2918	1205
8080-5900X	1201	8080-17226X	1101	9240-FC-2927	1205
8080-5951X	0801	8080-17231	1007	9240-FC-3678-A	1205
8080-5962X	0803	8080-17233	1007	9240-FD-4564	1205
8080-638-1	1003	8080-17301-X	1006	9240-FC-5380	1205
8080-S-638-1	1104	8080-17302-X	1006	9240-FC-5381	1207
8080-638-2	1003	8080-17307	1401	9240-FC-5382	1207
8080-S638-2	1104	8080-17310X	1001	9240-FC-5555	1209C
8080-S638-3	1003	8080-18-15-9	0801	9240-FC-5727	1205
	1104	8080-18-24-1	0803	9240-FC-5778	1209C
8080-6563-X	1201-1	8080-18-24-4	1201-1	9240-FC-5795	1209B
8080-8996-SF	0901	8080-18-66-1	0805A	9240-FC-5992	1207
8080-8997-SF	0901	8080-18-66-7	0805A	9240-FC-5993	1207

# OFFICIAL STOCK NUMBER INDEX (Cont'd)

Official Stock No.	Group	Official Stock No.	Group	Official Stock No.	Group
9240-FC-5997	1207	9410-T-84J-16A	0703	9680-A-535	1404
9240-FC-5998	1207	9410-T-84-17	0703	9680-A-621	1401
9240-FC-6003	1207	9410-T-84C-19	0704	9680-A-1083	0303
9240-FC-6009	1205	9410-T-84J-20A	0706B	9680-A-1203	1500
9240-FC-6011	1205	9410-T-84J-21A	0706B	9680-A-1388	0100
9240-FC-6018	1205	9410-T-8422	0706C	9680-A-1544	1000
9240-FC-7626	1209B	9410-T-84C-23A	0706B	9680-A-5548	0301
9240-FC-8418	1207	9410-T-84C-24A	0706C	9680-A-6343	1404
9240-FC-8778	1207	9410-T-84B-25	0706A	9680-A-6414	2208
9410-AS2-T-84-J	0700	9410-T-84G-25	0703	9680-A-6492	0501
9410-AT-84J-1A	0701	9410-T-84G-26	0703	9680-A-6853	0303
9410-T-84H-2	0704	9410-T-84G-28	0704C	9680-A-8619	2208
9410-AC-84J-2A	0706A	9410-T-84-29	0704C	9680-A-8809	1603
9410-AT-84-H2	0704	9410-T-84J-29	0704C	9680-A-8810	1603
9410-T84G-J3	0704C	9410-T-84-30	0706A	9680-A-9157	2001
9410-T-84J-6	0703	9410-T-84B-30A	0704C	9680-A-9158	2001
9410-T-84J-8	0704C	9410-T-84-31	0706A	9680-A-9194	2000
9410-1AT-84-H2	0704	9410-T-84J-31	0704C	9680-A-9196	2000
9410-X2136	0706B	9410-T-84B-32	0706A	9680-A-9201	2000
9410-4496K	0706A	9410-T-84GJ-35	0704C	9680-A-9202	2001
9410-4497	0706A	9410-T-84-42	0706B	9680-A-9203	2001
9410-4498K	0706A	9410-T-84G-48	0704C	9680-A-9205	2000
9410-4611	0706A	9410-T-84J-86A	0706B	9680-A-9206	2003
9410-4682-K	0704	9410-T-84-85A	0704C	9680-A-9208	2001
9410-4684	0706B	9410-T84-115	0706A	9680-A-9210	2001
9410-4886	0704	9410-T-84H-137	0704	9680-A-9211	2001
9410-C8-2-1-2	0706A	9410-T-84-A-148	0706A	9680-A-9214	2000
9410-AT-84F-10A	0704C	9410-T-84J-187	0704C	9680-A-9215	2000
9410-T-84F-11A	0704	9410-T84-554	0703	9680-A-10302	2001
9410-C-84B-12A	0706A	9410-T-8452 1/2	0704	9680-A-10308	2001
9410-T-84F-12A	0704	9410-T845-50 1/2	0802	9680-A-10315	2001
9410-T-84F-13	0704	9680-A-170	1603	9680-390510	1403A
9410-T-84D-14C	0701	9680-A-450	1203	9680-635886	0603-1
9410-T-84F-14	0704	9680-A-472	1302	9680-640070	0104
9410-T-84F-15	0704				

## NOTES